

Tmax. T Generation

Low voltage moulded-case
circuit-breakers up to 1600 A

Preliminary - 1SDC210015D0201



Main characteristics

1

The ranges

2

Accessories

3

Characteristic curves and technical information

4

Wiring diagrams

5

Overall dimensions

6

Ordering codes

7

T GENERATION

Tmax. COMPLETE FREEDOM.



Tmax is freedom. Freedom now reaching up to 1600 A with the new Tmax T7 circuit-breaker. There's a boundless and highly diversified world of differing types of installations, requirements, needs and problems from 0 to 1600 A. With T Generation everything becomes simple and rational – seven sizes to find the solutions you're looking for.

BE FREE TO SIZE ANY TYPE OF INSTALLATION IN AN IDEAL WAY AT ALL TIMES.

Thanks to the seven sizes and a complete series of magnetic only, thermomagnetic and electronic trip units.

And also a wide range of accessories and the possibility of selecting dedicated ranges for all market applications, even the most specific and advanced ones.

BE FREE TO INSTALL ALL THE SIZES WITHOUT ANY DIFFICULTY.

T Generation is undeniably the family of moulded-case circuit-breakers with the top performance/size ratio available on the market, so can you imagine how much more space there is for cabling and how simply you'll be able to carry it out? And further, what about the reduced dimensions of the switchboard?

ATION



BE FREE TO RIDE THE MOST ADVANCED TECHNOLOGY.

It is thanks to this technology that T Generation offers you performances which were out of the question until now in circuit-breakers with these dimensions. And there are some exclusive technical solutions which only ABB SACE can offer you, such as the brand new electronic trip units designed for the new Tmax T7 or the new rapid accessory fitting system.

FREEDOM OF TOTALLY SAFE SELECTION.

The safety of knowing that behind Tmax there's ABB SACE's strong and constant commitment to continually search for excellence of quality at the base of each product and service. ABB quality.

TMAX T1, T2 AND T3. ALL SOLUTIONS PERFECTLY COORDINATED, UP TO 250 A.



Tmax T1, T2 and T3 – the three “little ones” of the Tmax family - were thought up from the beginning to work together. You can select functions and performances which until now couldn't be found in circuit-breakers with these dimensions. Perfect up to 250 A.

There are so many characteristics common to the three sizes. The single depth (70 mm) of the three pieces of apparatus making installation truly simpler, the new arcing chambers produced with a gasifying material, and an innovative construction system allowing the arc extinction time to be reduced.

All three sizes are fitted with adjustment of the thermal threshold as standard and have new - three-pole and four-pole - residual

current releases, designed and constructed to optimise space in the switchboard and simplify coupling with the circuit-breaker. Tmax T1, T2 and T3 have a completely standardised range of accessories.





TMAX T1. THE LITTLE ONE THAT'S REALLY BIG.

Thanks to its extremely compact dimensions, Tmax T1 is a unique circuit-breaker in its category. Compared with any other circuit-breaker with the same performance (160 A – up to 36 kA at 415 V AC), the overall dimensions of the apparatus are notably smaller.

TMAX T2. INTELLIGENCE AND HIGH PERFORMANCE IN THE PALM OF YOUR HAND.

Tmax T2 is the only 160 A circuit-breaker available with such high performances in such very limited overall



dimensions. A breaking capacity of 85 kA at 415 V AC can be achieved. Tmax T2 can be fitted with a latest generation electronic trip unit.

TMAX T3. 250 A IN A DEPTH OF 70 MM FOR THE FIRST TIME.

Tmax T3 is the first circuit-breaker which carries 250 A in considerably limited overall dimensions compared with any other similar apparatus – a really large step forward for this type of equipment.


Tmax T3 allows coordinations for motor protection to be made up to a power of 90 kW at 415 V AC.

TMAX T4, T5 AND T6. BE FREE TO CHOOSE UP TO 1000 A.



Tmax T4, T5 and T6 are the moulded-case circuit-breakers with the best performance/size ratio on the market. Their application possibilities are practically unlimited, thanks to their dedicated and specific ranges, advanced electronics, as well as a complete and standardised range of accessories. The top quality materials and innovative construction techniques used by ABB SACE mean Tmax circuit-breakers can guarantee truly exceptional performances, with a really high rated current/volume ratio. For example, T4 and T5 guarantee a breaking capacity up to 200 kA at 415 V AC and an extraordinary 80 kA at 690 V AC. Moreover, they complete the range of applications up to 1150 V in alternating current and 1000 V in direct current.

The series of electronic trip units, equipped with latest generation technology, offers solutions exclusive to ABB. T4, T5 and T6 have the same depth, simplifying their positioning in the switchboard compartments, and also have a complete, standardised and unified range of accessories available, simplifying selection, making them flexible to use and reducing stocks.

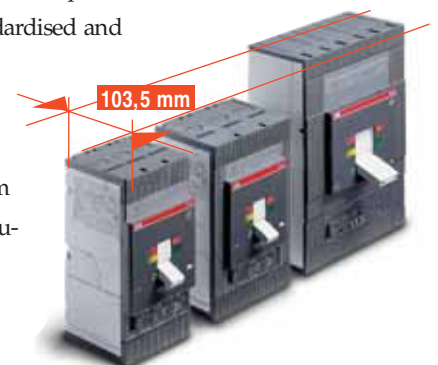



NEW PR223EF TRIP UNIT. THIS IS WHERE THE EXCLUSIVE INNOVATION IS TO BE FOUND.

The new PR223EF trip unit with the EFDP system offers two characteristics which until now were antithetic: selectivity and rapid tripping. With the new PR223EF, a new range up to 1000 A has been conceived for specific needs requiring high selectivity values: rapid detection of the fault and no limit to the number of hierarchical levels of the distribution plant. With the EFDP system, the size of the apparatus inside the installation can be reduced and cable and busbar

sizing can be optimised. And the outcome? Considerable reductions in plant costs.

NEW PR223DS TRIP UNIT. FREEDOM OF CONTROL.

The new PR223DS trip unit has been conceived and built for power distribution circuit-breakers.

Now all the different electrical values of the installation can be measured. And that's not all – there are LEDs available on the front of the trip unit which signal some configurations and the presence of any alarms (overload, incorrect connections, etc.).



TMAX T7. FREEDOM TO THE NTH POWER.



The new Tmax T7, available in two versions up to 1600 A either with manual operating mechanism or motor operator, was conceived with a really revolutionary design for circuit-breakers of this type: advanced electronics, exceptional performances and new installation and accessory fitting solutions.

Flexibility is absolutely exceptional with Tmax T7: they can be installed both vertically and horizontally (in the withdrawable version, too), there are all types of terminals (among which, flat orientated rear terminals) and a new, faster and safer racking-out system for the moving part. Moreover, cabling is considerably facilitated by the reduced height.

A great news is the new rapid accessory wiring system. No wires inside the circuit-breaker, rapid, simple and safe connection to the external circuit, and no screws for fixing the external power supply cables.

The exclusive news of the new cable interlock provides notable benefits in terms of optimal sizing. By using this accessory it is possible to interlock two circuit-breakers in any position and, above all, to interlock a T7 with an air circuit-breaker as well. Impossible until today, this answer is ideal for automatic transfer switch solutions.




Special attention has been paid to the electronics and the results are there to be seen ... PR231, PR232, PR331 and PR332 are the new interchangeable electronic trip units, with modularity and rating-plugs which can be replaced by the customer.



The PR231 and PR232 trip units, with dip-switches for setting the protection thresholds, offer LEDs to signal protection tripped for each protection function: this means the reason for circuit-breaker tripping can always be found.

The PR332 is decidedly ahead of its time in the present reference panorama: fitted with a large graphic display, it allows all the information needed to be displayed simply and clearly. It also offers advanced protection functions (as well as the "classic" protection functions). For example, the exclusive data logger function allowing all the events and values before the fault to be recorded for later analysis.

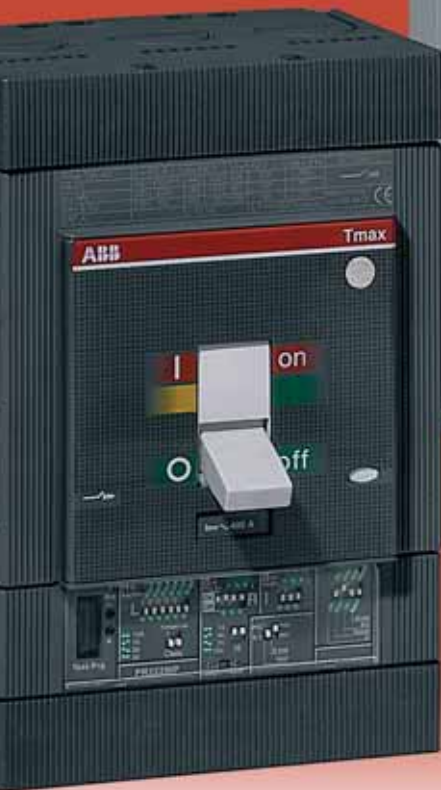



Index

| | |
|---|-----|
| Overview of the Tmax family | 1/2 |
| General | 1/4 |
| Construction characteristics | |
| Modularity of the series | 1/6 |
| Distinguishing features of the series | 1/8 |

Overview of the Tmax family



1



Circuit-breakers for AC-DC distribution

| | | | T1 1p | T1 |
|--------------------|------|-----------------|--------------------|----------|
| Iu | [A] | | 160 | 160 |
| In | [A] | | 16...160 | 16...160 |
| Poles | [Nr] | | 1 | 3/4 |
| Ue | [V] | (AC) 50 - 60 Hz | 240 | 690 |
| | [V] | (DC) | 125 | 500 |
| Icu (380-415 V AC) | [kA] | B | 25* (220/230 V AC) | 16 |
| | [kA] | C | | 25 |
| | [kA] | N | | 36 |
| | [kA] | S | | |
| | [kA] | H | | |
| | [kA] | L | | |
| | [kA] | V | | |



Circuit-breakers for zone selectivity

| Iu | [A] | | | |
|-----------------------|------|-----------------|--|--|
| Poles | [Nr] | | | |
| Ue | [V] | (AC) 50 - 60 Hz | | |
| EFDP zone selectivity | | | | |
| ZS zone selectivity | | | | |



Circuit-breakers for motor protection

| Iu | [A] | | | |
|--------------------------------------|------|-----------------|--|--|
| Poles | [Nr] | | | |
| Ue | [V] | (AC) 50 - 60 Hz | | |
| Magnetic only trip unit, IEC 60947-2 | | | | |
| PR221DS-I trip unit, IEC 60947-2 | | | | |
| PR222MP trip unit, IEC 60947-4-1 | | | | |
| PR231/P-I trip unit, IEC 60947-2 | | | | |



Circuit-breakers for use up to 1150 V AC and 1000 V DC

| Iu | [A] | | | |
|---------|------|-------------------|--|--|
| Poles | [Nr] | | | |
| Icu max | [kA] | 1000 V AC | | |
| | [kA] | 1150 V AC | | |
| | [kA] | 1000 V DC | | |
| | | 4 poles in series | | |



Switch-disconnectors

| | | | | T1D |
|-------|------|-----------------|--|-----|
| Ith | [A] | | | 160 |
| Ie | [A] | | | 125 |
| Poles | [Nr] | | | 3/4 |
| Ue | [V] | (AC) 50 - 60 Hz | | 690 |
| | [V] | (DC) | | 500 |
| Icm | [kA] | | | 2.8 |
| Icw | [kA] | | | 2 |

* For In 16 A and In 20 A: Icu @220/230 V AC = 16 kA

Note: ABB SACE's moulded-case circuit-breakers are also available in the versions according to UL Standards (see catalogue "ABB SACE molded case circuit-breakers - UL 489 and CSA C22.2 Standard").



| T2 | T3 | T4 | T5 | T6 | T7 |
|-----------|----------|----------|-----------|--------------|--------------------|
| 160 | 250 | 250/320 | 400/630 | 630/800/1000 | 800/1000/1250/1600 |
| 1.6...160 | 63...250 | 20...320 | 320...630 | 630...1000 | 200...1600 |
| 3/4 | 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| 690 | 690 | 690 | 690 | 690 | 690 |
| 500 | 500 | 750 | 750 | 750 | |
| | | | | | |
| 36 | 36 | 36 | 36 | 36 | |
| 50 | 50 | 50 | 50 | 50 | 50 |
| 70 | | 70 | 70 | 70 | 70 |
| 85 | | 120 | 120 | 100 | 120 |
| | | 200 | 200 | | 150 |

| T4 | T5 | T6 | T7 |
|---------|---------|---------|--------------------|
| 250/320 | 400/630 | 630/800 | 800/1000/1250/1600 |
| 3/4 | 3/4 | 3/4 | 3/4 |
| 690 | 690 | 690 | 690 |
| ■ | ■ | ■ | ■ |


| T2 | T3 | T4 | T5 | T6 | T7 |
|-----|-----|---------|---------|-----|---------------|
| 160 | 250 | 250/320 | 400/630 | 800 | 800/1000/1250 |
| 3 | 3 | 3 | 3 | 3 | 3 |
| 690 | 690 | 690 | 690 | 690 | 690 |
| ■ | ■ | ■ | | | |
| ■ | | ■ | ■ | ■ | |
| | | ■ | ■ | ■ | |
| | | | | | ■ |

| T4 | T5 | T6 |
|-----|---------|---------|
| 250 | 400/630 | 630/800 |
| 3/4 | 3/4 | 3/4 |
| 20 | 20 | 12 |
| 12 | 12 | |
| 40 | 40 | 40 |

| T3D | T4D | T5D | T6D | T7D |
|-----|---------|---------|--------------|----------------|
| 250 | 250/320 | 400/630 | 630/800/1000 | 1000/1250/1600 |
| 200 | 250/320 | 400/630 | 630/800/1000 | 1000/1250/1600 |
| 3/4 | 3/4 | 3/4 | 3/4 | 3/4 |
| 690 | 690 | 690 | 690 | 690 |
| 500 | 750 | 750 | 750 | 750 |
| 5.3 | 5.3 | 11 | 30 | 52.2 |
| 3.6 | 3.6 | 6 | 15 | 20 |


General

Tmax family is now available as a complete range of moulded case circuit-breakers up to 1600 A. All the circuit-breakers, both three-pole and four-pole, are available in the fixed version; the sizes T2, T3, T4 and T5 in the plug-in version and T4, T5, T6 and T7 in the withdrawable one as well. With the same frame size, the circuit-breakers in the Tmax family, are available with different breaking capacities and different rated uninterrupted currents.

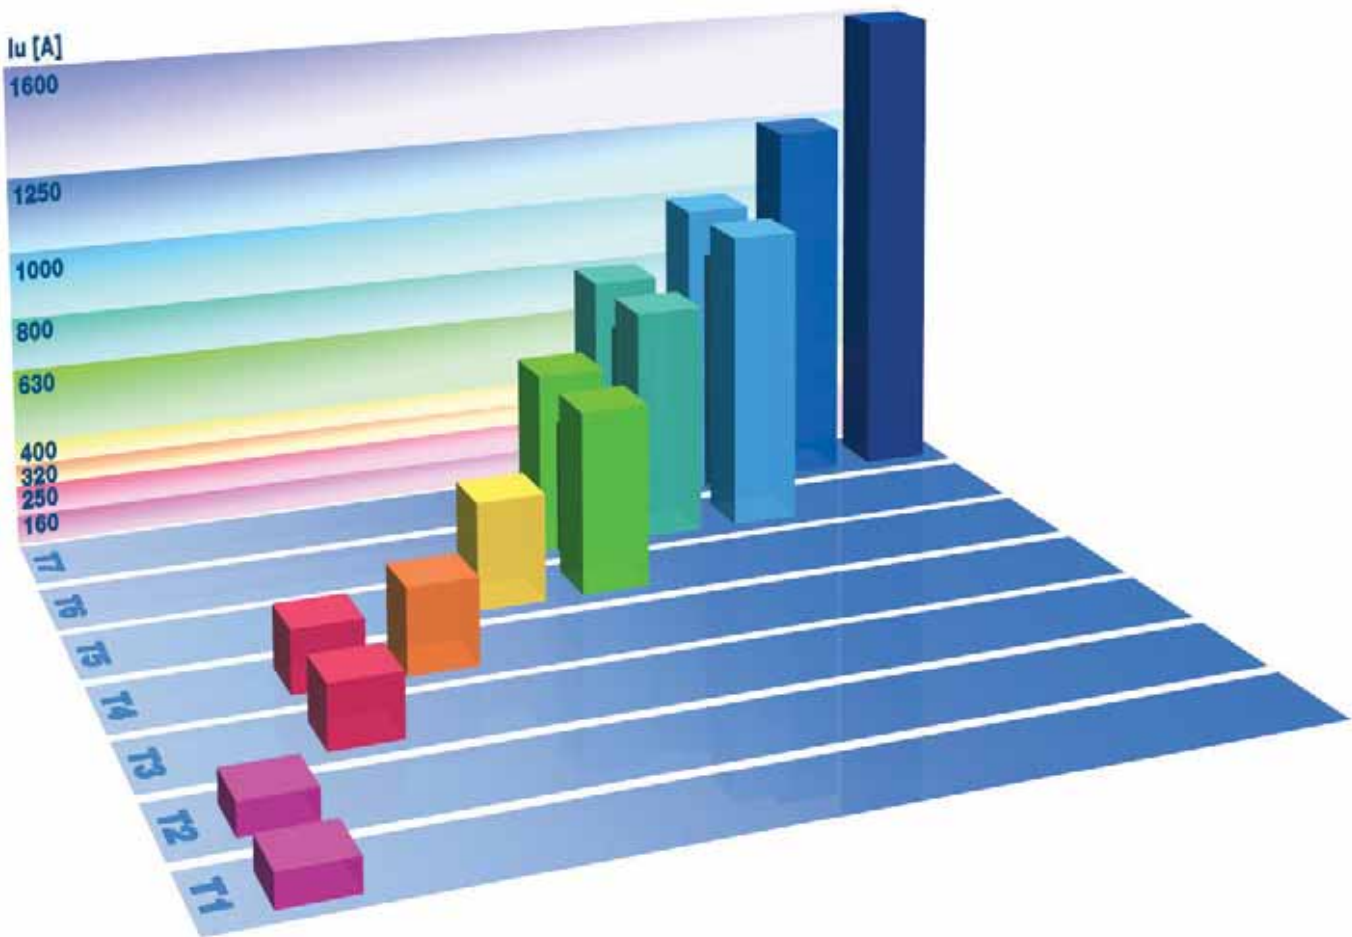

1SDC210014F0001

The electric arc interruption system used on the Tmax circuit-breakers allows the short-circuit currents of very high value to be interrupted extremely rapidly. The considerable opening speed of the contacts, the dynamic blasting action carried out by the magnetic field and the structure of the arcing chamber contribute to extinguishing the arc in the shortest possible time, notably limiting the value of the specific let-through energy I^2t and the current peak.

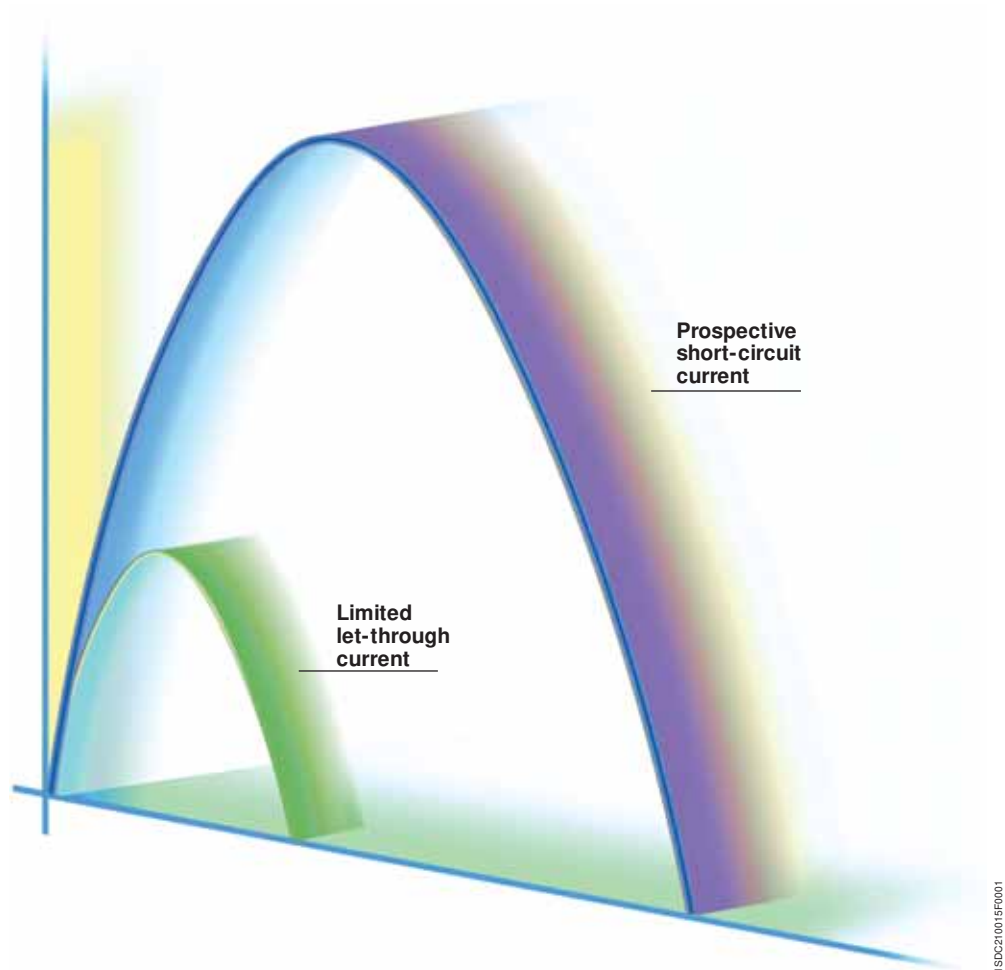



1SDC210015D0201

Construction characteristics

Modularity of the series

1

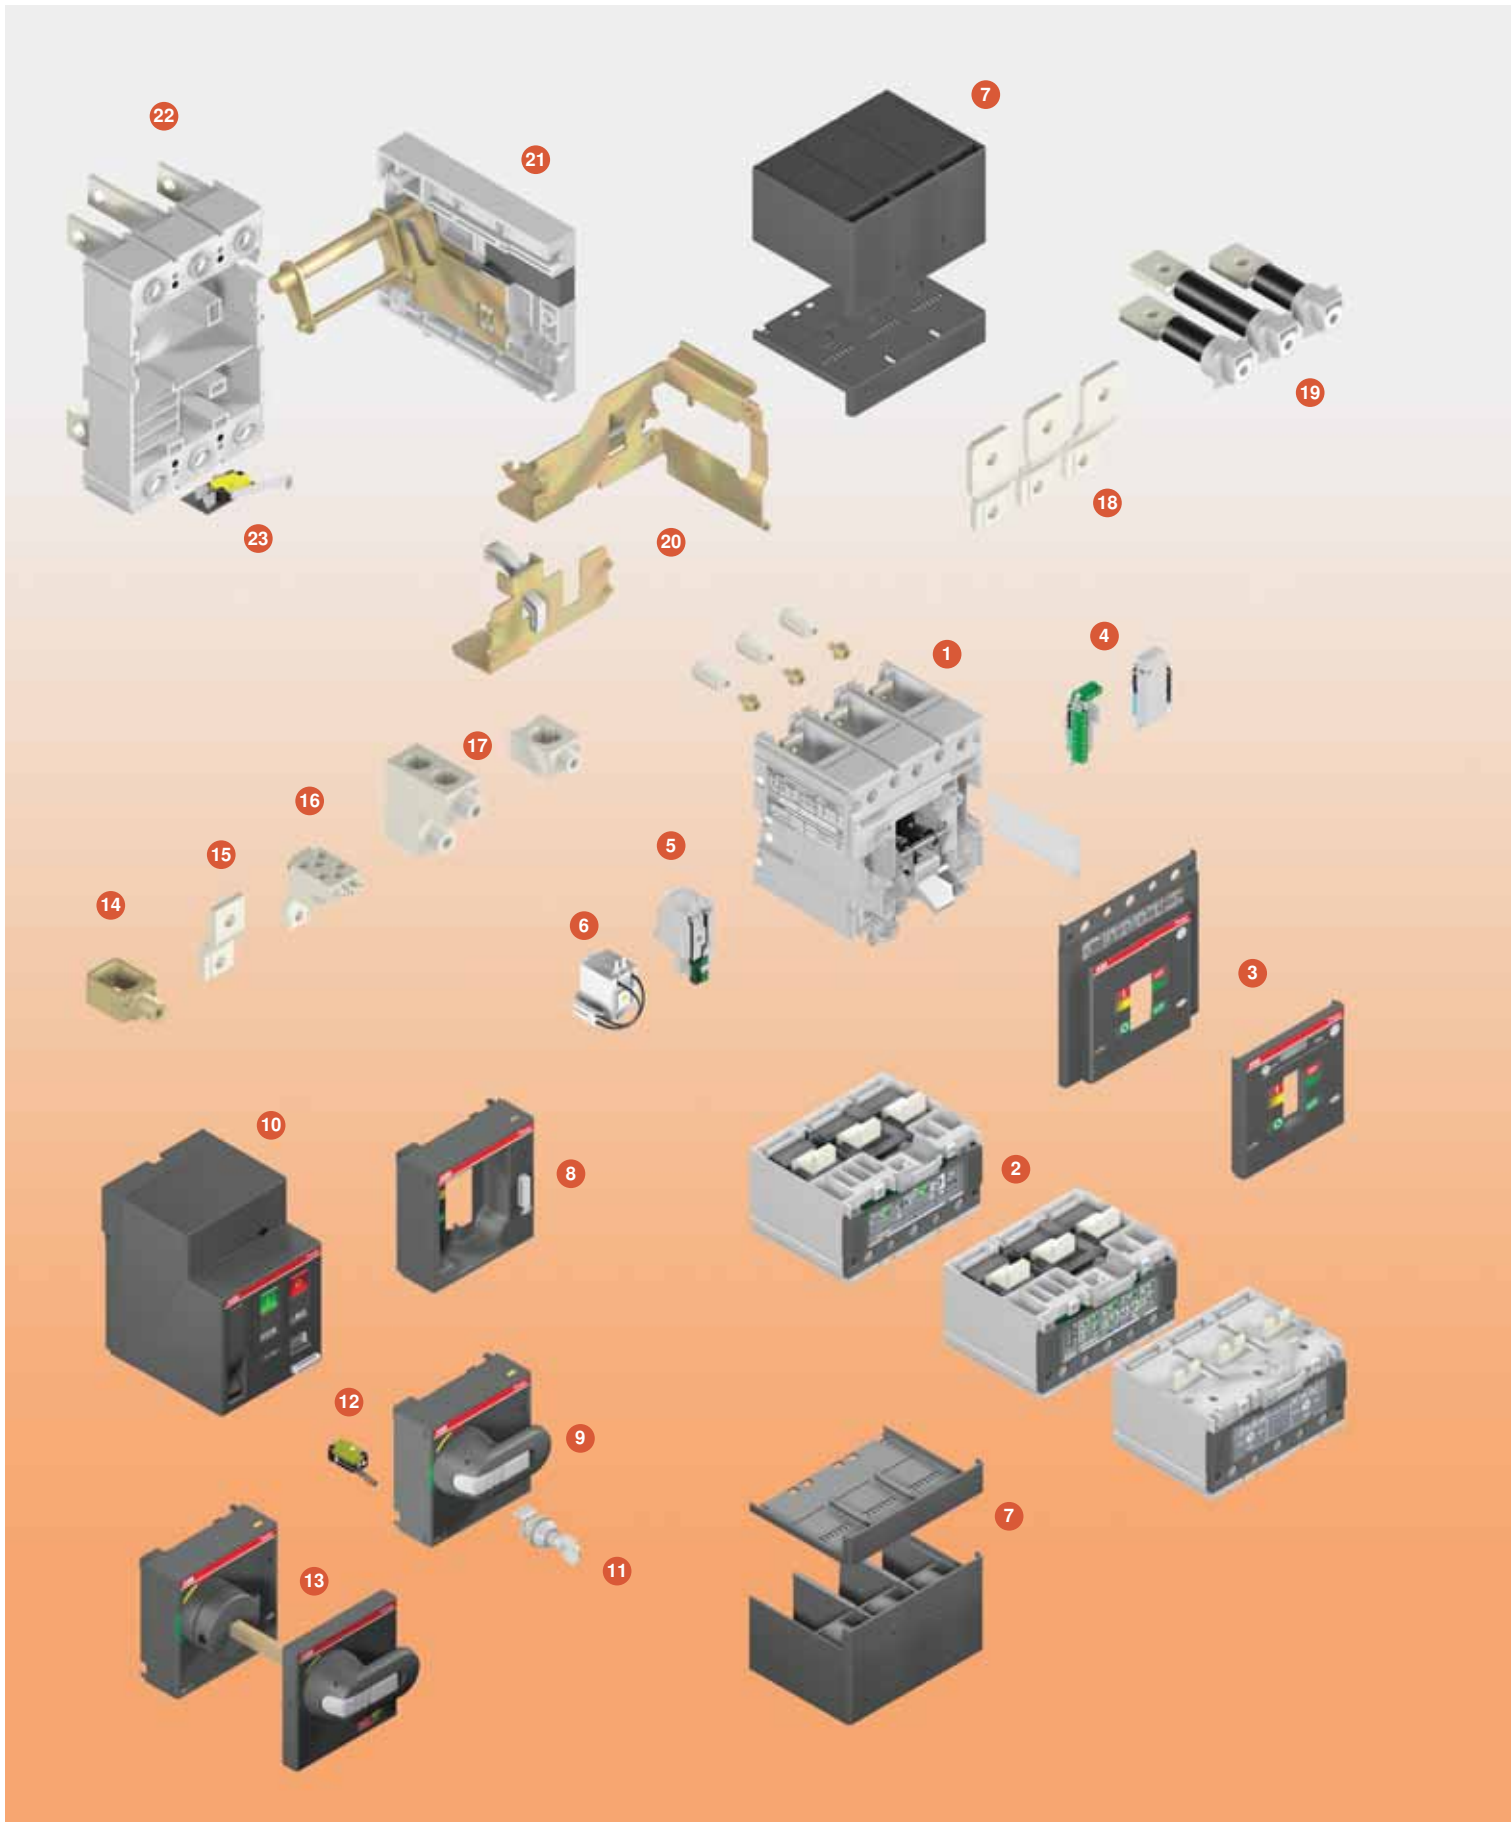

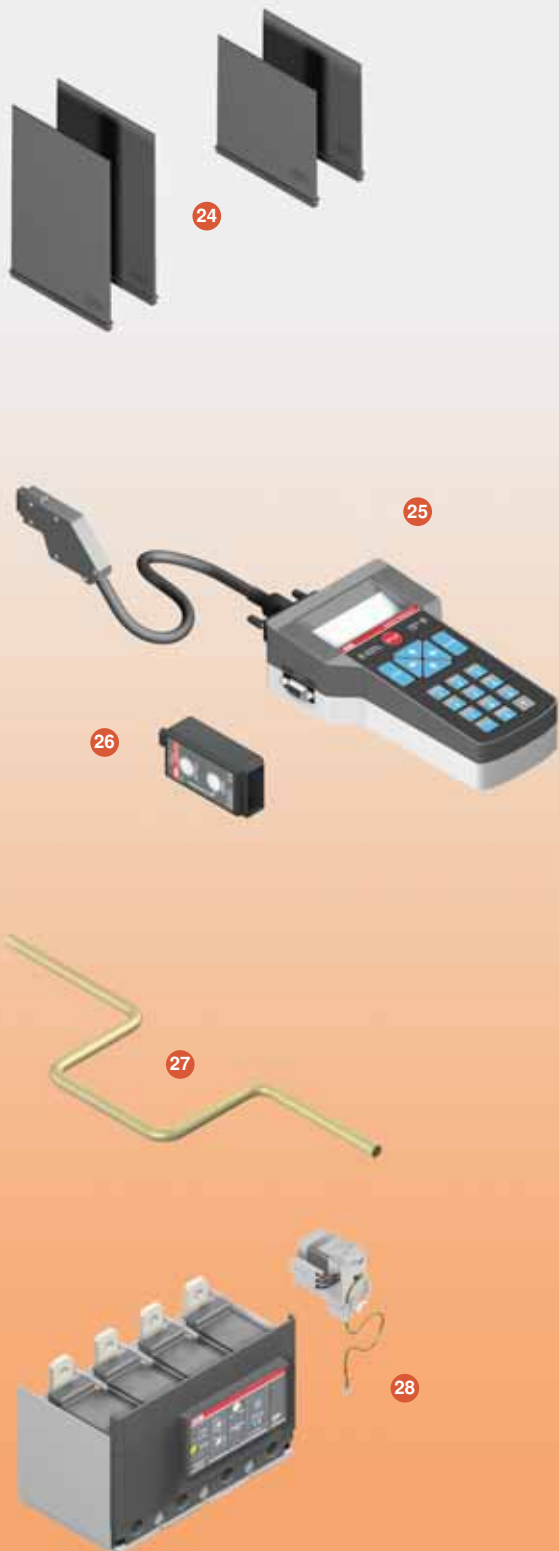

Starting from the fixed version circuit-breaker, all the other versions used for various requirements are obtained by means of mounting conversion kits.

The following are available:

- kit for converting a fixed circuit-breaker into the moving part of a plug-in and withdrawable one
- circuit-breaker fixed parts for plug-in and withdrawable circuit-breakers
- conversion kit for the connection terminals.

Various accessories are also available:

1. Breaking unit
2. Trip units
3. Front
4. Auxiliary contacts - AUX and AUX-E
5. Undervoltage release - UVR
6. Shunt opening release - SOR and P-SOR
7. Terminal covers
8. Front for lever operating mechanism - FLD
9. Direct rotary handle - RHD
10. Stored energy motor operator - MOE
11. Key lock - KLF
12. Early auxiliary contact - AUE
13. Transmitted rotary handle - RHE
14. Front terminal for copper cable - FC Cu
15. Front extended terminal - EF
16. Multi-cable terminal (only for T4) - MC
17. Front terminal for copper-aluminium - FC CuAl
18. Front extended spread terminal - ES
19. Rear orientated terminal - R
20. Conversion kit for plug-in/withdrawable versions
21. Guide of fixed part in the withdrawable version
22. Fixed part - FP
23. Auxiliary position contact - AUP
24. Phase separators
25. PR010T
26. TT1
27. Racking out crank handle
28. Residual current release.

Construction characteristics

Distinguishing features of the series



Double insulation

Tmax has double insulation between the live power parts (excluding the terminals) and the front parts of the apparatus where the operator works during normal operation of the installation. The seat of each electrical accessory is completely segregated from the power circuit, thereby preventing any risk of contact with live parts, and, in particular, the operating mechanism is completely insulated in relation to the powered circuits.

Furthermore, the circuit-breaker has oversized insulation, both between the live internal parts and in the area of the connection terminals. In fact, the distances exceed those required by the IEC Standards and comply with what is foreseen by the UL 489 Standard.




Positive operation

The operating lever always indicates the precise position of the moving contacts of the circuit-breaker, thereby guaranteeing safe and reliable signals, in compliance with the prescriptions of the IEC 60073 and IEC 60417-2 Standard (I = Closed; O = Open; yellow-green line = Open due to protection trip). The circuit-breaker operating mechanism has free release regardless of the pressure on the lever and the speed of the operation. Protection tripping automatically opens the moving contacts: to close them again, the operating mechanism must be reset by pushing the operating lever from the intermediate position into the lowest open position.

Isolation behaviour

In the open position, the circuit-breaker guarantees circuit in compliance with the IEC 60947-2 Standard. The oversized insulation distances guarantee there are no leakage currents and dielectric resistance to any overvoltages between input and output.

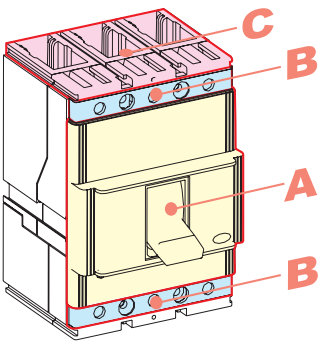

Degrees of protection

The table indicates the degrees of protection guaranteed by the Tmax circuit-breakers according to the prescriptions of the IEC 60529 Standard:

| | With front | Without front ⁽²⁾ | Without terminal covers | With high terminal covers | With low terminal covers | With IP40 protection kit on the front |
|------------------------|----------------------|------------------------------|-------------------------|---------------------------|--------------------------|---------------------------------------|
| A | IP 40 ⁽³⁾ | IP 20 | - | - | - | - |
| B⁽⁴⁾ | IP 20 | IP 20 | IP 20 | IP 40 | IP 40 | IP 40 |
| C | - | - | - | IP 40 ⁽¹⁾ | IP 30 ⁽¹⁾ | - |

⁽¹⁾ After correct installation

⁽²⁾ During installation of the electrical accessories

⁽³⁾ Also for front for lever operating mechanism and direct rotary handle

⁽⁴⁾ Only for T1...T6

The fixed parts are always preset with IP20 degree of protection. IP54 degree of protection can be obtained with the circuit-breaker installed in a switchboard fitted with a rotary handle operating mechanism transmitted on the compartment door and special kit (RHE – IP54).

Operating temperature

The Tmax circuit-breakers can be used in ambient conditions where the surrounding air temperature varies between $-25\text{ }^{\circ}\text{C}$ and $+70\text{ }^{\circ}\text{C}$, and stored in ambients with temperatures between $-40\text{ }^{\circ}\text{C}$ and $+70\text{ }^{\circ}\text{C}$.

The circuit-breakers fitted with thermomagnetic trip units have their thermal element set for a reference temperature of $+40\text{ }^{\circ}\text{C}$. For temperatures other than $+40\text{ }^{\circ}\text{C}$, with the same setting, there is a thermal trip threshold variation as shown in the table on page 4/50 and following.

The electronic trip units do not undergo any variations in performance as the temperature varies but, in the case of temperatures exceeding $+40\text{ }^{\circ}\text{C}$, the maximum setting for protection against overloads L must be reduced, as indicated in the derating graph on page 4/37 and following, to take into account the heating phenomena which occur in the copper parts of the circuit-breaker passed through by the phase current.

For temperatures above $+70\text{ }^{\circ}\text{C}$ the circuit-breaker performances are not guaranteed. To ensure service continuity of the installations, the way to keep the temperature within acceptable levels for operation of the various devices and not only of the circuit-breakers must be carefully assessed, such as using forced ventilation in the switchboards and in their installation room.



1SDC210021F0001

Altitude

Up to an altitude of 2000 m the Tmax circuit-breakers do not undergo any alterations in their rated performances. As the altitude increases, the atmospheric properties are altered in terms of composition, dielectric resistance, cooling capacity and pressure. Therefore the circuit-breaker performances undergo derating, which can basically be measured by means of the variation in significant parameters such as the maximum rated operating voltage and the rated uninterrupted current.

| Altitude | [m] | 2000 | 3000 | 4000 | 5000 |
|------------------------------------|---------|------|------|------|------|
| Rated service voltage, U_e | [V~] | 690 | 600 | 500 | 440 |
| Rated uninterrupted current, I_u | % I_n | 100 | 98 | 93 | 90 |

Construction characteristics

Distinguishing features of the series



Electromagnetic compatibility

Operation of the protections is guaranteed in the presence of interferences caused by electronic apparatus, atmospheric disturbances or electrical discharges by using the electronic trip units and the electronic residual current releases. No interference with other electronic apparatus near the place of installation is generated either. This is in compliance with the IEC 60947-2 Appendix B + Appendix F Standards and European Directive No. 89/336 regarding EMC - electromagnetic compatibility.

Tropicalisation

Circuit-breakers and accessories in the Tmax series are tested in compliance with the IEC 60068-2-30 Standard, carrying out 2 cycles at 55 °C with the "variant 1" method (clause 6.3.3). The suitability of the Tmax series for use under the most severe environmental conditions is therefore ensured with the hot-humid climate defined in the climatograph 8 of the IEC 60721-2-1 Standards thanks to:

- moulded insulating cases made of synthetic resins reinforced with glass fibres;
- anti-corrosion treatment of the main metallic parts;
- Fe/Zn 12 galvanisation (ISO 2081), protected by a conversion layer mainly consisting of chromates (ISO 4520);
- application of anti-condensation protection for electronic overcurrent releases and relative accessories.

Resistance to shocks and vibrations

The circuit-breakers are unaffected by vibrations generated mechanically and due to electromagnetic effects, in compliance with the IEC 60068-2-6 Standards and the regulations of the major classification organisations⁽¹⁾:

- RINA
- Det Norske Veritas
- Bureau Veritas
- Lloyd's register of shipping
- Germanischer Lloyd
- ABS
- Russian Maritime Register of Shipping.

The T1-T5 Tmax circuit-breakers are also tested, according to the IEC 60068-2-27 Standard, to resist shocks up to 12g for 11 ms. Please ask ABB SACE for higher performances in terms of resistance to shocks.

⁽¹⁾ Ask to ABB for Tmax certificates of approval.



Versions and types

All the Tmax circuit breakers are available in fixed versions, T2, T3, T4 and T5 in the plug-in version and T4, T5, T6 and T7 also in the withdrawable one.

All the circuit breakers can be manually operated, by the operating lever or the rotary handle (direct or transmitted), and electrically operated. For this issue different solutions are available:

- The solenoid operator for T1, T2 and T3
- The stored energy motor operator for T4, T5 and T6
- T7 with the stored energy operating mechanism, gear motor for the automatic charging of the closing springs and shunt opening and closing releases.

Installation

Tmax circuit-breakers can be installed in the switchboards, mounted in any horizontal, vertical or lying down position on the back plate or on rails, without undergoing any derating of their rated characteristics. Tmax circuit-breakers can be installed easily in all types of switchboards, above all thanks to the possibility of being supplied either by top or bottom terminals, without jeopardizing the apparatus functionality⁽¹⁾.

Apart from fixing on the base plate, T1, T2 and T3 can also be installed on DIN 50022 rails, thanks to the special fixing brackets.

Furthermore, the depth of 70 mm takes Tmax T3 to the same standard as the two smaller sizes, making assembly of circuit-breakers up to 250 A in standard switchboards even simpler. In fact, it is possible to prepare standardised support structures, facilitating the design stage and construction of the switchboard metalwork.

⁽¹⁾ For uses at a voltage of 1000 V, T4V250 and T5V400 in the fixed version, and T4L250 and T5L400 in the plug-in version must be supplied from above.

Construction characteristics

Distinguishing features of the series

Racking-out with the door closed

With Tmax T4, T5, T6 and T7 circuit-breakers, in the withdrawable version, the circuit-breaker can be racked-in and out with the compartment door closed, thereby increasing operator safety and allowing rationalisation of low voltage arc proof switchboards.

Racking out can only be carried out with the circuit-breaker open (for obvious safety reasons), using a special racking-out crank handle supplied with the conversion kit from fixed circuit-breaker to moving part of withdrawable circuit-breaker.



Range of accessories

The completeness and installation rationality of the Tmax series is also achieved thanks to innovative solutions in development of the accessories:

- single range of accessories for T1, T2 and T3; one for T4, T5 and T6, and one for T7, characterised by completeness and simplicity for installation. Harmonisation of the accessories allows reduction in stocks and greater service flexibility, offering increasing advantages for users of the Tmax series;
- new system of rapid assembly for internal electrical accessories of Tmax T7 without cables for the connections to the terminal box;
- same possibility of equipping with accessories, in terms of connection devices (terminals, terminal covers and phase separators), between fixed circuit-breakers and fixed parts of plug-in circuit-breakers for Tmax T2 and T3.
- moreover, Tmax offers a wide choice of residual current releases:
 - three-pole and four-pole RC221 and RC222 up to 250 A with T1, T2 and T3;
 - RC222, four-pole up to 500 A for T4 and T5;
 - RC223 (type B) also sensitive to currents with continuous slowly variable components (IEC 60947-2 Annex M), four-pole for T3 and T4, up to 250 A;
 - integrated residual current protection for PR332/P-LSIRc trip unit available for Tmax T7.



Compliance with Standards and company quality system

Tmax circuit-breakers and their accessories comply with the international IEC 60947-2 Standards and the EC directive:

- Low Voltage Directives (LVD) no. 73/23 EEC
- Electromagnetic Compatibility Directive (EMC) no. 89/336 EEC.

Certification of compliance with the product Standards mentioned above is carried out, in accordance with the European EN 45011 Standard, by the Italian certification organisation ACAE (Association for Certification of Electrical Apparatus), member of the European organization LOVAG (Low Voltage Agreement Group) and by the Swedish certification organization SEMKO.

The Test Room at ABB SACE is accredited by SINAL (certificate No. 062). The Tmax series also has a range which has undergone certification according to the severe American UL 489 and CSA C22.2 Standards. Furthermore, the Tmax series is certified by the Russian GOST (Russia Certificate of Conformity) certification organisation. The pieces of apparatus comply with the prescriptions for on-board shipping installations and are approved by the major Naval Registers - Lloyd's Register of Shipping, Germanischer Lloyd, Bureau Veritas, Rina, Det Norske Veritas, Russian Maritime Register of Shipping, and ABS (please ask ABB SACE for confirmation about the versions available).

ABB SACE's Quality System complies with the international ISO 9001-2000 Standard (model for quality assurance in design, development, construction, installation and service assistance) and with the equivalent European EN ISO 9001 and Italian UNI EN ISO 9001 Standards.

The third certifying Organisation is RINA-QUACER. ABB SACE received the first certification in 1990 with three-year validity and this has now reached its fifth confirmation.

The new Tmax series has a hologram on the front, obtained using special anti-imitation techniques - a guarantee of the quality and genuineness of the circuit-breaker as an ABB SACE product. Attention to protection of the environment is another priority commitment for ABB SACE, and, as confirmation of this, the environmental management system has been certified by RINA. ABB SACE - the first industry in the electromechanical sector in Italy to obtain this recognition - thanks to a revision of the production process with an eye to ecology - has been able to reduce the consumption of raw materials and waste from processing by 20%. ABB SACE's commitment to safeguarding the environment is also shown in a concrete way by Life Cycle Assessments (LCA) of the products, carried out directly by ABB SACE's Research and Development in collaboration with the ABB Research Centre. Selection of materials, processes and packing materials is made optimising the true environmental impact of the product, also foreseeing the possibility of its being recycled.

Furthermore, in 1997 ABB SACE developed its Environmental Management system and got it certified in conformity with the international ISO14001 Standard, integrating it in 1999 with the Management System for Health and Safety in the workplace according to OHSAS 18001 (Swedish National Testing and Research Institute).



Index

Tmax circuit-breakers for power distribution

| | |
|----------------------------------|------|
| Electrical characteristics | 2/4 |
| General characteristics..... | 2/6 |
| Thermomagnetic trip units | 2/8 |
| Electronic trip units..... | 2/11 |

Circuit-breaker for zone selectivity

| | |
|--------------------------------------|------|
| Electrical characteristics | 2/36 |
| General characteristics..... | 2/37 |
| EFDP zone selectivity: PR223EF | 2/38 |
| ZS zone selectivity: PR332/P | 2/41 |

Tmax circuit-breakers for motor protection

| | |
|--|------|
| Electrical characteristics | 2/44 |
| General characteristics..... | 2/46 |
| Protection against short-circuit | 2/47 |
| Integrated protection: PR222MP..... | 2/49 |


Tmax circuit-breakers for use up to 1150 V AC and 1000 V DC

| | |
|----------------------------------|------|
| Electrical characteristics | 2/56 |
|----------------------------------|------|

Switch-disconnectors

| | |
|----------------------------------|------|
| Electrical characteristics | 2/60 |
|----------------------------------|------|

Power distribution

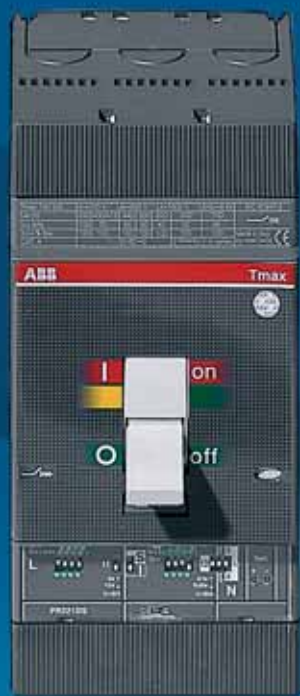



Circuit-breakers for power distribution



Index

Tmax circuit-breakers for power distribution

| | |
|----------------------------------|------|
| Electrical characteristics | 2/4 |
| General characteristics..... | 2/6 |
| Thermomagnetic trip units | 2/8 |
| Electronic trip units..... | 2/11 |

Circuit-breakers for power distribution

Electrical characteristics

| | | Tmax T1 1P | Tmax T1 | | | Tmax T2 | | | | |
|---|--|-------------------------|---------------------|------|------|-------------------------|------------------|----------------------------------|-------------|------|
| Rated uninterrupted current, I_u | [A] | 160 | 160 | | | 160 | | | | |
| Poles | [Nr] | 1 | 3/4 | | | 3/4 | | | | |
| Rated service current, U_e | (AC) 50-60 Hz | 240 | 690 | | | 690 | | | | |
| | (DC) | 125 | 500 | | | 500 | | | | |
| Rated impulse withstand voltage, U_{imp} | [kV] | 8 | 8 | | | 8 | | | | |
| Rated insulation voltage, U_i | [V] | 500 | 800 | | | 800 | | | | |
| Test voltage at industrial frequency for 1 min. | [V] | 3000 | 3000 | | | 3000 | | | | |
| Rated ultimate short-circuit breaking capacity, I_{cu} | (AC) 50-60 Hz 220/230 V | 25* | B | C | N | N | S | H | L | |
| | (AC) 50-60 Hz 380/415 V | – | 25 | 40 | 50 | 65 | 85 | 100 | 120 | |
| | (AC) 50-60 Hz 440 V | – | 16 | 25 | 36 | 36 | 50 | 70 | 85 | |
| | (AC) 50-60 Hz 500 V | – | 10 | 15 | 22 | 30 | 45 | 55 | 75 | |
| | (AC) 50-60 Hz 690 V | – | 8 | 10 | 15 | 25 | 30 | 36 | 50 | |
| | (DC) 250 V - 2 poles in series | – | 3 | 4 | 6 | 6 | 7 | 8 | 10 | |
| | (DC) 250 V - 3 poles in series | 25 (at 125 V) | 16 | 25 | 36 | 36 | 50 | 70 | 85 | |
| | (DC) 500 V - 2 poles in series | – | 20 | 30 | 40 | 40 | 55 | 85 | 100 | |
| | (DC) 500 V - 3 poles in series | – | – | – | – | – | – | – | – | |
| | (DC) 750 V - 3 poles in series | – | 16 | 25 | 36 | 36 | 50 | 70 | 85 | |
| | | – | – | – | – | – | – | – | – | |
| | Rated service short-circuit breaking capacity, I_{cs} | (AC) 50-60 Hz 220/230 V | 75% | 100% | 75% | 75% | 100% | 100% | 100% | 100% |
| (AC) 50-60 Hz 380/415 V | | – | 100% | 100% | 75% | 100% | 100% | 100% | 75% (70 kA) | |
| (AC) 50-60 Hz 440 V | | – | 100% | 75% | 50% | 100% | 100% | 100% | 75% | |
| (AC) 50-60 Hz 500 V | | – | 100% | 75% | 50% | 100% | 100% | 100% | 75% | |
| (AC) 50-60 Hz 690 V | | – | 100% | 75% | 50% | 100% | 100% | 100% | 75% | |
| Rated short-circuit making capacity, I_{cm} | (AC) 50-60 Hz 220/230 V | 52.5 | 52.5 | 84 | 105 | 143 | 187 | 220 | 264 | |
| | (AC) 50-60 Hz 380/415 V | – | 32 | 52.5 | 75.6 | 75.6 | 105 | 154 | 187 | |
| | (AC) 50-60 Hz 440 V | – | 17 | 30 | 46.2 | 63 | 94.5 | 121 | 165 | |
| | (AC) 50-60 Hz 500 V | – | 13.6 | 17 | 30 | 52.5 | 63 | 75.6 | 105 | |
| | (AC) 50-60 Hz 690 V | – | 4.3 | 5.9 | 9.2 | 9.2 | 11.9 | 13.6 | 17 | |
| | | 7 | 7 | 6 | 5 | 3 | 3 | 3 | 3 | |
| Opening time (415 V) | [ms] | A | A | | | A | | | | |
| Utilisation category (IEC 60947-2) | | IEC 60947-2 | IEC 60947-2 | | | IEC 60947-2 | | | | |
| Reference Standard | | ■ | ■ | | | ■ | | | | |
| Isolation behaviour | | | | | | | | | | |
| Trip units: | thermomagnetic | | | | | | | | | |
| | T fixed, M fixed | TMF | ■ | – | – | – | – | – | – | |
| | T adjustable, M fixed | TMD | – | ■ | – | – | ■ | – | – | |
| | T adjustable, M adjustable (5...10 x I _n) | TMA | – | – | – | – | – | – | – | |
| | T adjustable, M fixed (3 x I _n) | TMG | – | – | – | – | ■ ⁽⁸⁾ | – | – | |
| | T adjustable, M adjustable (2.5...5 x I _n) | TMG | – | – | – | – | – | – | – | |
| | magnetic only | MA | – | – | – | – | ■ | (MF up to I _n 12.5 A) | | |
| | electronic | PR221DS | – | – | – | – | – | – | – | – |
| | | PR222DS | – | – | – | – | – | – | – | – |
| | | PR223DS | – | – | – | – | – | – | – | – |
| | | PR231/P | – | – | – | – | – | – | – | – |
| | | PR232/P | – | – | – | – | – | – | – | – |
| | | PR331/P | – | – | – | – | – | – | – | – |
| PR332/P | – | – | – | – | – | – | – | – | | |
| Interchangeability | | | | | | | | | | |
| Versions | | F | F | | | F-P | | | | |
| Terminals | fixed | FC Cu | FC Cu-EF-FC CuAl-HR | | | F-FC Cu-FC CuAl-EF-ES-R | | | | |
| | plug-in | – | – | | | F-FC Cu-FC CuAl-EF-ES-R | | | | |
| | withdrawable | – | – | | | – | | | | |
| Fixing on DIN rail | | – | DIN EN 50022 | | | DIN EN 50022 | | | | |
| Mechanical life | | 25000 | 25000 | | | 25000 | | | | |
| | [No. operations] | 240 | 240 | | | 240 | | | | |
| | [No. Hourly operations] | 8000 | 8000 | | | 8000 | | | | |
| Electrical life @415 V AC | | 120 | 120 | | | 120 | | | | |
| | [No. operations] | 120 | 120 | | | 120 | | | | |
| | [No. Hourly operations] | 120 | 120 | | | 120 | | | | |
| Basic dimensions - fixed version | 3 poles | W [mm] | 25.4 (1 pole) | | | 76 | | | | |
| | 4 poles | W [mm] | – | | | 102 | | | | |
| | | D [mm] | 70 | | | 70 | | | | |
| | | H [mm] | 130 | | | 130 | | | | |
| Weight | fixed | 3/4 poles | 0.4 (1 pole) | | | 0.9/1.2 | | | | |
| | plug-in | 3/4 poles | – | | | 1.1/1.5 | | | | |
| | withdrawable | 3/4 poles | – | | | 1.5/1.9 | | | | |

TERMINAL CAPTION
 F = Front
 EF = Front extended
 ES = Front extended spread
 FC Cu = Front for copper cables
 FC CuAl = Front for copper-aluminium cables

R = Rear orientated
 HR = Rear flat horizontal
 VR = Rear flat vertical
 HR/VR = Rear flat orientated
 MC = Multicable

F = fixed circuit-breakers
 P = plug-in circuit-breakers
 W = withdrawable circuit-breakers

⁽⁷⁾ The breaking capacity for settings I_n=16 A and I_n=20 A is 16 kA

Circuit-breakers for power distribution

General characteristics

The series of Tmax moulded-case circuit-breakers - complying with the IEC 60947-2 Standard - is divided into seven basic sizes, with an application range from 1 A to 1600 A and breaking capacities from 16 kA to 200 kA (at 380/415 V AC).

For protection of alternating current networks, the following are available:

- T1B 1p circuit-breaker, equipped with TMF thermomagnetic trip units with fixed thermal and magnetic threshold ($I_3 = 10 \times I_n$);
- T1, T2, T3 and T4 (up to 50 A) circuit-breakers equipped with TMD thermomagnetic trip units with adjustable thermal threshold ($I_1 = 0.7 \dots 1 \times I_n$) and fixed magnetic threshold ($I_3 = 10 \times I_n$);
- T2, T3 and T5 circuit-breakers, fitted with TMG trip units for long cables and generator protection with adjustable thermal threshold ($I_1 = 0.7 \dots 1 \times I_n$) and fixed magnetic threshold ($I_3 = 3 \times I_n$) for T2 and T3 and adjustable magnetic threshold ($I_3 = 2.5 \dots 5 \times I_n$) for T5;
- T4, T5 and T6 circuit-breakers with TMA thermomagnetic trip units with adjustable thermal threshold ($I_1 = 0.7 \dots 1 \times I_n$) and adjustable magnetic threshold ($I_3 = 5 \dots 10 \times I_n$);
- T2 with PR221DS electronic trip unit;
- T4, T5 and T6 with PR221DS, PR222DS/P, PR222DS/PD and PR223DS electronic trip units;
- the T7 circuit-breaker, which completes the Tmax family up to 1600 A, fitted with PR231/P, PR232/P, PR331/P and PR332/P electronic trip units. The T7 circuit-breaker is available in the two versions: with manual operating mechanism or motorizable with stored energy operating mechanism⁽¹⁾.

The field of application in alternating current of the Tmax series varies from 1 A to 1600 A with voltages up to 690 V. The Tmax T1, T2, T3, T4, T5 and T6 circuit-breakers equipped with TMF, TMD and TMA thermomagnetic trip units can also be used in direct current plants, with a range of application from 1 A to 800 A and a minimum operating voltage of 24 V DC, according to the appropriate connection diagrams.

The three-pole T2, T3 and T4 circuit-breakers can also be fitted with MF and MA adjustable magnetic only trip units, both for applications in alternating current and in direct current, in particular for motor protection (see page 2/43 and following).

For all the circuit-breakers in the series, fitted with thermomagnetic and electronic trip units, the single-phase trip current is defined (see page 4/54).

⁽¹⁾ For motorisation, the T7 circuit-breaker with stored energy operating mechanism must be ordered, complete with geared motor for automatic spring charging, opening coil and closing coil.

Interchangeability

The Tmax T4, T5 and T6 circuit-breakers can be equipped either with TMF, TMD, TMG or TMA thermomagnetic trip units, MA magnetic only trip units or PR221DS, PR222DS/P, PR222DS/PD, PR222MP and PR223DS electronic trip units.

Similarly, Tmax T7 can also mount the latest generation PR231/P, PR232/P, PR331/P⁽¹⁾ and PR332/P⁽¹⁾ electronic trip units.

Trip units

| Circuit-breakers | TMD | | | TMA | | | | | | | | TMG | | | | | |
|------------------|-----|----|----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| | 20 | 32 | 50 | 80 | 100 | 125 | 160 | 200 | 250 | 320 | 400 | 500 | 630 | 800 | 320 | 400 | 500 |
| T4 250 | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | | | | | | | | |
| T4 320 | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | ▲ | | | | | | | | |
| T5 400 | | | | | | | | | | ■ | ■ | | | | ▲ | ▲ | |
| T5 630 | | | | | | | | | | ▲ | ▲ | ■ | | | ▲ | ▲ | ▲ |
| T6 630 | | | | | | | | | | | | | ■ | | | | |
| T6 800 | | | | | | | | | | | | | | ■ | | | |
| T6 1000 | | | | | | | | | | | | | | | | | |
| T7 800 | | | | | | | | | | | | | | | | | |
| T7 1000 | | | | | | | | | | | | | | | | | |
| T7 1250 | | | | | | | | | | | | | | | | | |
| T7 1600 | | | | | | | | | | | | | | | | | |

■ = Complete circuit-breaker already coded
▲ = Circuit-breaker to be assembled


⁽¹⁾ If ordered loose PR331/P and PR332/P must be completed with the "trip unit adapters" (see page 3/42)

Range of application of the circuit-breakers in alternating current and in direct current

| AC | Trip unit | Range [A] |
|-----------------------|----------------------|------------|
| T1 1p 160 | TMF | 16...160 |
| T1 160 | TMD | 16...160 |
| T2 160 | TMD | 1.6...160 |
| | TMG | 16...160 |
| | MF/MA | 1...100 |
| | PR221DS | 10...160 |
| T3 250 | TMG | 63...250 |
| | TMD | 63...250 |
| | MA | 100...200 |
| T4 250/320 | TMD | 20...50 |
| | TMA | 80...250 |
| | MA | 10...200 |
| | PR221DS | 100...320 |
| | PR222DS/P-PR222DS/PD | 100...320 |
| | PR223DS | 100...320 |
| T5 400/630 | TMG | 320...500 |
| | TMA | 320...500 |
| | PR221DS | 320...630 |
| | PR222DS/P-PR222DS/PD | 320...630 |
| | PR223DS | 320...630 |
| T6 630/800/1000 | TMA | 630...800 |
| | PR221DS | 630...1000 |
| | PR222DS/P-PR222DS/PD | 630...1000 |
| | PR223DS | 630...1000 |
| T7 800/1000/1250/1600 | PR231/P-PR232/P | 400...1600 |
| | PR331/P-PR332/P | 400...1600 |
| DC | | |
| T1 1p 160 | TMF | 16...160 |
| T1 160 | TMD | 16...160 |
| T2 160 | TMD | 1.6...160 |
| T3 250 | MF/MA | 1...100 |
| | TMD/TMG | 63...250 |
| | MA | 100...200 |
| T4 250/320 | TMD | 20...50 |
| | TMA | 80...250 |
| | MA | 10...200 |
| T5 400/630 | TMA/TMG | 320...500 |
| T6 630/800/1000 | TMA | 630...800 |

MF = magnetic only trip unit with fixed magnetic thresholds
 MA = magnetic only trip unit with adjustable magnetic thresholds
 TMF = thermomagnetic trip unit with fixed thermal and magnetic thresholds
 TMD = thermomagnetic trip unit with adjustable thermal and fixed magnetic thresholds
 TMA = thermomagnetic trip unit with adjustable thermal and magnetic thresholds
 TMG = thermomagnetic trip unit for generator protection
 PR22_, PR23_, PR33_ = electronic trip units

Thanks to their simplicity of assembly, the end customer can change the type of trip unit extremely rapidly, according to their own requirements and needs: in this case, correct assembly is the customer's responsibility. Above all, this means into increased flexibility of use of the circuit-breakers with considerable savings in terms of costs thanks to better rationalisation of stock management.

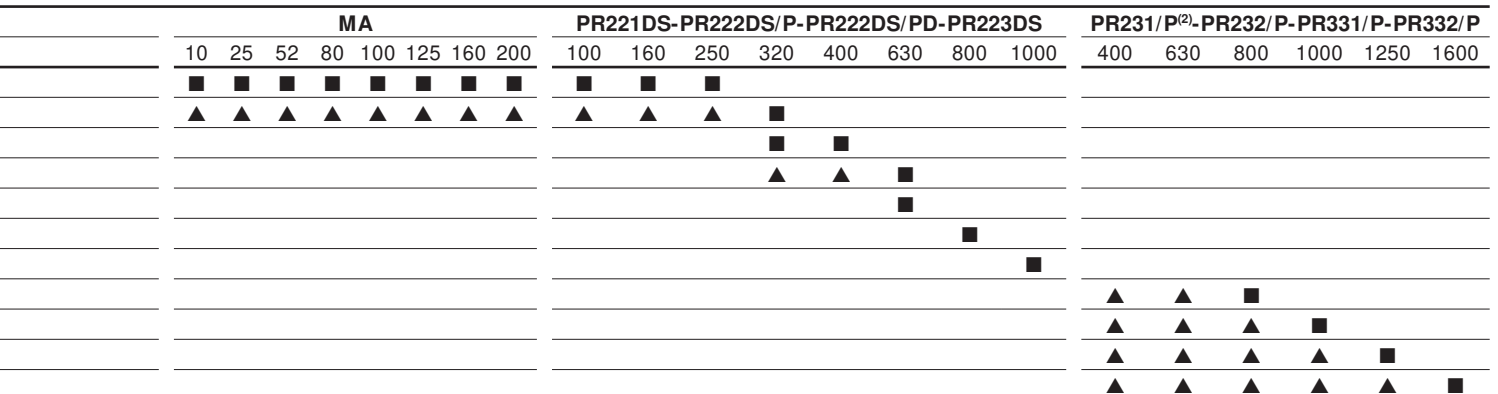

⁽²⁾ Interchangeability of PR231/P can be requested by means of the dedicated ordering code 1SDA063140R1.

Circuit-breakers for power distribution


Thermomagnetic trip units

The Tmax T1 1p, T1, T2, T3, T4, T5 and T6 circuit-breakers can be fitted with thermomagnetic trip units and are used in protection of alternating and direct current networks with a range of use from 1.6 A to 800 A. They allow the protection against overload with a thermal device (with fixed threshold for T1 1p and adjustable threshold for T1, T2, T3, T4, T5 and T6) realised using the bimetal technique, and protection against short-circuit with a magnetic device (with fixed threshold for T1, T2 and T3 and T4 up to 50 A and adjustable threshold for T4, T5 and T6).


The four-pole circuit-breakers are always supplied with the neutral protected by the trip unit and with protection of the neutral at 100% of the phase setting for settings up to 100 A. For higher settings, the protection of the neutral is at 50% of the phase setting unless the protection of the neutral at 100% of I_n is required.

Thermomagnetic trip units TMD e TMG (for T1, T2 and T3)

Thermal threshold
Adjustable from 0.7 to 1 x I_n

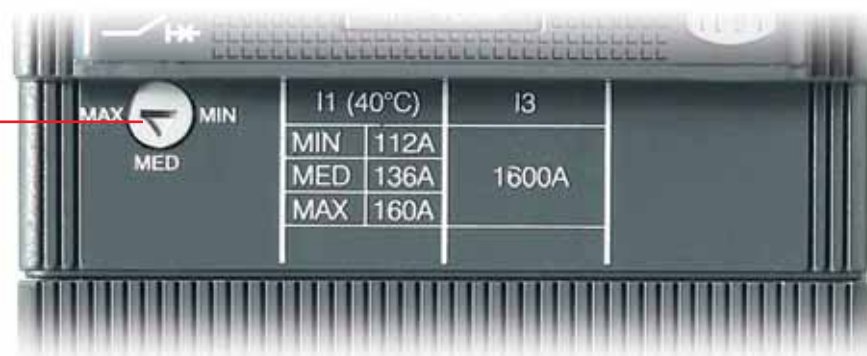

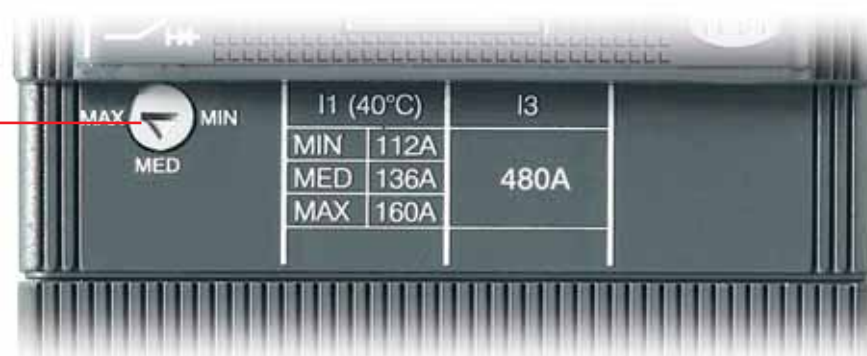

Thermal threshold
Adjustable from 0.7 to 1 x I_n





TMD = thermomagnetic trip unit with adjustable thermal threshold ($I_1 = 0.7 \dots 1 \times I_n$) and fixed magnetic threshold ($I_3 = 10 \times I_n$).
TMG = thermomagnetic trip unit with adjustable thermal threshold ($I_1 = 0.7 \dots 1 \times I_n$) and fixed magnetic threshold ($I_3 = 3 \times I_n$).

Furthermore, for Tmax T2, T3 and T5, the TMG thermomagnetic trip units with low magnetic trip threshold are available. For T2 and T3 the trip unit has adjustable thermal threshold ($I_1 = 0.7...1 \times I_n$) and fixed magnetic threshold ($I_3 = 3 \times I_n$), whereas for T5 the trip unit has adjustable thermal threshold ($I_1 = 0.7...1 \times I_n$) and adjustable magnetic threshold ($I_3 = 2.5...5 \times I_n$). The thermomagnetic trip units can be used to protect long cables and for generator protection, both in direct current and in alternating current.



TMD - T1 and T3

| | | | | | | | | | | | | | | | |
|---|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|--------------------|-----|-----|------|------|------|------|------|------|
|  | In [A] | 16 ⁽¹⁾ | 20 ⁽¹⁾ | 25 ⁽²⁾ | 32 | 40 | 50 | 63 | 80 | 100 | 125 | 125 | 160 | 200 | 250 |
| | Neutral [A] - 100% | 16 | 20 | 25 | 32 | 40 | 50 | 63 | 80 | 100 | 125 | – | 160 | 200 | 250 |
| $I_1 = 0.7...1 \times I_n$ | Neutral [A] - 50% | – | – | – | – | – | – | – | – | – | 80 | 100 | 125 | 160 | |
| | T1 160 | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | – | ■ | – | – |
| T3 250 | | | | | | | | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
|  | I_3 [A] | 630 ⁽³⁾ | 630 ⁽³⁾ | 630 ⁽³⁾ | 630 ⁽³⁾ | 630 ⁽³⁾ | 630 ⁽³⁾ | 630 | 800 | 1000 | 1250 | 1250 | 1600 | 2000 | 2500 |
| | Neutral [A] - 100% | 630 | 630 | 630 | 630 | 630 | 630 | 630 | 800 | 1000 | 1250 | 1250 | 1600 | 2000 | 2500 |
| $I_3 = 10 \times I_n$ | Neutral [A] - 50% | – | – | – | – | – | – | – | – | – | 800 | 1000 | 1250 | 1600 | |



TMD - T2

| | | | | | | | | | | | | | | | | | | | | | | |
|---|---|-----------|----|-----|-----|----|----|-----|----|-----|------|-----|-----|-----|-----|-----|-----|-----|-----|------|------|------|
|  | In [A] | 1.6 | 2 | 2.5 | 3.2 | 4 | 5 | 6.3 | 8 | 10 | 12.5 | 16 | 20 | 25 | 32 | 40 | 50 | 63 | 80 | 100 | 125 | 160 |
| | Neutral [A] - 100% | 1.6 | 2 | 2.5 | 3.2 | 4 | 5 | 6.3 | 8 | 10 | 12.5 | 16 | 20 | 25 | 32 | 40 | 50 | 63 | 80 | 100 | 125 | 160 |
| $I_1 = 0.7...1 \times I_n$ | Neutral [A] - 50% | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | 80 | 100 |
| |  | I_3 [A] | 16 | 20 | 25 | 32 | 40 | 50 | 63 | 80 | 100 | 125 | 500 | 500 | 500 | 500 | 500 | 500 | 630 | 800 | 1000 | 1250 |
| Neutral [A] - 100% | | 16 | 20 | 25 | 32 | 40 | 50 | 63 | 80 | 100 | 125 | 500 | 500 | 500 | 500 | 500 | 500 | 630 | 800 | 1000 | 1250 | 1600 |
| $I_3 = 10 \times I_n$ | Neutral [A] - 50% | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | – | 800 | 1000 |

TMG - T2

| | | | | | | | | | |
|---|---|-----------|-----|-----|-----|-----|-----|-----|-----|
|  | In [A] | 16 | 25 | 40 | 63 | 80 | 100 | 125 | 160 |
| | Neutral [A] - 100% | 16 | 25 | 40 | 63 | 80 | 100 | 125 | 160 |
| $I_1 = 0.7...1 \times I_n$ | | | | | | | | | |
| |  | I_3 [A] | 160 | 160 | 200 | 200 | 240 | 300 | 375 |
| Neutral [A] - 100% | | 160 | 160 | 200 | 200 | 240 | 300 | 375 | 480 |
| $I_3 = 3 \times I_n$ | | | | | | | | | |

TMG - T3

| | | | | | | | | | |
|---|---|-----------|-----|-----|-----|-----|-----|-----|-----|
|  | In [A] | 40 | 63 | 80 | 100 | 125 | 160 | 200 | 250 |
| | Neutral [A] - 100% | 63 | 63 | 80 | 100 | 125 | 160 | 200 | 250 |
| $I_1 = 0.7...1 \times I_n$ | | | | | | | | | |
| |  | I_3 [A] | 400 | 400 | 400 | 400 | 400 | 480 | 600 |
| Neutral [A] - 100% | | 400 | 400 | 400 | 400 | 400 | 480 | 600 | 750 |
| $I_3 = 3 \times I_n$ | | | | | | | | | |

Notes: ⁽¹⁾ only T1B ⁽²⁾ only T1B and T1C ⁽³⁾ T1N $\Rightarrow I_3$ [A] = 500; T1B-C available also the version with $\Rightarrow I_3$ [A] = 500

– In identifies the setting current for protection of the phases (L1, L2 and L3) and of the neutral.

– The TMD and TMA thermomagnetic trip units have the thermal element with adjustable threshold $I_1 = 0.7...1 \times I_n$. The value of the thermal element adjustment which is obtained by acting on the special selector, is intended at 40 °C. The magnetic element has fixed trip threshold with $\pm 20\%$ tolerance according to what is indicated by the IEC 60947-2 (pos. 8.3.3.1.2) Standard. The trip thresholds of the magnetic protection I_3 are a function of the setting used both by the phase and neutral protection.

Circuit-breakers for power distribution

Thermomagnetic trip units


Thermomagnetic trip units TMD/TMA and TMG (for T4, T5 and T6)

Thermal threshold

Adjustable

Thermal threshold

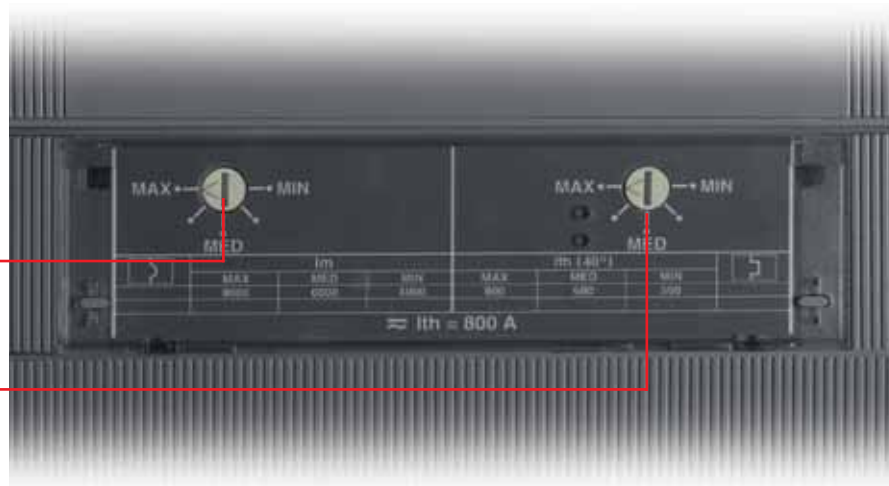

Adjustable from 0.7 to 1 x I_n





1SDC21004F0001

TMA = thermomagnetic trip unit with adjustable thermal threshold ($I_t = 0.7...1 \times I_n$) and adjustable magnetic threshold ($I_s = 5...10 \times I_n$)
 TMG (for T5) = thermomagnetic trip unit with adjustable thermal threshold ($I_t = 0.7...1 \times I_n$) and adjustable magnetic threshold ($I_s = 2.5...5 \times I_n$)



TMD/TMA - T4

| | | | | | | | | | | |
|---|---|-----|-----|-----|-----------|------------|------------|------------|-------------|-------------|
|  | I _n [A] | 20 | 32 | 50 | 80 | 100 | 125 | 160 | 200 | 250 |
| | Neutral [A] - 100% | 20 | 32 | 50 | 80 | 100 | 125 | 160 | 200 | 250 |
| | I _t = 0.7...1 x I _n Neutral [A] - 50% | - | - | - | - | - | 80 | 100 | 125 | 160 |
|  | I _s = 10 x I _n [A] | 320 | 320 | 500 | | | | | | |
| | I _s = 5...10 x I _n [A] | | | | 400...800 | 500...1000 | 625...1250 | 800...1600 | 1000...2000 | 1250...2500 |
| | I _s = 10 x I _n Neutral [A] - 100% | 320 | 320 | 500 | 400...800 | 500...1000 | 625...1250 | 800...1600 | 1000...2000 | 1250...2500 |
| I _s = 5...10 x I _n Neutral [A] - 50% | - | - | - | - | - | 400...800 | 500...1000 | 625...1250 | 800...1600 | |



TMA - T5

| | | | | | | | |
|---|---|--|-------------|--|-------------|--|-------------|
|  | I _n [A] | | 320 | | 400 | | 500 |
| | Neutral [A] - 100% | | 320 | | 400 | | 500 |
| | I _t = 0.7...1 x I _n Neutral [A] - 50% | | 200 | | 250 | | 320 |
|  | I _s [A] | | 1600...3200 | | 2000...4000 | | 2500...5000 |
| | Neutral [A] - 100% | | 1600...3200 | | 2000...4000 | | 2500...5000 |
| | I _s = 5...10 x I _n Neutral [A] - 50% | | 1000...2000 | | 1250...2500 | | 1600...3200 |

TMG - T5

| | | | | | | | |
|---|---|--|------------|--|-------------|--|-------------|
|  | I _n [A] | | 320 | | 400 | | 500 |
| | Neutral [A] - 100% | | 320 | | 400 | | 500 |
| | I _t = 0.7...1 x I _n | | | | | | |
|  | I _s [A] | | 800...1600 | | 1000...2000 | | 1250...2500 |
| | Neutral [A] - 100% | | 800...1600 | | 1000...2000 | | 1250...2500 |
| | I _s = 2.5...5 x I _n | | | | | | |

TMA - T6

| | | | | | |
|---|---|--|-------------|--|-------------|
|  | I _n [A] | | 630 | | 800 |
| | Neutral [A] - 100% | | 630 | | 400 |
| | I _t = 0.7...1 x I _n Neutral [A] - 50% | | 400 | | 250 |
|  | I _s [A] | | 3150...6300 | | 4000...8000 |
| | Neutral [A] - 100% | | 3150...6300 | | 4000...8000 |
| | I _s = 10 x I _n Neutral [A] - 50% | | 2000...4000 | | 2500...5000 |

Notes
 - I_n identifies the setting current for protection of the phases (L1, L2 and L3) and of the neutral.
 - The TMA and TMG thermomagnetic trip units which equip the Tmax T4, T5 and T6 circuit-breakers have the thermal element with adjustable threshold $I_t = 0.7...1 \times I_n$. The set current value which is obtained using the special selector is intended at 40 °C. The magnetic element has adjustable trip threshold ($I_s = 5...10 \times I_n$ for TMA and $I_s = 2.5...5 \times I_n$ for TMG) with a tolerance of $\pm 20\%$ according to what is indicated in the IEC 60947-2 (par. 8.3.3.1.2) Standard. The trip thresholds of the magnetic protection I_s are a function of the setting used both by the phase and neutral protection.

Circuit-breakers for power distribution

Electronic trip units

The Tmax T2, T4, T5, T6 and T7 circuit-breakers, for use in alternating current, can be equipped with overcurrent releases constructed using electronic technology. This allows protection functions to be obtained which guarantee high reliability, tripping precision and insensitivity to temperature and to the electromagnetic components in conformity with the standards on the matter.

The power supply needed for correct operation is supplied directly by the current sensors of the release, and tripping is always guaranteed, even under single-phase load conditions and in correspondence with the minimum setting.

Characteristics of the Tmax electronic trip units

| | |
|---|-------------------------|
| Operating temperature | -25 °C ... +70 °C |
| Relative humidity | 98% |
| Self-supply | 0.2 x In (single phase) |
| Auxiliary power supply (where applicable) | 24 V DC |
| Operating frequency | 45...66 Hz |
| Electromagnetic compatibility (LF and HF) | IEC 60947-2 Annex F |

For Tmax T2, T4, T5 and T6 the protection trip unit consists of:

- 3 or 4 current sensors (current transformers)
- external current sensors (e.g. for the external neutral), when available
- a trip unit
- a trip coil (for T2 housed in the right slot, for T4, T5 and T6 integrated in the electronic trip unit).

For Tmax T7 the protection trip unit consists of:

- 3 or 4 current sensors (Rogowski coils and current transformers)
- external current sensors (e.g. for the external neutral)
- interchangeable rating plug
- a trip unit
- a trip coil housed in the body of the circuit-breaker.

Rating plugs

| Circuit-breaker | CS Rated current I _u | In [A] | | | | | |
|-----------------|---------------------------------|--------|-----|-----|------|------|------|
| | | 400 | 630 | 800 | 1000 | 1250 | 1600 |
| T7 | 800 | ■ | ■ | ■ | | | |
| | 1000 | ■ | ■ | ■ | ■ | | |
| | 1250 | ■ | ■ | ■ | ■ | ■ | |
| | 1600 | ■ | ■ | ■ | ■ | ■ | ■ |

The current sensors supply the electronic trip unit with the energy needed for correct operation of the trip unit and the signal needed to detect the current.

The current sensors are available with rated primary current as shown in the table.

Current sensors

| | In [A] | 10 | 25 | 63 | 100 | 160 | 250 | 320 | 400 | 630 | 800 | 1000 | 1250 | 1600 |
|------------------------------------|--------|----|----|----|-----|-----|-----|-----|-----|-----|-----|------|------|------|
| PR221DS | T2 | ■ | ■ | ■ | ■ | ■ | | | | | | | | |
| | T4 | | | | ■ | ■ | ■ | ■ | | | | | | |
| | T5 | | | | | | | ■ | ■ | ■ | | | | |
| | T6 | | | | | | | | | ■ | ■ | ■ | | |
| PR222DS/P, PR222DS/PD, PR223DS | T4 | | | | ■ | ■ | ■ | ■ | | | | | | |
| | T5 | | | | | | | ■ | ■ | ■ | | | | |
| | T6 | | | | | | | | | ■ | ■ | ■ | | |
| PR231/P, PR232/P, PR331/P, PR332/P | T7 | | | | | | | | ■ | ■ | ■ | ■ | ■ | ■ |

When a protection function trips, the circuit-breaker opens by means of the trip coil, which changes over a contact (AUX-SA, supplied on request, see chapter “Accessories” at page 3/20 and following) to signal trip unit tripped. Signalling reset is of mechanical type and takes place with resetting of the circuit-breaker.

Circuit-breakers for power distribution

Electronic trip units

Basic protection functions



(L) Protection against overload

This protection function trips when there is an overload with inverse long-time delay trip according to the IEC 60947-2 Standard ($I^2t=k$). The protection cannot be excluded.



(S) Protection against short-circuit with time delay

This protection function trips when there is a short-circuit, with long inverse time-delay trip ($I^2t=k$ ON) or a constant trip time ($I^2t=k$ OFF). The protection can be excluded.



(I) Instantaneous protection against short-circuit

This protection function trips instantaneously in case of a short-circuit. The protection can be excluded.



(G) Protection against earth fault

The protection against earth fault trips when the vectorial sum of the currents passing through the current sensors exceeds the set threshold value, with long inverse time-delay trip ($I^2t=k$ ON) or a constant trip time ($I^2t=k$ OFF). The protection can be excluded.

Advanced protection functions

The PR332/P trip unit makes it possible to carry out highly developed protection against the most varied types of fault. In fact, it adds the following advanced protection functions to the basic protection functions.



IEC 60255-3

(L) Protection against overload (IEC 60255-3)

This protection trips in case of an overload with inverse long-time delay according to IEC 60255-3 Standard, for the coordination with fuses and MV protections. The protection can be excluded.



(U) Protection against unbalanced phase

The protection function against unbalanced phase U can be used in those cases where a particularly precise control is needed regarding missing and/or unbalance of the phase currents. The trip time is instantaneous. The protection can be excluded.



(OT) Protection against overtemperature

The protection against overtemperature trips instantaneously when the temperature inside the trip unit exceeds 85 °C, in order to prevent any temporary or continual malfunction of the microprocessor. The protection cannot be excluded.



(Rc) Protection against residual current ⁽¹⁾

This integrated protection is based on current measurements made by an external toroid and is alternative to protection against earth fault G. The protection can be excluded.



(ZS) Zone selectivity ⁽²⁾

ZS zone selectivity is an advanced method for carrying out coordination of the protections in order to reduce the trip times of the protection closest to the fault in relation to the time foreseen by time selectivity. Zone selectivity can be applied to the protection functions S and G, with constant time-delay trip. The protection can be excluded.



(UV, OV, RV) Protections against voltage

The three protections trip with a constant time-delay in the case of undervoltage, overvoltage and residual voltage respectively. The latter allows to detect interruptions of the neutral (or of the earthing conductor in systems with earthed neutral) and faults which cause movement of the star centre in systems with isolated neutral (e.g. large earth faults) to be identified. Movement of the star centre is calculated by vectorially summing the phase voltages. The protections can be excluded.



(RP) Protection against reversal of power

The protection against reversal power causes tripping of the breaker, with constant time-delay trip, when the flow of power reverses sign and exceeds, as an absolute value, the set threshold. It is particularly suitable for protection of large machines such as generators. The protection can be excluded.




(UF, OF) Protections of frequency


The two protections detect the variation in network frequency above or below the adjustable thresholds, opening the circuit-breaker, with constant time-delay trip. The protection can be excluded.


⁽¹⁾ It is not suitable for human protection.


⁽²⁾ For further information about zone selectivity, please see the section: "Circuit-breakers for zone selectivity".

Electronic trip units for power distribution

| | | | |
|----------------------|--|--|----------------|
| SACE PR221DS | |  | |
| | | PR221DS | PR221DS |
| Protection functions | | L S / I | I |

| | | | |
|-----------------------|--|---|------------------|
| SACE PR222DS/P | |  | |
| | | PR222DS/P | PR222DS/P |
| Protection functions | | L S I | L S I G |

| | | | |
|------------------------|--|--|-------------------|
| SACE PR222DS/PD | |  | |
| | | PR222DS/PD | PR222DS/PD |
| Protection functions | | L S I | L S I G |

| | | | |
|----------------------|--|--|--|
| SACE PR223DS | |  | |
| | | PR223DS | |
| Protection functions | | L S I G | |

Circuit-breakers for power distribution

Electronic trip units

SACE PR231/P




PR231/P

PR231/P

Protection functions



SACE PR232/P

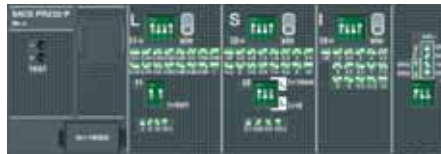

PR232/P

Protection functions



SACE PR331/P



PR331/P

Protection functions



SACE PR332/P



PR332/P

PR332/P

PR332/P

PR332/P

Protection functions



Advanced protection function⁽¹⁾



Opt.⁽²⁾



⁽¹⁾ In alternative to R_c (with external toroid).

⁽²⁾ Available with PR330/V. Measurement module.

⁽³⁾ For all versions.

⁽⁴⁾ According to IEC 60255-3.


PR221DS

The PR221DS trip unit, available for T2, T4, T5 and T6, provides protection functions against overload L and short-circuit S/I (version PR221DS-LS/I): with this version, by moving the dedicated dip-switch, you can choose whether to have inverse time-delay S or instantaneous I protection against short-circuit. Alternatively, the version with only the protection function against instantaneous short-circuit I is available (version PR221DS-I, also see page 2/43 and following).




There is a single adjustment for the phases and the neutral. However, for the neutral it can be decided whether to request the protection threshold of the functions at 50 - 100% of that of the phases for Tmax T2 (In = 100 A), whereas for T4, T5 and T6 it is possible to select the protection threshold OFF, 50% or 100% directly from the front of the trip unit by means of the specific dip switch.

The trip coil is always supplied with the PR221DS trip unit for Tmax T2 and is housed in the right-hand slot of the circuit-breaker. Dedicated auxiliary contacts are available for T2 with electronic trip unit (see page 3/22).

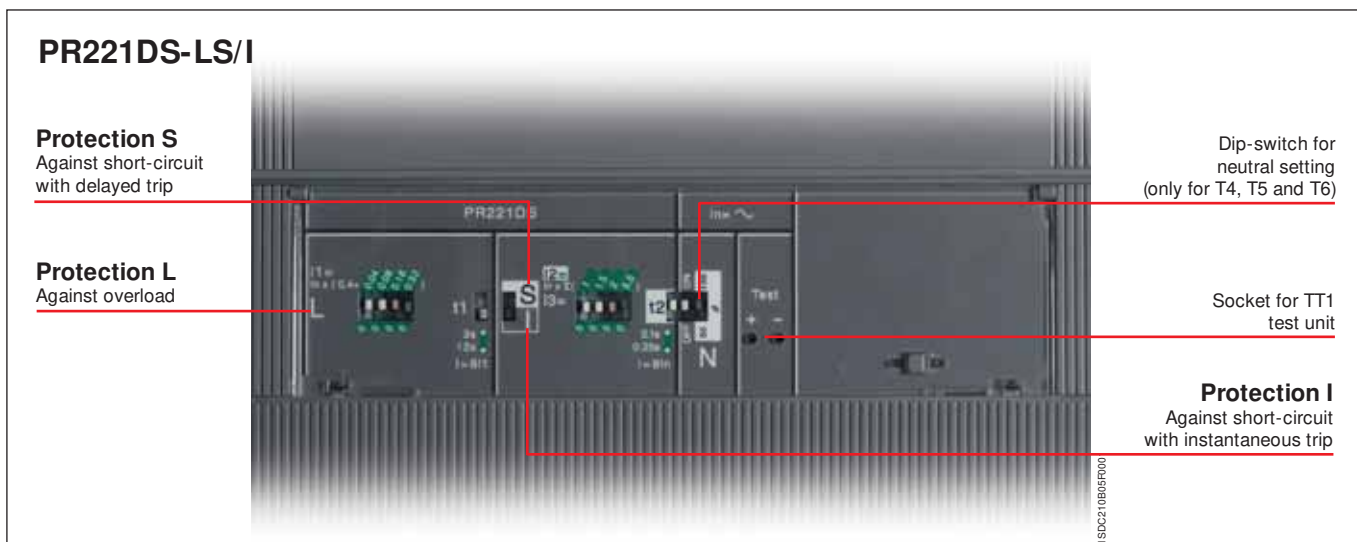For Tmax T4, T5 and T6, the opening solenoid is housed internally and therefore, by not using the right-hand slot of the circuit-breaker, all the auxiliary contacts available can be used.



PR221DS - Protection functions and parameterisations

| Protection functions ⁽¹⁾ | Trip threshold | Trip curves | Excludability | Relation t = f(I) |
|---|---|---|---------------|-------------------|
|  <p>Against overload with long inverse time delay trip and trip characteristic according to an inverse time curve ($I^2t=k$) according to IEC 60947-2 Standard</p> | $I_1 = 0.40 - 1 \times I_n$ step = $0.04 \times I_n$ Trip between $1.1...1.30 \times I_1$ (T4, T5, T6) Trip between $1.05...1.30 \times I_1$ (T2) | at $6 \times I_1$ $t_1 = 3-6$ (only for T2) - 12s (only for T4, T5, T6) Tolerance: $\pm 10\%$ up to $6 \times I_n$ (T4, T5, T6) $\pm 10\%$ up to $2 \times I_n$ (T2) $\pm 20\%$ above $6 \times I_n$ (T4, T5, T6) $\pm 20\%$ above $2 \times I_n$ (T2) | - | $t = k/I^2$ |
|  <p>Against short-circuit with inverse short time delay trip and trip characteristic with inverse time ($I^2t=k$) (selectable as an alternative to protection function I)</p> | $I_2 = 1-1.5-2-2.5-3-3.5-4.5-5.5-6.5-7-7.5-8-8.5-9-10 \times I_n$ Tolerance: $\pm 10\%$ (T4, T5, T6) $\pm 10\%$ up to $2 \times I_n$ (T2) $\pm 20\%$ above $2 \times I_n$ (T2) | at $8 \times I_n$ $t_2 = 0.1 - 0.25s$ Tolerance: $\pm 10\%$ up to $6 \times I_n$ (T4, T5, T6) $\pm 20\%$ above $6 \times I_n$ (T4, T5, T6) $\pm 20\%$ (T2) | ■ | $t = k/I^2$ |
|  <p>Against short-circuit with instantaneous trip (selectable as an alternative to protection function S)</p> | $I_3 = 1-1.5-2-2.5-3-3.5-4.5-5.5-6.5-7-7.5-8-8.5-9-10 \times I_n$ Tolerance: $\pm 10\%$ (T4, T5, T6) $\pm 20\%$ (T2) | instantaneous | ■ | $t = k$ |

⁽¹⁾ These tolerances hold in the following conditions:
 - self-powered trip unit at full power (without start-up)
 - two or three-phase power supply
 In conditions other than those considered, the following tolerances hold:

⁽²⁾ For T4 In = 320 A, T5 In = 630 A and T6 In = 1000 A $\Rightarrow I_{2,max} = 8.5 \times I_n$.

| | Trip threshold | Trip time |
|---|----------------|-------------|
| S | $\pm 20\%$ | $\pm 20\%$ |
| I | $\pm 20\%$ | $\leq 40ms$ |

Circuit-breakers for power distribution

Electronic trip units

PR222DS/P

The PR222DS/P trip unit, available for T4, T5 and T6, has protection functions against overload L, delayed S and instantaneous I short-circuit (version PR222DS/P-LSI). Alternatively, as well as the functions L, S, I, it also has protection against earth fault G (version PR222DS/P-LSIG).

Setting of the PR222DS trip unit can be carried out by means of dip switches on the front of the circuit-breaker or electronically, using the PR010/T programming and control unit (see page 3/47) or the BT030 wireless communication unit (see page 3/43).

There is a single setting for the phases and neutral, for which one can decide whether to set the threshold of the protection functions to OFF, to 50% or to 100% that of the phases by means of two dedicated dip switches.

Furthermore, on the front of the PR222DS/P (or PR222DS/PD) trip units, signalling of pre-alarm and alarm of protection L is available. The pre-alarm threshold value, signalled by the red LED flashing, is equal to $0.9 \times I_n$. It is also possible to transmit remotely the alarm of protection L, simply connecting connector X3 to the dedicated contact.

PR222DS/PD

Apart from the protection functions available for the PR222DS/P trip unit (for the settings see page 2/19), the PR222DS/PD trip unit, available for T4, T5 and T6 also has the dialogue unit integrated with Modbus® RTU protocol.

The Modbus® RTU protocol has been known and used worldwide for many years and is now a market standard thanks to its simplicity of installation, configuration and to its integration in the various different supervision, control and automation systems, as well as good level performances.

The PR222DS/PD trip units allow the Tmax T4, T5 and T6 circuit-breakers to be integrated in a communication network based on the Modbus® RTU protocol. Modbus® RTU provides a Master-Slave system architecture where a Master (PLC, PC...) cyclically interrogates several Slaves (field devices). The devices use the EIA RS485 standard as the physical means for data transmission at a maximum transmission speed of 19.2 kbps.

Again for this trip unit, the power supply needed for correct operation of the protection functions is supplied directly by the current transformers of the trip unit, and tripping is always guaranteed, even under conditions of single-phase load down. Nevertheless, communication is only possible with an auxiliary power supply of 24 V DC.

PR222DS/PD - Electrical characteristics

| | |
|---|-------------------|
| Auxiliary power supply (galvanically insulated) | 24 V DC \pm 20% |
| Maximum ripple | \pm 5% |
| Inrush current @ 24 V | 1 A for 30 ms |
| Rated current @ 24 V | 100 mA |
| Rated power @ 24 V | 2.5 W |

The PR222DS/PD release, with integrated communication and control functions, allows a wide range of information to be acquired and transmitted remotely, opening and closing commands to be carried out by means of the electronic version motor operator, the configuration and programming parameters of the unit to be stored, such as the current thresholds of the protection functions and the protection curves.

All the information can be consulted both locally, directly on the front of the circuit-breaker with the front display unit FDU or on the HMI030 switchgear multi-meter, and remotely by means of supervision and control systems.

Moreover, by means of the BT030 external module, to be connected to the test connector of the PR222DS/PD trip unit, wireless communication to a PDA or Notebook is possible through a Bluetooth port.

The PR222DS/PD trip units can be associated with the AUX-E auxiliary contacts in electronic version, to know the state of the circuit-breaker (open/closed), and with MOE-E motor operator (the AUX-E are compulsory when MOE-E is to be used) to remotely control circuit-breaker opening and closing as well.

If the circuit-breaker fitted with the PR222DS/PD trip unit is inserted in a supervision system, during the test phases with the PR010/T unit, communication is automatically abandoned and starts again on completion of this operation.

| | PR222DS/P | PR222DS/PD | PR223DS |
|--|------------------|---------------------|---------------------|
| Communication functions | | | |
| Protocol | | Modbus RTU standard | Modbus RTU standard |
| Physical medium | | EIA RS485 | EIA RS485 |
| Speed (maximum) | | 19.2 kbps | 19.2 kbps |
| Measurement functions | | | |
| Phase currents | ■ ⁽¹⁾ | ■ | ■ |
| Neutral current | ■ ⁽¹⁾ | ■ | ■ |
| Ground current | ■ ⁽¹⁾ | ■ | ■ |
| Voltages (phase to phase, phase to earth) | | | ■ |
| Powers (active, reactive, apparent) | | | ■ |
| Power factors | | | ■ |
| Energies | | | ■ |
| Peak factor | | | ■ |
| Frequency | | | ■ |
| Signalling functions | | | |
| L pre-alarm and alarm LED | ■ ⁽⁵⁾ | ■ ⁽⁵⁾ | ■ |
| L alarm output contact ⁽²⁾ | ■ | ■ | ■ |
| Available data | | | |
| Circuit-breaker status (open, closed) ⁽³⁾ | | ■ | ■ |
| Mode (local, remote) | | ■ | ■ |
| Protection parameters set | ■ ⁽¹⁾ | ■ | ■ |
| Alarms | | | |
| Protections: L, S, I, G | ■ ⁽¹⁾ | ■ | ■ |
| Failed tripping under fault conditions | ■ ⁽¹⁾ | ■ | ■ |
| Maintenance | | | |
| Total number of operations | | ■ | ■ |
| Total number of trips | | ■ | ■ |
| Number of trip tests | | ■ | ■ |
| Number of manual operations | | ■ | ■ |
| Number of trips for each individual protection function | | ■ | ■ |
| Record of last trip data | ■ ⁽¹⁾ | ■ | ■ |
| Commands | | | |
| Circuit-breaker opening/closing (with motor operator) | | ■ | ■ |
| Alarm reset | ■ ⁽¹⁾ | ■ | ■ |
| Circuit-breaker reset (with motor operator) | | ■ | ■ |
| Setting the curves and protection thresholds | ■ ⁽¹⁾ | ■ | ■ |
| Safety function | | | |
| Automatic opening in the case of failed Trip command fail (with motor operator) ⁽⁴⁾ | | ■ | ■ |
| Events | | | |
| Changes in circuit-breaker state, in the protections and all the alarms | | ■ | ■ |

⁽¹⁾ With PR010/T unit or BT030 unit

⁽²⁾ Typical contact: MOS photo Vmax: 48 V DC/30 V AC
I_{max}: 50 mA DC/35 mA AC

⁽³⁾ Available with AUX-E electronic auxiliary contacts

⁽⁴⁾ The motor operator must be in electronic version (MOE-E) and electronic auxiliary contacts (AUX-E) have to be used

⁽⁵⁾ Signals: – Pre-alarm L - permanently lit
– Alarm L - flashing (0.5 s ON / 0.5 s OFF)
– Incongruent manual setting (L > S / S > I) - flashing (1 s ON / 2 s OFF)
– WINK (remote control to identify the relay) - flashing (0.125 s ON / 0.125 s OFF)

Circuit-breakers for power distribution

Electronic trip units

PR222DS/P

Protection S
Against short-circuit
with delayed trip

Protection L
Against overload


Socket for TT1
test unit

Socket for connection
of PR010/T test unit
and BT030 wireless
communication unit

Protection I
Against short-circuit
with instantaneous trip

Dip-switch for
neutral setting

Selection for electronic
or manual setting

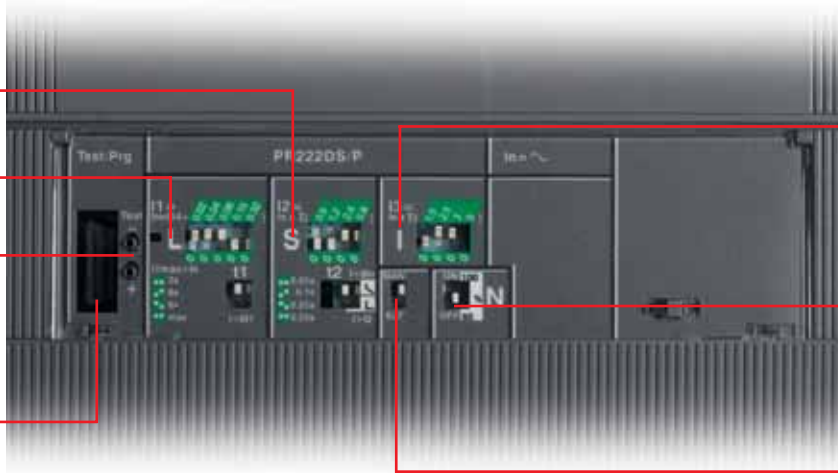

1SDC21008R0001

PR222DS/PD

Protection S
Against short-circuit
with delayed trip

Protection L
Against overload

Socket for TT1
test unit

Socket for connection
of PR010/T test unit
and BT030 wireless
communication unit

Protection I
Against short-circuit
with instantaneous trip

Dip-switch for
neutral setting

Selection for electronic
or manual setting

Selection for local
or remote setting



1SDC210087R0001

PR223DS


Socket for connection
of PR010/T test unit
and BT030 wireless
communication unit

Socket for TT1
test unit

LED signalling alarm
of the circuit-breaker




LED signalling
the status of the
circuit-breaker

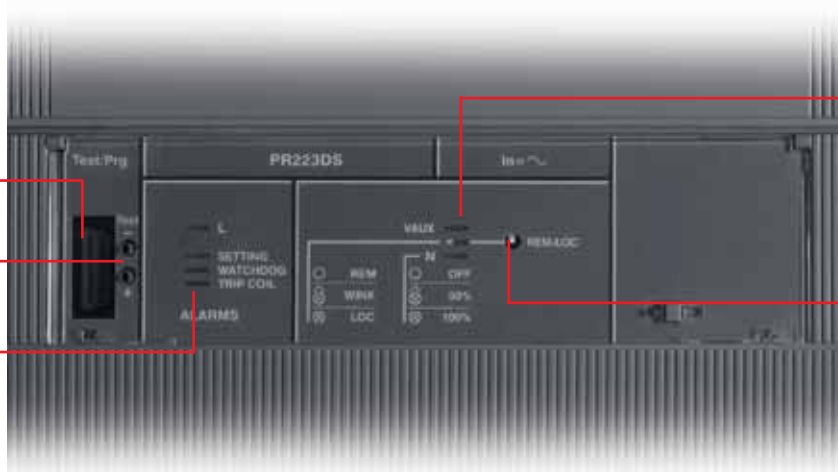Push button for
operation
mode selection
(local/remote)
and on-board
diagnosis system



1SDC21008R0001

PR222DS/P, PR222DS/PD and PR223DS⁽⁵⁾ - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation $t = f(I)$ |
|--|---|---|---------------|---------------------|
|  <p>Against overload with long inverse time delay trip and trip characteristic according to an inverse time curve ($I^2t = k$) according to IEC 60947-2 Standard</p> | <p>Manual setting $I_1 = 0.40 \dots 1 \times I_n$ step = $0.02 \times I_n$</p> <p>Electronic setting $I_1 = 0.40 \dots 1 \times I_n$ step $0.01 \times I_n$ Trip between $1.1 \dots 3 \times I_1$</p> | <p>Manual setting at $6 \times I_1$ $t_1 = 3 - 6 - 9 - 18s^{(2)}$</p> <p>Electronic setting at $6 \times I_1$ $t_1 = 3 \dots 18s$ step $0.5s^{(2)}$ Tolerance: $\pm 10\%$</p> | - | $t = k/I^2$ |
|  <p>Against short-circuit with inverse short time delay trip and trip characteristic with inverse time ($I^2t = k$) or definite time</p> | <p>Manual setting $I_2 = 0.6 - 1.2 - 1.8 - 2.4 - 3 - 3.6 - 4.2 - 5.8 - 6.4 - 7 - 7.6 - 8.2 - 8.8 - 9.4 - 10 \times I_n^{(3)}$</p> <p>Electronic setting $I_2 = 0.60 \dots 10 \times I_n$ step $0.1 \times I_n$ Tolerance: $\pm 10\%$</p> | <p>Manual setting at $8 \times I_n$ $t_2 = 0.05 - 0.1 - 0.25 - 0.5s$</p> <p>Electronic setting at $8 \times I_n$ $t_2 = 0.05 \dots 0.5s$ step $0.01s$ Tolerance: $\pm 10\%^{(4)}$</p> | ■ | $t = k/I^2$ |
| | <p>Manual setting $I_2 = 0.6 - 1.2 - 1.8 - 2.4 - 3 - 3.6 - 4.2 - 5.8 - 6.4 - 7 - 7.6 - 8.2 - 8.8 - 9.4 - 10 \times I_n^{(3)}$</p> <p>Electronic setting $I_2 = 0.60 \dots 10 \times I_n$ step $0.1 \times I_n$ Tolerance: $\pm 10\%$</p> | <p>Manual setting $t_2 = 0.05 - 0.1 - 0.25 - 0.5s$</p> <p>Electronic setting $t_2 = 0.05 \dots 0.5s$ step $0.01s$ Tolerance: $\pm 10\%^{(4)}$</p> | ■ | $t = k$ |
| | <p>Manual setting $I_3 = 1.5 - 2.5 - 3 - 4 - 4.5 - 5 - 5.5 - 6.5 - 7 - 7.5 - 8 - 9 - 9.5 - 10.5 - 12 \times I_n^{(3)}$</p> <p>Electronic setting $I_3 = 1.5 \dots 12 \times I_n^{(3)}$ step $0.1 \times I_n$ Tolerance: $\pm 10\%$</p> | <p>instantaneous</p> <p>Electronic setting $t_2 = 0.05 \dots 0.5s$ step $0.01s$ Tolerance: $\pm 10\%^{(4)}$</p> | ■ | $t = k$ |
|  <p>Against earth fault with inverse short time delay trip and trip characteristic according to an inverse time curve ($I^2t = k$)</p> | <p>Manual setting $I_4 = 0.2 - 0.25 - 0.45 - 0.55 - 0.75 - 0.8 - 1 \times I_n$</p> <p>Electronic setting $I_4 = 0.2 \dots 1 \times I_n$ step $0.1 \times I_n$ Tolerance: $\pm 10\%$</p> | <p>Manual setting up to up to up to up to $3.15 \times I_4$ $2.25 \times I_4$ $1.6 \times I_4$ $1.10 \times I_4$ $t_4 = 0.1s$ $t_4 = 0.2s$ $t_4 = 0.4s$ $t_4 = 0.80s$</p> <p>Electronic setting $t_4 = 0.1 \dots 0.8 \times I_n$ step $0.01s$ Tolerance: $\pm 15\%$</p> | ■ | $t = k/I^2$ |

⁽¹⁾ These tolerances hold in the following conditions:
 – self-powered trip unit at full power and/or auxiliary supply
 – two or three-phase power supply

In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip time |
|----------|----------------|-------------|
| S | $\pm 20\%$ | $\pm 20\%$ |
| I | $\pm 20\%$ | $\leq 50ms$ |
| G | $\pm 20\%$ | $\pm 20\%$ |

⁽²⁾ For T4 $I_n = 320 A$ and T5 $I_n = 630 A \Rightarrow t_1 = 12s$

⁽³⁾ For T4 $I_n = 320 A$ and T5 $I_n = 630 A$. T6 $I_n = 1000 A \Rightarrow I_{2max} = 8.8 \times I_n$ and $I_{3max} = 9.5 \times I_n$

⁽⁴⁾ Tolerance: $\pm 10 ms$

⁽⁵⁾ The setting of the PR223DS trip unit is electronic only (local/remote)

The L protection can be set at $I_1 = 0.18 \dots 1 \times I_n$. For $I_1 < 0.4 \times I_n$ the neutral setting must be at 100% of that of the phases.

Circuit-breakers for power distribution

Electronic trip units

PR223DS

Apart from the traditional L, S, I, and G protection functions, the PR223DS release, available on T4, T5 and T6, also offers the possibility of measuring the main electrical values. In fact, by means of the VM210 accessory, and without the use of voltage transformers, the current, voltage, power and energy values can be made available to the user both locally, directly on the front of the circuit-breaker with the front display unit - FDU - or on the HMI030 front of switchgear interface, and remotely by means of a supervision and control system.

Setting the PR223DS release can only be carried out electronically, using the PR010/T test unit (setting in local mode) or the dialogue (setting in remote mode). For the protection function adjustments, see page 2/19.

For the neutral, it is possible to set the protection threshold of the functions to OFF, to 50% and to 100% of that of the phases (for protection L settings below $0.4 \times I_n$, it is obligatory to set the neutral to 100%). The pre-alarm and alarm signalling of protection L are also available by means of a dedicated LED on the front of the release. The pre-alarm threshold value is equal to $0.9 \times I_n$.

Still on the front of the release, the LEDs signalling the following information are available: state of the connection to the opening solenoid, use of the default parameters, mode (local or remote), presence of auxiliary power supply and setting the neutral.

PR223DS - Measurements

| Measurements | With distributed N | Without distributed N |
|--------------------------|---|--------------------------|
| Effective current values | I_1, I_2, I_3, I_{ne} | I_1, I_2, I_3 |
| Effective voltage values | $V_1, V_2, V_3, V_{12}, V_{23}, V_{31}$ | V_{12}, V_{23}, V_{31} |
| Apparent powers | S_{tot}, S_1, S_2, S_3 | S_{tot} |
| Active powers | P_{tot}, P_1, P_2, P_3 | P_{tot} |
| Reactive powers | Q_{tot}, Q_1, Q_2, Q_3 | Q_{tot} |
| Power factors | $\cos \varphi$ | $\cos \varphi$ |
| Energies | E_{TOT} | E_{TOT} |
| Phase peak factor | ■ | ■ |
| Frequency | f | f |

The PR223DS trip unit, with integrated ModBus RTU protocol based dialogue unit, allows a wide range of information to be acquired and transmitted remotely and to carry out opening and closing commands.

The PR223DS trip unit can be associated with the AUX-E auxiliary contacts, to know the state of the circuit-breaker (open, closed), and with MOE-E motor operator (the AUX-E are compulsory when MOE-E is to be used) to remotely control circuit-breaker opening and closing as well.

If the PR223DS trip unit is inserted in a supervision system, during the test and configuration with the PR010/T unit, communication is automatically abandoned and starts again on completion of these operations.

The unit is self-supplied by means of current sensors housed in the electronic release. Operation of the electronic release is also guaranteed when there is a single-phase load and in correspondence with the minimum setting. An external power supply must be connected to activate the dialogue function and the measurement functions.

Auxiliary power supply - Electrical characteristics

| | PR223DS |
|---|-----------------------|
| Auxiliary power supply (galvanically insulated) | 24 V DC \pm 20% |
| Maximum ripple | \pm 5% |
| Inrush current @24 V | \sim 4 A for 0.5 ms |
| Rated current @24 V | \sim 80 mA |
| Rated power @24 V | \sim 2 W |


PR231/P

The PR231/P trip unit is the basic trip unit for Tmax T7. It provides protection functions against overload L and short-circuit S/I (version PR231/P-LS/I): with this version, by moving the dedicated dip-switch, you can choose whether to have protection S or protection I. Alternatively the version with only the protection function against instantaneous short-circuit I is available (version PR231/P-I see also page 2/43 and following).

Setting the trip parameters of the PR231/P trip unit is made directly on the front of the circuit-breaker by means of dip switches, and there is only one for the phases and the neutral, so it is possible to set the protection threshold, at 50% or at 100% of the phase protection.

For correct functioning of the PR231/P trip unit, it is necessary to select the network frequency of the plant to be protected (50/60Hz) by means of the appropriate dip-switch.

Interchangeability of PR231/P can be requested by means of the dedicated ordering code 1SDA063140R1.

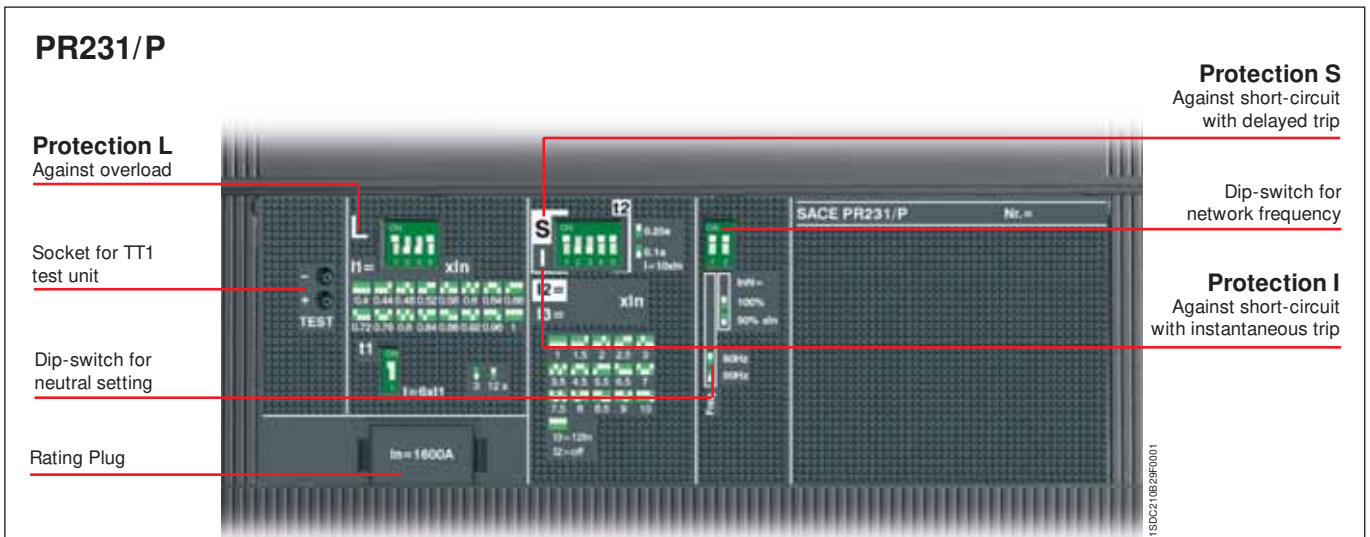

PR231/P - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation t = f(I) |
|---|--|---|---------------|----------------------|
| <p>Against overload with long inverse time delay trip and trip characteristic according to an inverse time curve (I²t = k) according to IEC 60947-2 Standard</p> | <p>I₁ = 0.40...1 x I_n step = 0.04 x I_n</p> <p>Trip between 1.1...1.3 x I₁</p> <p>Tolerance: ±10%</p> | <p>at 6 x I₁ at 6 x I₁</p> <p>t₁ = 3 - 12s</p> <p>Tolerance: ±10%</p> | - | t = k/I ² |
| <p>Against short-circuit with long inverse time delay trip and trip characteristic with inverse time (I²t = k) (selectable as an alternative to protection function I)</p> | <p>I₂ = 1-1.5-2-2.5-3-3.5-4.5-5.5-6.5-7-7.5-8-8.5-9-10 x I_n</p> <p>Tolerance: ±10%</p> | <p>at 10 x I₂ at 10 x I₂</p> <p>t₂ = 0.1 - 0.25s</p> <p>Tolerance: ±10%</p> | ■ | t = k/I ² |
| <p>Against short-circuit with instantaneous trip (selectable as an alternative to protection function S)</p> | <p>I₃ = 1-1.5-2-2.5-3-3.5-4.5-5.5-6.5-7-7.5-8-8.5-9-10-12 x I_n</p> <p>Tolerance: ±10%</p> | <p>instantaneous</p> | - | t = k |

⁽¹⁾ These tolerances hold in the following conditions:
 - self-powered trip unit at full power
 - two or three-phase power supply
 In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip time |
|----------|----------------|-----------|
| S | ± 10% | ± 20% |
| I | ± 15% | ≤ 60ms |

Circuit-breakers for power distribution


Electronic trip units

PR232/P

The PR232/P release, available for T7, provides protection functions against overload L, delayed short-circuit S and instantaneous short-circuit I (version PR232/P-LS/I).

Setting the trip parameters (see table) of the PR232/P release can be carried out by means of the dip-switches, and is unique for the phases and the neutral, for which it is possible to set the protection threshold to OFF, to 50%, 100% or 200% of the threshold of the phases directly from the front of the release by means of a special dip-switch. In particular, adjustment of the neutral to 200% of the phase current requires setting protection L to respect the current-carrying capacity of the circuit-breaker.

To guarantee protection of the installation by means of the PR232/P protection release, it is necessary to select the rated network frequency (50/60 Hz), by means of the special dip-switch.

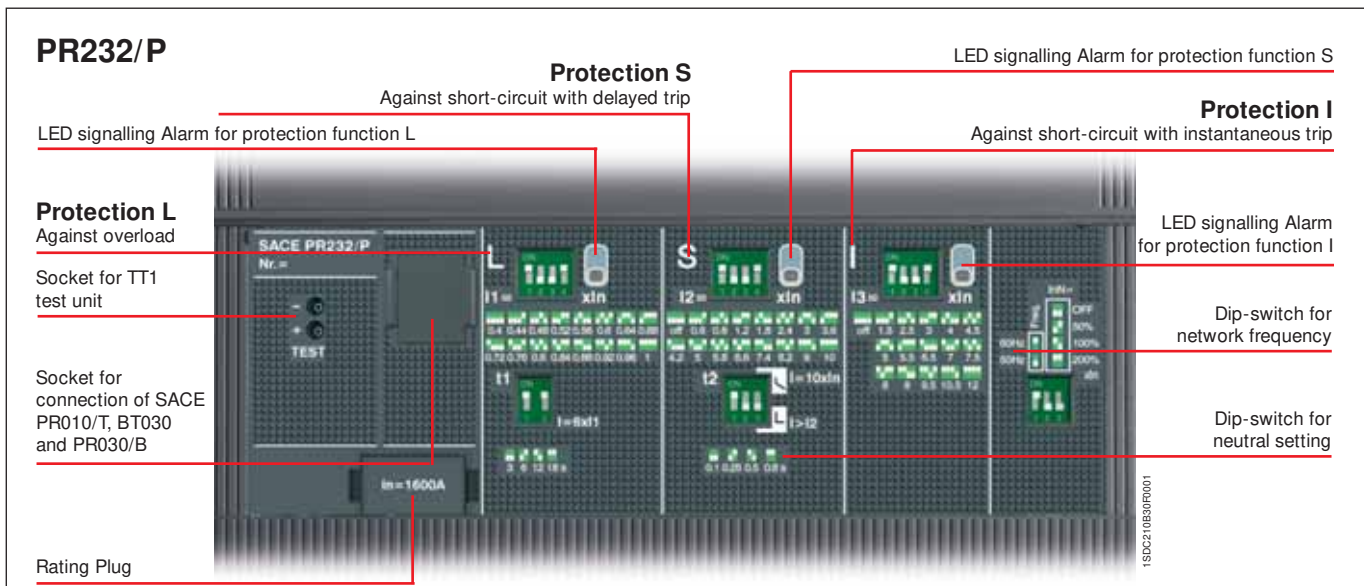

PR232/P - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Thermal memory ⁽²⁾ | Excludability | Relation $t = f(I)$ |
|--|--|---|-------------------------------|---------------|---------------------|
| L Against overload with long inverse time delay trip and trip characteristic according to an inverse time curve ($I^2t = k$) according to IEC 60947-2 Standard | $I_1 = 0.40...1 \times I_n$ step = $0.04 \times I_n$ Trip between $1.1...1.3 \times I_1$ | at $6 \times I_1$ $t_1 = 3s$ $t_1 = 6s$ $t_1 = 12s$ $t_1 = 18s$ Tolerance: $\pm 10\%$ | ■ | — | $t = k/I^2$ |
| S Against short-circuit with inverse short time delay trip and trip characteristic with inverse time ($I^2t = k$) or definite time | $I_2 = 0.6 - 0.8 - 1.2 - 1.8 - 2.4 - 3 - 3.6 - 4.2 - 5 - 5.8 - 6.6 - 7.4 - 8.2 - 9 - 10 \times I_n$ Tolerance: $\pm 10\%$ | at $10 \times I_n$ $t_2 = 0.1s$ $t_2 = 0.25s$ $t_2 = 0.5s$ $t_2 = 0.8s$ Tolerance: $\pm 10\%$ | ■ | ■ | $t = k/I^2$ |
| I Against short-circuit with instantaneous trip | $I_3 = 0.6 - 0.8 - 1.2 - 1.8 - 2.4 - 3 - 3.6 - 4.2 - 5 - 5.8 - 6.6 - 7.4 - 8.2 - 9 - 10 \times I_n$ Tolerance: $\pm 10\%$ | $t_2 = 0.1s$ $t_2 = 0.25s$ $t_2 = 0.5s$ $t_2 = 0.8s$ Tolerance: $\pm 10\%$ | — | ■ | $t = k$ |
| | $I_3 = 1.5 - 2.5 - 3 - 4 - 4.5 - 5 - 5.5 - 6.5 - 7 - 7.5 - 8 - 9 - 9.5 - 10.5 - 12 \times I_n$ Tolerance: $\pm 10\%$ | instantaneous | — | ■ | $t = k$ |

⁽¹⁾ These tolerances hold in the following conditions:
 – self-powered trip unit at full power (without start-up)
 – two or three-phase power supply




In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip time |
|----------|----------------|-------------|
| S | $\pm 10\%$ | $\pm 20\%$ |
| I | $\pm 15\%$ | $\leq 60ms$ |

⁽²⁾ Active up to 7 min. after tripping of the breaker (ON/OFF setting by means of PR010/T test unit).

There are three red LEDs available on the front of the PR232/P trip unit dedicated to signalling alarm of protections L, S, and I. Furthermore, a yellow flashing LED allows the state of pre-alarm of function L to be signalled, which is activated when 90% of the set trip threshold is reached.

PR232/P - Alarm and Pre-alarm LED

| Protection | Colour | Pre-alarm (Flashing 2Hz) | Alarm | Last trip |
|---|--------|--------------------------|-------|-----------|
|  | Yellow | ■ | ■ | – |
| | Red | – | ■ | ■ |
|  | Red | – | ■ | ■ |
|  | Red | – | ■ | ■ |

Following circuit-breaker opening, it is possible to know which protection function made the release trip by connecting the PR030/B battery unit onto the front of the release. This is also possible thanks to the PR010/T test and configuration unit.


By means of the BT030 wireless communication unit the PR232/P can be connected to a PDA or to a personal computer, extending the range of information available for the user. In fact, by means of the ABB SACE's SD-Pocket communication software, it is possible to read the values of the currents flowing through the circuit-breaker, the value of the last 20 interrupted currents, and the protection settings.

Circuit-breakers for power distribution

Electronic trip units

PR331/P

The PR331/P, available for Tmax T7 in the PR331/P-LSIG version, with its complete range of protection functions together with the wide combination of thresholds and trip times offered is suitable for protecting a wide range of alternating current installations. In addition to protection functions the unit is provided with multifunction LED indicators. Furthermore, PR331/P allows connection to external devices enhancing its advanced characteristics like remote signalling and monitoring, or interface from front of HMI030 panel.

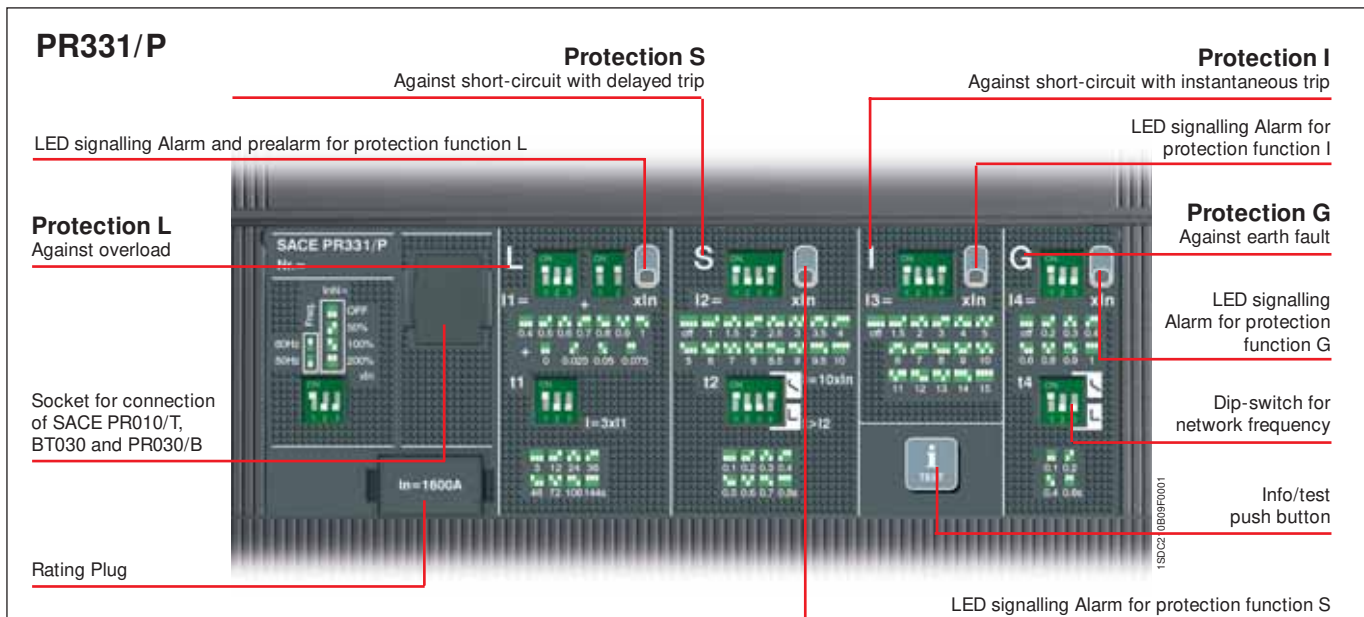

PR331/P - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation $t = f(I)$ |
|--|---|--|---------------|---------------------|
| L Against overload with long inverse time-delay trip and trip characteristic according to an inverse time curve ($I^2t=k$) according to the IEC 60947-2 Standard | $I_1 = 0.40 \dots 1 \times I_n$ step = $0.025 \times I_n$ Trip between $1.05 \dots 1.2 \times I_1$ | at $3 \times I_1$ $t_1 = 3 - 12 - 24 - 36 - 48 - 72 - 108 - 144s$ Tolerance: $\pm 10\%$ up to $6 \times I_n$ $\pm 20\%$ above $6 \times I_n$ | — | $t = k/I^2$ |
| S Against short-circuit with short inverse time-delay trip and trip characteristic with inverse time ($I^2t=k$) or with definite time | $I_2 = 0.6 - 0.8 - 1.2 - 1.8 - 2.4 - 3 - 3.6 - 4.2 - 5 - 5.8 - 6.6 - 7.4 - 8.2 - 9 - 10 \times I_n$ Tolerance: $\pm 7\%$ up to $4 \times I_n$ $\pm 10\%$ above $4 \times I_n$ | at $10 \times I_n$ $t_2 = 0.1 \dots 0.8s$ step = $0.1s$ Tolerance: min ($\pm 10\%$, $\pm 40ms$) | ■ | $t = k/I^2$ |
| I Against short-circuit with adjustable instantaneous trip | $I_3 = 1.5 - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 9 - 10 - 11 - 12 - 13 - 14 - 15 \times I_n$ ⁽²⁾ Tolerance: $\pm 10\%$ | instantaneous | ■ | $t = k$ |
| G Against earth fault with short inverse time-delay trip and trip characteristic according to an inverse time curve ($I^2t=k$) or with definite time | $I_4 = 0.2 - 0.3 - 0.4 - 0.6 - 0.8 - 0.9 - 1 \times I_n$ Tolerance: $\pm 7\%$ | up to $4.47 \times I_4$ up to $3.16 \times I_4$ up to $2.24 \times I_4$ up to $1.58 \times I_4$ $t_4 = 0.1s$ $t_4 = 0.2s$ $t_4 = 0.4s$ $t_4 = 0.80s$ Tolerance: $\pm 15\%$ | ■ | $t = k/I^2$ |
| | $I_4 = 0.2 - 0.3 - 0.4 - 0.6 - 0.8 - 0.9 - 1 \times I_n$ Tolerance: $\pm 7\%$ | $t_4 = 0.1s$ $t_4 = 0.2s$ $t_4 = 0.4s$ $t_4 = 0.80s$ Tolerance: min ($\pm 10\%$, $\pm 40ms$) | ■ | $t = k$ |

⁽¹⁾ These tolerances hold in the following conditions:
– self-powered trip unit at full power and/or auxiliary supply
– two or three-phase power supply

In conditions other than those considered, the following tolerances hold:

⁽²⁾ For T7 $I_n = 1250 A/1600 A \Rightarrow I_{3,max} = 12 \times I_n$

| | Trip threshold | Trip time |
|----------|----------------|-------------|
| S | $\pm 10\%$ | $\pm 20\%$ |
| I | $\pm 15\%$ | $\leq 60ms$ |
| G | $\pm 15\%$ | $\pm 20\%$ |

User interface

The user communicates directly with the trip unit by means of the dip switches. Up to four LEDs (according to the version) are also available for signalling. These LEDs (one for each protection) are active when:

- a protection is timing. For protection L the pre-alarm status is also shown;
- a protection has tripped (the corresponding LED is activated by pressing the “Info/Test” pushbutton);
- a failure in connection of a current sensor or in the trip coil is detected. The indication is active when the unit is powered (through current sensors or an auxiliary power supply)
- wrong rating plug for the circuit-breaker.

The protection tripped indication works even with the circuit-breaker open, without the need for any internal or external auxiliary power supply. This information is available for 48 hours of inactivity after the trip and is still available after reclosing. If the query is made more than 48 hours later it is sufficient to connect a PR030/B battery unit, PR010/T, or a BT030 wireless communication unit.

Setting the neutral

Protection of the neutral can be set at 50%, 100% or 200% of the phase currents. In particular, setting the neutral at 200% of phase current requires protection L to be set at not more than $0.5 \times I_n$ in order to respect the current-carrying capacity of the circuit-breaker. The user can also switch the neutral protection OFF.

Test Function

The Test function is carried out by means of the Info/Test pushbutton and the PR030/B battery unit (or BT030) fitted with a polarized connector housed on the bottom of the box, which allows the device to be connected to the test connector on the front of PR331/P trip units. The PR331/P electronic trip unit can be tested by using the SACE PR010/T test and configuration unit by connecting it to the TEST connector.

Power supply

The unit does not require an external power supply either for protection functions or for alarm signalling functions. It is self-supplied by means of the current sensors installed on the circuit-breaker. For operation, it is sufficient for at least one phase to be passed through by a current of 80 A. An external power supply can be connected in order to activate additional features, and in particular for connection to external devices: HMI030 and PR021/K.

PR331/P - Electrical characteristics

| | |
|---|-------------------|
| Auxiliary power supply (galvanically insulated) | 24 V DC \pm 20% |
| Maximum ripple | \pm 5% |
| Inrush current @ 24 V | ~ 1 A for 5 ms |
| Rated current @ 24 V | ~ 80 mA |
| Rated power @ 24 V | ~ 2 W |

Communication

By means of the BT030 wireless communication unit, PR331/P can be connected to a PDA or to a personal computer, extending the range of information available for the user. In fact, by means of ABB SACE's SD-Pocket communication software, it is possible to read the values of the currents flowing through the circuit-breaker, the value of the last 20 interrupted currents, and the protection settings.

PR331/P can also be connected to the optional external PR021/K signalling unit, for the remote signalling of protections alarms and trips, and to HMI030, for the remote user interfacing.

Circuit-breakers for power distribution

Electronic trip units



PR332/P

The SACE PR332/P trip unit for Tmax T7 (available in four versions: PR332/P-LI, PR332/P-LSI, PR332/P-LSIG and PR332/P-LSIRc) is a sophisticated and flexible protection system based on a state-of-the-art microprocessor and DSP technology. Fitted with the optional internal PR330/D-M dialogue unit, PR332/P turns into an intelligent protection, measurement and communication device, based on the Modbus® RTU protocol. By means of the PR330/D-M, PR332/P can also be connected to the ABB EP010 Fieldbus plug adapter, which makes it possible to choose among several different networks, such as Profibus and DeviceNet.





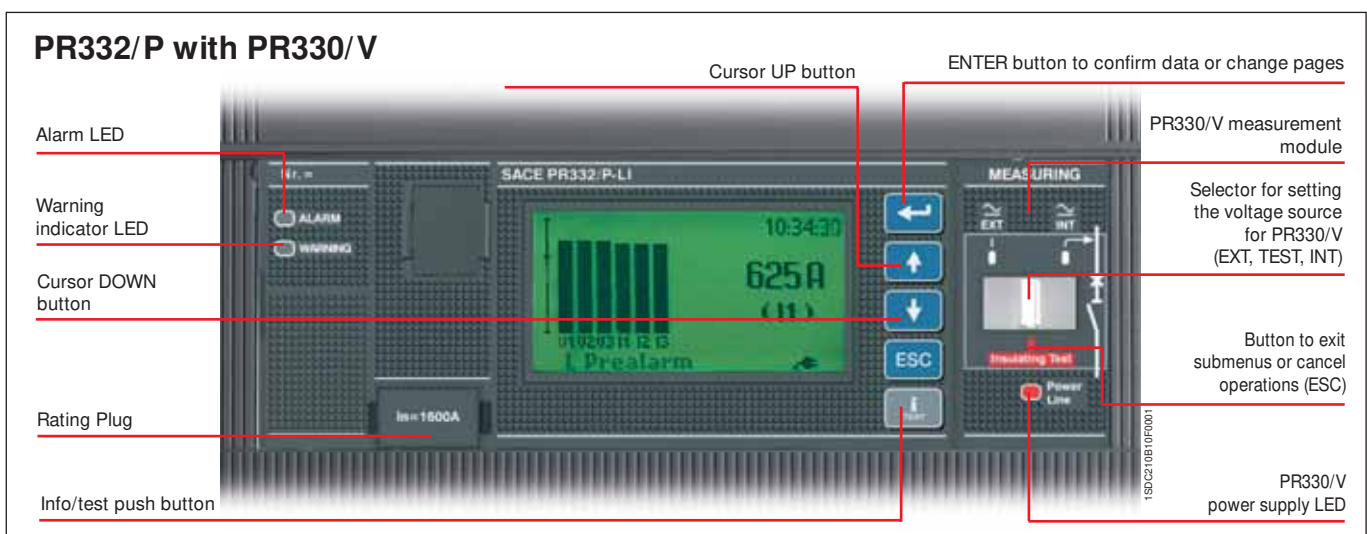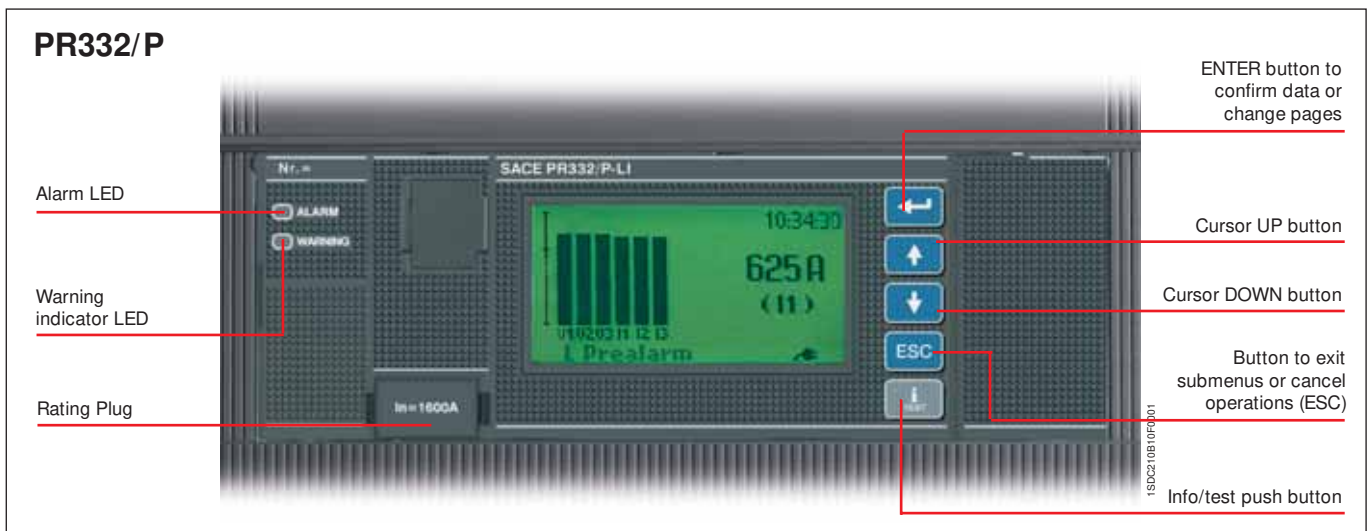


The new PR332/P is the result of ABB SACE's experience in designing protection trip units. The exhaustive range of settings makes this protection unit ideal for general use in power distribution.

Access to information and programming using a keyboard and graphic liquid crystal display is extremely simple and intuitive. An integrated ammeter and many other additional features are provided over and above the protection functions. These additional functions can be further increased with addition on board of the dialogue, signalling, measurement, and wireless communication units. All the thresholds and trip curve delays of the protection functions are stored in special memories which retain the information even when no power is supplied.







2



PR332/P - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation t = f(I) | Thermal memory ⁽²⁾ | Zone selectivity ⁽²⁾ |
|---|--|--|---------------|------------------------|-------------------------------|---------------------------------|
|  Against overload with inverse long-time delay trip according to IEC 60947-2 Standard (I ² t=k) or in accordance with the IEC 60255-3 Standard (t=f(α) ⁽³⁾) | I ₁ = 0.4... 1 x I _n step = 0.01 x I _n Trip between 1.05...1.2 x I ₁ | t ₂ = 3... 144s step = 3s Tolerance: ± 10% up to 4x I _n ± 20% above 4 x I _n | – | t = k/I ² | ■ | – |
|  Against short-circuit with short inverse time-delay trip and trip characteristic with inverse time (I ² t=k) or with definite time | I ₂ = 0.6... 10 x I _n step = 0.1 x I _n Tolerance: ± 7% up to 4x I _n ± 10% above 4 x I _n | at 10 x I _n t ₂ = 0.05... 0.8s step = 0.01s Tolerance: ± 15% up to 4 x I _n ± 20% over 4 x I _n | ■ | t = k/I ² | ■ | – |
|  Against short-circuit with adjustable instantaneous trip | I ₃ = 1.5... 15 x I _n step = 0.1 x I _n Tolerance: ± 10% | instantaneous | ■ | t = k | – | – |
|  Against earth fault with short inverse time-delay trip and trip characteristic according to an inverse time curve (I ² t=k) or with definite time | I ₄ = 0.2... 1 x I _n step = 0.02 x I _n Tolerance: ± 7% | t ₄ = 0.1... 1s step = 0.05s Tolerance: ± 15% | ■ | t = k/I ⁽⁵⁾ | – | – |
|  Against residual current fault with definite time-delay trip | IΔ = 0.3-0.5-0.7-1-2-3-5-7-10-20-30 A Tolerance: ± 10% | tΔ = 0.06-0.1-0.2-0.3-0.4-0.5-0.8-1-3-4-4.8s Tolerance: ± 20% | ■ | t = k | – | – |
|  Against overtemperature of the trip unit with instantaneous trip | Trip unit temperature over 85 °C | instantaneous | – | temp = k | – | – |
|  Against unbalanced phase with definite time-delay trip | I ₆ = 5%... 90% x I ₁ step = 5% x I ₁ Tolerance: ± 10% | t ₆ = 0.5... 60 s step = 0.5s Tolerance: min (± 20%; ± 100ms) | ■ | t = k | – | – |

PR332/P with PR330/V - Advanced protection functions and parameterisations

| Advanced protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation t = f(I) | Thermal memory ⁽²⁾ | Zone selectivity |
|---|---|--|---------------|-------------------|-------------------------------|------------------|
|  Against undervoltage with adjustable constant time | U ₆ = 0.5... 0.95 x U _n step = 0.01 x U _n Tolerance: ± 5% | t ₆ = 0.1... 5s step = 0.1s Tolerance: min (± 20% ± 100ms) | ■ | t = k | – | – |
|  Against overvoltage with adjustable constant time | U ₉ = 1.05... 1.2 x U _n step = 0.01 x U _n Tolerance: ± 5% | t ₉ = 0.1... 5s step = 0.1s Tolerance: min (± 20% ± 100ms) | ■ | t = k | – | – |
|  Against residual voltage with adjustable constant time | U ₁₀ = 0.1... 0.4 x U _n step = 0.01 x U _n Tolerance: ± 5% | t ₁₀ = 0.5... 30s step = 0.5s Tolerance: min (± 10% ± 100ms) | ■ | t = k | – | – |
|  Against reversal of power with adjustable constant time | P ₁₁ = -0.3... -0.1 x P _n step = 0.02xP _n Tolerance: ± 5% | t ₁₁ = 0.5... 25s step = 0.1s Tolerance: min (± 10% ± 100ms) | ■ | t = k | – | – |
|  Against underfrequency with adjustable constant time | f ₁₂ = 0.90... 0.99 x f _n step = 0.01 x f _n Tolerance: ± 5% | t ₁₂ = 0.5... 3s step = 0.1s Tolerance: min (± 10% ± 100ms) | ■ | t = k | – | – |
|  Against overfrequency with adjustable constant time | f ₁₃ = 1.01... 1.10 x f _n step = 0.01 x f _n Tolerance: ± 5% | t ₁₃ = 0.5... 3s step = 0.1s Tolerance: min (± 10% ± 100ms) | ■ | t = k | – | – |

⁽¹⁾ These tolerances are valid under the following conditions:
– trip unit self-supplied at full power and/or auxiliary supply
– two or three-phase power supply

In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip time |
|--------------|----------------|-----------|
| S | ± 10% | ± 20% |
| I | ± 15% | ≤ 60ms |
| G | ± 15% | ± 20% |
| Other | ± 10% | ± 20% |

⁽²⁾ Active with 24V auxiliary power supply

$$^{(3)}t = \frac{(3^\alpha - 1)}{\left(\frac{I}{I_1}\right)^\alpha - 1} t_1 (3 \times I_1)$$

⁽⁴⁾ For T7 I_n = 1250 A/1600 A ⇒ I₁max = 12 x I_n

⁽⁵⁾ k = (2s) · (I₁)²

Circuit-breakers for power distribution

Electronic trip units

Setting the neutral

In PR332/P, the neutral protection is 50% of the value set for phase protection in the standard version. The neutral protection can be excluded or set to 100%.

In installations where very high harmonics occur, the resulting current at the neutral can be higher than that of the phases. Therefore it is possible to set the neutral protection at 150% or 200% of the value set for the phases. In this case it is necessary to reduce the setting of protection L accordingly. The table below lists the neutral settings for the various possible combinations between type of circuit-breaker and the threshold I_n setting.

Adjustable neutral protection settings

Threshold I_n settings (overload protection)

| Circuit-breaker model | $0.4 < I_n < 0.5$ | $0.5 < I_n < 0.66$ | $0.66 < I_n < 1^{(1)}$ |
|-----------------------|-------------------|--------------------|------------------------|
| T7 | 0-50-100-150-200% | 0-50-100-150% | 0-50-100% |

⁽¹⁾ The setting $I_n = 1$ indicates the maximum overload protection setting. The actual maximum setting allowable must take into account any derating based on temperature, the terminals used and the altitude (see the "Installations" chapter)

Start-up function

The start-up function allows protections S, I and G to operate with higher trip thresholds during the start-up phase. This avoids untimely tripping caused by the high inrush currents of certain loads (motors, transformers, lamps).

The start-up phase lasts from 100 ms to 30 s, in steps of 0.01 s. It is automatically recognized by the PR332/P trip unit when the peak value of the maximum current exceeds the threshold that can be set by the user. A new start-up becomes possible after the current has fallen down to $0.1 \times I_n$, if the trip unit is supplied from an external source.

Protection against overtemperature

The user has the following signals or commands available for the protection against overtemperature:

- lighting up of the "Warning" LED when the temperature is higher than 70 °C (temperature at which the microprocessor is still able to operate correctly);
- lighting up of the "Alarm" LED when the temperature is higher than 85 °C (temperature above which the microprocessor can no longer guarantee correct operation) and, when decided during the unit configuration stage, simultaneous opening of the circuit-breaker with indication of the trip directly on the display, as for the other protections.

Self-diagnosis

The PR332/P range of trip units contains an electronic circuit which periodically checks the continuity of internal connections (trip coil and each current sensor, including the Source Ground Return when present).

In the case of a malfunction an alarm message appears directly on the display. The Alarm is highlighted by the Alarm LED as well.

Residual Current

Different solutions are available for integrated residual current protection. The basic choice is PR332/P-LSIRc, which has all the characteristics of PR332/P-LSI and residual current protection as well. When additional features are required, the solution is PR332/P-LSIG with an additional PR330/V module (see next paragraph). Using this configuration, residual current protection is added to a powerful unit, having the features of PR332/P-LSI and all the add-ons described for the PR330/V module, such as voltage protection and advanced measurement functions.

Residual current protection acts by measuring the current by means the external dedicated toroid.

Test Functions

Once enabled from the menu, the “Info/Test” pushbutton on the front of the trip unit allows correct operation of the chain consisting of the microprocessor, trip coil and circuit-breaker tripping mechanism to be checked.

The control menu also includes the option of testing correct operation of the display, signalling LEDs.

By means of the front multi-pin connector it is possible to apply a SACE PR010/T Test unit which allows the functions of the PR222DS/P, PR222DS/PD, PR223DS, PR223EF, PR232/P, PR331/P and PR332/P ranges of trip units to be tested and checked.

User interface

The human-machine interface (HMI) of the device is made up of a wide graphic display, LEDs, and browsing pushbuttons. The interface is designed to provide maximum simplicity.

The language can be selected from among five available options: Italian, English, German, French and Spanish.

As in the previous generation of trip units, a password system is used to manage the “Read” or “Edit” modes. The default password, 0001, can be modified by the user.

The protection parameters (curves and trip thresholds) can be set directly via the HMI of the device. The parameters can only be changed when the trip unit is operating in “Edit” mode, but the information available and the parameter settings can be checked at any time in “Read” mode.

When a communication device (internal PR330/D-M module or external BT030 device) is connected, it is possible to set parameters simply by downloading them into the unit (over the network for PR330/D-M, by using the SD-Pocket software and a PDA or a notebook for BT030). Parameterisation can then be carried out quickly and automatically in an error-free way by transferring data directly from DocWin.

Indicator LEDs

LEDs on the front panel of the trip unit are used to indicate all the pre-alarms (“WARNING”) and alarms (“ALARM”). A message on the display always explicitly indicates the type of event concerned.

Example of events indicated by the “WARNING” LED:

- unbalance between phases;
- pre-alarm for overload ($L1 > 90\% \times I_1$);
- first temperature threshold exceeded (70 °C);
- contact wear beyond 80%;
- phase rotation reversed (with optional PR330/V).

Example of events indicated by the “ALARM” LED:

- timing of function L;
- timing of function S;
- timing of function G;
- second temperature threshold exceeded (85 °C);
- contact wear 100%;
- timing of Reverse Power flow protection (with optional PR330/V).

Data logger

By default PR332/P, is provided with the Data Logger function that automatically records in a wide memory buffer the instantaneous values of all the currents and voltages. Data can be easily downloaded from the unit by means of SD-Pocket or SD-TestBus2 applications using a Bluetooth port and can be transferred to any personal computer for elaboration. The function freezes the recording whenever a trip occurs or in case of other events, so that a detailed analysis of faults can be easily performed. SD-Pocket and SD-TestBus2 allow also reading and downloading of all the others trip information.

- Number of analog channels: 8
- Maximum sampling rate: 4800 Hz
- Maximum sampling time: 27 s (@sampling rate 600 Hz)
- 64 events tracking.

Circuit-breakers for power distribution

Electronic trip units

Trip information and opening data

In case a trip occurs PR332/P store all the needed information:

- Protection tripped
- Opening data (current)
- Time stamp (guaranteed with auxiliary supply or self-supply with power failure no longer than 48h).

By pushing the “Info/Test” pushbutton the trip unit shows all these data directly on display.

No auxiliary power supply is needed. The information is available to user for 48 hours with the circuit breaker open or without current flowing.

The information of the latest 20 trips are stored in memory.

If the information can be furthermore retrieved more than 48 hours later, it is sufficient to connect a PR030/B battery unit or a BT030 wireless communication unit.

Load control

Load control makes it possible to engage/disengage individual loads on the load side before the overload protection L is tripped, thereby avoiding unnecessary trips of the circuit-breaker on the supply side. This is done by means of contactors or switch-disconnectors (externally wired to the trip unit), controlled by the PR332/P through PR021/K unit.

Two different Load Control schemes can be implemented:

- disconnection of two separate loads, with different current thresholds
- connection and disconnection of a load, with hysteresis.

Current thresholds and trip times are smaller than those available for selection with protection L, so that load control can be used to prevent overload tripping. External PR021/K accessory unit is required for Load Control. The function is only active when an auxiliary power supply is available.

PR330/V Measurement Module

This optional internal module, installed in PR332/P, allows the trip unit to measure the phase and neutral voltages and to process them in order to achieve a series of features, in terms of protection and measurement.

PR330/V does not normally require any external connection or voltage transformers, since it is connected internally to the upper terminals of Tmax T7 (selector in “INT” position). When necessary, the connection of voltage pick-ups can be moved to any other point (i.e. lower terminals), by using the alternative connection located in the terminal box and switching the selector to the “EXT” position. For the dielectric test of the circuit-breaker the selector must be switched to the “TEST” position. PR330/V is able to energize the PR332/P while line voltage input is above 85 V. The use of Voltage Transformers is mandatory for rated voltages higher than 690 V.

Voltage transformers shall have burdens equal to 10 VA and accuracy class 0.5 or better.

Additional Protections with PR330/V:

- Undervoltage (UV) protection
- Overvoltage (OV) protection
- Residual voltage (RV) protection
- Reversal of power (RP) protection
- Underfrequency (UF) protection
- Overfrequency (OF) protection
- Phase sequence (alarm only).

All the above indicated protections can be excluded, although it is possible to leave only the alarm active when required: in this case the trip unit will indicate the “ALARM” status. With the circuit-breaker closed, these protections also operate when the trip unit is self-supplied. With the circuit-breaker open, they operate when the auxiliary power supply (24 V DC or PR330/V) is present.

Measurement function

The current measurement function (ammeter) is present on all versions of the PR332/P trip unit. The display shows histograms showing the currents of the three phases and neutral on the main page. Furthermore, the most loaded phase current is indicated in numerical format. Earth fault current, where applicable, is shown on a dedicated page.

The latter current value takes on two different meanings depending on whether the external toroidal transformer for the “Source Ground Return” function or the internal transformer (residual type) is

connected.

The ammeter can operate either with self-supply or with an auxiliary power supply voltage. The display is rear-lit and the ammeter is active even at current levels lower than 160 A.

Accuracy of the ammeter measurement chain (current sensor plus ammeter) is no more than 1.5% in the 30% - 120% current interval of I_n .

- Currents: three phases (L1, L2, L3), neutral (Ne) and earth fault;
- Instantaneous values of currents during a period of time (data logger);
- Maintenance: number of operations, percentage of contact wear, opening data storage (last 20 trips and 20 events).

When the optional PR330/V is connected the following additional measurement function are present:

- Voltage: phase-phase, phase-neutral and residual voltage
- Instantaneous values of voltages during a period of time (data logger)
- Power: active, reactive and apparent
- Power factor
- Frequency and peak factor
- Energy: active, reactive, apparent, counter.

Communication

PR332/P electronic trip unit can be fitted with communication modules, which make possible to exchange data and information with other industrial electronic devices by means of a network.

The basic communication protocol implemented is Modbus RTU, a well-known standard of wide-spread use in industrial automation and power distribution equipment. A Modbus RTU communication interface can be connected immediately and exchange data with the wide range of industrial devices featuring the same protocol. ABB SACE has developed a complete series of accessories for electronic trip unit PR332/P:

- PR330/D-M is the communication module for PR332/P protection trip units. It is designed to allow easy integration of the Tmax circuit-breakers in a Modbus network. The Modbus RTU protocol is of widespread use in the power as well as the automation industry. It is based on a master/slave architecture, with a bandwidth of up to 19.2 kbps. A standard Modbus network is easily wired up and configured by means of an RS485 physical layer. ABB SACE trip units work as slaves in the field bus network. All information required for simple integration of PR330/D-M in an industrial communication system are available on the ABB Web page.
- BT030 is a device to be connected to the Test connector of PR222DS/P, PR222DS/PD, PR223DS, PR223EF, PR232/P, PR331/P and PR332/P trip units. It allows Bluetooth communication between the trip unit and a PDA or a Notebook with a Bluetooth port. This device is dedicated to use with the SD-Pocket or SD-TestBus2 application. It can provide the auxiliary supply needed to energize the protection trip unit by means of rechargeable batteries.
- EP010-FBP-PDP22 is the Fieldbus Plug interface allows connection of ABB SACE trip units with Modbus communication to a Profibus, DeviceNet, or AS-I field bus network.

Furthermore, a new generation of software dedicated to installation, configuration, supervision and control of protection trip units and circuit-breakers is now available:

- SDView 2000
- SD-Pocket
- SD-TestBus2.

All information required for simple integration of PR330/D-M in an industrial communication system are available on the ABB Web page (<http://www.abb.com>).

Circuit-breakers for power distribution

Electronic trip units

Measurement, signalling and available data functions

Details about functions available on PR332/P, trip units with PR330/D-M and EP010 – FBP – PDP22 are listed in the table below:

| Communication functions | PR332/P +PR330/D-M | PR332/P+PR330/D-M and EP010 |
|---|------------------------|--------------------------------|
| Protocol | Modbus RTU standard | FBP-PDP22 |
| Physical means | RS485 | Profibus-DP or DeviceNet cable |
| Speed (maximum) | 19.2 kbps | 115 kbps |
| Measurement functions | | |
| Phase currents | ■ | ■ |
| Neutral current | ■ | ■ |
| Ground current | ■ | ■ |
| Voltage (phase-phase, phase-neutral, residual) | opt. ⁽¹⁾ | opt. ^{(1) (2)} |
| Power (active, reactive, apparent) | opt. ⁽¹⁾ | opt. ^{(1) (3)} |
| Power factor | opt. ⁽¹⁾ | (4) |
| Frequency and peak factor | opt. ⁽¹⁾ | (4) |
| Energy (active, reactive, apparent) | opt. ⁽¹⁾ | (4) |
| Harmonic analysis up to the 40th harmonic | – | (4) |
| Signalling functions | | |
| LED: auxiliary power supply, pre-alarm, alarm, transmission, reception | ■ | ■ |
| Temperature | ■ | ■ |
| Indication for L, S, I, G and other protection | ■ | ■ |
| Available data | | |
| Circuit-breaker status (open, closed) | ■ | ■ |
| Circuit-breaker position (racked-in, racked-out) | ■ | ■ |
| Mode (local, remote) | ■ | ■ |
| Protection parameters set | ■ | ■ |
| Load control parameters | ■ | ■ |
| Alarms | | |
| Protections: L, S, I, G | ■ | ■ |
| Undervoltage, overvoltage and residual voltage protection (timing and trip) | opt. | opt. |
| Reverse power protection (timing and trip) | opt. | opt. |
| Directional protection (timing and trip) | – | – |
| Underfrequency/overfrequency protection (timing and trip) | opt. | opt. |
| Phases rotation | – | – |
| Failed tripping under fault conditions | ■ | ■ |
| Maintenance | | |
| Total number of operations | ■ | ■ |
| Total number of trips | ■ | ■ |
| Number of trip tests | ■ | ■ |
| Number of manual operations | ■ | ■ |
| Number of separate trips for each protection function | ■ | ■ |
| Contact wear (%) | ■ | ■ |
| Record data of last trip | ■ | ■ |
| Commands | | |
| Circuit-breaker open/close | ■ | ■ |
| Alarms reset | ■ | ■ |
| Setting of curves and protection thresholds | ■ | ■ |
| Synchronize system time | ■ | ■ |
| Events | | |
| Status changes in circuit-breaker, protections and all alarms | ■ | ■ |

⁽¹⁾ with PR330/V

⁽²⁾ no residual voltage

⁽³⁾ no apparent power available

⁽⁴⁾ please ask ABB for further details

Power supply

The PR332/P trip unit does not normally require any external power supplies, being self-supplied from the current sensors (CS): to activate the protection and ammeter functions, it is sufficient for at least one phase to have a current load higher than 80 A.

The unit ensures fully self-supplied operation. When an auxiliary power supply is present, it is also possible to use the unit with the circuit-breaker either open or closed with very low current flowing through (< 80 A).


It is also possible to use an auxiliary power supply provided by the PR030/B portable battery unit (always supplied), which allows the protection functions to be set when the trip unit is not self-supplied.

PR332/P stores and shows all the information needed after a trip (protection tripped, trip current, time, date). No auxiliary supply is required for this functionality.

| | PR332/P | PR330/D-M |
|---|-------------------|-----------------|
| Auxiliary power supply (galvanically insulated) | 24 V DC \pm 20% | from PR332/P |
| Maximum ripple | \pm 5% | \pm 5% |
| Inrush current @ 24 V | ~1 A for 5 ms | ~0.5 A for 5 ms |
| Rated power @ 24 V | ~3 W | +1 W |

□ PR330/V can give power supply to the trip unit when at least one line voltage is equal or higher to 85V RMS.

Zone selectivity

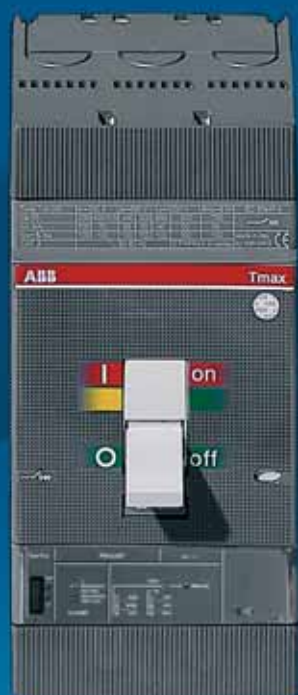



Circuit-breaker for zone selectivity



Index

Circuit-breaker for zone selectivity

| | |
|-------------------------------------|------|
| Electrical characteristics | 2/36 |
| General characteristics..... | 2/37 |
| EFDP zone selectivity: PR223EF..... | 2/38 |
| ZS zone selectivity: PR332/P | 2/41 |

Circuit-breaker for zone selectivity

Electrical characteristics

Zone selectivity

| | | T4 | T5 | T6 | T7 | | | |
|---|-------------------------------|--------------------------------|---------------------------------------|--|---|----------|----------|------------------------|
| Rated uninterrupted current, I_u | [A] | 250/320 | 400/630 | 630/800/1000 | 800/1000/1250/1600 | | | |
| Poles | [Nr] | 3/4 | 3/4 | 3/4 | 3/4 | | | |
| Rated service current, U_e | [V] | 690 | 690 | 690 | 690 | | | |
| | [V] | 750 | 750 | 750 | 750 | | | |
| Rated impulse withstand voltage, U_{imp} | [kV] | 8 | 8 | 8 | - | | | |
| Rated insulation voltage, U_i | [V] | 1000 | 1000 | 1000 | 8 | | | |
| Test voltage at industrial frequency for 1 min. | [V] | 3500 | 3500 | 3500 | 1000 | | | |
| Rated ultimate short-circuit breaking capacity, I_{cu} | | L | L | L | S | H | L | V⁽¹⁾ |
| (AC) 50-60 Hz 220/230 V | [kA] | 200 | 200 | 200 | 85 | 100 | 200 | 200 |
| (AC) 50-60 Hz 380/415 V | [kA] | 120 | 120 | 100 | 50 | 70 | 120 | 150 |
| (AC) 50-60 Hz 440 V | [kA] | 100 | 100 | 80 | 50 | 65 | 100 | 130 |
| (AC) 50-60 Hz 500 V | [kA] | 85 | 85 | 65 | 40 | 50 | 85 | 100 |
| (AC) 50-60 Hz 690 V | [kA] | 70 | 70 | 30 | 30 | 42 | 50 | 60 |
| Rated service short-circuit breaking capacity, I_{cs} | | | | | | | | |
| (AC) 50-60 Hz 220/230 V | [%I _{cu}] | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| (AC) 50-60 Hz 380/415 V | [%I _{cu}] | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| (AC) 50-60 Hz 440 V | [%I _{cu}] | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| (AC) 50-60 Hz 500 V | [%I _{cu}] | 100% | 100% ⁽²⁾ | 75% | 100% | 100% | 75% | 100% |
| (AC) 50-60 Hz 690 V | [%I _{cu}] | 100% | 100% ⁽³⁾ | 75% | 100% | 75% | 75% | 75% |
| Rated short-circuit making capacity, I_{cm} | | | | | | | | |
| (AC) 50-60 Hz 220/230 V | [kA] | 440 | 440 | 440 | 187 | 220 | 440 | 440 |
| (AC) 50-60 Hz 380/415 V | [kA] | 264 | 264 | 220 | 105 | 154 | 264 | 330 |
| (AC) 50-60 Hz 440 V | [kA] | 220 | 220 | 176 | 105 | 143 | 220 | 286 |
| (AC) 50-60 Hz 500 V | [kA] | 187 | 187 | 143 | 84 | 105 | 187 | 220 |
| (AC) 50-60 Hz 690 V | [kA] | 154 | 154 | 66 | 63 | 88.2 | 105 | 132 |
| Utilisation category (IEC 60947-2) | | A | B (400A) ⁽⁴⁾ - A (630A) | B (630A - 800A) ⁽⁵⁾ - A (1000A) | B ⁽⁶⁾ | | | |
| Isolation behaviour | | ■ | ■ | ■ | ■ | | | |
| Reference Standard | | IEC 60947-2 | IEC 60947-2 | IEC 60947-2 | IEC 60947-2 | | | |
| Trip unit: | electronic PR223EF PR332/P | ■ | ■ | ■ | - | | | |
| | | - | - | - | ■ | | | |
| Versions | | F-P-W | F-P-W | F-W | F-W | | | |
| Terminals | fixed | F-FC Cu-FC CuAl- EF-ES-R-MC | F-FC Cu-FC CuAl- EF-ES-R-MC | F-FC CuAl- EF-ES-R | F-EF-ES-FC CuAl- HR/VR | | | |
| | plug-in | EF-ES-HR-VR-FC Cu-FC CuAl | EF-ES-HR-VR-FC Cu-FC CuAl | - | - | | | |
| | withdrawable | EF-ES-HR-VR-FC Cu-FC CuAl | EF-ES-HR-VR-FC Cu-FC CuAl | EF-HR-VR | F-HR/VR | | | |
| Mechanical life | [No. operations] | 20000 | 20000 | 20000 | 10000 | | | |
| | [No. Hourly operations] | 240 | 120 | 120 | 60 | | | |
| Electrical life @415 V AC | [No. operations] | 8000 (250A) - 6000 (320A) | 7000 (630A) - 5000 (800A) | 7000 (630A) - 5000 (800A) - 4000 (1000A) | 2000 (S, H, L versions) - 3000 (V version) | | | |
| | [No. Hourly operations] | 120 | 60 | 60 | 60 | | | |
| Basic dimensions - fixed version | 3 poles W [mm] | 105 | 140 | 210 | 210 | | | |
| | 4 poles W [mm] | 140 | 184 | 280 | 280 | | | |
| | D [mm] | 103.5 | 103.5 | 103.5 | 154 (manual)/178 (motorizable) | | | |
| | H [mm] | 205 | 205 | 268 | 268 | | | |
| Weight | fixed 3/4 poles [kg] | 2.35/3.05 | 3.24/4.15 | 9.5/12 | 9.7/12.5 (manual)/ 11/14 (motorizable) | | | |
| | plug-in 3/4 poles [kg] | 3.6/4.65 | 5.15/6.65 | - | - | | | |
| | withdrawable 3/4 poles [kg] | 3.85/4.9 | 5.4/6.9 | 12.1/15.1 | 29.7/39.6 (manual)/ 32/42.6 (motorizable) | | | |

TERMINAL CAPTION

EF = Front extended
F = Front
ES = Front extended spread
R = Rear orientated
MC = Multi-cable
HR = Rear flat horizontal
VR = Rear flat vertical
HR/VR = Rear flat orientated

F = Fixed circuit-breaker
P = Plug-in circuit-breaker
W = Withdrawable circuit-breaker

⁽¹⁾ Only for T7 800/1000/1250 A

⁽²⁾ 75% for T5 630

⁽³⁾ 50% for T5 630

⁽⁴⁾ I_{cu} = 5 kA


⁽⁵⁾ I_{cu} = 7.6 kA (630 A) - 10 kA (800 A)

⁽⁶⁾ I_{cu} = 20 kA (S, H, L versions) - 15 kA (V version)

Nota: in the plug-in/withdrawable version of T5 630 the maximum rated current is derated by 10% at 40 °C.

Circuit-breaker for zone selectivity

General characteristics

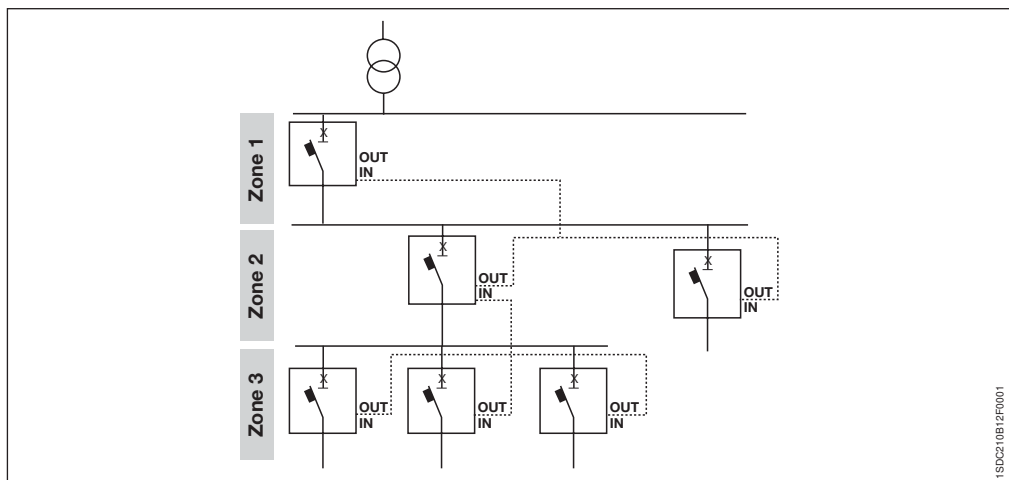

This type of coordination, a development of time coordination, is made by means of logic connections between current measuring devices which, once the set threshold having been exceeded is detected, allow just the fault area to be identified and to have its power supply cut off.

By means of zone selectivity it is possible obtain selectivity considerably reducing the trip times and therefore the thermal stresses all the plant components are subjected to during the fault.

Making the protection is done by connecting all the zone selectivity outputs of the trip units belonging to the same zone to each other and taking this signal to the zone selectivity input of the trip unit immediately to the supply side. By means of a simple shielded twisted-pairwire (maximum length of 200 m), each circuit-breaker which detects a fault communicates this to the one on the supply side sending a timed locking signal. The circuit-breaker which does not receive any communication from those on the load side, sends the opening command within the set selectivity time.

Zone selectivity can be activated for Tmax circuit-breakers in the case where:

- there is a source of 24 V auxiliary power supply;
- the Tmax T4, T5 or T6 circuit-breaker is equipped with the PR223EF trip unit (EFDP zone selectivity) or Tmax T7 equipped with the PR332/P trip unit (ZS zone selectivity).

Current sensors

| | In [A] | 160 | 250 | 320 | 400 | 630 | 800 | 1000 | 1250 | 1600 |
|---------|---------|-----|-----|-----|-----|-----|-----|------|------|------|
| PR223EF | T4 250 | ■ | ■ | | | | | | | |
| | T4 320 | | | ■ | | | | | | |
| | T5 400 | | | ■ | ■ | | | | | |
| | T5 630 | | | | | ■ | | | | |
| | T6 630 | | | | | ■ | | | | |
| | T6 800 | | | | | | ■ | | | |
| PR332/P | T6 1000 | | | | | | | ■ | | |
| | T7 800 | | | | ▲ | ▲ | ■ | | | |
| | T7 1000 | | | | ▲ | ▲ | ▲ | ■ | | |
| | T7 1250 | | | | ▲ | ▲ | ▲ | ▲ | ■ | |
| | T7 1600 | | | | ▲ | ▲ | ▲ | ▲ | ▲ | ■ |

■ = Complete circuit-breaker already coded
 ▲ = Circuit-breaker to be assembled

By means of the IM210 interlocking module, it is possible to create chains of logical selectivity between the PR223EF and PR332/P trip units.

For further information on zone selectivity, please consult the section: "Characteristic curves and technical information" on page 4/70.

Circuit-breaker for zone selectivity

EFDP Zone selectivity: PR223EF

The PR223EF electronic trip unit available on T4, T5 and T6 in the L version (120 kA @ 380/415 V) for use in alternating current, is able to isolate a fault present in extremely rapid times.

This performance is made possible thanks to the EFDP (Early Fault Detection and Prevention) algorithm, which is able to detect the short-circuit at its onset, exploiting analysis of the trend of the shunted current in relation to the current. The PR223EF trip unit therefore offers two performances simultaneously which, until today, were antithetic: selectivity and trip rapidity.

Thanks to extremely rapid detection and quenching of the short-circuit, the MCCB equipped with this trip unit are totally selective up to over 100 kA, and are not subject to any limits regarding the number of hierarchical levels of the installation. Trip rapidity, together with just as rapid transmission of the order to wait, allow a high number of circuit-breakers to be interlocked, making a global selectivity chain in the installation: by using the PR223EF no limitation in topological terms is introduced, with distances between interlocked circuit-breakers reaching up to 200 meters, thereby making the protection system highly flexible.

EFDP zone selectivity is carried out by means of a logic interlocking protocol (Interlocking, IL). The connection is made by means of a simple screened-twisted-pair cable which connects the circuit-breakers fitted with the PR223EF. In the case of a fault, the circuit-breaker immediately to the supply side sends a locking signal to the hierarchically higher circuit-breaker by means of the bus and, before intervening, checks that a similar locking signal has not been reached by the circuit-breakers on the load side.

The soundness of the system is controlled by a monitoring function of the interlock channel, guaranteeing the system a very high level of safety.

All the protection functions can be programmed remotely using the dialogue function present on the trip unit or locally by means of the PR010/T which can be connected to a serial port on the front of the PR223EF.

The trip unit can be supplied from a 24 V DC auxiliary source or directly through the current transformers (self-supply). The electronic trip unit operation is guaranteed even in the case of single-phase load up to $0.18 \times I_n$.

In the presence of an auxiliary power supply:

- the device implements the L, S, EF and G protection functions; if the EF is disabled by the user, function I is enabled
- EFDP zone selectivity is implemented on the S, EF and G functions.

If it is under self-supply conditions:

- the trip unit disables the EF, implementing the classic protection functions which also characterize the PR223/DS trip unit: L, S, I and G
- EFDP zone selectivity is not enabled.

Auxiliary power supply - Electrical characteristics

| | PR223EF |
|---|-----------------------|
| Auxiliary power supply (galvanically insulated) | 24 V DC $\pm 20\%$ |
| Maximum ripple | $\pm 5\%$ |
| Inrush current @ 24 V | ~ 4 A for 0.5 ms |
| Rated current @ 24 V | ~ 80 mA |
| Rated power @ 24 V | ~ 2 W |

Connection of the logic interlock and auxiliary power supply is made by means of the X3 and X4 connectors located on the back of the trip unit.

For the neutral, it is possible set the protection threshold of the functions to OFF, at 50% and at 100% that of the phase, by means of the dialogue function or PR010/T. Furthermore, pre-alarm and alarm signalling of protection L is available on the front of the trip units. The pre-alarm threshold value is $0.9 \times I_n$.


The PR223EF trip unit, just like the PR223DS one, allows storage and display of information regarding a trip unit trip. The information is saved permanently and up to 20 trip events are recorded, which can be acquired by a supervision system using the Modbus protocol or can be displayed locally by means of the FDU or PR010/T unit.

PR223EF

Socket for connection of PR010/T test unit and BT030 wireless communication unit

Socket for TT1 test unit

LED signalling alarm of the circuit-breaker

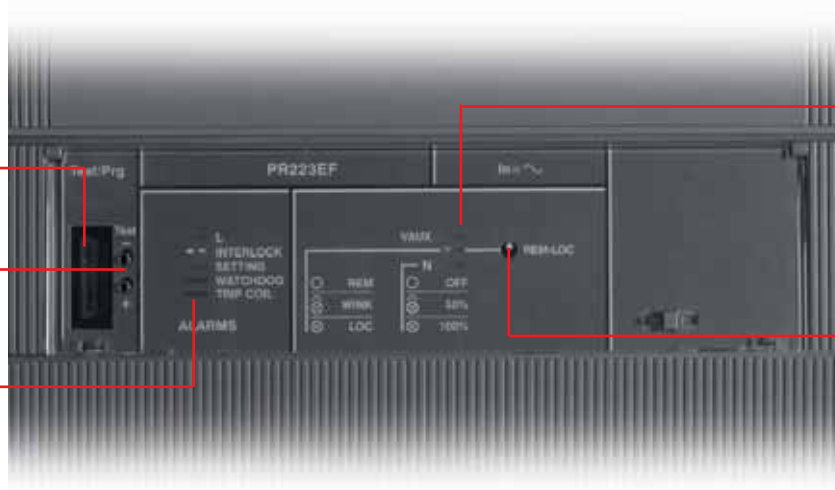

LED signalling the status of the circuit-breaker

Push button for operation mode selection (local/remote) and on-board diagnosis system

1SDC210215F1002

PR223EF - Protection functions and parameterisations

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | Relation t = f(I) | EFDP zone selectivity |
|--|--|--|---------------|----------------------|-----------------------|
| L Against overload with long inverse time-delay trip and trip characteristic according to an inverse time curva (I ² t=k) according to the IEC 60947-2 Standard | Electronic setting I ₁ = 0.18...1 x I _n ⁽⁵⁾ step 0.01 x I _n Trip between 1.1...1.3 x I ₁ (IEC 60947-2) | Electronic setting at 6 x I ₁ t ₁ = 3...18s ⁽²⁾ step 0.5s Tolerance: ± 10% | - | t = k/I ² | - |
| S Against short-circuit with short inverse time-delay trip and trip characteristic with inverse time (I ² t=k) or with definite time | Electronic setting I ₂ = 0.60...10 x I _n ⁽³⁾ step 0.1 x I _n Tolerance: ± 10% | Electronic setting⁽³⁾ at 8 x I ₂ t ₂ = 0.05...0.5s step 0.01s Tolerance: ± 10% | ■ | t = k/I ² | ■ |
| EF Against short-circuit with ultra rapid trip ⁽⁴⁾ | Electronic setting I ₂ = 0.60...10 x I _n ⁽³⁾ step 0.1 x I _n Tolerance: ± 10% | Electronic setting t ₂ = 0.05...0.5s step 0.01s Tolerance: ± 10% | ■ | t = k | ■ |
| I Against short-circuit with instantaneous trip with adjustable threshold | Electronic setting I ₃ = 1.5...12 x I _n ⁽³⁾ step 0.1 x I _n Tolerance: ± 10% | instantaneous | ■ | t = k | - |
| G Against earth fault with inverse short time delay trip and trip characteristic with inverse time (I ² t=k) | Electronic setting I ₄ = 0.2...1 x I _n (step 0.1 x I _n) Tolerance: ± 10% | Electronic setting t ₄ = 0.1...0.8 x I _n (step 0.01s) Tolerance: ± 15% | ■ | t = k/I ² | ■ |

⁽¹⁾ These tolerances are valid under the following conditions:
 - trip unit self-supplied at full power and/or auxiliary supply;
 - two or three-phase power supply;

In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip curves |
|----------|----------------|-------------|
| S | ± 20% | ± 20% |
| I | ± 20% | ≤ 50ms |
| G | ± 20% | ± 20% |

⁽²⁾ For T4. I_n = 320 A and T5. I_n = 630 A ⇒ t₁ = 12s

⁽³⁾ For T4. I_n = 320 A and T5. I_n = 630 A ⇒ I₂max = 8.8 x I_n, I₃max = 9.5 x I_n

⁽⁴⁾ Active in auxiliary power supply (24 V DC)

⁽⁵⁾ For I₁ < 0.4 x I_n in the neutral setting must be at 100% of that of the phases

Circuit-breaker for zone selectivity

EFDP Zone selectivity: PR223EF

The information recorded when the protection release trips is:

- Currents (L1, L2, L3, N) which caused opening
- Events
- States
- Alarms
- Trips
- Tripped protection
- Parameters of the tripped protection.

When there is an auxiliary power supply, the PR223EF, fitted with the VM210 module accessory, allows the currents and voltages of the installation to be displayed both locally by means of the FDU or the HMI030, and remotely with a supervision system by means of Modbus protocol. Furthermore, up to 20 trip events can be recorded in self-supply as well.

PR223EF - Measurements

| Measurements | With distributed N | Without distributed N |
|--------------------------|---|--------------------------|
| Effective current values | I_1, I_2, I_3, I_{ne} | I_1, I_2, I_3 |
| Effective voltage values | $V_1, V_2, V_3, V_{12}, V_{23}, V_{31}$ | V_{12}, V_{23}, V_{31} |
| Phase peak factor | ■ | ■ |
| Frequency | f | f |

The PR223EF trip unit is an integral part of the circuit-breaker and is therefore not interchangeable with the other protection trip units available on T4, T5 and on T6.

2

Circuit-breaker for zone selectivity

ZS Zone selectivity: PR332/P

With the PR332/P trip unit (see chapter: "Tmax circuit-breakers for power distribution", page 2/26 and foll.) it is now possible to extend the ZS zone selectivity function, already available on ABB SACE Emax air circuit-breakers to the Tmax moulded-case circuit-breakers.

The ZS zone selectivity, which is applicable to protection functions S and G, can be enabled in the case where the curve with fixed time is selected and the auxiliary power supply is present.

To realize correctly the ZS zone selectivity the following settings are suggested for the upstream circuit-breaker:

| | |
|-------------------------|---|
| S | $t_2 \geq t_2 \text{ set time} + 70 \text{ ms}^*$ |
| I | $I_3 = \text{OFF}$ |
| G | $t_4 \geq t_4 \text{ set time} + 70 \text{ ms}^*$ |
| Selectivity time | same setting for each circuit-breaker |

* At minimum between the trip times of two CBs in series, with auxiliary power supply.

** See page 2/27 for $t_{2\text{set}}$ and $t_{4\text{set}}$ settings.


To carry out the cabling, a shielded twisted pair cable (not supplied with the trip unit; ask ABB for information) can be used. The shield should only be earthed on the trip unit of the circuit-breaker on the supply side.

The maximum length of the cabling for zone selectivity, between two units, is 200 meters.



The maximum number of the circuit-breakers which can be connected to the outputs (Z out) of a trip unit is 16.

The ZS of selectivity is identical to that which can be obtained through the trip units type PR333/P (for Emax X1) and PR122/P- PR123/P (for Emax). Tmax T7 circuit-breaker equipped with PR332/P can be connected directly without external accessories on the load side of a zone selectivity chain created through the other devices (PR333/P, PR122/P and PR123/P).

For example:

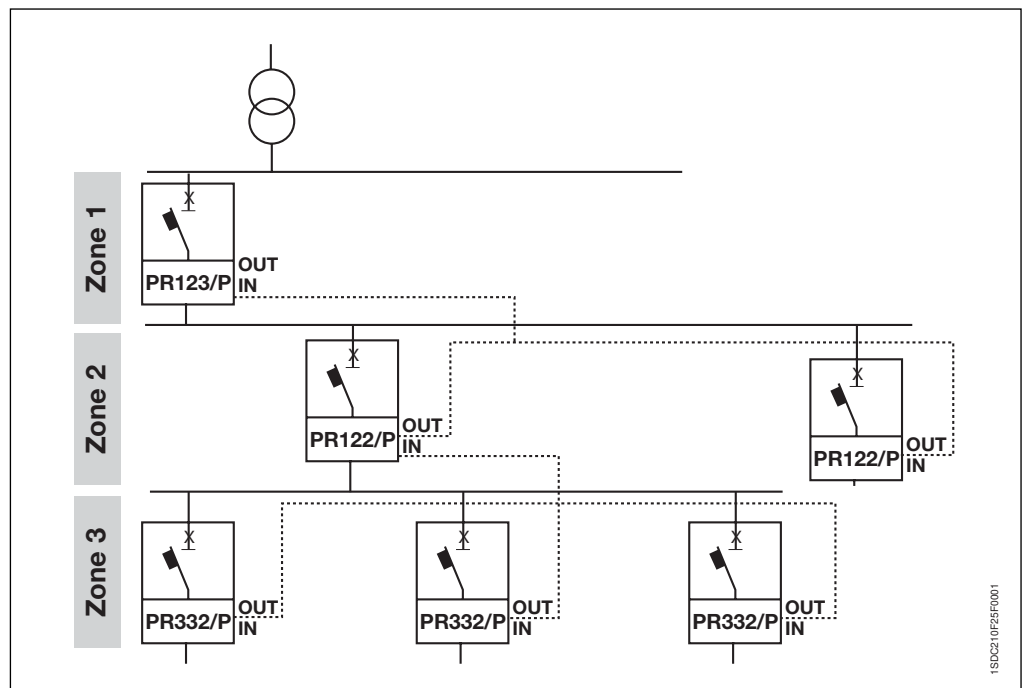

Motor Protection

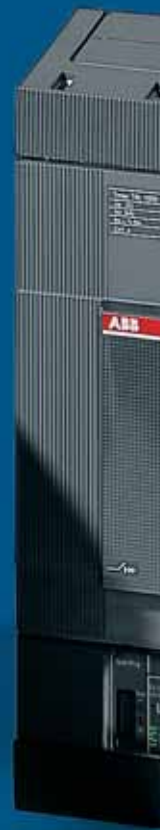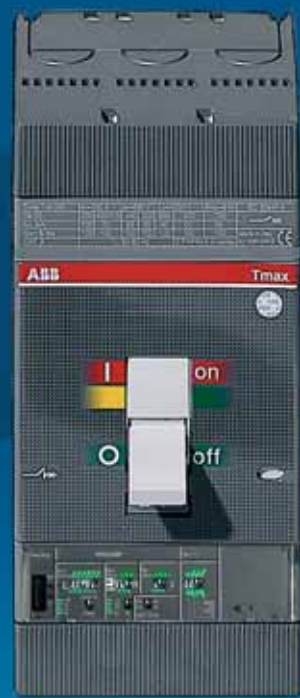



Circuit-breakers for motor protection



Index

Circuit-breakers for motor protection

| | |
|--|------|
| Electrical characteristics | 2/44 |
| General characteristics..... | 2/46 |
| Protection against short-circuit | 2/47 |
| Integrated protection: PR222MP..... | 2/49 |

Circuit-breakers for motor protection

Electrical characteristics

Motor Protection

| | |
|---|---|
| Rated uninterrupted current, I_u | [A] |
| Rated service current, I_n | [A] |
| Poles | [Nr] |
| Rated service voltage, U_e | (AC) 50-60 Hz [V] (DC) [V] |
| Rated impulse withstand voltage, U_{imp} | [kV] |
| Rated insulation voltage, U_i | [V] |
| Test voltage at industrial frequency for 1 min. | [V] |
| Rated ultimate short-circuit breaking capacity, I_{cu} | |
| (AC) 50-60 Hz 220/230 V | [kA] |
| (AC) 50-60 Hz 380/415 V | [kA] |
| (AC) 50-60 Hz 440 V | [kA] |
| (AC) 50-60 Hz 500 V | [kA] |
| (AC) 50-60 Hz 690 V | [kA] |
| Rated service short-circuit breaking capacity, I_{cs} | |
| (AC) 50-60 Hz 220/230 V | [%I _{cu}] |
| (AC) 50-60 Hz 380/415 V | [%I _{cu}] |
| (AC) 50-60 Hz 440 V | [%I _{cu}] |
| (AC) 50-60 Hz 500 V | [%I _{cu}] |
| (AC) 50-60 Hz 690 V | [%I _{cu}] |
| Rated short-circuit making capacity, I_{cm} | |
| (AC) 50-60 Hz 220/230 V | [kA] |
| (AC) 50-60 Hz 380/415 V | [kA] |
| (AC) 50-60 Hz 440 V | [kA] |
| (AC) 50-60 Hz 500 V | [kA] |
| (AC) 50-60 Hz 690 V | [kA] |
| Opening time (415 V) | [ms] |
| Utilisation category (IEC 60947-2) | |
| Isolation behaviour | |
| Reference Standard | |
| Protection against short-circuit | |
| Magnetic only trip unit | MA |
| Electronic trip unit | PR221DS-I PR231/P-I |
| Integrated protection (IEC 60947-4-1) | |
| Electronic trip unit | PR222MP |
| Interchangeability | |
| Versions | |
| Terminals | fixed plug-in withdrawable |
| Fixing on DIN rail | |
| Mechanical life | [No. operations] |
| Electrical life @ 415 V AC | [No. operations] |
| Basic fixed version dimensions | W [mm] D [mm] H [mm] |
| Weight | fixed [kg] plug-in [kg] withdrawable [kg] |

| Tmax T2 | | | | Tmax T3 | |
|---|------|------|-------------|---|-------------|
| 160 | | | | 250 | |
| 1...100 | | | | 100...200 | |
| 3 | | | | 3 | |
| 690 | | | | 690 | |
| 500 | | | | 500 | |
| 8 | | | | 8 | |
| 800 | | | | 800 | |
| 3000 | | | | 3000 | |
| N | S | H | L | N | S |
| 65 | 85 | 100 | 120 | 50 | 85 |
| 36 | 50 | 70 | 85 | 36 | 50 |
| 30 | 45 | 55 | 75 | 25 | 40 |
| 25 | 30 | 36 | 50 | 20 | 30 |
| 6 | 7 | 8 | 10 | 5 | 8 |
| 100% | 100% | 100% | 100% | 75% | 50% |
| 100% | 100% | 100% | 75% (70 kA) | 75% | 50% (27 kA) |
| 100% | 100% | 100% | 75% | 75% | 50% |
| 100% | 100% | 100% | 75% | 75% | 50% |
| 100% | 100% | 100% | 75% | 75% | 50% |
| 143 | 187 | 220 | 264 | 105 | 187 |
| 75.6 | 105 | 154 | 187 | 75.6 | 105 |
| 63 | 94.5 | 121 | 165 | 52.5 | 84 |
| 52.5 | 63 | 75.6 | 105 | 40 | 63 |
| 9.2 | 11.9 | 13.6 | 17 | 7.7 | 13.6 |
| 3 | 3 | 3 | 3 | 7 | 6 |
| A | | | | A | |
| ■ | | | | ■ | |
| IEC 60947-2 | | | | IEC 60947-2 | |
| ■ (MF up to I _n 12.5 A) | | | | ■ | |
| ■ | | | | - | |
| - | | | | - | |
| - | | | | - | |
| - | | | | - | |
| F - P | | | | F - P | |
| F - FC Cu - FC CuAl - EF - ES - R - FC CuAl | | | | F - FC Cu - FC CuAl - EF - ES - R - FC CuAl | |
| F - FC Cu - FC CuAl - EF - ES - R - FC CuAl | | | | F - FC Cu - FC CuAl - EF - ES - R - FC CuAl | |
| - | | | | - | |
| DIN EN 50022 | | | | DIN EN 50022 | |
| 25000 | | | | 25000 | |
| 240 | | | | 240 | |
| 8000 | | | | 8000 | |
| 120 | | | | 120 | |
| 90 | | | | 105 | |
| 70 | | | | 70 | |
| 130 | | | | 150 | |
| 1.1 | | | | 1.5 | |
| - | | | | - | |
| 1.5 | | | | 2.7 | |

TERMINAL CAPTION
 F = Front
 EF = Front extended
 ES = Front extended spread
 FC Cu = Front for copper cables
 R = Rear orientated

FC CuAl = Front for CuAl cables
 MC = Multicable
 HR = Rear flat horizontal
 VR = Rear flat vertical
 HR/VR = Rear flat orientated

⁽¹⁾ 75% for T5 630
⁽²⁾ 50% for T5 630
⁽³⁾ I_{cw} = 5 kA
⁽⁴⁾ I_{cw} = 10 kA
⁽⁵⁾ I_{cw} = 20 kA (S, H, L versions) - 15 A (V version)

Note: in the plug-in/withdrawable version of T5 630 the maximum rated current is derated by 10% at 40 °C.

| Tmax T4 | | | | | Tmax T5 | | | | | Tmax T6 | | | | Tmax T7 | | | |
|--|------|------|------|------|--------------------------------------|------|---------------------|---------------------|---------------------|--------------------------------|------|------|-----|--|------|------|------|
| 250, 320 | | | | | 400, 630 | | | | | 630, 800 | | | | 800/1000/1250 | | | |
| 10...320 | | | | | 320, 400, 630 | | | | | 630 | | | | - | | | |
| 3 | | | | | 3 | | | | | 3 | | | | 3 | | | |
| 690 | | | | | 690 | | | | | 690 | | | | 690 | | | |
| 750 | | | | | 750 | | | | | 750 | | | | - | | | |
| 8 | | | | | 8 | | | | | 8 | | | | 8 | | | |
| 1000 | | | | | 1000 | | | | | 1000 | | | | 1000 | | | |
| 3500 | | | | | 3500 | | | | | 3500 | | | | 3500 | | | |
| N | S | H | L | V | N | S | H | L | V | N | S | H | L | S | H | L | V |
| 70 | 85 | 100 | 200 | 200 | 70 | 85 | 100 | 200 | 200 | 70 | 85 | 100 | 200 | 85 | 100 | 200 | 200 |
| 36 | 50 | 70 | 120 | 200 | 36 | 50 | 70 | 120 | 200 | 36 | 50 | 70 | 100 | 50 | 70 | 120 | 150 |
| 30 | 40 | 65 | 100 | 180 | 30 | 40 | 65 | 100 | 180 | 30 | 45 | 50 | 80 | 50 | 65 | 100 | 130 |
| 25 | 30 | 50 | 85 | 150 | 25 | 30 | 50 | 85 | 150 | 25 | 35 | 50 | 65 | 40 | 50 | 85 | 100 |
| 20 | 25 | 40 | 70 | 80 | 20 | 25 | 40 | 70 | 80 | 20 | 22 | 25 | 30 | 30 | 42 | 50 | 60 |
| 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 75% | 100% | 100% | 100% | 100% |
| 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% ⁽¹⁾ | 100% ⁽²⁾ | 100% | 100% | 100% | 75% | 100% | 100% | 75% | 100% |
| 100% | 100% | 100% | 100% | 100% | 100% | 100% | 100% ⁽¹⁾ | 100% ⁽²⁾ | 100% ⁽²⁾ | 75% | 75% | 75% | 75% | 100% | 75% | 75% | 75% |
| 154 | 187 | 220 | 440 | 660 | 154 | 187 | 220 | 440 | 660 | 154 | 187 | 220 | 440 | 187 | 220 | 440 | 440 |
| 75.6 | 105 | 154 | 264 | 440 | 75.6 | 105 | 154 | 264 | 440 | 75.6 | 105 | 154 | 220 | 105 | 154 | 264 | 330 |
| 63 | 84 | 143 | 220 | 396 | 63 | 84 | 143 | 220 | 396 | 63 | 94.5 | 105 | 176 | 105 | 143 | 220 | 286 |
| 52.5 | 63 | 105 | 187 | 330 | 52.5 | 63 | 105 | 187 | 330 | 52.5 | 73.5 | 105 | 143 | 84 | 105 | 187 | 220 |
| 40 | 52.5 | 84 | 154 | 176 | 40 | 52.5 | 84 | 154 | 176 | 40 | 48.4 | 55 | 66 | 63 | 88.2 | 105 | 132 |
| A | | | | | B (400 A) ⁽³⁾ - A (630 A) | | | | | B ⁽⁴⁾ | | | | B ⁽⁵⁾ | | | |
| ■ | | | | | ■ | | | | | ■ | | | | ■ | | | |
| IEC 60947-2/IEC 60947-4 | | | | | IEC 60947-2/IEC 60947-4 | | | | | IEC 60947-2/IEC 60947-4 | | | | IEC 60947-2 | | | |
| ■ | | | | | - | | | | | - | | | | - | | | |
| ■ | | | | | ■ | | | | | ■ | | | | - | | | |
| - | | | | | - | | | | | - | | | | ■ | | | |
| ■ | | | | | ■ | | | | | ■ | | | | - | | | |
| ■ | | | | | ■ | | | | | ■ | | | | ■ | | | |
| F - P - W | | | | | F - P - W | | | | | F - W | | | | F-W | | | |
| F - FC Cu - FC CuAl - EF - ES - R - MC | | | | | F - FC Cu - FC CuAl - EF - ES - R | | | | | F - FC CuAl - EF - ES - R - RC | | | | F-EF-ES-FC CuAl-HR/VR | | | |
| EF - ES - R - FC Cu - FC CuAl | | | | | EF - ES - R - FC Cu - FC CuAl | | | | | - | | | | - | | | |
| EF - ES - R - FC Cu - FC CuAl | | | | | EF - ES - R - FC Cu - FC CuAl | | | | | EF - HR - VR | | | | F-HR/VR | | | |
| - | | | | | - | | | | | - | | | | - | | | |
| 20000 | | | | | 20000 | | | | | 20000 | | | | 10000 | | | |
| 240 | | | | | 120 | | | | | 120 | | | | 60 | | | |
| 8000 | | | | | 7000 | | | | | 5000 | | | | 2000 (S, H, L versions) / 3000 (V version) | | | |
| 120 | | | | | 60 | | | | | 60 | | | | 60 | | | |
| 105 | | | | | 140 | | | | | 210 | | | | 210 | | | |
| 103.5 | | | | | 103.5 | | | | | 103.5 | | | | 154 (manual) / 178 (motorizable) | | | |
| 205 | | | | | 205 | | | | | 268 | | | | 268 | | | |
| 2.35 | | | | | 3.25 | | | | | 9.5/12 | | | | 9.7/12.5 (manual) - 11/14 (motorizable) | | | |
| 3.6 | | | | | 5.15 | | | | | - | | | | - | | | |
| 3.85 | | | | | 5.4 | | | | | 12.1/15.1 | | | | 29.7/39.6 (manual) - 32/42.6 (motorizable) | | | |

Circuit-breakers for motor protection

General characteristics


Starting, switching and protection of three-phase asynchronous motors are basic operations for their correct use. ABB SACE proposes two different solutions for this type of application:

- a **traditional system**, which foresees a circuit-breaker for protection against short-circuit, a thermal relay for protection against overload and missing or unbalanced phase and a contactor for motor switching;
- a **system of integrated protection** thanks to the PR222MP trip unit, which ensures both protection against short-circuit, and against overload, as well as that against missing or unbalanced phase and that against the rotor block.


All this must necessarily take into account the problems which arise at the moment of starting.

In particular, when selecting these devices, different factors must be taken into consideration, such as:

- the motor power
- the diagram and type of starting
- the type of motor: with cage rotor or with wound rotor
- the fault current at the point of the network where the motor is installed.

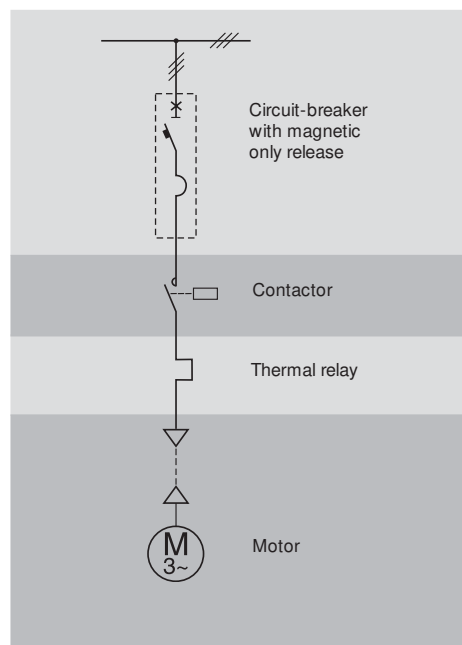

Protection against short-circuit

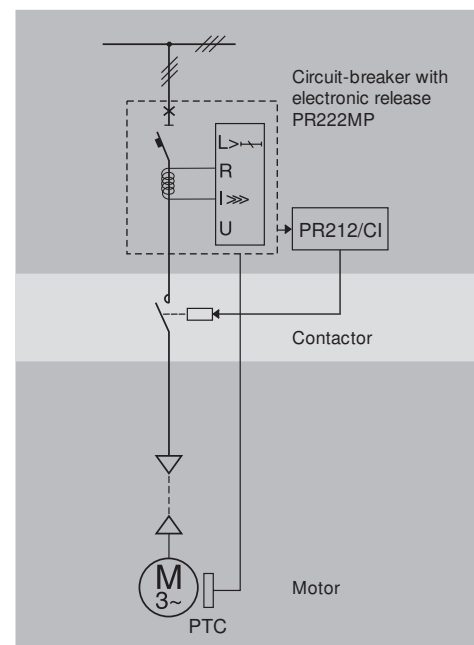

Integrated protection

Circuit-breakers for motor protection

Protection against short-circuit

With the new series of Tmax moulded-case circuit-breakers, ABB SACE proposes a range up to 400 A, which implementing exclusively the protection against short-circuit, is suitable for use inside protected starters of traditional type.


The Tmax T2, T3 and T4 circuit-breakers in the three-pole version with fixed magnetic only trip unit (only for T2, $I_3 = 13 \times I_n$ up to $I_n = 12.5$ A) or adjustable between 6 and 12 times the rated service current for T2 and T3, and between 6 and 14 times for T4, stand out for their compactness and exceptional performances in terms of breaking capacity and limitation of the specific let-through energy. Furthermore, thanks to the great flexibility given by the wide range of magnetic threshold settings, they allow optimal motor protection.

They can be used in a wide range of start-ups, from 0.37 kW to 45 kW for T2 and up to 250 kW for T5 (at 400 V).

Finally, thanks to their wide setting range of protection against short-circuit, T2, T4, T5 and T6, in the three-pole version equipped with PR221DS-I electronic trip units and T7, in three-pole version equipped with PR231/P-I electronic trip units, allow the most suitable trip value to be selected for any type of motor for rated currents up to 1250 A and 560 kW (at 400 V).




MF – Fixed magnetic only trip units

| Tmax T2 | | | | | | | | | | | | |
|---|-----------------------|----|-----|----|-----|-----|----|----|-----|-----|-----|------|
|  | I_n [A] | 1 | 1.6 | 2 | 2.5 | 3.2 | 4 | 5 | 6.5 | 8.5 | 11 | 12.5 |
| | $I_3 = 13 \times I_n$ | 13 | 21 | 26 | 33 | 42 | 52 | 65 | 84 | 110 | 145 | 163 |

Note: The magnetic only trip units which equip the Tmax T2 in three-pole version circuit-breaker have a trip threshold I_3 fixed at $13 \times I_n$, according to what is indicated in the table.

MA – Adjustable magnetic only trip units

| Tmax T2-T3-T4 | | | | | | | | | | | |
|---|--|-----------|------------|------------|------------|------------|-------------|-------------|-------------|-------------|--------------|
|  | I_n [A] | 10 | 20 | 25 | 32 | 52 | 80 | 100 | 125 | 160 | 200 |
| | Tmax T2 | | ■ | | ■ | ■ | ■ | ■ | | | |
| | Tmax T3 | | | | | | | ■ | ■ | ■ | ■ |
| | Tmax T4 | ■ | | ■ | | ■ | ■ | ■ | ■ | ■ | ■ |
| | Tmax T2, T3 $I_3 = 6...12 \times I_n$ | - | 120... 240 | - | 192... 384 | 314... 624 | 480... 960 | 600... 1200 | 750... 1500 | 960... 1920 | 1200... 2400 |
| | Tmax T4 $I_3 = 6...14 \times I_n$ | 60... 140 | - | 150... 350 | - | 314... 728 | 480... 1120 | 600... 1400 | 750... 1750 | 960... 2240 | 1200... 2800 |

Note: The magnetic only trip units which equip the Tmax T2 and T3 three-pole version circuit-breakers have a trip threshold I_3 which can be adjusted from 6 to $12 \times I_n$ for T2 and T3 and from 6 to $14 \times I_n$ for T4, according to what is indicated in the table.

Circuit-breakers for motor protection


Protection against short-circuit

Current sensors

| | In [A] | 10 | 25 | 63 | 100 | 160 | 250 | 320 | 400 | 630 | 800 | 1000 | 1250 |
|-----------|--------------------|-----------|-----------|-----------|-------------|-------------|-------------|-------------|-------------|-------------|-------------|--------------|---------------|
| PR221DS-I | T2 160 | ■ | ■ | ■ | ■ | ■ | | | | | | | |
| | T4 250 | | | | ■ | ■ | ■ | | | | | | |
| | T4 320 | | | | ▲ | ▲ | ▲ | ■ | | | | | |
| | T5 400 | | | | | | | ■ | ■ | | | | |
| | T5 630 | | | | | | | ▲ | ▲ | ■ | | | |
| | T6 630 | | | | | | | | | ■ | | | |
| | T6 800 | | | | | | | | | | ■ | | |
| PR231/P-I | T7 800 | | | | | | | | | ▲ | ■ | | |
| | T7 1000 | | | | | | | | | ▲ | ▲ | ■ | |
| | T7 1250 | | | | | | | | | ▲ | ▲ | ▲ | ■ |
| | I ₃ [A] | 10... 100 | 25... 250 | 63... 630 | 100... 1000 | 160... 1600 | 250... 2500 | 320... 3200 | 400... 4000 | 630... 6300 | 800... 9600 | 1000... 1250 | 1250... 15000 |

■ = Complete circuit-breaker already coded
▲ = Circuit-breaker to be assembled


PR221DS-I

| Protection function | Trip threshold | Excludability | Relation t=f(I) |
|--|---|---------------|-----------------|
|  Against short-circuit with adjustable instantaneous trip | I ₃ = 1 - 1.5 - 2 - 2.5 - 3 - 3.5 - 4.5 - 5.5 - 6.5 - 7 - 7.5 - 8 - 8.5 - 9 - 10 x I _n Tolerance ± 20% (T2) ± 10% (T4-T5, T6) | ■ | t=k |

Note: The tolerances are valid under the following hypotheses:
 – relay self-supplied on running and/or auxiliary power supply (without start up)
 – two-phase or three-phase power supply
 In all the cases not foreseen by the above-mentioned hypotheses, the following tolerance values are valid:

| | Trip threshold | Trip time |
|---|----------------|-----------|
| I | ± 20% | ≤ 40ms |

PR231P-I

| Protection function | Trip threshold | Excludability | Relation t=f(I) |
|--|--|---------------|-----------------|
|  Against short-circuit with adjustable instantaneous trip | I ₃ = 1 - 1.5 - 2 - 2.5 - 3 - 3.5 - 4.5 - 5.5 - 6.5 - 7 - 7.5 - 8 - 8.5 - 9 - 10 - 12 x I _n Tolerance ± 10% | - | t=k |

Note: The tolerances are valid under the following hypotheses:
 – relay self-supplied on running and/or auxiliary power supply (without start up)
 – two-phase or three-phase power supply
 In all the cases not foreseen by the above-mentioned hypotheses, the following tolerance values are valid:

| | Trip threshold | Trip time |
|---|----------------|-----------|
| I | ± 15% | ≤ 60ms |

Circuit-breakers for motor protection

Integrated protection: PR222MP



In the three-pole version, the Tmax T4, T5 and T6 circuit-breakers are fitted with PR222MP electronic trip units. This makes it possible to obtain functions which guarantee high trip precision, extreme reliability and immunity to variations in the external temperature. The PR222MP trip units fully integrated on board the circuit-breaker guarantee complete protection of the motor. In fact, it is not necessary to provide the help of an external thermal relay for protection against overloads as, on the other hand, occurs with the standard solution.

The PR222MP can be connected to a contactor for the basic protection function (NORMAL mode) of the motor: the circuit-breaker can control contactor opening in the case of a fault (excluding short-circuit), by means of the SACE PR212/CI accessory control unit. In fact, a contactor has breaking capacities at high currents which are less efficient than the circuit-breaker, but a high number of possible operations consistently higher than those of the circuit-breaker (about 1.000.000). The combination of the two devices therefore optimises motor protection and control. However, the PR222MP can also be connected directly to the motor (HEAVY mode). In this case, the circuit-breaker is called on to protect the plant in any case, without the help of the contactor: this solution is suggested for motors with a low number of operations.

PR222MP electronic trip unit - Current sensors

Tmax T4-T5-T6

| In [A] | 100 | 160 | 320 | 400 | 630 |
|--------|-----|-----|-----|-----|-----|
| T4 250 | ■ | ■ | | | |
| T5 400 | | | ■ | ■ | |
| T6 800 | | | | | ■ |

■ = Complete circuit-breaker already coded

In any case, the PR010/T unit for testing the trip unit and checking the protection functions, and the PR021/K signalling unit are available for the PR222MP trip unit. The electronic trip units are self-supplied and are made up of three current transformers, the PR222MP protection unit and a trip coil which acts directly on the circuit-breaker operating mechanism. The current transformers, housed inside the trip unit, supply the energy and the signal required for correct protection operation. Operation is guaranteed with a single-phase current equal to 20% of the rated current. The trip unit is temperature-compensated and is sensitive to missing phase according to Table IV of the IEC60947-4-1 7.2.1.5.2 Standards.

The T4, T5 and T6 circuit-breakers for motor protection are perfectly integrated with the new line of ABB contactors. The latter - defined as A-line - together with the line of thermal relays and ABB SACE moulded-case circuit-breakers, is the basis for the new generation of apparatus specially designed to guarantee a system of products which can be integrated according to the required applications. All this has the aim not only of continually improving the products, but above all of providing designers, installers and end users with the best solutions in terms of performances and reliability, combined with the simplicity of the system.


The Tmax T4 and T5 circuit-breakers with PR222MP trip unit and the "A" series of contactors are, in particular, an extraordinary solution in terms of compactness, sharing the same width and thereby saving space, assembly material, installation time and relative cabling operations. The combination of circuit-breaker-contactor allows an extremely compact protected starter to be made.

Circuit-breakers for motor protection

Integrated protection: PR222MP

2


Typical operating characteristic of an asynchronous motor

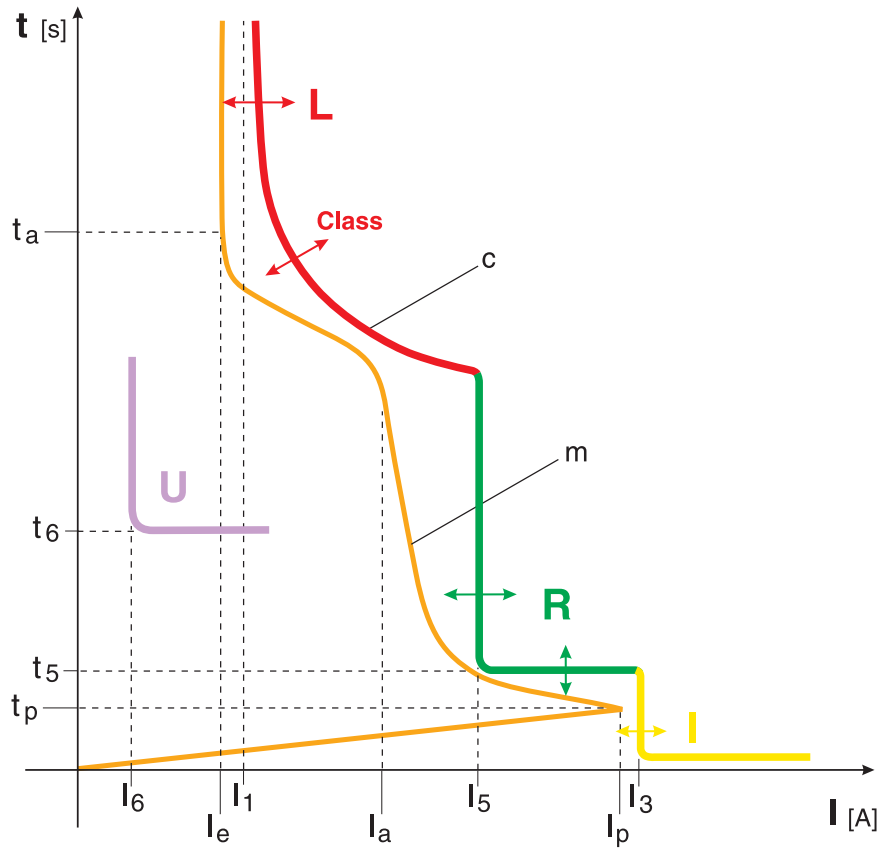

I_1 = function L trip current
 I_3 = function I trip current
 I_5 = function R trip current
 t_5 = function R trip time
 I_6 = function U trip current
 t_6 = function U trip time
 I_e = rated service current of the motor
 I_a = motor starting current
 I_p = peak value of the sub-transient starting current
 t_a = motor starting time
 t_p = duration of the sub-transient starting phase
 m = typical motor starting curve
 c = example of trip curve of a motor protection circuit-breaker with electronic release
 The different curves of the functions, with numerous threshold and time settings, allow an overall trip curve to be drawn which is really close to the motor starting curve, thereby optimising its protection.

1SDC210015D0001

Protection functions

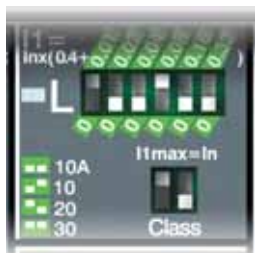

(L) Protection against overload

Function L protects the motor against overloads according to the indications and classes defined by the IEC 60947-4-1 Standard.

The protection is based on a pre-defined model (ABB SACE international patent) which, by simulating the copper and iron over-temperatures inside the motor, allows precise safeguarding of the motor. The protection intervenes when the established over-temperature is reached. The trip time is fixed by selecting the trip class defined in the above-mentioned Standard.

The function is temperature-compensated and sensitive to a missing/unbalanced phase according to the IEC 60947-4-1 Standard.


In the case of an auxiliary power supply, the thermal memory function is guaranteed, which allows the trip unit to continue to calculate the motor temperature even following an opening.

Function L, which cannot be excluded, can be set manually to $I_1 = 0.4...1 \times I_n$ with 60 thresholds which can be set by means of the dip-switches on the front of the trip unit, or electronically by means of the SACE PR010T test and configuration unit.

The starting class of the motor must then be selected, which determines the trip time for overload according to the IEC 60947-4-1 4.7.3 Table II Standards: class 10 A corresponds to a trip time $t_1 = 4s$, class 10 to $t_1 = 8s$, class 20 to $t_1 = 16s$ and class 30 to $t_1 = 24s$ at $7.2 \times I_n$. Setting this trip time can also be carried out electronically with the PR010T: the electronic steps are equal to 1s.

Tripping of this protection leads to contactor opening (with the PR212/CI unit). Any anomaly of the contactor would make the circuit-breaker open, thanks to the BACK UP function.

For protection L, there is then a pre-alarm and an alarm LED: the pre-alarm threshold value is fixed and equal to $0.9 \times I_1$ and the LED is permanently lit, whereas it flashes in case of alarm ($I > 1.05 \times I_1$). It is also possible to transmit remotely the alarm of protection L, simply connecting connector X_3 to the dedicated contact.

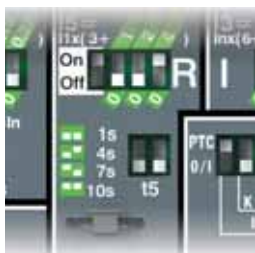

(R) Protection against rotor block

Function R protects the motor against possible rotor block during operation. Protection R has the characteristic of protecting the motor in two different ways, according to whether the fault is present at start-up or whether it is present during normal service of an already active plant.

In the former case, protection R is linked to protection L for time selection as well: in the presence of a fault during start-up, protection R is inhibited for a time equal to the time set with the trip class. Once this time is exceeded, protection R becomes active leading to a trip after a fixed set t_5 time. In the latter case, protection R is already active and the protection tripping time will be equal to t_5 . The protection intervenes when at least one of the phase currents exceeds the established value and remains over that threshold for time t_5 .

Function R can be set manually $I_5 = 3...10 \times I_1$ with 8 thresholds which can be set by means of the dip-switches on the front of the trip unit, or with 70 thresholds by means of the SACE PR010T test and configuration unit (steps of $0.1 \times I_1$). The trip time t_5 can be set to 1, 4, 7 or 10 seconds by means of a dip-switch, or with steps of 0.5s by means of PR010T.

Tripping of this protection leads to contactor opening (with the PR212/CI unit); any anomaly of the contactor would make the circuit-breaker open, thanks to the BACK UP function.




(I) Protection against short-circuit

This protection function intervenes in the case of a short-circuit between phases. It is sufficient for just a single phase to exceed the set threshold to cause immediate opening of the circuit-breaker (protection cannot be excluded).

The PR222MP trip unit is able to recognise whether the motor to be protected is in the start-up phase or if there is a short-circuit: this has the aim of allowing completely safe start-up conditions. It cannot be excluded.

Circuit-breakers for motor protection

Integrated protection: PR222MP

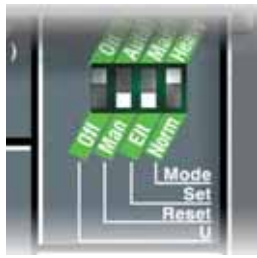

(U) Protection against missing phase and/or unbalanced

Function U can be used in those cases where a particularly precise control is needed regarding phase missing/unbalanced. This protection can be excluded and intervenes if the effective value of one or two currents drops below the level equal to 0.4 of the current I_l set for protection L and remains there for longer than 4 seconds.

This protection can be set electronically with the PR010T from 0.4 to $0.9 \times I_l$ with time adjustable between 1 and 10s (steps of 0.5s).

Tripping of this protection leads to contactor opening (with the PR212/CI unit); any anomaly of the contactor would make the circuit-breaker open, thanks to the BACK UP function.

Parameterisation of the PR222MP trip unit

Man/Elt: by means of a dip switch located on the front, the trip unit can be provided for manual parameterisation (Man) of the thresholds and times acting directly on the dip switches located on the front of the trip unit or with electronic parameterisation (Elt) by means of the PR010T.

Reset Mode

Auto/Man: this function (AUTO) allows the state of activation of the PR212/CI to be automatically reset following contactor trip for L function, after a fixed time of 15s. The AUTO reset is only possible when there is an auxiliary voltage.

Setting the working modes


Normal: the Normal mode foresees the use of a circuit-breaker and a contactor: this configuration makes intervention towards the contactor possible, through the PR212/CI unit, when the PR222MP considers this appropriate.

Heavy: on the other hand, the heavy mode foresees the use of only the circuit-breaker and therefore the PR222MP sends the trip signal directly to the circuit-breaker.

BACK UP Function

This protection is conceived to manage the possibility that an opening command sent to the contactor might not have a positive outcome, i.e. that the contactor does not intervene. In this case, after having waiting for the time defined using the dip switch "k time" (min = 80ms or max = 160ms), the PR222MP sends a trip signal to the circuit-breaker.

By introducing a time delay between the command sent to the contactor and to the back-up one, it is necessary to compensate the contactor actuation time.

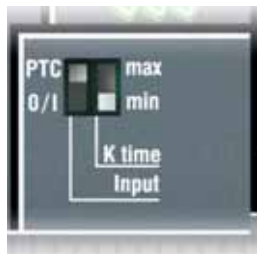

Setting the PTC protection

PTC: by means of a PTC sensor inserted in the motor, this protection controls the internal temperature of the protected motor. In the case of excessive temperature, the PR222MP release will command opening of the contactor (if it is in "Normal" mode) or of the circuit-breaker (if it is in "Heavy" mode).

0/1: in this mode, as an alternative to the PTC protection, it is possible to signal the state of a generic contact without potential by means of the ABB SACE PR021/K signalling unit (see page 3/45) (for the electrical circuit diagram, see page 5/20).

PR222MP

Protection R

Against rotor block

Protection L

Against motor overload


Socket for connection of SACE PR010/T test unit

Socket for SACE TT1 test unit

Class

Class of motor starting according to the IEC 60947-4-1 Standards

Selection between:
 - PTC⁽¹⁾ temperature sensor input
 - 0/1 generic input

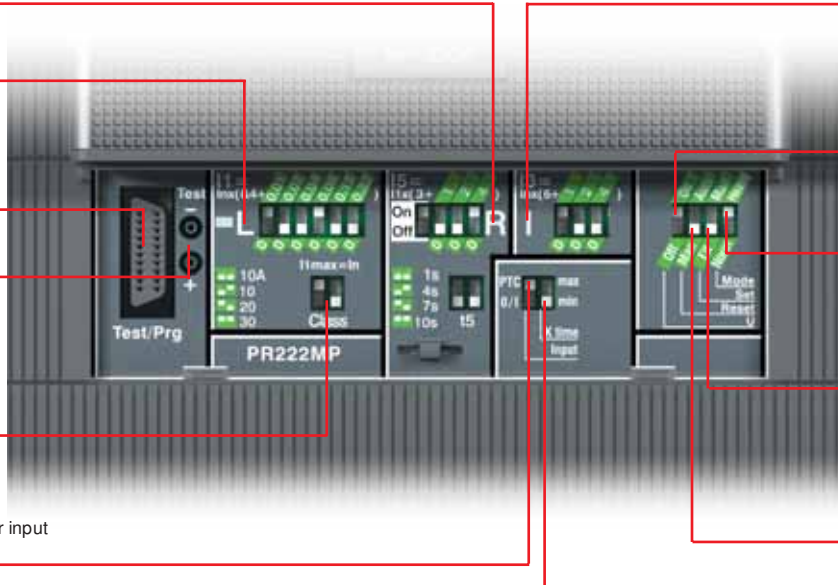

Protection I
 Against short-circuit with instantaneous trip

Protection U
 Against phase current unbalance or loss of phase

Setting the work methods

Man/Elt
 Release parametrisation methods

Setting the reset following trip
 - manual
 - automatic

Setting the back-up time

⁽¹⁾ A special input is available to connect a PTC temperature probe, inserted in the motor to be protected

PR222MP - Protection functions and parameterisation

| Protection functions | Trip threshold | Trip curves ⁽¹⁾ | Excludability | t = f(I) | Thermal memory ⁽²⁾ |
|---|---|---|---------------|---------------|-------------------------------|
| L Against overload with long inverse time delay trip and trip characteristic according to an inverse time curve according to IEC 60947-4-1 Standard | Manual setting $I_1 = 0.4...1 \times I_n$ step = $0.01 \times I_n$ Tolerance: $\pm 15\%$ | Manual setting Trip classes: 10 A - 10 - 20 - 30 (IEC 60497-4-1) $t_1 = 4-8-16-24s$ where t_1 is the trip time at $7.2 \times I_1$ cold, depending on the class selected | - | - | ■ |
| | Electronic setting $I_1 = 0.4...1 \times I_n$ step = $0.01 \times I_n$ Tolerance: $\pm 15\%$ | Electronic setting $t_1 = 4...24s$ step = 1s Tolerance: $\pm 15\%$ | | | |
| R Against rotor block with delayed trip and trip characteristic with definite time | Manual setting $I_5 = OFF - 3...10 \times I_1$ step = $1 \times I_n$ Tolerance: $\pm 15\%$ | Manual setting $t_5 = 1 - 4 - 7 - 10 s$ Tolerance: $\pm 10\%$ | ■ | $t = k/I^2$ | - |
| | Electronic setting $I_5 = OFF - 3...10 \times I_1$ step = $0.1 \times I_1$ Tolerance: $\pm 15\%$ | Electronic setting $t_5 = 1...10s$ step = 0.5s Tolerance: $\pm 10\%$ | | | |
| I Against short-circuit with instantaneous trip | Manual setting $I_3 = 6...13 \times I_n$ step = $1 \times I_n$ Tolerance: $\pm 15\%$ | instantaneous | - | $t = k^{(3)}$ | - |
| | Electronic setting $I_3 = 6...13 \times I_n$ step = $0.1 \times I_n$ Tolerance: $\pm 15\%$ | | | | |
| U Against phase current unbalance or loss of phase with delayed trip and trip characteristic with definite time | Manual setting $I_6 = ON (0.4 \times I_1) - OFF$ Tolerance: $\pm 15\%$ | Manual setting $t_6 = 4s$ Tolerance: $\pm 10\%$ | ■ | $t = k$ | - |
| | Electronic setting $I_6 = 0.4...0.9 \times I_1 - OFF$ Tolerance: $\pm 15\%$ | Electronic setting $t_6 = 1...10s$ step 0.5s Tolerance: $\pm 10\%$ | | | |

⁽¹⁾ These tolerances hold in the following conditions:
 - self-powered trip unit at full power and/or auxiliary supply (without start-up);
 - two or three-phase power supply.
 In conditions other than those considered, the following tolerances hold:

| | Trip threshold | Trip time |
|---|----------------|-------------|
| R | $\pm 20\%$ | $\pm 20\%$ |
| I | $\pm 20\%$ | $\leq 50ms$ |
| U | $\pm 20\%$ | $\pm 20\%$ |

⁽²⁾ Available in auxiliary supply at 24 V DC
⁽³⁾ Full power: $t = t_5$
 Start up: $t = t_1 + t_5$

1150 V AC and 1000 V DC





Circuit-breakers for use up to 1150 V AC and 1000 V DC



Index

Circuit-breakers for use up to 1150 V AC and 1000 V DC

Electrical characteristics2/56

Circuit-breakers for use up to 1150 V AC and 1000 V DC

Electrical characteristics

The range of T4, T5 and T6 circuit-breakers for applications in direct current at 1000 V or in alternating current up to 1150 V also comes into the panorama of the Tmax proposals.

The typical sectors of use are installations in mines, road and railway tunnels, electrical transport and industrial applications in general.

The circuit-breakers are available in the three-pole and four-pole version with TMD or TMA adjustable thermomagnetic releases or with PR221DS, PR222DS/P, PR222DS/PD and PR222MP electronic trip units.

The dimensions of these circuit-breakers are the same as the standard one. The Tmax circuit-breakers for these applications are available in the fixed, plug-in and withdrawable version (for which the use of the 1000 V fixed parts supplied only by upper terminals is mandatory) and they are compatible with all the accessories except for the residual current release.

Circuit-breakers for use up to 1150 V AC

| | | | | Tmax T4 | | Tmax T5 | | Tmax T6 | |
|--|----------------------|-------------------------|---------|-------------|------------------------|--------------------------------------|------------------------|------------------------|------|
| Rated uninterrupted current, Iu | | [A] | | 250 | | 400/630 | | 630/800 | |
| Poles | | | | 3, 4 | | 3, 4 | | 3, 4 | |
| Rated service voltage, Ue | (AC) 50-60 Hz | [V] | | 1000 | 1150 | 1000 | 1150 | 1000 | 1150 |
| Rated impulse withstand voltage, Uimp | | [kV] | | 8 | | 8 | | 8 | |
| Rated insulation voltage, Ui | | [V] | | 1000 | 1150 | 1000 | 1150 | 1000 | 1150 |
| Test voltage at power frequency for 1 min. | | [V] | | 3500 | | 3500 | | 3500 | |
| Rated ultimate short-circuit breaking capacity, Icu | | | | L | V⁽¹⁾ | L | V⁽¹⁾ | L⁽¹⁾ | |
| | (AC) 50-60 Hz 1000 V | [kA] | | 12 | 20 | 12 | 20 | 12 | |
| | (AC) 50-60 Hz 1150 V | [kA] | | | 12 | | 12 | | |
| Rated service short-circuit breaking capacity, Ics | | | | 12 | 12 | 10 | 10 | 6 | |
| | (AC) 50-60 Hz 1000 V | [kA] | | | 6 | | 6 | | |
| | (AC) 50-60 Hz 1150 V | [kA] | | | | | | | |
| Rated short-circuit making capacity, Icm | | | | 24 | 40 | 24 | 40 | 24 | |
| | (AC) 50-60 Hz 1000 V | [kA] | | | 24 | | 24 | | |
| | (AC) 50-60 Hz 1150 V | [kA] | | | | | | | |
| Category of use (IEC 60947-2) | | | | A | | B (400 A) ⁽²⁾ - A (630 A) | | B ⁽³⁾ | |
| Behaviour on isolation | | | | ■ | | ■ | | ■ | |
| Reference Standards | | | | IEC 60947-2 | | IEC 60947-2 | | IEC 60947-2 | |
| Thermomagnetic releases | TMD | | | ■ | | | | | |
| | TMA | | | | | ■ | | ■ | |
| Electronic trip units | PR221DS/LS | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR221DS/I | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR221DS/P_LSI | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR221DS/P_LSIG | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR222DS/PD_LSI | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR222DS/PD_LSIG | | | ■ | ■ | ■ | ■ | ■ | ■ |
| | PR222MP | | | ■ | | ■ | | | |
| | Terminals | | | FC Cu | | FC Cu | | F - FC CuAl - R | |
| Version | | | F, P, W | F | F, P, W ⁽⁴⁾ | F | F ⁽⁵⁾ | | |
| Mechanical life | | [No. operations] | | 20000 | | 20000 | | 20000 | |
| | | [No. hourly operations] | | 240 | | 120 | | 120 | |
| Basic fixed dimensions ⁽⁶⁾ | 3 poles | W [mm] | | 105 | | 140 | | 210 | |
| | 4 poles | W [mm] | | 140 | | 184 | | 280 | |
| | | D [mm] | | 103.5 | | 103.5 | | 103.5 | |
| | | H [mm] | | 205 | | 205 | | 268 | |
| Weight | fixed | 3/4 poles | [kg] | 2.35 / 3.05 | 2.35/3.05 | 3.25 / 4.15 | 3.25 / 4.15 | 9.5 / 12 | |
| | plug-in | 3/4 poles | [kg] | 3.6 / 4.65 | | 5.15 / 6.65 | | | |
| | withdrawable | 3/4 poles | [kg] | 3.85 / 4.9 | | 5.4 / 6.9 | | | |

TERMINAL CAPTION

F = Front
FC Cu = Front for copper cables
FC CuAl = Front for copper cables CuAl
R = Rear

F = Fixed circuit-breakers
P = Plug-in circuit-breakers
W = Withdrawable circuit-breakers

⁽¹⁾ Power supply only from above

⁽²⁾ Icw = 5 kA

⁽³⁾ Icw = 7.6 kA (630 A) - 10 kA (800 A)

⁽⁴⁾ Tmax T5630 is only available in the fixed version

⁽⁵⁾ For T6 in the withdrawable version, please ask ABB SACE

⁽⁶⁾ Circuit-breaker without high terminal covers

PR221DS and PR222DS for use up to 1150 V AC - Current sensor

Tmax T4-T5-T6

| In [A] | 100 | 250 | 320 | 400 | 630 | 800 |
|---------------|-----|-----|-----|-----|-----|-----|
| T4 250 | ■ | ■ | | | | |
| T5 400 | | | ■ | ■ | | |
| T5 630 | | | | | ■ | |
| T6 630 | | | | | ■ | |
| T6 800 | | | | | | ■ |

Note: For the PR222MP setting, please see page 2/49



Circuit-breakers for use at 1000 V DC

| | | Tmax T4 | Tmax T5 | Tmax T6 |
|--|-------------------------|-------------|--------------------------------------|------------------|
| Rated uninterrupted current, Iu | [A] | 250 | 400/630 | 630/800 |
| Poles | | 4 | 4 | 4 |
| Rated service voltage, Ue | [V] | 1000 | 1000 | 1000 |
| Rated impulse withstand voltage, Uimp | [kV] | 8 | 8 | 8 |
| Rated insulation voltage, Ui | [V] | 1150 | 1150 | 1000 |
| Test voltage at power frequency for 1 min. | [V] | 3500 | 3500 | 3500 |
| Rated ultimate short-circuit breaking capacity, Icu | | V | V | L |
| (DC) 4 poles in serie ⁽¹⁾ | [kA] | 40 | 40 | 40 |
| Rated service short-circuit breaking capacity, Ics | | | | |
| (DC) 4 poles in serie ⁽²⁾ | [kA] | 20 | 20 | |
| Category of use (IEC 60947-2) | | A | B (400 A) ⁽³⁾ - A (630 A) | B ⁽⁴⁾ |
| Behaviour on isolation | | ■ | ■ | ■ |
| Reference Standards | | IEC 60947-2 | IEC 60947-2 | IEC 60947-2 |
| Thermomagnetic releases | | ■ | - | - |
| | TMD | ■ | ■ | ■ |
| | TMA | ■ | - | - |
| Terminals | | FC Cu | FC Cu | F - FC CuAl - R |
| Interchangeability | | ■ | - | ■ |
| Versions | | F | F | F ⁽⁵⁾ |
| Mechanical life | [No. operations] | 20000 | 20000 | 20000 |
| | [No. hourly operations] | 240 | 120 | 120 |
| Basic fixed dimensions | 4 poles | W [mm] | 140 | 184 |
| | | D [mm] | 103.5 | 103.5 |
| | | H [mm] | 205 | 205 |
| Weight | fixed 4 poles | [kg] | 3.05 | 4.15 |
| | | | | 12 |


TERMINAL CAPTION
 F = Front
 FC Cu = Front for copper cables
 FC CuAl = Front for copper cables CuAl
 R = Rear

⁽¹⁾ See the wiring diagrams on page 4/62 diagram D
⁽²⁾ Power supply only from above
⁽³⁾ Icw = 5 kA
⁽⁴⁾ Icw = 7.6 kA (630 A) - 10 kA (800 A)
⁽⁵⁾ For T6 in the withdrawable version, please ask ABB SACE

Thermomagnetic trip unit for use up to 1150 V AC and 1000 V DC - TMD and TMA

| In [A] | 32 | 50 | 80 | 100 | 125 | 160 | 200 | 250 | 320 | 400 | 500 | 630 | 800 |
|--|--|-----|-----|------------|------------|------------|------------|-------------|-------------|-------------|-------------|-------------|-------------|
| Neutral [A] - 100% | 32 | 50 | 80 | 100 | 125 | 160 | 200 | 250 | 320 | 400 | 500 | 630 | 800 |
|  I_n = 0.7... 1xI_n | T4 250 | ■ | ■ | ■ | ■ | ■ | ■ | ■ | | | | | |
| | T5 400 | | | | | | | | ■ | ■ | | | |
| | T5 630 | | | | | | | | | | ■ | | |
| | T6 630 | | | | | | | | | | | ■ | |
| | T6 800 | | | | | | | | | | | | ■ |
| | | | | | | | | | | | | | |
|  I₃ = 10xI_n I₃ = 5...10xI_n | I ₃ = 10 x I _n [A] | 320 | 500 | | | | | | | | | | |
| | I ₃ = 5...10 x I _n [A] | - | - | 400...8000 | 500...1000 | 625...1250 | 800...1600 | 1000...2000 | 1250...2500 | 1600...3200 | 2000...4000 | 2500...5000 | 3150...6300 |

Switch-disconnectors

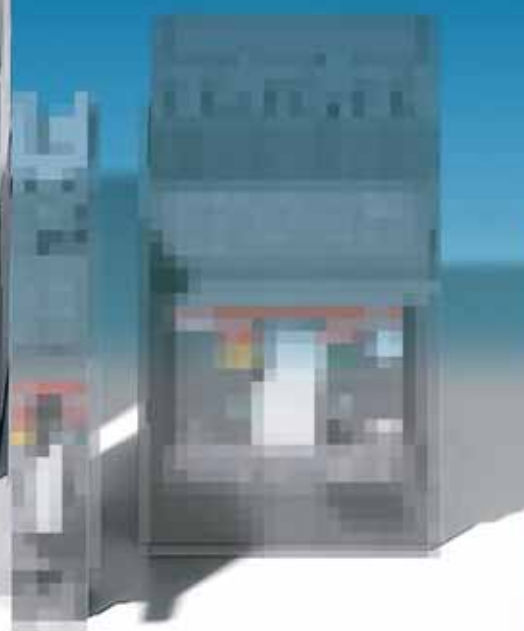



Index

Switch-disconnectors

Electrical characteristics2/60

Switch-disconnectors

Electrical characteristics

The Tmax switch-disconnectors derive from the corresponding circuit-breakers, of which they keep the overall dimensions, versions, fixing systems and the possibility of mounting accessories unchanged. This version only differs from the circuit-breakers in the absence of the protection trip units. They are characterised by a rated voltage of 690 V in alternating current and 750 V in direct current.

Switch-disconnectors

| | | | | Tmax T1D |
|--|---|-------------------------|------|--------------|
| Conventional thermal current, Ith | | [A] | | 160 |
| Rated service current in category AC22, Ie | | [A] | | 160 |
| Rated service current in category AC23, Ie | | [A] | | 125 |
| Poles | | [Nr.] | | 3/4 |
| Rated service voltage, Ue | (AC) 50-60 Hz | [V] | | 690 |
| | (DC) | [V] | | 500 |
| Rated impulse withstand voltage, Uimp | | [kV] | | 8 |
| Rated insulation voltage, Ui | | [V] | | 800 |
| Test voltage at industrial frequency for 1 minute | | [V] | | 3000 |
| Rated short-circuit making capacity, Icm (min) switch-disconnector only | | [kA] | | 2.8 |
| | (max) with circuit-breaker on supply side | [kA] | | 187 |
| Rated short-time withstand current for 1s, Icw | | [kA] | | 2 |
| Reference Standard | | | | IEC 60947-3 |
| Versions | | | | F |
| Terminals | | | | FC Cu - EF - |
| | | | | FC CuAl |
| Mechanical life | | [No. operations] | | 25000 |
| | | [No. Hourly operations] | | 120 |
| Basic dimensions, fixed | 3 poles | W [mm] | | 76 |
| | 4 poles | W [mm] | | 102 |
| | | D [mm] | | 70 |
| | | H [mm] | | 130 |
| Weight | fixed | 3/4 poles | [kg] | 0.9/1.2 |
| | plug-in | 3/4 poles | [kg] | - |
| | withdrawable | 3/4 poles | [kg] | - |

Switch-disconnector coordination

| | T1 | | | T2 | | | T3 | | T4 | | | | T5 400 | | | | | | |
|-----------------|----|----|----|----|----|----|----|----|----|----|----|----|--------|-----|----|----|----|-----|-----|
| | B | C | N | N | S | H | L | N | S | N | S | H | L | V | N | S | H | L | V |
| Icu [kA] | 16 | 25 | 36 | 36 | 50 | 70 | 85 | 36 | 50 | 36 | 50 | 70 | 120 | 200 | 36 | 50 | 70 | 120 | 200 |
| T1D 160 | 16 | 25 | 36 | 36 | 50 | 70 | 85 | | | | | | | | | | | | |
| T3D 250 | | | | | | | | 36 | 50 | 36 | 50 | | | | | | | | |
| T4D 320 | | | | | | | | | | 36 | 50 | 70 | 120 | 200 | | | | | |
| T5D 400 | | | | | | | | | | | | | | | 36 | 50 | 70 | 120 | 200 |
| T5D 630 | | | | | | | | | | | | | | | | | | | |
| T6D 630 | | | | | | | | | | | | | | | | | | | |
| T6D 800 | | | | | | | | | | | | | | | | | | | |
| T6D 1000 | | | | | | | | | | | | | | | | | | | |
| T7D 1000 | | | | | | | | | | | | | | | | | | | |
| T7D 1250 | | | | | | | | | | | | | | | | | | | |
| T7D 1600 | | | | | | | | | | | | | | | | | | | |

Applications

They can be used as general circuit-breakers in sub-switchboards as switching and isolation parts for lines, busbars or groups of apparatus, or as bus-ties. They can be part of general isolation devices of groups of machines or of complexes for motor switching and protection.

Isolation

The main function carried out by this apparatus consists of isolation of the circuit they are inserted in. Once the contacts are open they are at a distance which prevents an arc from striking, in accordance with the prescriptions in the standards regarding isolation behaviour. The position of the operating lever corresponds definitely with that of the contacts (positive operation).

| Tmax T3D | | | | | Tmax T4D | | | | Tmax T5D | | | | Tmax T6D | | | | Tmax T7D | | | |
|-------------------------|--|--|--|--|----------------------------------|--|--|--|----------|-------------------------------|--|--|----------|--|----------------------|--|----------|--|--|--|
| 250 | | | | | 250/320 | | | | | 400/630 | | | | | 630/800/1000 | | | | | 1000/1250/1600 |
| 250 | | | | | 250/320 | | | | | 400/630 | | | | | 630/800/1000 | | | | | 1000/1250/1600 |
| 200 | | | | | 250 | | | | | 400 | | | | | 630/800/800 | | | | | 1000/1250/1250 |
| 3/4 | | | | | 3/4 | | | | | 3/4 | | | | | 3/4 | | | | | 3/4 |
| 690 | | | | | 690 | | | | | 690 | | | | | 690 | | | | | 690 |
| 500 | | | | | 750 | | | | | 750 | | | | | 750 | | | | | 750 |
| 8 | | | | | 8 | | | | | 8 | | | | | 8 | | | | | 8 |
| 800 | | | | | 800 | | | | | 800 | | | | | 1000 | | | | | 1000 |
| 3000 | | | | | 3000 | | | | | 3000 | | | | | 3500 | | | | | 3000 |
| 5.3 | | | | | 5.3 | | | | | 11 | | | | | 30 | | | | | 52.5 |
| 105 | | | | | 440 | | | | | 440 | | | | | 440 | | | | | 440 |
| 3.6 | | | | | 3.6 | | | | | 6 | | | | | 15 | | | | | 20 (S, H, L versions)/15 (V version) |
| IEC 60947-3 | | | | | IEC 60947-3 | | | | | IEC 60947-3 | | | | | IEC 60947-3 | | | | | IEC 60947-3 |
| F - P | | | | | F - P - W | | | | | F - P - W | | | | | F-W | | | | | F-W |
| F-FC CuAl-FC Cu-EF-ES-R | | | | | F-FC CuAl-FC Cu-EF-ES-R-MC-HR-VR | | | | | F-FC CuAl-FC Cu-EF-ES-R-HR-VR | | | | | F-FC CuAl-EF-ES-R-RC | | | | | F-EF-ES-FC CuAl HR/VR |
| 25000 | | | | | 20000 | | | | | 20000 | | | | | 20000 | | | | | 10000 |
| 120 | | | | | 120 | | | | | 120 | | | | | 120 | | | | | 60 |
| 105 | | | | | 105 | | | | | 140 | | | | | 210 | | | | | 210 |
| 140 | | | | | 140 | | | | | 184 | | | | | 280 | | | | | 280 |
| 70 | | | | | 103.5 | | | | | 103.5 | | | | | 268 | | | | | 154(manual)/178(motorizable) |
| 150 | | | | | 205 | | | | | 205 | | | | | 103.5 | | | | | 268 |
| 1.5/2 | | | | | 2.35/3.05 | | | | | 3.25/4.15 | | | | | 9.5/12 | | | | | 9.7/12.5(manual)/11/14(motorizable) |
| 2.1/3.7 | | | | | 3.6/4.65 | | | | | 5.15/6.65 | | | | | - | | | | | - |
| - | | | | | 3.85/4.9 | | | | | 5.4/6.9 | | | | | 12.1/15.1 | | | | | 29.7/39.6(manual)/32/42.6(motorizable) |

| T5 630 | | | | | T6 630 | | | | T6 800 | | | | T6 1000 | | | | T7 1000 | | | | T7 1250 | | | | T7 1600 | | |
|--------|----|----|-----|-----|--------|----|----|-----|--------|----|----|-----|---------|----|----|-----|---------|----|-----|-----|---------|----|-----|-----|---------|----|-----|
| N | S | H | L | V | N | S | H | L | N | S | H | L | N | S | H | L | S | H | L | V | S | H | L | V | S | H | L |
| 36 | 50 | 70 | 120 | 200 | 36 | 50 | 65 | 100 | 36 | 50 | 65 | 100 | 36 | 50 | 65 | 100 | 50 | 70 | 120 | 150 | 50 | 70 | 120 | 150 | 50 | 70 | 120 |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| 36 | 50 | 70 | 120 | 200 | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | 36 | 50 | 65 | 100 | 36 | 50 | 65 | 100 | 36 | 50 | 65 | 100 | | | | | | | | | | | |
| | | | | | | | | | 36 | 50 | 65 | 100 | 36 | 50 | 65 | 100 | | | | | | | | | | | |
| | | | | | | | | | | | | | 36 | 50 | 65 | 100 | | | | | | | | | | | |
| | | | | | | | | | | | | | | | | | 50 | 70 | 120 | 150 | 50 | 70 | 120 | 150 | 50 | 70 | 120 |
| | | | | | | | | | | | | | | | | | | | | | 50 | 70 | 120 | 150 | 50 | 70 | 120 |
| | | | | | | | | | | | | | | | | | | | | | | | | | 50 | 70 | 120 |

Protection

Each switch-disconnector must be protected on the supply side by a coordinated device which safeguards it against short-circuits. The coordination table below indicates the Tmax circuit-breaker which can carry out the protection function for each switch-disconnector. These are always pieces of apparatus of a size corresponding to or smaller than that of the switch disconnector.

Making capacity

The making capacity Icm is a performance of notable importance since a switch-disconnector must be able to withstand the dynamic, thermal and current stresses which can occur during closure without being destroyed, up to the short-circuit closing conditions.





Index

| | |
|--|------|
| Versions and types | 3/2 |
| Connection terminals | 3/7 |
| Service releases | 3/16 |
| Electrical signals | 3/20 |
| Remote control | 3/25 |
| Operating mechanisms and locks | 3/30 |
| Residual current releases | 3/36 |
| Accessories for electronic trip units | 3/40 |
| Test and configuration accessories | 3/47 |
| Automatic transfer switch - ATS010 | 3/48 |
| Installation accessories and spare parts | 3/51 |
| Compatibility of internal accessories | 3/52 |

Accessories

Versions and types

Starting from the fixed version with front terminals, the Tmax circuit-breakers can be converted into the various versions (plug-in for T2, T3, T4 and T5; withdrawable for T4, T5, T6 and T7), using the conversion kits. This makes management of the product, its versions and stocks as a whole very flexible. In any case, it is always possible to request the circuit-breaker in the desired version completely preset in the factory, by ordering, on the same line, the fixed circuit-breaker and the conversion kit, to which must be added the fixed part.

T7 is available in two different versions: the lever operating mechanism version similar to the other sizes in the Tmax family, and the new motorizable version.



1SDC210C03F0001

Fixed

The Tmax FIXED three-pole or four-pole version circuit-breakers foresee:

- circuit-breakers characterised by just two depths up to 1000 A: 70 mm for Tmax T1, T2 and T3 and 103.5 mm for Tmax T4, T5 and T6. For T7 the depth varies according to the type of operating mechanism – with lever or spring charging motor)
- standard front in groups of circuit-breakers: 45 mm for Tmax T1, T2 and T3 and 105 mm for T4 and T5, 140 mm for T6 and 280 mm for T7
- flange for compartment door
- possibility of assembly on back plate (or on DIN rail with T1, T2 and T3, with the help of the special accessory, see page 3/50)
- thermomagnetic (on Tmax T1, T2, T3, T4, T5 and T6) or electronic (on Tmax T2, T4, T5, T6 and T7) trip units
- standard FC Cu type terminals (front for copper cables) for T1 and F type (front) on all the Tmax family sizes.



1SDC210C03F0001

Plug-in

The PLUG-IN version of the circuit-breaker (Tmax T2, T3, T4 and T5) consists of:

- fixed part to be installed directly on the back plate of the unit
- moving part obtained from the fixed circuit-breaker with addition of the isolating contacts (near the connection terminals), of the rear frame (for fixing to the fixed part) and of the terminal covers.

The circuit-breaker is racked out by unscrewing the top and bottom fixing screws. A special lock prevents circuit-breaker racking in and racking out with the contacts in the closed position.

In the case where the circuit-breaker has electrical accessories mounted (SOR, UVR, MOS, MOE, MOE-E, AUX, AUX-E, AUE, RC222), the socket-plug connectors or the adapters for isolation of the relative auxiliary circuits must also be ordered (see page 3/28).



1SDC210015D0201

Withdrawable

The circuit-breakers in the WITHDRAWABLE version (Tmax T4, T5, T6 and T7) are made up of:

- fixed part to be installed directly on the back plate of the unit fitted with lateral guides to allow the moving part racking-in and racking-out operation to be carried out easily, and a dedicated flange for the compartment door to replace the one provided with the circuit-breaker in the fixed version;
- moving part obtained from the fixed circuit-breaker with addition of the relative conversion kit from fixed to withdrawable moving part;
- mandatory accessory to be applied onto the front of the circuit-breaker selected between front for lever operating mechanism (standard supply for circuit-breakers fitted with accessories in the factory, excluding T7) motor operator and rotary handle operating mechanism. Application of one of these accessories allows the racking-in and racking-out of the moving part with the compartment door closed (on T7 no accessory is required to have racking-out with the door closed).

Racking-in and racking-out of the moving part is carried out by means of the special operating lever always supplied with the fixed part. This particular device allows the circuit-breaker to be placed in the isolated position (with power and auxiliary circuits disconnected) with the compartment door closed, to the great advantage of operator safety. The handle can only be inserted with the circuit-breaker open. Once removed or racked-out, the circuit-breaker can be operated in open/closed and, by means of special connection extensions, blank tests can be carried out of the auxiliary control circuit functions.

The T4, T5 and T6 circuit-breakers in the withdrawable version can only be fitted with pre-wired electrical accessories, provided with the appropriate ADP adapters for isolation of the relative auxiliary circuits (see page 3/28).

Motorizable

The T7 circuit-breaker in the motorizable version can be equipped with the spring charging motor. To allow a complete remote control with T7 motorizable, the circuit-breaker must be fitted with:

- shunt opening release;
- shunt closing release;
- spring charging motor.

Versions available

| | F Fixed | P Plug-in | W Withdrawable | M Motorizable |
|----|------------|--------------|-------------------|------------------|
| T1 | ■ | | | |
| T2 | ■ | ■ | | |
| T3 | ■ | ■ | | |
| T4 | ■ | ■ | ■ | |
| T5 | ■ | ■ | ■ | |
| T6 | ■ | | ■ | |
| T7 | ■ | | ■ | ■ |

Accessories

Versions and types



1SDC210C06F0001

Fixed part - FP

The fixed part, available for all the sizes of the Tmax family starting from T2, allows the circuit-breaker to be made in the plug-in or withdrawable version. Different positions of the circuit-breaker are possible:

- plug-in: connected, removed;
- withdrawable: connected, removed, racked-out for test (only for T7), racked-out.

In the standard version, the fixed parts of T2 and T3 are available with front terminals (F). A distinctive characteristic is the possibility of fitting these fixed parts with the same terminal, terminal cover and phase separator kits used for the fixed circuit-breakers. With Tmax T4, T5, T6 and T7, fixed parts with dedicated front and rear terminals are available. Moreover, the fixed parts of T4 and T5 with front terminals can also be fitted with the special ES, FC Cu and FC CuAl terminals.

The rear flat terminals of the fixed parts of Tmax T7 are orientated (horizontally or vertically). Factory assembly is horizontal as standard. By means of the extra code 1SDA063571R1, it is possible to ask for the fixed part with vertical terminals. This extra code can be associated either with the top terminals or with the bottom ones (in the case of asking for assembly of both the terminals vertically, the extra code must be repeated twice). The anti-racking-in locks, to be mounted on the left side of the fixed part, and which prevent racking-in of incorrect moving parts are supplied as standard fitting of the fixed parts of Tmax T7. In detail, it is possible to define the different ways of combination between the fixed part and the moving part according to: T7 with lever or which can be motorised, breaking capacity and rated uninterrupted current.



1SDC210C06F0001

Kit for conversion of fixed part of plug-in into fixed part of withdrawable

For Tmax T4 and T5 is available a conversion kit which is made up by a guide to prepare the fixed part of the circuit-breaker in the plug-in version in the fixed part of the circuit-breaker in the withdrawable version, a racking-out crank handle and by the flange for the compartment door to replace the one supplied with the fixed or plug-in circuit-breaker version.



1SDC210C07F0001

Racking-out crank handle

This allows racking-out and racking-in of the circuit-breaker in the withdrawable version into the fixed part, with the door closed. The crank handle is the same for the whole range of circuit-breakers and is automatically supplied with the fixed part of withdrawable circuit-breakers or with the conversion kit for fixed part of plug-in into fixed part of withdrawable.

Sliding contacts blocks

The sliding contacts blocks are required for Tmax T7 in withdrawable version equipped with electrical accessories or with an electronic trip unit. Their function is to realize the electrical connections of the secondary circuits between the mobile part and the fixed part and these blocks work in pairs: one block is to be mounted on the mobile part and the respective one on the fixed part. The following table combines the types of sliding contacts blocks and the electrical accessories.

| Left block | Central block | Right block |
|--------------------------------------|---------------|------------------------------|
| Spring charging motor | Trip unit | Auxiliary contacts (Q or SY) |
| Spring charged contact | | Shunt opening release |
| Ready to close contact | | Shunt closing release |
| Early auxiliary contacts | PR331 | Under voltage release |
| Signalling trip coil release tripped | PR332 | |

If at least one of the electrical accessories listed in the previous table is fitted on the circuit breaker the respective pair of blocks must be mounted on the mobile part and on the fixed part.



Kit for conversion into moving part of plug-in for T2 - T3 - T4 - T5

Allows the fixed circuit-breaker with front terminals to be converted into the moving part of a plug-in circuit-breaker. The kit consists of:

- isolating contacts
- anti-racking out safety device
- assembly screws and nuts
- low terminal covers for the moving part.

The fixed part for plug-in version is necessary to complete the circuit-breaker.

Kit for conversion into moving part of withdrawable for T4 - T5 - T6 - T7

Allows the fixed circuit-breaker with front terminals to be converted into the moving part of a withdrawable circuit-breaker. The kit consists of:

- isolating contacts
- frame
- assembly screws and nuts
- low terminal covers for the moving part.

The circuit-breakers in the withdrawable version must always be completed either with the front for lever operating mechanism (standard supply for circuit-breakers fitted with accessories in the factory, excluding T7), rotary handle operating mechanism or motor operator.

The fixed part for withdrawable version is necessary to complete the circuit-breaker.

Accessories

Versions and types

Kit for conversion of fixed part into withdrawable for RC222 and RC223 residual current releases

With the dedicated conversion kit, the RC222 and RC223 residual current releases for T4 and T5 as well can be converted from the fixed to the plug-in version. The kit consists of four copper busbars which make the connection between the terminals of the residual current relay and the isolating contacts mounted on the circuit-breaker terminals.

Therefore, to obtain a circuit-breaker fitted with the residual current release accessory in the plug-in version, the two kits for conversion of circuit-breakers and for residual current release must be ordered.

The power circuit is connected to the connection terminals of the fixed part.

Kit for conversion of plug-in into withdrawable for RC222 and RC223 residual current releases

The RC222 and RC223 residual current releases for T4 and T5 can be converted from the plug-in to withdrawable version by adding the special kit consisting of a bellows to be applied on the front of the residual current release to allow racking-out of the circuit-breaker and of the residual current release with the switchgear door closed.

This kit can also be mounted on the fixed version circuit-breaker when there is the front for locks or the direct rotary handle operating mechanism, therefore widening the range of use of the residual current releases.

Accessories

Connection terminals

The basic version circuit-breaker is supplied with:

- front terminals for copper cables (FC Cu), for the Tmax T1 circuit-breaker
- front terminals (F), for all the other Tmax family sizes.

Different types of terminals, which can be combined together in different ways, are also available (top of one type, bottom of a different type), thereby allowing the circuit-breaker to be connected to the plant in the most suitable way in relation to installation requirements.

The following can be distinguished:

- **front terminals** which allow connection of cables or busbars working directly from the front of the circuit-breaker
- **orientated rear terminals** which allow installation of the circuit-breakers in switchboards with rear access to both the cable and busbar connections.

Terminals are available for direct connection of bare copper or aluminium cables and terminals for connection of busbars or cables with cable lugs.

On page 3/9 and following, the information needed to make the connections for each type of terminal is summarised. For connection with bare cables, the minimum and maximum cross-sections of the cables, which can be clamped in the terminals, the type of cables (rigid or flexible) and the diameter of the terminal are indicated. For connections with busbars, flat terminals of different sizes and composition are recommended.

The torque values to be applied to the tightening screws of the terminals for cables and to the screws used to connect the busbars to the flat terminals are indicated.

The circuit-breakers can be ordered complete with the terminals required (mounted directly in the factory), by associating the terminal kit codes with the code of the standard version circuit-breaker, or the terminals can be ordered individually in packs of 3 - 4 - 6 or 8 pieces.

To receive the circuit-breaker with mixed terminals, the two terminal half-kits must be specified, loading the one to be mounted on top as the first half-kit and then the one to be mounted below.

If the top terminals are the same as the bottom ones, it is compulsory to order the complete kit (6 or 8 pieces) and not the two half-kits: the configuration would not be accepted by the system.

Insulating terminal covers

The terminal covers are applied to the circuit-breaker to prevent accidental contact with live parts and thereby guarantee protection against direct contacts. The following are available:

- low terminal covers (LTC): these guarantee IP40 degree of protection for fixed circuit-breakers with rear terminals and for moving parts of plug-in and withdrawable circuit-breakers
- high terminal covers (HTC): these guarantee IP40 degree of protection, for fixed circuit-breakers with front, front extended, front for cables terminals.

With Tmax T2 and T3, the fixed parts of plug-in circuit-breakers can use the same terminal covers as the corresponding fixed circuit-breakers. For fixed parts of T4 and T5, the proper terminal covers (TC-FP) are available.

The degrees of protection indicated at page 1/8 are valid for the circuit-breaker installed in a switchboard.



1SDC2110C11FR001



1SDC210C12FR001

Accessories

Connection terminals

Phase separators

These allow the insulation characteristics between the phases at the connections to be increased. They are mounted from the front, even with the circuit-breaker already installed, inserting them into the corresponding slots and they are available in two versions:

- 100 mm high
- 200 mm high.

The H=100 mm phase separators are supplied as compulsory with front extended type terminals (EF), whereas the ones with height H=200 mm are compulsory with front extended spread type terminals (ES).

The phase separating partitions are incompatible with both the high and low insulating terminal covers.

The fixed parts can use the same phase separating partitions as the corresponding fixed circuit breakers.

With the phase separating partitions mounted, on request, with Tmax T1, T2 and T3 a special kit is available to reach IP40 degree of protection from the front of the circuit-breaker.

It is possible to mount the phase separating partitions between two circuit-breakers or fixed parts side by side.



1SDC210C13FR001



1SDC210C14FR001



1SDC210C15FR001

Screws for sealing the terminal covers

These are applied to the terminal covers of fixed circuit-breakers or to the moving parts of plug-in or withdrawable circuit-breakers. They prevent removal of both the high and low terminal covers and can be locked with a wire and lead seal.

Kit for taking up the auxiliary power supply

Special kits are available with the fixed version of Tmax T2, T3, T4 and T5 circuit-breakers for taking up the auxiliary power supply directly from the connection terminals. They can only be combined with the front terminals for copper cables (FC Cu) for T2, T3, T4 and T5 or with the front terminals (F) for T4.

Connection terminals

Circuit-breaker

| | F | EF | ES | FC Cu | FC CuAl | FC CuAl | MC | RC CuAl | HR | VR | HR for RC221/222 | R |
|----------------|------------------|--------------------------|---------------------------------|-----------------------------------|---------------------------------|--|-----------------------|--------------------------------|--------------------------------|------------------------------|--------------------------------|------------------|
| | | | | | | | | | | | | |
| | Front terminals | Front extended terminals | Front extended spread terminals | Front terminals for copper cables | Front terminals for CuAl cables | Front terminals for CuAl cables ⁽¹⁾ | Multi-cable terminals | Rear terminals for CuAl cables | Rear flat horizontal terminals | Rear flat vertical terminals | Rear flat horizontal terminals | Rear terminals |
| T1 | | F | | F ⁽²⁾ | | F | | | F | | F | |
| T2 | F ⁽²⁾ | F | F | F | F | F | | | | | | F |
| T3 | F ⁽²⁾ | F | F | F | F | F | | | | | | F |
| T4 | F ⁽²⁾ | F | F | F | F | F | F | | | | | F |
| T5 | F ⁽²⁾ | F | F | F | F | F | | | | | | F |
| T6 630 | F ⁽²⁾ | F | F | | F | | | F | | | | F |
| T6 800 | F ⁽²⁾ | F | F | | | F | | F | | | | F |
| T6 1000 | | | F ⁽³⁾ | | | F ⁽³⁾ | | | | | | F ⁽³⁾ |
| T7 | F ⁽²⁾ | F | F | | | F | | | F | F | | F |

⁽¹⁾ Housed externally

⁽²⁾ Standard supply

⁽³⁾ A type of terminal among those indicated in the table must necessarily be mounted on the T6 1000 A circuit-breaker (complete circuit-breaker, breaking part and loose protection trip unit).

F = Fixed

Fixed part

| | F | EF | ES | FC Cu | FC CuAl | FC CuAl | R | HR | VR | HR/VR |
|-----------|------------------|--------------------------|------------------------------------|-----------------------------------|---------------------------------|--|----------------|--------------------------------|------------------------------|---------------------|
| | Front terminals | Front extended terminals | Front extended spread terminals | Front terminals for copper cables | Front terminals for CuAl cables | Front terminals for CuAl cables ⁽¹⁾ | Rear terminals | Rear flat horizontal terminals | Rear flat vertical terminals | Rear flat terminals |
| T2 | P ⁽²⁾ | P | P | P | P | P | P | | | |
| T3 | P ⁽²⁾ | P | P | P | P | P | P | | | |
| T4 | | P-W | | P-W | P-W | | | P-W | P-W | |
| T5 | | P-W | P ⁽³⁾ -W ⁽³⁾ | P-W | P-W | | | P-W | P-W | |
| T6 | | W | | | | | | W | W | |
| T7 | | W | | | | | | | | W |

⁽¹⁾ Housed externally

⁽²⁾ Standard supply

⁽³⁾ For T5 630 only

P = Plug-in

W = Withdrawable

Accessories

Connection terminals

Front terminals - F

Allow connection of busbars or cables terminated with cable terminal



1SDC210C26R001

| Type | Version | Pieces | Busbars/cable terminal [mm] | | | | Tightening [Nm] | Terminal covers | | | Phase separators |
|------------------------|---------|--------|-----------------------------|-----|-------------------|--------|-----------------|-----------------|-----|------------|------------------|
| | | | W | H | D | Ø | | high | low | fixed part | |
| T2 | F-P | 1 | 20 | 7.5 | 5 | 6.5 | 6 | R | R | – | R |
| T3 | F-P | 1 | 24 | 9.5 | 8 | 8.5 | 8 | R | R | – | R |
| T4 | F | 1 | 25 | 9.5 | 8 | 8.5 | 18 | R | R | – | R |
| T5 | F | 1 | 35 | 11 | 10 ⁽¹⁾ | 10.5 | 28 | R | R | – | R |
| T6 630 | F | 2 | 40 | 12 | 5 | 2 x 7 | 9 | R | R | – | R |
| T6 800 | F | 2 | 50 | 12 | 5 | 2 x 7 | 9 | R | R | – | R |
| T7 1250 ⁽²⁾ | F | 2 | 50 | 20 | 8 | 2 x 11 | 18 | – | R | – | R |
| T7 1600 | F | 2 | 50 | 20 | 10 | 2 x 11 | 18 | – | R | – | R |

⁽¹⁾ minimum 5 mm

⁽²⁾ up to 1250 A



1SDC210C27R001



1SDC210C28R001

Front extended terminals - EF

Allow connection of busbars or cables terminated with cable terminal



1SDC210C29R001

| Type | Version | Pieces | Busbars [mm] | | | Cable terminal [mm] | | Tightening [Nm] | | Terminal covers | | | Phase separators |
|------------------------|---------|--------|--------------|----|---------------------|---------------------|-------------------|-----------------|------------------|-----------------|-----|------------|------------------|
| | | | W | D | Ø | W | Ø | A | B ⁽¹⁾ | high | low | fixed part | |
| T1 | F | 1 | 15 | 5 | 8.5 | 15 | 8.5 | 7 | 9 | R | – | – | S |
| T2 | F-P | 1 | 20 | 4 | 8.5 | 20 | 8.5 | 6 | 9 | R | – | – | S |
| T3 | F-P | 1 | 20 | 6 | 10 | 20 | 10 | 8 | 18 | R | – | – | S |
| T4 | F | 1 | 20 | 10 | 10 | 20 | 10 | 18 | 18 | R | – | – | S |
| | P-W | 1 | 20 | 10 | 8 | 20 | 8 | – | 9 | – | – | R | R |
| T5 | F | 2 | 30 | 7 | 11 | 30 | 11 | 28 | 18 | R | – | – | S |
| | P-W | 2 | 30 | 15 | 10 | 30 | 10 | – | 18 | – | – | R | R |
| T6 630 | F-W | 2 | 40 | 5 | 11 ⁽²⁾ | 40 | 11 ⁽²⁾ | 9 | 18 | – | R | R | R |
| T6 800 | F-W | 2 | 50 | 5 | 14 | 50 | 14 | 9 | 30 | – | R | R | R |
| T7 1250 ⁽³⁾ | F-W | 2 | 50 | 8 | 4x11 ⁽⁴⁾ | – | – | 45 | 18 | – | R | – | R |
| T7 1600 | F-W | 2 | 50 | 10 | 4x11 ⁽⁴⁾ | – | – | 45 | 18 | – | R | – | R |

⁽¹⁾ class 4.8 screws (not supplied)

⁽²⁾ 14 mm for W

⁽³⁾ up to 1250 A


⁽⁴⁾ only use two holes diagonally



1SDC210C30R001



1SDC210C31R001



A = Tightening the terminal onto the circuit-breaker

B = Tightening the cable/busbar onto the terminal


R = On request

S = Standard

Pieces = Number of busbars, cables or cable terminals

Front extended spread terminals - ES

Allow connection of busbars or cables terminated with cable terminal



| Type | Version | Pieces | Busbars [mm] | | | Cable terminal [mm] | | Tightening [Nm] | | Terminal covers | | | Phase separators |
|------|--------------------------------------|--------|--------------|----|--------|---------------------|------|-----------------|------------------|-----------------|-----|------------|------------------|
| | | | W | P | Ø | W | Ø | A | B ⁽¹⁾ | high | low | fixed part | |
| T2 | F-P | 1 | 30 | 4 | 10.5 | 30 | 10.5 | 6 | 18 | - | - | - | S |
| T3 | F-P | 1 | 30 | 4 | 10.5 | 30 | 10.5 | 8 | 18 | - | - | - | S |
| T4 | F | 1 | 30 | 6 | 10.5 | 30 | 10.5 | 18 | 18 | - | - | - | S |
| T5 | F-P ⁽²⁾ -W ⁽²⁾ | 1 | 40 | 10 | 11 | 11 | 11 | 28 | 18 | - | - | - | S |
| T6 | F | 1 | 80 | 5 | 3 x 13 | 3 x 45 | 13 | 9 | 30 | - | - | - | - |
| T7 | F | 2 | 50 | 10 | 3 x 13 | 4 x 45 | 13 | 45 | 20 | - | - | - | - |

⁽¹⁾ class 4.8 screws (not supplied)

⁽²⁾ for T5 630 only




Front terminals for copper cables - FC Cu

Allow connection of bare copper cables directly to the circuit-breaker



| Type | Version | Pieces | Cable [mm ²] | | Flexible busbars W x S x N ⁽¹⁾ | Tightening [Nm] | | Ø [mm] | Terminal covers | | | Phase separators |
|----------|---------|--------|--------------------------|-----------|--|-----------------|----|--------|-----------------|-----|------------|------------------|
| | | | rigid | flexible | | A | B | | high | low | fixed part | |
| T1/T1 1p | F | 1 | 2.5...70 | 2.5...50 | 9x0.8x6 | - | 7 | 12 | R | R | - | R |
| | F | 2 | - | 2.5...35 | - | - | 7 | 12 | R | R | - | R |
| T2 | F-P | 1 | 1...95 | 1...70 | 13x0.5x10 | - | 7 | 14 | R | R | R | R |
| | F-P | 2 | - | 1...50 | - | - | 7 | 14 | R | R | R | R |
| T3 | F-P | 1 | 6...185 | 6...150 | 15.5x0.8x10 | - | 10 | 18 | R | R | R | R |
| | F-P | 2 | - | 6...70 | - | - | 10 | 18 | R | R | R | R |
| T4 | F-P-W | 1 | 2.5...185 | 2.5...120 | 15.5x0.8x10 | - | 10 | 18 | R | R | S | R |
| | F-P-W | 2 | - | 2.5...95 | - | - | 10 | 18 | R | R | S | R |
| T5 | F-P-W | 1 | 16...300 | 16...240 | 24x1x10 | - | 25 | 28 | R | R | S | R |
| | F-P-W | 2 | - | 16...150 | - | - | - | - | - | - | - | - |
| | F | 2 | 120...240 | - | - | - | - | - | - | - | - | - |

⁽¹⁾ W = width; S = thickness; N = n. of bars



A = Tightening the terminal onto the circuit-breaker
 B = Tightening the cable/busbar onto the terminal
 R = On request
 S = Standard
 Pieces = Number of busbars, cables or cable terminals

Accessories

Connection terminals

Front terminals for copper/aluminium cables - FC CuAl


Allow connection of bare copper or aluminium cables directly to the circuit-breaker (solid aluminium cables cannot be used)



T2-T5
Standard



T4-T5
External



T6-T7

| Type | Assembly | Version | Pieces | Cable [mm ²] | | Tightening [Nm] | | Ø [mm] | Terminal covers | | | Phase separators |
|------------------------|----------|---------|--------|--------------------------|--|-----------------|------|--------|-----------------|-----|------------|------------------|
| | | | | rigido | | A | B | | high | low | fixed part | |
| T1 | external | F | 1 | 35...95 | | 7 | 13.5 | 14 | S | – | – | – |
| T2 | standard | F-P | 1 | 1...95 | | – | 7 | 14 | R | R | R | R |
| | external | F-P | 1 | 70...185 | | 6 | 25 | 18 | S | – | S | – |
| T3 | external | F-P | 2 | 35...95 | | 6 | 12 | 16 | S | – | S | – |
| | standard | F-P | 1 | 70...185 | | – | 16 | 18 | R | – | R | R |
| | external | F-P | 1 | 150...240 | | 8 | 31 | 24 | S | – | S | – |
| T4 | external | F-P | 2 | 35...150 | | 8 | 16 | 18 | S | – | S | – |
| | standard | F-P-W | 1 | 6...185 | | 9 | 31 | 18 | R | R | S | R |
| T5 | external | F | 2 | 35...150 | | 18 | 16 | 18 | S | – | S | – |
| | standard | F-P-W | 1 | 120...300 | | 18 | 43 | 24.5 | R | R | S | R |
| T6 630 | external | F | 2 | 95...240 | | 18 | 31 | 24.5 | S | – | S | – |
| | standard | F | 2 | 120...240 | | 5 | 31 | 21.5 | R | – | – | R |
| T6 800 | external | F | 3 | 70...185 | | 9 | 43 | 19 | S | – | – | – |
| T6 1000 | external | F | 4 | 70...150 | | 9 | 43 | 19 | S | – | – | – |
| T7 1250 ⁽¹⁾ | external | F | 4 | 95...240 | | 37 | 43 | 21.5 | S | – | – | – |

⁽¹⁾ up to 1250 A




Multi-cable terminals - MC

Allow connection of cables directly to the circuit-breaker




| Type | Version | Pieces | Cable [mm ²] | | Tightening [Nm] | | Terminal covers | | | Phase separators |
|------|---------|--------|--------------------------|----------|-----------------|---|-----------------|-----|------------|------------------|
| | | | flexible | rigid | A | B | high | low | fixed part | |
| T4 | F | 6 | 2.5...25 | 2.5...35 | 18 | 7 | S | – | – | – |



A = Tightening the terminal onto the circuit-breaker
 B = Tightening the cable/busbar onto the terminal
 R = On request
 S = Standard
 Pieces = Number of busbars, cables or cable terminals

Rear terminals for copper/aluminium cables - RC CuAl


Allow connection of bare copper or aluminium cables directly to the circuit-breaker



| Type | Version | Pieces | Tightening [Nm] | | Ø [mm] | Terminal covers | |
|---------------|---------|--------|-----------------|----|--------|-----------------|-----|
| | | | A | B | | high | low |
| T6 630 | F | 2 | 9 | 43 | 21 | S | – |
| T6 800 | F | 3 | 9 | 31 | 17.5 | S | – |

Rear flat horizontal terminals - HR

Allow connection of busbars or cable terminal at the rear. They can only be installed horizontally.



T1

| Type | Version | Pieces | Busbars [mm] | | | Cable terminal [mm] | | Tightening [Nm] | | Terminal covers | | Phase separators |
|------------------------------|---------|--------|--------------|----|------|---------------------|-----|-----------------|------------------|-----------------|-----|------------------|
| | | | W | D | Ø | W | Ø | A | B | high | low | |
| T1 | F | 1 | 14 | 5 | 6.2 | 14 | 6.2 | 7 | 5 ⁽¹⁾ | – | S | – |
| T7 1250⁽²⁾ | F | 2 | 50 | 8 | 2x11 | – | – | – | 20 | – | S | – |
| T7 1600 | F | 2 | 50 | 10 | 2x11 | – | – | – | 20 | – | S | – |

⁽¹⁾ class 8.8 screws (not supplied)

⁽²⁾ up to 1250 A


Rear flat vertical terminals - VR

Allow connection of busbars or cable terminal at the rear. They can only be installed vertically.

| Type | Version | Pieces | Busbars [mm] | | | Cable terminal [mm] | | Tightening [Nm] | | Terminal covers | | Phase separators |
|------------------------------|---------|--------|--------------|----|------|---------------------|---|-----------------|----|-----------------|-----|------------------|
| | | | W | D | Ø | W | Ø | A | B | high | low | |
| T7 1250⁽²⁾ | F | 2 | 50 | 8 | 2x11 | – | – | – | 20 | – | S | – |
| T7 1600 | F | 2 | 50 | 10 | 2x11 | – | – | – | 20 | – | S | – |

⁽¹⁾ class 8.8 screws (not supplied)

⁽²⁾ up to 1250 A




A = Tightening the terminal onto the circuit-breaker
 B = Tightening the cable/busbar onto the terminal
 R = On request
 S = Standard
 Pieces = Number of busbars, cables or cable terminals

Accessories

Connection terminals

Rear flat horizontal terminals for RC221/RC222 - HR

Allow connection of busbars or cable terminal at the rear with RC221/RC222.
They can be installed horizontally




| Type | Version | Pieces | Busbars [mm] | | | Tightening [Nm] | | Terminal covers | | Phase separators |
|-----------|---------|--------|--------------|---|-----|-----------------|------------------|-----------------|-----|------------------|
| | | | W | D | Ø | A | B | high | low | |
| T1 | F | 1 | 14 | 5 | 6.2 | 7 | 5 ⁽¹⁾ | – | – | – |

⁽¹⁾ class 8.8 screws (not supplied)

Rear terminals - R


Allow connection of busbars or cable terminal at the rear.
They can be installed in 4 different positions to facilitate connection to cable/busbars



| Type | Version | Pieces | Busbars [mm] | | | Tightening [Nm] | | Terminal covers | | Phase separators |
|------------------------------|---------|--------|--------------|----|------|-----------------|------------------|-----------------|-----|------------------|
| | | | W | D | Ø | A | B ⁽¹⁾ | high | low | |
| T2 | F-P | 1 | 20 | 4 | 8.5 | 6 | 9 | – | S | – |
| T3 | F-P | 1 | 20 | 6 | 8.5 | 6 | 9 | – | S | – |
| T4 | F | 1 | 20 | 10 | 8.5 | 6 | 9 | – | S | – |
| T5 | F | 2 | 30 | 7 | 11 | 18 | 18 | – | S | – |
| T6 630 | F | 2 | 40 | 5 | 14 | 18 | 30 | – | S | – |
| T6 800 | F | 2 | 50 | 5 | 14 | 18 | 30 | – | S | – |
| T6 1000 | F | 2 | 50 | 6 | 14 | 18 | 30 | – | S | – |
| T7 1250⁽²⁾ | F | 2 | 50 | 8 | 2x11 | – | 20 | – | S | – |
| T7 1600 | F | 2 | 50 | 10 | 2x11 | – | 20 | – | S | – |

⁽¹⁾ class 8.8 screws (not supplied)

⁽²⁾ up to 1250 A




A = Tightening the terminal onto the circuit-breaker
B = Tightening the cable/busbar onto the terminal
R = On request
S = Standard
Pieces = Number of busbars, cables or cable terminals

Rear flat horizontal and vertical terminals for fixed parts - HR/VR

These allow connection of busbars or cable terminals at the rear.

There are rear horizontal or vertical terminals.




| Type | Version | Pieces | Busbars [mm] | | | Cable terminal [mm] | | Tightening [Nm] | | Terminal covers | | | Phase separators |
|------------------------------|---------|--------|--------------|----|------|---------------------|----|-----------------|------------------|-----------------|-----|------------|------------------|
| | | | W | D | Ø | W | Ø | A | B ⁽¹⁾ | high | low | fixed part | |
| T4 | P - W | 1 | 20 | 10 | 10 | 20 | 10 | – | 18 | – | – | – | – |
| T5 400 | P - W | 1 | 25 | 10 | 12 | 25 | 12 | – | 18 | – | – | – | – |
| T5 630 | P - W | 2 | 40 | 15 | 11 | 40 | 11 | – | 18 | – | – | – | – |
| T6 630 | W | 2 | 40 | 5 | 14 | 40 | 14 | – | 30 | – | – | – | – |
| T6 800 | W | 2 | 50 | 5 | 14 | 50 | 14 | – | 30 | – | – | – | – |
| T7 1250⁽²⁾ | W | 2 | 50 | 8 | 2x11 | – | – | – | 20 | – | – | – | – |
| T7 1600 | W | 2 | 50 | 10 | 2x11 | – | – | – | 20 | – | – | – | – |

⁽¹⁾ class 4.8 screws (not supplied)

⁽²⁾ up to 1250 A

⁽³⁾ for vertical assembly directly in the factory, use extra code 1SDA063571R1



A = Tightening the terminal onto the circuit-breaker
 B = Tightening the cable/busbar onto the terminal
 R = On request
 S = Standard
 Pieces = Number of busbars, cables or cable terminals

Accessories

Service releases

The Tmax family of circuit-breakers can be fitted with service releases (shunt opening release, shunt closing release and undervoltage release). These are available in the pre-cabled version, depending on the size of the circuit-breaker fitted with 1 m long free cables, with a connector with 1 m cables or with a simple pin connector and two terminals to be mounted in the terminal board, or in the uncabled version, with cabling to be carried out by the customer.

Assembly is carried out for all the releases by pressing into the special seat in the left part of the circuit-breaker (right for T7) and fixing with the screw provided.

The releases are always alternative to each other for T1, T2, T3 (both for the three-pole and four-pole version), whereas for T4, T5 and T6 in the four-pole version the shunt opening release (not possible with PS-SOR) and the undervoltage release can be housed at the same time, as long as they are in the wired version and with the shunt opening release necessarily mounted in the slot of the third pole. The T7 circuit-breaker allows simultaneous mounting of all three service releases. These two possibilities are available on the three-pole version as well.

Moreover Tmax T7 can be equipped with two shunt opening releases instead of the undervoltage release to facilitate some specific applications where a very high safety level of the remote circuit-breaker opening command is required.

Shunt opening release – SOR

Allows circuit-breaker opening by means of an electric command. Operation of the release is guaranteed for a voltage between 70% and 110% of the rated power supply voltage value U_n , both in alternating current and in direct current. The SOR shunt opening release is always fitted with a limit contact for cutting off the power supply in the open position and with the release tripped.




1SDC210C5FR001

T1-T2-T3




1SDC210C3FR001


T4-T5-T6

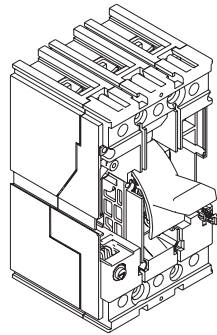

T1-T2-T3

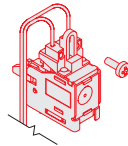

1SDC210C5FR001

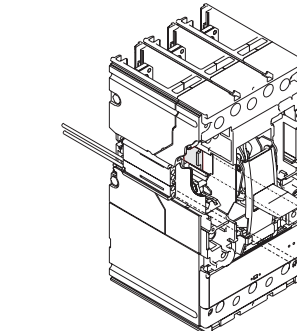

T4-T5-T6

1SDC210C5FR001

SOR - Electrical characteristics

| Version | Inrush power consumption | | | | | |
|---------------------------------|--------------------------|--------|-----------------|--------|---------|--------|
| | Tmax T1, T2, T3 | | Tmax T4, T5, T6 | | Tmax T7 | |
| | AC [VA] | DC [W] | AC [VA] | DC [W] | AC [VA] | DC [W] |
| 12 V DC | | 50 | | 150 | | |
| 24 V AC/DC | | | | | 200 | 200 |
| 24...30 V AC/DC | 50 | 50 | 150 | 150 | | |
| 30 V AC/DC | | | | | 200 | 200 |
| 48 V AC/DC | | | | | 200 | 200 |
| 48...60 V AC/DC | 60 | 60 | 150 | 150 | | |
| 60 V AC/DC | | | | | 200 | 200 |
| 110...120 V AC/DC | | | | | 200 | 200 |
| 120...127 V AC/DC | | | | | 200 | 200 |
| 110...127 V AC - 110...125 V DC | 50 | 50 | 150 | 150 | | |
| 220...240 V AC/DC | | | | | 200 | 200 |
| 220...240 V AC - 220...250 V DC | 50 | 50 | 150 | 150 | | |
| 240...250 V AC/DC | | | | | 200 | 200 |
| 380...400 V AC | | | | | 200 | |
| 380...440 V AC | 55 | | 150 | | | |
| 415...440 V AC | | | | | 200 | |
| 480...525 V AC | 55 | | 150 | | | |
| Opening times [ms] | 15 | 15 | 15 | 15 | 15 | 15 |



1SDXC2100C66F0001

Shunt opening release with permanent service – PS-SOR

Furthermore, for T4, T5 and T6, opening coils with permanent service (PS-SOR) are available, with much lower power consumption and which can be supplied continuously: in this case, in fact, they are not fitted with auxiliary limit contact. The pre-cabled or uncabled version can be chosen for these coils as well.

PS-SOR - Electrical characteristics

| Version | Tmax T4, T5, T6 | |
|----------------|-----------------|--------|
| | AC [VA] | DC [W] |
| 24...30 V DC | – | 4 |
| 110...120 V AC | 4 | – |

SOR Test Unit

The SOR Test Unit - control/monitoring unit - allows correct operation of the shunt opening releases which can be mounted on the Tmax T7 circuit-breaker to be verified, to guarantee a high level of reliability for the circuit-breaker opening command.

The SOR Test Unit - control/monitoring unit - allows continuity of the shunt opening releases with a rated service voltage between 24 V and 250 V (AC and DC) to be verified, as well as operation of the electronic circuit of the opening coil. The check of continuity is carried out cyclically at an interval of 20 seconds between one test and the next.

The unit has LED optic signals on the front which provide the following information:

- POWER ON: presence of power supply
- YO TESTING: test being carried out
- TEST FAILED: indication following a failed test or lack of auxiliary power supply
- ALARM: signalling after three failed tests.

There are also two relays and a changeover switch available on board the unit which allow the following two events to be signalled remotely:

- failure of a test (resetting takes place automatically when the alarm goes off)
- failure of three tests (resetting only takes place by means of the manual RESET from the front of the unit).

| Characteristics | |
|-----------------------------|----------------------|
| Auxiliary power supply | 24 V...250 V AC / DC |
| Maximum interrupted current | 6 A |
| Maximum interrupted voltage | 250 V AC |

Shunt closing release – SCR

The shunt closing release - only available on the motorizable versions of Tmax T7 - allows remote closure of the circuit-breaker when the circuit-breaker closing springs are charged. The technical characteristics and the service voltages of the shunt closing release are identical to those of the shunt opening release available on T7.

Accessories

Service releases

Undervoltage release – UVR

Opens the circuit-breaker due to lack of release power supply voltage or to drops to values under $0.7 \times U_n$ with a trip range from 0.7 to $0.35 \times U_n$. After tripping, the circuit-breaker can be closed again starting from a voltage higher than $0.85 \times U_n$. With the undervoltage release de-energised, it is not possible to close the circuit-breaker or the main contacts.

UVR - Electrical characteristics

| Version | Power consumption during permanent operation | | | | | |
|---------------------------------|--|--------|-----------------|--------|---------|--------|
| | Tmax T1, T2, T3 | | Tmax T4, T5, T6 | | Tmax T7 | |
| | AC [VA] | DC [W] | AC [VA] | DC [W] | AC [VA] | DC [W] |
| 24 V AC/DC | | | | | 3 | 3 |
| 24...30 V AC/DC | 1.5 | 1.5 | 6 | 3 | | |
| 30 V AC/DC | | | | | 3 | 3 |
| 48 V AC/DC | 1 | 1 | 6 | 3 | | |
| 60 V AC/DC | 1 | 1 | 6 | 3 | | |
| 110...120 V AC/DC | | | | | 3 | 3 |
| 120...127 V AC/DC | | | | | 3 | 3 |
| 110...127 V AC - 110...125 V DC | 2 | 2 | 6 | 3 | | |
| 220...240 V AC/DC | | | | | 3 | 3 |
| 220...240 V AC - 220...250 V DC | 2.5 | 2.5 | 6 | 3 | | |
| 240...250 V AC/DC | | | | | 3 | 3 |
| 380...400 V AC | | | | | 3 | |
| 380...440 V AC | 3 | | 6 | | | |
| 415...440 V AC | | | | | 3 | |
| 480...525 V AC | 4 | | 6 | | 3 | |
| Opening times [ms] | 15 | 15 | ≤ 25 | ≤ 25 | ≤ 25 | ≤ 25 |




1SDC210C57FR001

T1-T2-T3




1SDC210C59FR001


T4-T5-T6

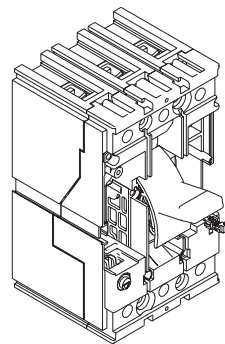

T1-T2-T3



1SDC210C58FR001

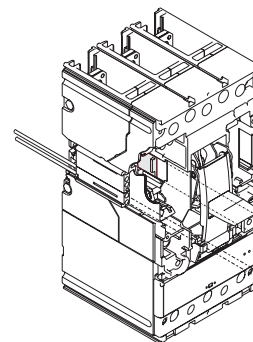

T4-T5-T6

1SDC210C59FR001



1SDC210C99F0001

Time delay device for undervoltage release – UVD

The undervoltage release (UVR) can be combined with an external electronic power supply time delay device, which allows circuit-breaker opening to be delayed in the case of a drop or failure in the power supply voltage of the release itself, according to preset and adjustable delays, in order to prevent unwarranted trips caused by temporary malfunctions. The delay device must be combined with an undervoltage release with the same corresponding voltage.

This time delay devices can be combined both on the Tmax (from T1 to T6) and on the Isomax circuit-breakers. For Tmax T7, the time delay device of Emax can be used as well.

UVD


| Circuit-breaker | Power supply voltage [V AC/DC] |
|----------------------------|--|
| T1...T6 | 24...30 |
| T1...T6 | 48...60 |
| T1...T6 | 110...125 |
| T1...T6 | 220...250 |
| Delay which can be set [s] | 0.25 - 0.5 - 0.75 - 1 - 1.25 - 2 - 2.5 - 3 |
| Trip time tolerance | ± 15% |



1SDC210C61F0001

Testing extension for service releases

Available for Tmax T4, T5 and T6, this allows the service releases to be supplied with the circuit-breaker in the removed position. With the circuit-breaker in safe conditions, i.e. isolated in relation to the power circuits, this makes it possible to carry out blank tests of the circuit-breaker functionality.

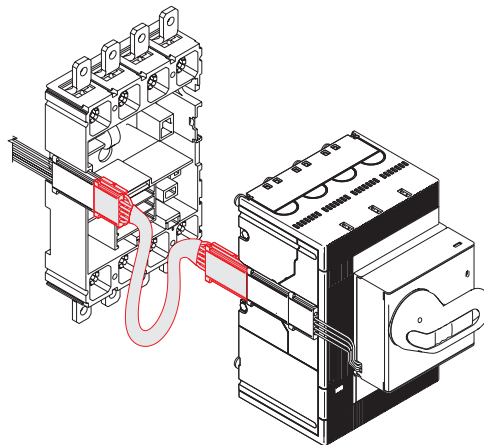

1SDC210C61F0001

Accessories

Electrical signals

These allow information on the operating state of the circuit-breaker to be taken outside. Installation of these accessories is carried out directly from the front of the circuit-breaker in special slots placed on the right-hand side of the circuit-breaker, completely segregated from the live parts - all to the benefit of user safety. The auxiliary contacts can be supplied (depending on the type) either in the version with cabling to be carried out by the customer by means of connection to the terminals integrated in the auxiliary contacts, or with cabling directly on the circuit-breaker terminal board or in the pre-cabled version, depending on the size of the circuit-breaker fitted with free cables 1 m long, with a connector with 1 m long cables. The pre-cabled version is mandatory on the T4, T5 and T6 circuit-breakers in the withdrawable version. The auxiliary contacts for T7 are always fitted with three terminals to be mounted in the terminal board to carry out the cabling. The auxiliary contacts are available for use both in direct and alternating current at various voltages. The signals are reset when the circuit-breaker is reset.

T1-T7 (AUX)

Available both in the pre-cabled and uncabled version, they supply the following electrical signalling:

- open/closed: indicates the position of the circuit-breaker contacts (Q)
- release trip: signals circuit-breaker opening two to overcurrent release trip (for overload or short circuit), trip of the residual current release, of the opening coil or of the undervoltage release, of the emergency opening pushbutton of the motor operator or two to operation of the test pushbutton (SY)
- contact for signalling electronic trip unit tripped: signals intervention of one of the protection functions of the electronic trip unit (S51).

The auxiliary contacts for T7 are always fitted with terminals to be mounted in the terminal box to carry out wiring.

T4, T5, T6 and T7 with electronic trip units (AUX-SA)

There is a contact for signalling electronic trip units tripped, only available in the pre-cabled version for use at 250 V AC.

T4, T5 and T6 (AUX-MO)

This auxiliary contact, only in the uncabled version, must necessarily be combined with the motor operator and indicates the motor operation mode (manual or remote).

T7 (AUX-RTC)

The "circuit-breaker ready to close" auxiliary contact is available with wiring directly on the terminal box of the T7 circuit-breaker with stored energy operating mechanism and signals that the circuit-breaker is ready to accept a closing command if there are the following five conditions:

- circuit-breaker open
- closing springs charged
- any opening coil de-energised
- any undervoltage coil energised
- opening solenoid armed.

T7 (AUX-SC)

Indicates the state of the circuit-breaker operating mechanism closing springs remotely (always supplied with the spring charging motor).

T4, T5 and T6 with PR222DS/PD and PR223DS electronic trip unit (AUX-E)

Only available in the pre-cabled version, the auxiliary contacts AUX-E (also called electronic version contacts) communicate the state of the circuit-breaker to the electronic trip unit and make an open/closed signal available to the outside and another one for electronic trip unit tripped.

They can only be combined with the PR222DS/PD or PR223DS electronic trip unit and only function when there is a 24 V DC auxiliary power supply to the trip unit for the communication functions.

The AUX-E contacts can, moreover, be directly connected to the MOE-E motor operator (see page 3/26).

The "traditional" version of the auxiliary contacts can also be combined with the protection trip units with dialogue; in this case, only electrical signalling of the state of the circuit-breaker will be provided and it will not be possible to communicate remotely or control the motor.




1SDC210C82F0001

AUX - 250 V AC/DC




1SDC210C83F0001

AUX-C - 250 V AC/DC

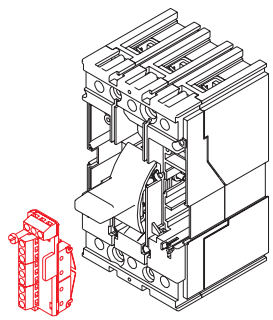

AUX

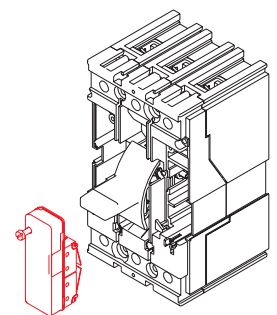

AUX-C

AUX - Electrical characteristics

AUX 250 V - T1...T6

Power supply voltage

| |
|--|
| 125 V |
| 250 V |
| Protection with gG 10x38 type fuse (I_{max} 6 A) |

Service current

Category of utilisation (IEC 60947-5-1)

| AC 14 | DC 13 |
|-------|--------|
| 6 A | 0.3 A |
| 5 A | 0.15 A |

AUX 400 V - T4...T7

Power supply voltage

| |
|-------|
| 125 V |
| 250 V |
| 400 V |

Service current I_n [A]

| AC | DC |
|----|-----|
| – | 0.5 |
| 12 | 0.3 |
| 3 | – |

AUX 24 V - T1...T7

Power supply voltage

| |
|------|
| 24 V |
| 5 V |

Service current I_n [A]

| AC | DC |
|-----|----------------|
| 0.3 | ≥ 0.75 mA |
| – | ≥ 1 mA |

AUX-E - T4...T6

| |
|----------------------------|
| Typical contact |
| V_{max} |
| I_{max} |
| P_{max} (resistive load) |
| Insulation voltage |

| |
|---------------------------|
| photoMOS |
| 300V DC/250 V AC |
| 100 mA AC/DC |
| 30 W |
| 3500 V (1 min. and 50 Hz) |

Accessories

Electrical signals

Types of auxiliary contacts


| | | Version | T1 | T2 TMD | T2 PR221DS | T3 | T4 | T5 | T6 | T7 |
|---------------------|--|---------------------------|----|--------|------------|----|----|----|----|----|
| AUX 250 V AC/DC | 1 open/closed changeover contact + 1 release tripped changeover contact | pre-cabled/ not cabled | ■ | ■ | | ■ | ■ | ■ | ■ | |
| AUX 250 V AC/DC | 3 open/closed changeover contacts + 1 release tripped changeover contact | pre-cabled/ not cabled | ■ | ■ | | ■ | ■ | ■ | ■ | |
| AUX 250 V AC/DC | 1 SA electronic release trip contact + 1 open/closed changeover contact + 1 release tripped changeover contact | pre-cabled | | | ■ | | | | | |
| AUX 250 V AC/DC | 2 open/closed changeover contacts + 1 release tripped changeover contact | pre-cabled | | | ■ | | | | | |
| AUX 400 V AC | 1 open/closed changeover contact + 1 release tripped changeover contact | pre-cabled | | | | | ■ | ■ | ■ | ■ |
| AUX 400 V AC | 2 open/closed changeover contacts | pre-cabled | | | | | ■ | ■ | ■ | ■ |
| AUX 24 V DC | 1 open/closed changeover contact + 1 release tripped changeover contact | pre-cabled | | | | | | | | ■ |
| AUX 24 V DC | 2 open/closed changeover contacts | pre-cabled | | | | | | | | ■ |
| AUX 24 V DC | 3 open/closed changeover contacts + 1 release tripped changeover contact | pre-cabled/ not cabled | ■ | ■ | | ■ | ■ | ■ | ■ | |
| AUX-SA 250 V AC | 1 SA electronic release trip contact | pre-cabled | | | | | ■ | ■ | ■ | ■ |
| AUX-MO | 1 contact signalling manual/remote | not cabled | | | | | ■ | ■ | ■ | |
| AUX-RTC 24 V DC | 1 contact signalling ready to close | pre-cabled | | | | | | | | ■ |
| AUX-RTC 250 V AC/DC | 1 contact signalling ready to close | pre-cabled | | | | | | | | ■ |
| AUX-SC 24 V DC | 1 contact signalling closing springs charged | pre-cabled | | | | | | | | ■ |
| AUX-SC 250 V AC/DC | 1 contact signalling closing springs charged | pre-cabled | | | | | | | | ■ |
| AUX-E | 1 open/closed contact + 1 relay tripped contact (only with PR222DS/PD and PR223DS) | pre-cabled | | | | | ■ | ■ | ■ | |



1SDC210C65F0001

Testing extension for auxiliary contacts

Available for Tmax T4, T5 and T6 circuit-breakers, this allows the auxiliary contacts to be connected to the relative power supply circuit with the circuit-breaker in the removed position. With the circuit-breaker in a safe position, i.e. isolated in relation to the power circuits, it is possible to carry out blank function tests of the circuit-breaker.

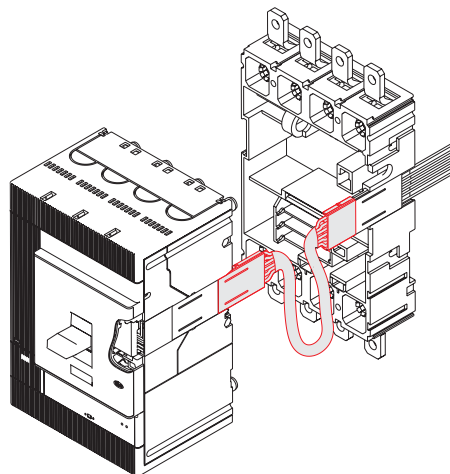


1SDC210C65F0001



1SDC210C68FR001

Early auxiliary contacts – AUE

Normally open contacts, advanced in relation to closing (2 contacts for all the sizes, except for T7 where there are 3). They allow the undervoltage release or a control device to be supplied in advance, in relation to closing of the main contacts, in compliance with the IEC 60204-1 and VDE 0113 Standards. They are mounted inside the direct and transmitted rotary handle operating mechanism, whereas on T7 with lever operating mechanism, they are mounted directly on the circuit-breaker. The early contacts are only supplied in the cabled version with 1 m long cables, complete with socket-plug with 6 poles for T1, T2 and T3 or with socket-plug connectors with 1 m. cables for T4, T5 and T6. It is necessary to bear in mind that the connectors for T4 T5 and T6, once inserted in the special slot on the right-hand side of the circuit-breaker, extend in relation to the outline of the circuit-breaker itself. The early auxiliary contacts for T7 are always fitted with 3 terminals to be mounted in the terminal board to carry out the cabling.

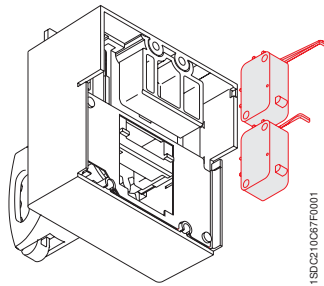

1SDC210C67FR001



1SDC210C68FR001

Auxiliary position contacts – AUP

With Tmax circuit-breakers, auxiliary position contacts which provide electrical signalling of the circuit-breaker position in relation to the fixed part are available. The following auxiliary position contacts are available:

T2 - T3

- contacts signalling circuit-breaker racked-in.

T4 - T5 - T6


- circuit-breaker racked-in signalling contacts for plug-in and withdrawable versions
- circuit-breaker racked-out signalling contacts only for withdrawable version
- circuit-breaker racked-in signalling contacts for plug-in and withdrawable versions 24 V DC
- circuit-breaker racked-out signalling contacts only for withdrawable version 24 V DC.

T7

- contacts for signalling circuit-breaker racked-in
- contacts for signalling circuit-breaker in isolated-test
- contacts for signalling circuit-breaker racked-out.


A maximum of three contacts can be installed on the fixed part of T2, T3, T4 and T5, whereas up to five auxiliary contacts can be mounted on the fixed part of T6 in all the combinations (for T4 and T5, in the withdrawable version, only one contact for signalling circuit-breaker racked-out can be housed in the compartment closest to the bottom terminals).

The auxiliary contacts for T7 are inserted in a single block consisting of two contacts for signalling racked-in, two for isolated-test and two for racked-out.

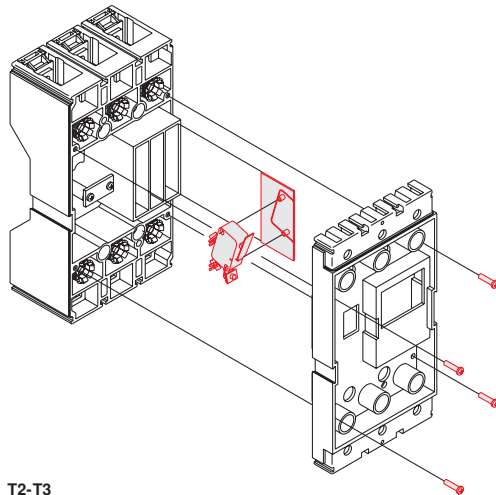

T2-T3

1SDC210C69FR001

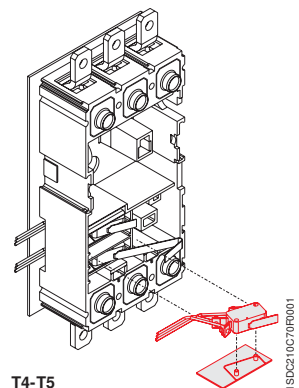

T4-T5

1SDC210C70FR001

Accessories

Electrical signals

Trip reset


Available on T7 in the version with possibility of motorisation, this is an electronic contact which allows remote circuit-breaker resetting following a trip of the overcurrent releases. It is available with two power supply voltages: 110...130 V AC/DC and 200...240 V AC/DC.

Mechanical operation counter

Available on T7 motorizable, it is connected to the operating mechanism by means of a simple lever mechanism. It indicates the number of circuit-breaker mechanical operations. The indication is visible from the outside on the front of the circuit-breaker.

Accessories

Remote control

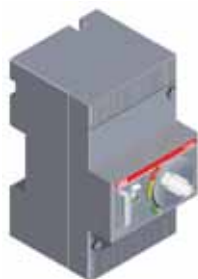

1SDC210C71R001



1SDC210C72R001

Solenoid operator for T1, T2 and T3 – MOS

Allows remote circuit-breaker opening and closing control and is particularly recommended for use in electric network supervision and control systems. A selector allows passage from automatic to manual operation and it is also available a block (supplied as standard) for the operating mode of the motor. It is always provided with a padlock in the open position which prevents any command, either locally or remotely. It operates both circuit-breaker opening and closing, working directly on the circuit-breaker lever.

It is offered in two versions, one “side-by-side” with the circuit-breaker, with T1 and T2, for installation on a panel or DIN EN 50022 rail, the other on the “front”, with T1, T2 and T3, suitable for installation directly on the front of the circuit-breaker.

The latter is complete with operating handle. The front version can also be used with plug-in circuit-breakers.


Coupling with the residual current release is only allowed for a circuit-breaker with solenoid operator side-by-side, to allow access to the user interface of the residual current release from the front of the switchgear. In fact, using the solenoid operator superimposed would imply the circuit-breaker position on the rear of the door and its residual current release and the interface would no longer be accessible. This combination can only be installed directly on the back plate of the switchgear. Both versions can be used either in the three-pole or four-pole version. The solenoid operator is supplied complete with 1 m long cables and, just for the superimposed version, with a socket-plug connector with 5 poles.

Both the opening and closing commands are operated by the solenoid which acts directly on the circuit-breaker lever.


The main parameters relative to the solenoid operator are indicated in the table.

| Rated voltage, Un | | |
|---|--------------------|---------------------------|
| AC | [V] | 110...250 |
| DC | [V] | 48...60 / 110...250 |
| Operating voltage | | 85...110% Un |
| Inrush power consumption during operation | | 1800 [VA] / 1000 [W] |
| Power on stand-by | | < 100 [mW] |
| Time | opening [s] | < 0.1 |
| | closing [s] | < 0.1 |
| Mechanical life | [no. Operations] | 25000 |
| | [no. Operations/h] | 240 (T1 and T2); 120 (T3) |
| Degree of protection, on the front | | IP30 |
| Minimum control impulse time on opening and closing | | >100 [ms] |

The unit is permanently supplied on stand-by, a control is applied by means of an external contact (relay, opto-insulator) in a low power circuit.
 Contact characteristics: V AC/DC = 24 V
 I AC/DC = 50 mA

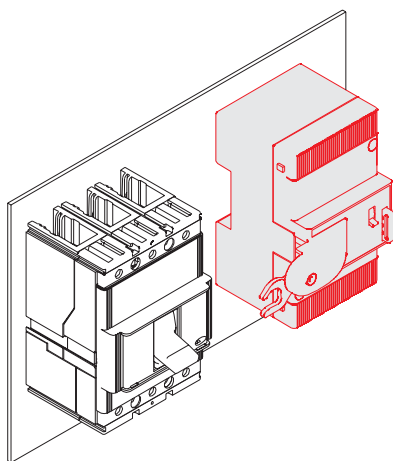

1SDC210C72R001

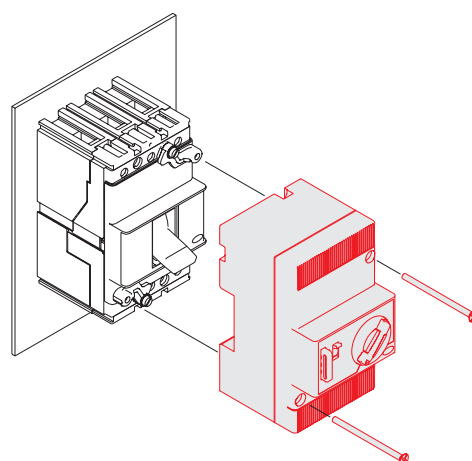

1SDC210C74R001

Accessories

Remote control



1SDC210C75R001

Stored energy motor operator for T4, T5 and T6 – MOE and MOE-E

With the stored energy motor operator, it is possible to control both opening and closing of the circuit-breaker on which it is installed. During opening of the circuit-breaker, the spring system is recharged automatically: the stored energy is exploited in this way to close the circuit-breaker.

The motor operator is always supplied with socket-plug connectors with 1 m long cables and is always fitted with a padlock in the open position, which prevents any command, either locally or remotely. The connectors, once inserted in the special slot on the left-hand side of the circuit-breaker, extend in relation to the outline of the circuit-breaker itself and are only compatible with pre-wired electrical accessories. A selector allows passage from automatic to manual operation and it is also available a block (supplied as standard) for the operating mode of the motor.

The motor operator can be fitted both with a key lock in the open position (with the same MOL-S keys for groups of circuit-breakers or different MOL-D keys) and with an MOL-M key lock against manual operation: in the former case, the lock in the open position is both of electrical and mechanical type, in the latter case, only of mechanical type, i.e. only closing from the front of the circuit-breaker (remote closing is allowed).

In the case of interlocked circuit-breakers, for safety reasons the key lock against manual operation is required.


The motor operator is always fitted with a contact to signal "auto" or "manual" (not on changeover). On request, it can also be fitted with an AUX-MO auxiliary contact (on changeover), which provides a signal of its state of service: "auto" (remote control of the circuit-breaker) or "manual".

If the circuit-breaker is fitted with the PR222DS/PD and PR223DS electronic trip unit, instead of the MOE motor operator, it is possible to use the MOE-E motor operator: for its use, the circuit-breaker must also be fitted with the AUX-E auxiliary contacts. The MOE-E allows use of the digital signals coming from the supervision and control system, by means of the PR222DS/PD, PR223DS and PR223EF trip unit and the AUX-E contacts, and to convert these into power signals to operate the motor operator. All the characteristics indicated above for the MOE motor operator are also valid for the MOE-E.

The main parameters relative to the stored energy motor operator are indicated in the table.

MOE and MOE-E

| | Tmax T4-T5 | | Tmax T6 | |
|--|---------------|-----------|-----------|-----------|
| | AC [V] | DC [V] | AC [V] | DC [V] |
| Rated voltage, Un | - | 24 | - | 24 |
| | - | 48...60 | - | 48...60 |
| | 110...125 | 110...125 | 110...125 | 110...125 |
| | 220...250 | 220...250 | 220...250 | 220...250 |
| | 380 | - | 380 | - |
| Operating voltage [% Un] | 85...110 | 85...110 | 85...110 | 85...110 |
| Power consumption on inrush Ps | ≤ 300 VA | ≤ 300 W | ≤ 400 VA | ≤ 400 W |
| Power consumption in service Pc | ≤ 150 VA | ≤ 150 W | ≤ 150 VA | ≤ 150 W |
| Duration | opening [s] | 1.5 | 3 | |
| | closing [s] | < 0.1 | < 0.1 | |
| | resetting [s] | 3 | 5 | |
| Mechanical life [no. Operations] | 20000 | | 10000 | |
| Degree of protection, on the front | IP30 | | IP30 | |
| Minimum control impulse time on opening and closing [ms] | ≥ 100 | | ≥ 100 | |

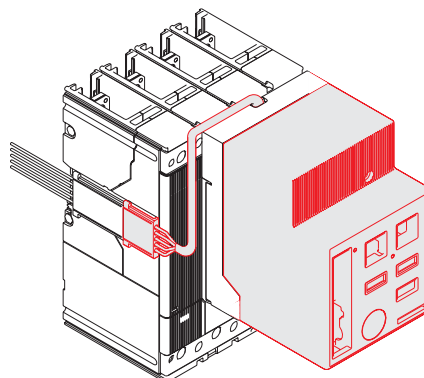

1SDC210C76R001

Testing extension for motor operators

Available for circuit-breakers Tmax T4, T5 and T6, this allows the motor operator to be connected to the relative power supply circuit with the circuit-breaker in the removed position. With the circuit-breaker in a safe position, i.e. isolated in relation to the power circuits, it is possible to carry out blank tests of the circuit-breaker functions.

Spring charging motor for T7 motorizable

Only available on Tmax T7 in the motorizable version, it automatically charges the circuit-breaker operating mechanism springs. This operation is carried out automatically immediately after closure of the circuit-breaker.

When there is no power supply or during maintenance work, the closing springs can, in any case, be charged manually by means of the special operating mechanism lever. It is always fitted with limit contact and microswitch for signalling closing springs charged.

The spring charging motor is always fitted with a terminal to be mounted in the terminal board to carry out the cabling.

Spring charging motor

| | Tmax T7 | |
|------------------------|-----------|-----------|
| | AC [V] | DC [V] |
| Rated voltage, Un | 24...30 | 24...30 |
| | 48...60 | 48...60 |
| | 100...130 | 100...130 |
| | 220...250 | 220...250 |
| | 380...415 | |
| | | |
| Opening voltage [% Un] | 85...110 | 85...110 |
| Power consumption | ≤ 100 VA | ≤ 100 W |
| Charging time [s] | 10 | 10 |

Note: To allow a complete remote control with T7 motorizable, the circuit-breaker must be fitted with:
– shunt opening release;
– shunt closing release;
– spring charging motor.

Accessories

Remote control

Adapters – ADP

For the SOR, PS-SOR, UVR, AUX, MOE or MOE-E and AUE pre-wired electrical accessories, used with Tmax T4, T5 and T6 in the plug-in or withdrawable version, it is necessary to use the adapters to be coupled with the plug, which will then be connected to the socket on the fixed part, for the moving parts.

According to the electrical accessories required, one or two adapters will be needed to be mounted on the left and/or right side of the moving part.

There are four types adapters available:

- 5-way adapters
- 6-way adapters
- 10-way adapters
- 12-way adapters.

The table below indicates the adapters which have to be used for the various possible combinations of electrical accessories:

Adapters ADP for T4, T5 and T6 wired accessories

| | 5- way | 6- way | 10- way | 12- way |
|---|--------|--------|---------|---------|
| left side | | | | |
| SOR | ■ | | | |
| UVR | ■ | | | |
| SA for residual current release RC222 | ■ | | | |
| SOR or UVR + SA for residual current release RC222 | ■ | | | |
| MOE (MOE-E) | | | ■ | |
| MOE (MOE-E) + SOR or UVR | | | ■ | |
| MOE (MOE-E) + SOR or UVR + SA for residual current release RC222 | | | ■ | |
| AUE | | | ■ | |
| AUE + SOR or UVR | | | ■ | |
| AUE + SOR or UVR + SA for residual current release RC222 | | | ■ | |
| right side | | | | |
| AUX 1Q + 1SY 1 open/closed changeover contact + 1 trip unit tripped changeover contact | | ■ | | |
| AUX 2Q 2 open/closed changeover contacts | | ■ | | |
| AUX 3Q + 1SY 3 open/closed changeover contacts + 1 trip unit tripped changeover contact | | | | ■ |

For Tmax T2 and T3 in the plug-in version, it is necessary, on the other hand, to order the socket-plug connectors: with 12 poles for the AUX auxiliary contacts - 3 open/closed changeover + 1 release tripped changeover, with 6 poles for the AUX auxiliary contacts -1 open/closed changeover + 1 release tripped changeover and with 3 poles for the service releases (SOR or UVR).

For T2 in the plug-in version with PR221DS electronic trip unit and suitable auxiliary contacts, it is necessary to order a 6 and a 3 pole socket-plug connector.

Socket plug connectors

In order to allow the racking-in and racking-out operations of the moving part of the plug-in circuit-breaker, the wired and unwired electrical accessories of Tmax T2 and T3 and the unwired electrical accessories of Tmax T4 and T5 must be fitted with one or more socket plug connectors, as per the table below.

Socket plug connectors

| | 3 poles | 6 poles | 12 poles |
|---|---------|---------|----------|
| T2-T3-T4-T5 | | | |
| SOR | ■ | | |
| UVR | ■ | | |
| AUX 1Q + 1SY 1 open/closed changeover contact + 1 trip unit tripped changeover contact | | ■ | |
| AUX 2Q 2 open/closed changeover contacts | | ■ | |
| AUX 3Q + 1SY 3 open/closed changeover contacts + 1 trip unit tripped changeover contact | | | ■ |
| T2-T3 | | | |
| MOS overload (1) | | ■ | |
| AUE | ■ | | |
| AUX 2Q + 1SY for PR221DS 2 open/closed contacts + 1 trip unit tripped changeover contact | | ■ | |
| AUX 1S51 + 1Q + 1SY for PR221DS 1 changeover contact 1 trip unit tripped changeover contact | ■ | ■ | |

⁽¹⁾ Always provided with the overlaid solenoid operator

Accessories

Operating mechanism and locks

Rotary handle operating mechanism – RHD/RHE

Thanks to its ergonomic grip, the rotary handle facilitates the circuit-breaker closing and opening operations.

It is always fitted with a padlock-lock in the open position which prevents circuit-breaker closing. The opening in the padlock-lock can take up to 3 padlocks - 7 mm Ø stem (not supplied). It is always fitted with a compartment door lock and on request it can be supplied with a key lock in the open position. Application of the rotary handle operating mechanism is an alternative to the motor operator and to the front interlocking plate (MIF) for T1, T2 and T3, or to the motor operator and to the front for lever operating mechanism for T4, T5 and T6. The rotary handle operating mechanism is available in either the direct version or in the transmitted version on the compartment door and the rotary handle operating mechanism in the emergency version, complete with red on yellow background handle, suitable for controlling machine tools, is available in both the versions.

The rotary handle operating mechanism is available on T7 with lever operating mechanism and, only for the direct version, is characterised by an articulated grip which allows the switchgear door to be opened in case of an emergency with the circuit-breaker closed. The release settings and nameplate data remain accessible to the user.

The transmitted rotary handle operating mechanisms can be ordered by building up the following three devices:

- rotary handle on the compartment door
- transmission rod (500 mm)
- base for circuit-breaker or, alternatively, by using the code of the ready-configured version.




T4-T7

Type of RH_ operating mechanism

| | | T1 | | T2, T3 | | T4, T5 | | | T6 | | T7 * | |
|-----------------|--|----|---|--------|---|--------|---|---|----|---|------|---|
| | | F | F | P | F | P | W | F | W | F | W | |
| RHD | Direct | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHD_EM | Emergency direct | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE | Transmitted with adjustable distance | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE_EM | Emergency transmitted with adjustable distance | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE_B | Base for circuit-breaker | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE_S | Rod for transmitted adjustable handle | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE_H | Handle for transmitted RH with adjustable distance | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |
| RHE_H_EM | Emergency handle for transmitted RH with adjustable distance | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ | ■ |

* The rotary handle operating mechanism is only available for T7 with lever operating mechanism

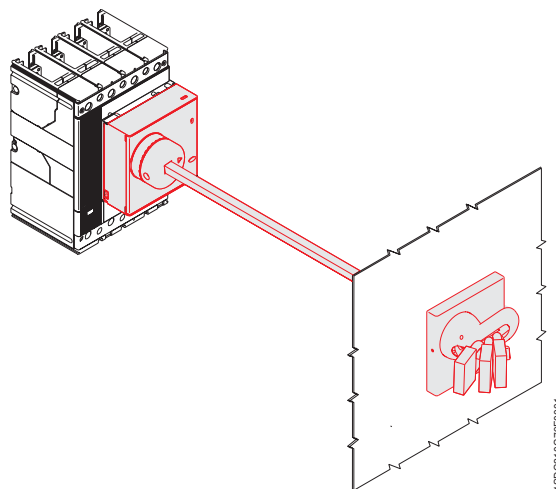

T4-T6



1SDC210C80FR001



1SDC210C81FR001

IP54 protection for rotary handle

Allows IP54 degree of protection to be obtained.

It is available for the transmitted rotary handle operating mechanism on the compartment door (RHE) for all the Tmax circuit-breakers.

Front for lever operating mechanism – FLD

This can be installed on fixed, plug-in or withdrawable Tmax T4, T5 and T6 circuit-breakers. In the case of withdrawable circuit-breakers, installed in a switchboard, it allows the IP40 degree of protection to be maintained for the whole isolation run of the circuit-breaker.

It is always fitted with a padlock in the open position (6 mm Ø stem up to three padlocks - not supplied) which prevents closing of the circuit-breaker and of the compartment door, and with compartment door lock. On request, it can be fitted with a key lock in the open position.

It is available in the following versions:

- for fixed or plug-in circuit-breaker
- for withdrawable circuit-breaker.

The front for lever operating mechanism is always an alternative to the motor operator and to the rotary handle and to the display FDU.

The same flange for the compartment door already supplied with the circuit-breaker or the one supplied with the conversion kit for withdrawable version can be used.



1SDC210C82FR001



1SDC210C83FR001

T1-T3


Padlock for operating lever – PLL

This is applied to the T1 - T2 - T3 circuit-breaker cover to prevent the lever closing or opening operation. It allows installation up to a maximum of three padlocks - 7 mm Ø stem (not supplied). It is available in the following versions:

- plug-in locking device only of the closing operation
- locking plate on the closing and opening operation according to the assembly position. The lock on the opening operation does not prevent release of the mechanism following a fault or remote control command
- locking plate just for the closing operation.

It is incompatible with the front accessories: solenoid operator, rotary handle operating mechanism and mechanic interlock.

The padlock is also available for T7 and it is directly mounted on the circuit-breaker cover.

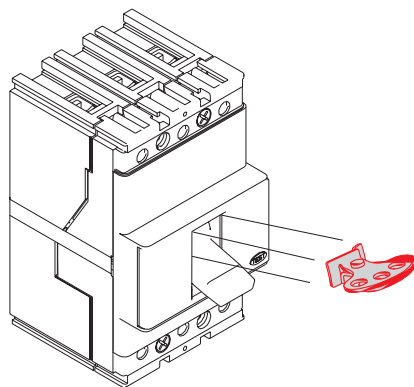

1SDC210C84FR001

T1-T3

Accessories

Operating mechanism and locks



1SDC210C8F0001

Key lock on the circuit-breaker for T1, T2, T3 and T7 – KLC

This allows the mechanical closing operation of the circuit-breaker to be locked and is installed directly on the front in the slot in correspondence with the left pole. This cannot be installed when the front operating mechanism, rotary handle operating mechanism, motor operator, and RC221/RC222 residual current releases are present, or on the three-pole circuit-breakers equipped with service releases (UVR, SOR). The key lock is the Ronis 622 type and is available in two versions:

- standard type, with key only removable with the circuit-breaker locked
- special type, with key removable in both positions.

On T7 the key lock in the open position is mounted directly on the circuit-breaker cover both in the version with different keys and with the same keys. Presetting for Ronis and Profalux key locks are also available.



1SDC210C8F0001

Key lock for rotary handle operating mechanism for T1, T2 and T3 – RHL

This allows the mechanical closing operation of the circuit-breaker to be locked.

The following versions are available:

- lock with different key for each circuit-breaker
- lock with the same key for groups of circuit-breakers.

The circuit-breaker in the open position ensures isolation of the circuit in accordance with the IEC 60947-2 Standard. It is also available in the version which allows the lock both in the open and closed position. The lock in the closed position does not prevent release of the mechanism following a fault or remote control.

Key lock for T4, T5, T6 and T7 – KLF-D and KLF-S

This allows mechanical operation of the circuit-breaker to be locked. This lock can be used with the direct or transmitted rotary handle operating mechanism or with the front for lever operating mechanism.

The lock of the circuit-breaker in the open position ensures isolation of the circuit in accordance with the IEC 60947-2 Standard. For T4, T5, T6 and T7 in the lever operating mechanism version key locks in the open position are available either with different keys (KLF-D) or with the same keys (KLF-S): in this case, up to four different key numbering codes are available (n. 2005-2006-2007-2008).

Lock in the racked-out position for fixed part (T4, T5 and T6)

For T4, T5 and T6 withdrawable circuit-breakers, key or padlocks locks are available to be applied onto the rail of the fixed part, to prevent racking-in of the plug-in part.

Selection can be made among the following:

- key lock with different keys (KLF-D FP)
- key lock with the same keys for groups of circuit-breakers (KLF-S FP)
- Ronis type key lock (KLF-D Ronis FP)
- padlock, which can take up to three padlocks with 6 mm stem Ø, not supplied (PLL FP).

Lock in racked-in – isolated – racked-out position for fixed part of T7

This device allows the moving part of a withdrawable version T7 circuit-breaker to be locked in the racked-in, isolated-test or racked-out position in the relative fixed part. Thanks to mounting an additional accessory, the lock can be limited just to the racked-out position.

Mechanical lock of compartment door

Available on T7 motorizable, this does not allow the compartment door to be opened with the circuit-breaker closed (and circuit-breaker racked-in for circuit-breakers in the withdrawable version) and locks the circuit-breaker closing with the compartment door open.



Sealable thermal adjustment lock


This is applied to the circuit-breaker cover near the thermal element regulator of the TMD thermomagnetic trip unit for T1, T2 and T3 and prevents it being tampered with.

Overview of the available locks

| | T1 | T2 | T3 | T4 | T5 | T6 | T7 |
|--|----|----|----|----|----|----|----|
| FDL Front for lever operating mechanism | | | | ■ | ■ | ■ | |
| PLL_ Padlock for operating lever | ■ | ■ | ■ | | | | ■ |
| KLC_ Key lock on the circuit-breaker | ■ | ■ | ■ | | | | ■ |
| RHL Keylock for rotary handle operating mechanism | ■ | ■ | ■ | | | | |
| KLF-D and KLF-S Key lock for front for lever and rotary handle | | | | ■ | ■ | ■ | |
| MOL-D and MOL-S_ Key lock in open position for MOE and MOE_E | | | | ■ | ■ | ■ | |
| MOL-M_ Key lock against manual operation for MOE and MOE_E | | | | ■ | ■ | ■ | |
| KLF-FP and PLL FP_ Locks in open position for fixed part | | | | ■ | ■ | ■ | ■ |
| Mechanical lock on compartment door | | | | | | | ■ |
| Sealable lock of thermal adjustment | ■ | ■ | ■ | | | | |

Accessories

Operating mechanism and locks

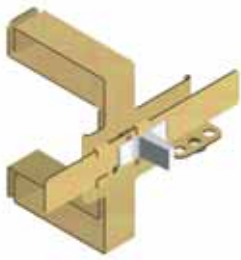

T1-T2-T3

1SDC210C8BF001



T3-T4-T5-T6

1SDC210C8BF001

Mechanical interlock

T1-T2-T3

The mechanical MIF interlock can be applied on the front of two T1, T2 or T3 circuit-breakers mounted side by side, in either the three-pole or four-pole fixed version and prevents simultaneous closing of the two circuit-breakers. Fixing is carried out directly on the back plate of the switchboard. The front interlocking plate allows installation of a padlock in order to fix the position (possibility of locking in the O-O position as well). It is also possible to interlock three circuit-breakers side by side, using the proper plate, thereby making the following interlock combinations: IOO-OIOOOI-OOO. It is incompatible with the front accessories (solenoid operator, rotary handle operating mechanism) and with the residual current releases.

T3

For T3, in the three-pole or four-pole fixed or plug-in version, the MIR mechanical interlock is available. This rear interlock, available in the horizontal (MIR-H) and vertical (MIR-V) version, is compatible with all the front accessories and with the residual current release (only MIR-H). The following interlocking combinations can be made: IO-OI-OO.

T4-T5-T6

The mechanical interlock for T4, T5 and T6 allows installation of two circuit-breakers on a single support and, by means of special lever mechanisms, makes them mechanically interdependent. For Tmax T4 and T5 this is a rear interlock consisting of a vertical or horizontal frame group (MIR-HR or MIR-VR) and of a pair of metal plates for fixing the circuit-breakers (MIR-P). The frame group is made up of metal frame and of the lever mechanism interlock. The metal plates are of different type according to the sizes of circuit-breakers to be interlocked. For Tmax T6 this is a rear interlock consisting of a vertical or horizontal support.

Interlock

| Type | | | |
|----------|-----------------------------|---|-----------------------------|
| A | T4 (F-P-W) | + | T4 (F-P-W) |
| B | T4 (F-P-W) | + | T5 400 (F-P-W) o T5 630 (F) |
| C | T4 (F-P-W) | + | T5 630 (P-W) |
| D | T5 400 (F-P-W) o T5 630 (F) | + | T5 400 (F-P-W) o T5 630 (F) |
| E | T5 400 (F-P-W) o T5 630 (F) | + | T5 630 (P-W) |
| F | T5 630 (P-W) | + | T5 630 (P-W) |

There are no limitations on the versions to be interlocked, therefore, for example, a fixed circuit-breaker can be interlocked with a withdrawable version switch-disconnector.

Since this is a rear interlock, all the front accessories which are compatible with the circuit-breakers installed can be used.

In the vertical interlock the bottom terminals of the upper circuit-breaker and the top terminals of the lower circuit-breaker must be of rear type.

To be able to receive the circuit-breakers mounted directly on the interlocking plate, code "1SDA050093R1" must be specified as the accessory of the second circuit-breaker (or fixed part) you want to interlock.

T7

This mechanism makes the mechanical interlock between two circuit-breakers by means of flexible cables, which are connected on a plate mounted on the side of the circuit-breaker preventing simultaneous closing of the two circuit-breakers. A cable kit has been prepared for vertical installation and another for horizontal installation. The plates to be mounted on the circuit-breaker differ according to whether the circuit-breaker is in the fixed or withdrawable version.

Accessories

Transparent protections

Transparent pushbutton protection – TCP

A transparent protection for the circuit-breaker opening and closing pushbuttons is available in two different versions on T7 with stored energy operating mechanism: one which protects both the push-buttons and the other which alternatively protects either the opening or the closing pushbutton.

There is the possibility of putting a padlock, which adds the lock function to the protection. In the closed position this lock does not prevent release of the mechanism following a fault or a remote command.

IP54 door protection

Available with T7 motorizable, it is made by means of a transparent plastic cover which completely protects the front of the circuit-breaker and allows IP54 degree of protection to be reached. Mounted on hinges, it is provided with a key lock.

Accessories

Residual current releases

All the Tmax series of circuit-breakers, both automatic circuit-breakers and switch-disconnectors, are preset for combined assembly with residual current releases.

In particular, the Tmax T1, T2 and T3 circuit-breakers can be combined with the new version of the SACE RC221 or RC222 series of residual current releases and four-pole T4 and T5 with RC222 or RC223 to be installed below the circuit-breaker.

The T6 and T7 circuit-breakers can be combined with the RCQ residual current switchgear release. Apart from the protection against overloads and short-circuits typical of automatic circuit-breakers, the residual current circuit-breakers derived from them also guarantee protection of people and protection against earth fault currents, thereby ensuring protection against direct contacts, indirect contacts and fire hazards. The residual current releases can also be mounted on the Tmax T1D, T3D, T4D and T5D switch-disconnectors. In that case, the derived apparatus is a “pure” residual current circuit-breaker, i.e. one which only guarantees residual current protection and not the protections typical of circuit-breakers. “Pure” residual current circuit-breakers are only sensitive to the earth fault current and are generally applied as main switch-disconnectors in small distribution switchboards towards end users.

The use of “pure” and “impure” residual current circuit-breakers allows continual monitoring of the state of plant insulation, ensuring efficient protection against fire and explosion hazards and, when the devices have $I_{\Delta n} \leq 30$ mA, ensure protection of people against indirect and direct earth contacts to fulfil the compulsory measures foreseen by the accident prevention regulations and prescriptions.

The residual current releases are constructed in compliance with the following Standards:

- IEC 60947-2 appendix B
- IEC 61000: for protection against unwarranted release.

They are constructed using electronic technology and act directly on the circuit-breaker by means of a trip coil, supplied with the residual current release, to be housed in the special slot made in the left-hand pole area.

They do not require an auxiliary power supply as they are supplied directly by the network and their operation is guaranteed even with only a single phase plus neutral or only two phases supplied with voltage and in the presence of unidirectional pulsating currents with direct components. All the possible connection combinations are allowed, except for guaranteeing, in the four-pole version, connection of the neutral to the first pole on the left.

The RC221 and RC222 residual current releases can either be supplied from above or from below. The operating conditions of the apparatus can be continually controlled by means of the electronic circuit test pushbutton and the magnetic indicator of residual current trip.

A disconnection device of the power supply during the insulation test is available.

The four-pole circuit-breaker complete with residual current release can be fitted with the electrical accessories normally available for the circuit-breaker. The shunt opening and undervoltage releases are housed in the special slot made in the neutral pole for the four-pole circuit-breakers, whereas they are incompatible with the three-pole circuit-breakers.

The residual current releases are supplied complete with:

- a trip coil to be housed in the area of the third pole, complete with an auxiliary contact signalling residual current release trip
- dedicated flange.

A changeover contact for signalling residual current protection trip is always supplied for Tmax circuit-breakers, combined with the RC221 and RC222 residual current releases. Two changeover contacts for signalling pre-alarm and alarm are also available with the RC222 release.

The opening solenoid for the RC221, RC222 and RC223 residual current releases is available as a spare part.

A circuit-breaker cannot have the residual current release and the rotary handle or the motor operator mounted at the same time (except for MOS in the side-by-side version for T1 and T2).



1SDC210C90R0001



1SDC210C91F0001

T1-T2-T3



1SDC210C92F0001



1SDC210C93F0001

T4-T5

RC221 and RC222 residual current releases for T1, T2 and T3

The RC221 and RC222 residual current releases for T1, T2 and T3 circuit-breakers are available both with three-pole and four-pole circuit-breakers, in the fixed version.

The configuration foresees insertion of the circuit-breaker on the structure of the corresponding residual current release, making access to the adjustments on the left-hand side of the circuit-breaker available, whilst the toroid is in the underneath position.

A distinguishing characteristic is provided by the type of cable connection which is made directly on the circuit-breaker, once the residual current release has been mounted, thereby ensuring simplification and rationalisation of the installation procedure.

With Tmax T2 and T3, only front terminals for copper cables (FC Cu) at the bottom are mounted on the residual current releases.

For this reason, when the residual current release is ordered, the FC Cu terminal semi-kit is always supplied (consult the code section on page 7/36).

On the other hand, for four-pole Tmax T1, it is also possible to mount the rear horizontal flat terminal kit below (HR for RC221/ RC222).

Furthermore, still for four-pole T1, a version of the RC222 residual current release is available in 200 mm modules. This release keeps the same technical characteristics as the normal RC222 for T1, T2 and T3 but, thanks to its reduced height, allows installation in 200 mm modules. Its special shape also allows a reduction in the overall dimensions when two or more units are placed side by side.

The bracket for fixing onto DIN 50022 rail is available on request.

A circuit-breaker cannot have the residual current release and the overlaid solenoid operator or the rotary handle operating mechanism mounted at the same time.

RC222 residual current release for T4 and T5

The RC222 release for T4 and T5 is available in the four-pole version and is mounted below the circuit-breaker.

The release is supplied with standard front terminals, but it can also be combined with all the terminals available for the corresponding circuit-breaker.

The RC222 residual current release, in the fixed version, can easily be converted into plug-in and into withdrawable by adding the special conversion kit and applying a derating of the performances as indicated in the table on the next page.

A circuit-breaker cannot have the residual current release and the motor operator mounted at the same time.

RC223 (B type) residual current release for T4

The RC223 (B type) residual current release, can only be combined with the Tmax T4 four-pole circuit-breaker in the fixed, plug-in and withdrawable version. The range of operation of the primary line-to-line voltage of this residual current release varies between 110 V and 500 V, with operation starting from 55 V phase-neutral. It is characterised by the same types of reference as the RC222 (S and AE type) release, but can also boast conformity with type B operation, which guarantees sensitivity to residual fault currents with alternating, alternating pulsating and direct current components.

The reference Standards are: IEC 60947-1, IEC 60947-2 Appendix B, and IEC 60755.

Apart from the signals and settings typical of the RC222 residual current release, the RC223 also allows selection of the maximum threshold of sensitivity to the residual fault frequency (3 steps: 400 - 700 - 1000 Hz). It is therefore possible to adapt the residual current device to the different requirements of the industrial plant according to the prospective fault frequencies generated on the load side of the release. Typical installations which may require frequency thresholds different from the standard ones (50 - 60 Hz) are the welding plants for the automobile industry (1000 Hz), the textile industry (700 Hz), airports and three phase drives (400 Hz).

All the functions of the apparatus - even the most advanced ones - can be checked by the user by means of a careful watchdog test which is carried out by a series of simple successive steps.

A circuit-breaker cannot have the residual current release and the motor operator mounted at the same time.

Accessories

Residual current releases

| Circuit-breakers size | RC221 | RC222 | | RC223 |
|---|---------------------------------|---|---|---|
| | T1-T2-T3 | T1-T2-T3 | T4 and T5 4p | T4 4p |
| Type | "L" shaped | "L" shaped | Placed below | Placed below |
| Technology | microprocessor-based | microprocessor-based | microprocessor-based | microprocessor-based |
| Action | with trip coil | with trip coil | with trip coil | with trip coil |
| Primary service voltage ⁽¹⁾ [V] | 85...500 | 85...500 | 85...500 | 110...500 |
| Operating frequency [Hz] | 45...66 | 45...66 | 45...66 | 0-400-700-1000 |
| Self-supply | ■ | ■ | ■ | ■ |
| Test operation range ⁽¹⁾ [V] | 85...500 | 85...500 | 85...500 | 110...500 |
| Rated service current [A] | up to 250 A | up to 250 A | up to 500 A | up to 250 A |
| Rated residual current trip [A] | 0.03 - 0.1 - 0.3 0.5 - 1 - 3 | 0.03 - 0.05 - 0.1 - 0.3 0.5 - 1 - 3 - 5 - 10 | 0.03 - 0.05 - 0.1 0.3 - 0.5 - 1 - 3 - 5 - 10 | 0.03 - 0.05 - 0.1 0.3 - 0.5 - 1 |
| Time limit for non-trip [s] | instantaneous | instantaneous - 0.1 - 0.2 - 0.3 - 0.5 - 1 - 2 - 3 | instantaneous - 0.1 - 0.2 - 0.3 - 0.5 - 1 - 2 - 3 | instantaneous - 0 - 0.1 - 0.2 - 0.3 - 0.5 - 1 - 2 - 3 |
| Tolerance over trip times | | ± 20% | ± 20% | ± 20% |
| Local trip signalling | ■ | ■ | ■ | ■ |
| Trip coil with changeover contact for trip signalling | ■ | ■ | ■ | ■ |
| Input for remote opening | | ■ | ■ | ■ |
| NO contact for pre-alarm signalling | | ■ | ■ | ■ |
| NO contact for alarm signalling | | ■ | ■ | ■ |
| Indication of pre-alarm from 25% I _{Δn} (tolerance ±3%) | ■ | ■ | ■ | |
| Indication of alarm timing at 75% I _{Δn} (tolerance ±3%) | ■ | ■ | ■ | |
| "A" type for pulsating alternating current, AC for alternating current | ■ | ■ | ■ | ■ |
| "AE" type for remote release device | | ■ | ■ | ■ |
| Type B for pulsed current and direct current | | | | ■ |
| Selective "S" type | | ■ | ■ | ■ |
| Switch for insulation test | ■ | ■ | ■ | ■ |
| Power supply from above and below | ■ | ■ | ■ | ■ |
| Assembly with three-pole circuit-breakers | ■ | ■ | | |
| Assembly with four-pole circuit-breakers | ■ | ■ | ■ | ■ |
| Kit for conversion of circuit-breaker with residual current release from fixed to plug-in | | ■ | ■ | ■ |


⁽¹⁾ Operation up to 50 V Phase-Neutral (55 V for RC223)

| RC222-RC223 T4-T5 Performances | Maximum withstand current | |
|--------------------------------|---------------------------|----------------------|
| | Fixed | Plug-in/Withdrawable |
| T4 250 | 250 A | 250 A |
| T4 320⁽¹⁾ | 320 A | 280 A |
| T5 400⁽¹⁾ | 400 A | 400 A |
| T5 630⁽¹⁾ | 500 A | 450 A |

⁽¹⁾ available only with RC222

Homopolar toroid for residual current protection

The electronic PR332/P LSIRc and PR332/P LSIG (with PR330/V) trip units can be used combined with the homopolar toroid for residual current protection, which allows activation of the residual current protection. The toroid is provided with a multiple dip-switch selector which is set according to the required sensitivity (up to 3 A or 30 A). This accessory must be mounted on the busbars and is available in a single size up to 1600 A.

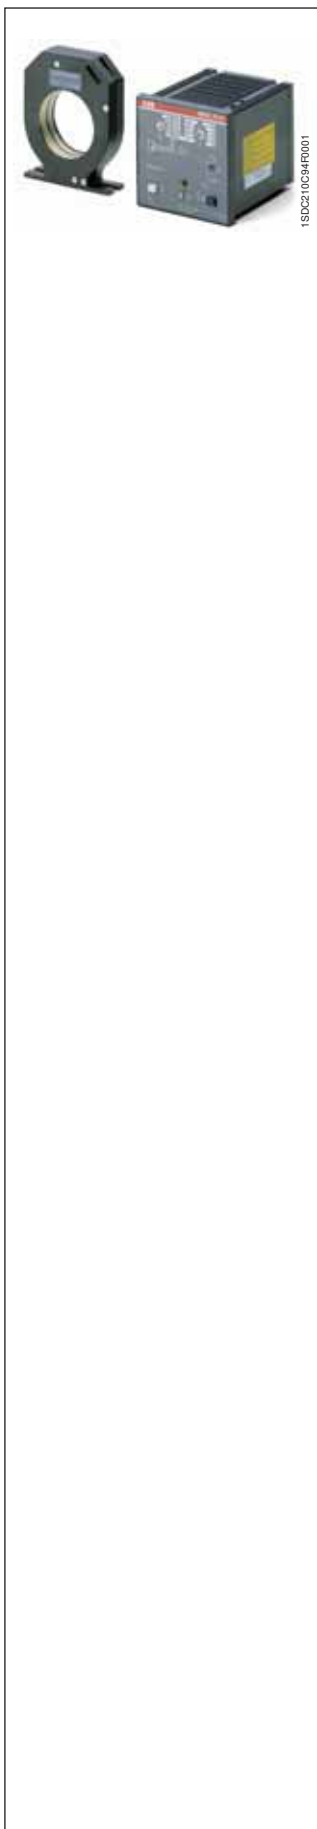

SACE RCQ switchboard residual current relay

The Tmax circuit-breakers can also be combined with the SACE RCQ switchboard relay with separate toroid (to be installed externally on the line conductors) and these fulfil requirements with thresholds up to 30 A trips and times up to 5 s or when the installation conditions are particularly restrictive, such as with circuit-breakers already installed, or limited space in the circuit-breaker compartment.

Thanks to the wide range of settings, the SACE RCQ switchboard relay is suitable for applications where a system of residual current protection coordinated with the various distribution levels, from the main switchboard to the end user, is required. It is particularly recommended when low sensitivity residual current protection is required, such as in partial (current) or total (chronometric) selective chains, and for high sensitivity applications (physiological sensitivity) to provide protection of people against direct contacts.

On a drop in the auxiliary power supply voltage, the opening command can intervene after a minimum time of 100 ms and after the time set plus 100 ms.

The SACE RCQ relay is a type A residual current relay and detects residual currents both of the alternating and pulsating type with continuous components.

The SACE RCQ relay is of the type with indirect action and acts on the circuit-breaker release mechanism by means of the shunt opening release (or of the undervoltage release) of the circuit-breaker itself (to be ordered by the user), to be housed in the special slot made on the left-hand pole of the circuit-breaker.

| Residual current relay | | SACE RCQ |
|--|----------------------|--|
| Power supply voltage | AC [V] | 80 ... 500 |
| | DC [V] | 48 ... 125 |
| Operating frequency | [Hz] | 45 ÷ 66 Hz |
| Power consumption on in rush | | 100 [VA] / 100 [W] |
| Power consumption in service | | 6 [VA] / 6 [W] |
| Trip threshold adjustment $I_{\Delta n}$ | | |
| 1st range of adjustments | [A] | 0.03-0.05-0.1-0.3-0.5 |
| 2nd range of adjustments | [A] | 1-3-5-10-30 |
| Trip time adjustment | [s] | instantaneous 0.1-0.2-0.3-0.5-0.7-1-2-3-5 |
| Pre-alarm threshold adjustment | [%] x $I_{\Delta n}$ | 25 ... 75% x $I_{\Delta n}$ |
| Range of use of closed transformers | | |
| Toroidal transformer Ø 60 [mm] | [A] | 0.03 ... 30 |
| Toroidal transformer Ø 110 [mm] | [A] | 0.03 ... 30 |
| Toroidal transformer Ø 185 [mm] | [A] | 0.1 ... 30 |
| Range of use of transformers which can be opened | | |
| Toroidal transformer Ø 110 [mm] | [A] | 0.3 ... 30 |
| Toroidal transformer Ø 180 [mm] | [A] | 0.3 ... 30 |
| Toroidal transformer Ø 230 [mm] | [A] | 1 ... 30 |
| Signalling for alarm pre-threshold | | Yellow flashing LED 1 N.O. change-over contact 6 A - 250 V AC 50/60 Hz |
| Residual current relay trip signalling | | Yellow magnetic flag change-over contacts (N.O. N.C.; N.O.) 6 A - 250 V AC 50/60 Hz |
| Remote opening control | | N.O. contact Trip time 15 ms |
| Connection to the toroidal transformer | | By means of 4 twisted conductors. Maximum length: 5 m |
| Dimensions W x H x D | [mm] | 96 x 96 x 131.5 |
| Drilling for assembly on door | [mm] | 92 x 92 |
| Degree of protection on the front | | IP41 |
| Degree of protection on the rear | | IP30 |

Accessories

Accessories for electronic trip units



1SDC210C36F0001

Front display unit – FDU

The front display is a display unit of the setting currents, alarms and parameters of the PR222DS/P, PR222DS/PD, PR223DS and PR223EF electronic trip units of T4, T5 and T6. The display unit can operate correctly with self-supply with $I \geq 0.35 \times I_n$ on at least one phase.

If the display is used in combination with the PR222DS/PD, PR223DS or PR223EF trip units, and therefore with an auxiliary power supply, it is also possible to detect the protection, which has caused the release trip and the fault current.

Connection of the display to the PR223DS and PR223EF trip units must, compulsorily, pass through the AUX-E auxiliary contacts in electronic version, whereas with the PR222DS/P trip unit it can be made directly.

It is not compatible with the front accessories: rotary handle operating mechanism, motor operator and front for lever operating mechanism.

When combined with PR223DS trip unit with VM210 device, the FDU is able to display a wide range of measurements, as shown in the table.

| Measurement | With N | Without N |
|--|---|--------------------------|
| Effective current values | I_1, I_2, I_3, I_n | I_1, I_2, I_3 |
| Effective voltage values | $V_1, V_2, V_3, V_{12}, V_{23}, V_{31}$ | V_{12}, V_{23}, V_{31} |
| Apparent powers | S_{tot}, S_1, S_2, S_3 | S_{tot} |
| Active powers | P_{tot}, P_1, P_2, P_3 | P_{tot} |
| Reactive powers | Q_{tot}, Q_1, Q_2, Q_3 | Q_{tot} |
| Power factors | cos | cos |
| Active energy | ■ | ■ |
| Reactive energy | ■ | ■ |
| Apparent energy | ■ | ■ |
| Frequency | ■ | ■ |
| Peak factors | ■ | ■ |
| Circuit-breaker state | | |
| Protection function parameters | ■ | ■ |
| Trip warnings and alarms (only with Vaux) | ■ | ■ |
| Phase 1, 2, 3 and N trip current | ■ | ■ |
| Protection tripped (L, S, EF ⁽¹⁾ , I, G) | ■ | ■ |
| Current levels and trip times (L, S, EF ⁽¹⁾ , I, G) | ■ | ■ |

⁽¹⁾ only PR223EF

VM210

The VM210 accessory, combined with the PR223DS and PR223EF trip units for T4, T5 and T6, is able to provide the various measurements of the electrical values of the plant.

The VM210 can provide the measurements relative to a maximum of 5 PR223DS or PR223EF trip units. The maximum connection distance between the module and the trip unit is 15 meters. For distances longer than 1 meters, a shielded multi-core cable must be used.

| VM210 Conditions of use | Values |
|-------------------------------|--------------------|
| Power supply | 24 V DC $\pm 20\%$ |
| Ripple | $\pm 5\%$ |
| Operating Temp. | -25 °C...+70 °C |
| Relative humidity | 5%...98% |
| Certifications | |
| Product | IEC 60068 |
| Electromagnetic compatibility | IEC 61000 |




1SDC210C36F0001

IM210

The IM210 interlocking module guarantees extension of zone selectivity from PR223EF trip unit to the following trip units on the supply side:

- PR332/P for Tmax T7;
- PR332/P and PR333/P for Emax X1;
- PR122/P and PR123/P for Emax circuit-breakers.

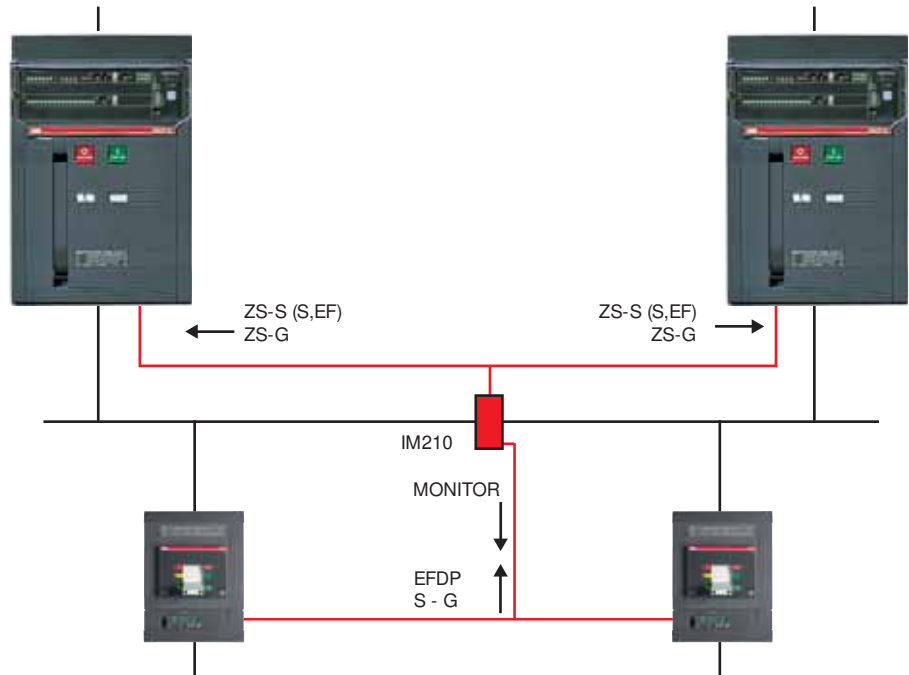

| IM210 Conditions of use | Values |
|-------------------------------|-------------------|
| Power supply | 24 V DC \pm 20% |
| Ripple | \pm 5% |
| Operating Temp. | -25 °C...+70 °C |
| Relative humidity | 5%...98% |
| Certifications | |
| Environmental tests | IEC 60068 |
| Electromagnetic compatibility | IEC 61000 |

HMI030 interface on the front of switchgear

This accessory, which can be used with all the protection trip units fitted with dialogue, is designed for installation on the front of the switchgear. It consists of a graphic display where all the trip unit measurements and alarms/events are displayed. The user can navigate in a simple and intuitive way among the measurements by using the navigation pushbuttons. The device can replace the traditional multimeters without the need for current/voltage transformers. The HMI030 is connected directly to the protection trip unit by means of a serial line and requires a 24 V DC power supply.

Accessories

Accessories for electronic trip units

Optional modules

The PR332/P trip unit for T7 can be enriched with additional internal modules, thereby increasing the capacity of the trip units and making these units highly versatile.

PR330/V voltage measuring module

This optional internal module can be added to PR332/P. It measures and processes the phase and neutral voltages, transferring these data to the protection trip unit, so that a series of protection and measurement functions can be implemented.

It can be connected to the PR332/P at any time, and the latter recognises it automatically without having to be configured.

The PR332/P does not normally require an external connection or a voltage transformer since it is connected internally to the upper terminals of T7. If necessary, the connection of voltage sockets can be moved externally with connection to the terminal board using voltage transformers connected to the top or bottom terminals.

On the PR330/V module there is a selector which defines the method of wiring implemented to detect the voltage measurements (INT= connection of the internal module towards the top terminals – EXT= connection to the terminal box). The “Insulating Test” position guarantees carrying out the dielectric test. A “Power Line” LED indicates presence of the line voltage.



1SDC210D13F0001



1SDC210D14F0001

PR330/D-M communication module (Modbus RTU)

The PR330/D-M communication module is the solution for connecting Tmax to a Modbus network for remote supervision and control of the circuit-breaker.

It is suitable for the PR332/P trip unit for T7. As for the PR330/V, this module can be added to the protection trip unit and its presence is recognised automatically.

The electronic trip unit is supplied with three LEDs on the front:

- “Power” power supply LED, which indicates the presence of auxiliary power supply to the PR330/D-M module
- “Tx” data transmission LED
- “Rx” data reception LED.

PR330/R actuator module

The PR330/R actuator module is fitted in the right slot of T7 and it is used for opening and closing the circuit-breaker by means of the shunt opening and closing releases by remote control. It is suitable for the PR332/P.

BT030 wireless communication unit

BT030 is a device to be connected to the Test connector of PR222DS, PR223DS, PR223EF, PR232/P, PR331/P and PR332/P. It allows Bluetooth communication between the protection trip unit and a hand-held or laptop PC with a Bluetooth port. BT030 can also be used with Emax circuit-breakers fitted with PR121/P, PR122/P and PR123/P.

This device is dedicated to use with the SD-Pocket application.

BT030 can provide the power supply needed for self-supply and for the protection release by means of a rechargeable Li-ion battery.

PR030/B power supply unit

With this accessory, which is always supplied with the PR332/P range of trip units, it is possible to read and configure the parameters of the unit whatever the state of the circuit-breaker is (open-closed, in the isolated for test position or racked-in, with/without auxiliary power supply).

PR030/B is needed for readout of the data relative to trips if the trip occurred more than 48 hours previously and the trip unit was no longer supplied.

An electronic circuit inside it allows power supply to the unit for about 3 hours continuously to carry out just the data reading and configuration operations.

The life of the battery decreases if the SACE PR030/B is also used to carry out the Trip test and the Auto test.

Trip unit adapter

In order to allow all the connections between the electronic trip unit type PR33x and the terminal board on the circuit-breaker, the circuit-breaker it self must be fitted with a trip unit adapter.

Two different trip unit adapters are available: one is suitable with T7 level operating mechanism, the other with T7 motorizable.

Rating plug

Available on the electronic trip units which can be mounted on T7, it must be applied on the front of the trip unit itself and provides information about the current sensor settings. It is therefore no longer necessary to change the circuit-breaker current sensors, but is sufficient just to replace the rating plug to obtain modification of the rated current of the circuit-breaker.

| Type of circuit-breaker | Rated current I _n | I _n (A) | | | | | |
|-------------------------|------------------------------|--------------------|-----|-----|------|------|------|
| | | 400 | 630 | 800 | 1000 | 1250 | 1600 |
| T7 | 800 | ■ | ■ | ■ | | | |
| | 1000 | ■ | ■ | ■ | ■ | | |
| | 1250 | ■ | ■ | ■ | ■ | ■ | |
| | 1600 | ■ | ■ | ■ | ■ | ■ | ■ |

Accessories

Accessories for electronic trip units



EP010 - FBP

It is the “E-plug” interface which can connect T4, T5 and T6, equipped with the PR222DS/PD electronic trip unit, to the field bus plug system, allowing user to choose among several field bus system (ASI, Device Net, Profibus). This must be connected to the trip unit by means of the specific X3 connector.

When using EP010 for profibus, the PDP22 Fieldbus Plug must be used. The PDP21 Fieldbus Plug cannot be used with EP010.



SACE PR212/CI contactor control unit

The SACE PR212/CI accessory unit can be associated with PR222MP for Tmax and PR212MP for the SACE Isomax S family.

When the special dip switch on the front of the PR222/MP is positioned on “Normal mode” working mode, it is possible to control contactor opening in the case of a fault due to overload L, locked rotor R or missing/unbalance of phase U.

The SACE PR212/CI unit can be installed either on a DIN rail or on the rear of the door.



1SDC210015D0201

SACE PR021/K signalling unit

The SACE PR021/K signalling unit can convert the digital signals supplied by the PR222DS/PD (LSI or LSI_G), PR223DS or PR223EF trip unit into electrical signals, with normally open electrical contacts.

The unit is connected to the protection trip unit by means of the Modbus RTU standard serial changeover line, on which all the information about the activation status of the protection functions flows. The corresponding electrical contacts are closed based on these information.

In particular, the following signals are available:

- the alarm signal remains active throughout the overload, until the trip unit is tripped
- the trip signals of the protections remain active during the timing phase, and even after the trip unit is tripped.

A reset pushbutton allows the state of all the signals to be reset.

The unit also has ten LEDs to visually signal the following information:

- “PW/WD”: auxiliary power supply present and W.D.
- “TX/RX”: flashing synchronised with dialogue with the serial Bus and several warning indications
- eight LEDs associated with the internal contacts.

The table indicates the characteristics of the signalling relays available in the SACE PR021/K unit.

Power contacts electrical characteristics

| | |
|--|---------------------------------|
| Maximum changeover power (resistive load) | 100W / 1250 VA (resistive load) |
| Maximum changeover voltage | 130 V DC / 250 V AC |
| Maximum changeover current | 5 A |
| Breaking capacity (resistive load) @30 V DC | 3.3 A |
| Breaking capacity (resistive load) @250 V AC | 5 A |
| Contact/coil insulation | 2000 V rms (1 min @50 Hz) |

Note: the PR021/K unit is an alternative to any supervision and control systems.

Available signals

| K51 | PR222MP |
|-----|--|
| 1 | Protection L alarm |
| 2 | Protection R alarm |
| 3 | Protection I alarm |
| 4 | Protection U alarm |
| | Welded contactor alarm contacts ⁽¹⁾ |
| 5 | Bus K.O. |
| 6 | PTC alarm (temperature sensor on motor) |
| | Generic input 0/1 ⁽¹⁾ |
| 7 | Release trip |
| 8 | Protection L pre-alarm |
| | Back-up protection alarm ⁽¹⁾ |

⁽¹⁾ alternatively by means of dip-switch.

| K51 | PR222DS-PR223DS-PR223EF |
|-----|-------------------------|
| 1 | Protection L alarm |
| 2 | Protection S alarm |
| 3 | Protection I alarm |
| 4 | Protection G alarm |
| 5 | Bus K.O. |
| 6-7 | Release trip |
| 8 | Protection L pre-alarm |

Accessories

Accessories for electronic trip units

Current sensor for external neutral

This is applied to the external neutral conductor and allows protection G against earth faults to be carried out with external neutral three-pole circuit-breakers.

The current sensor must be connected to the trip unit by means of the specific connectors X4 for T2, T4, T5 and T6 or with a direct connection in the terminal board for T7. The combination is possible with all the types of electronic trip unit, except for PR221, PR231 and PR232.

| T4 | T5 | T6 | T7 |
|-----|-----|------|------------|
| [A] | [A] | [A] | [A] |
| 100 | 320 | 630 | 400...1600 |
| 160 | 400 | 800 | |
| 250 | 630 | 1000 | |
| 320 | | | |

Connectors

Connectors X3 and X4 allow connection of the electronic trip units with external plant units or components. In fact, they are used to make the L alarm signal available outside, connection of the external neutral, connection to the PR021/K signalling unit, to the PR212/CI contactor control unit or to the temperature sensor of the PTC motor and allows two-way communication from the circuit-breaker fitted with dialogue towards the outside and vice versa.

Both the connectors are available both for fixed version circuit-breakers and for plug-in or withdrawable version circuit-breakers.

| Connector | Function | Trip unit |
|-----------|-------------------------|--|
| X3 | PR021/K | PR222DS/PD, PR223DS and PR223EF |
| | L alarm signal | PR222DS/P, PR222DS/PD, PR223DS and PR223EF |
| | Auxiliary supply | PR222DS/PD, PR223DS, PR223EF and PR222MP |
| | IM210 | PR223EF |
| | EP 010 | PR222DS/PD, PR223DS and PR223EF |
| X4 | External neutral | PR222DS/P, PR222DS/PD, PR223DS and PR223EF |
| | VM210 | PR223DS and PR223EF |
| | IM210 | PR223EF |
| | PR212/CI | PR222MP |
| | PTC generic contact 0/1 | PR222MP |

Accessories

Test and configuration accessories



1SDC210009R0001

SACE PR010/T test and configuration unit

The SACE PR010/T unit is an instrument capable of performing the Test, programming and parameter reading functions for the protection units equipping SACE Isomax S and Tmax moulded-case circuit-breakers and SACE Emax\air circuit-breakers.

In particular, for Tmax T4, T5, T6 and T7 circuit-breakers fitted with the different versions of trip units, the test programming and parameter reading functions are available.

All the functions mentioned can be carried out ON BOARD by connecting the SACE PR010/T unit to the front multi-pin connector on the protection units. Special interfacing cables supplied as standard with the unit guarantee the connection.

The human-machine interface is ensured by using a membrane keypad and a multi-line alphanumeric display.

There are also two LEDs on the unit which indicate, respectively:

- POWER-ON and STAND BY state
- state of the battery charge.

Two different types of test are provided: manual and automatic.

By means of connection to a computer (with the software supplied by ABB SACE), it is possible to upgrade the software of the SACE PR010/T unit to allow upgrading of the test unit as new products are developed.

The results of greatest interest regarding the test can, moreover, be stored in the unit itself and sent to the PC on specific request for "issue of report".

In automatic and manual mode the SACE PR010/T unit can test:

- protection functions L, S, I, G
- protection functions L, R, I, U (for PR222MP)
- monitoring correct operation of the microprocessor.

The SACE PR010/T unit is portable, operating with rechargeable batteries and/or with an external power supply.

In the standard supply, the unit includes the following:

- SACE PR010/T test unit complete with rechargeable batteries
- SACE TT1 test unit
- 100...240 V AC/12 V DC external power supply
- connection cables between the unit and the multi-pin connector on the range of trip units which equip the Tmax, SACE Isomax S and SACE Emax series
- connection cable between the unit and the PC (RS232 serial)
- power supply cable
- instruction manual and diskette with application SW
- plastic container.



1SDC210004R0001

SACE TT1 test unit

This allows tripping of all the electronic trip units which equip the Tmax family of circuit-breakers in the various versions (except for PR33x) to be checked and the trip test of the trip coil (CTC). The device, supplied with power by means of a replaceable 12 V battery, is provided with a two-pole polarised connector housed at the back of the box which allows connection of the device to the test input bushings located on the front of the electronic trip unit.

The compact dimensions of the accessory make it practically pocket size.

SD-TestBus 2

SD-TestBus 2 is the installation, diagnostic and configuration software for ABB SACE products with Modbus RTU communication. It can be used during putting into service or for trouble shooting in an operational communication network.

SD-TestBus2 carries out an automatic scan of the RS485 bus, detects all the devices connected and checks their configuration, verifying all the possible combinations of addresses, parity and baud rate.

Required standard set up is made of:

- Personal computer
- Serial interface (s.g. RS232/RS485 or USB/RS485)
- SD-TestBus 2 software.

Accessories

Automatic transfer switch - ATS010



1SDC210005R0001

Automatic transfer switch – ATS010

The switching unit ATS010 (Automatic Transfer Switch) is the new network-group switching device offered by ABB SACE. It is based on microprocessor technology in compliance with the leading electromagnetic compatibility and environmental standards (EN 50178, EN 50081-2, EN 50082-2, IEC 60068-2-1, IEC 60068-2-2, and IEC 60068-2-3).

The device is able to manage the entire switching procedure between the normal line and emergency line circuit breakers automatically, allowing great flexibility of settings. In case of an error in the normal line voltage, in accordance with the delays set, the normal line circuit breaker is opened, the generator started and the emergency line circuit breaker closed. Similarly, when the normal line returns to range, the reverse switching procedure is automatically controlled.

It is especially suited for use in all emergency power supply systems requiring a solution that is ready to install, easy to use and reliable.

Some of the main applications include: power supply for UPS (Uninterrupted Power Supply) units, operating rooms and primary hospital services, emergency power supply for civilian buildings, airports, hotels, data banks and telecommunications systems, power supply of industrial lines for continuous processes.

The switching system consists of the ATS010 unit connected to two motor-driven and mechanically interlocked circuit breakers.

The Tmax T4, T5, T6 and T7 circuit-breakers and the switch-disconnectors of the respective sizes can be used.

The built-in mains sensor of the SACE ATS010 device makes it possible to detect errors in the mains voltage. The three inputs may be directly connected to the three phases of the normal power supply line for networks with rated voltage up to 500 V AC. Networks with a higher voltage require the insertion of voltage transformers (TV), setting a rated voltage for the device that matches their secondary voltage (typically 100 V).

Two change-over contacts for each circuit breaker connect directly to the motor operator. The circuit breaker connection is completed by wiring the status contacts: Open/Closed, Relay tripped, Racked-in (for draw out/plug-in circuit-breakers).

That is why on every circuit breaker connected to the ATS010 unit, the following are included in addition to the mechanical interlock accessories:

- motor operator from 48 V to 110 V DC or up to 250 V AC
- key lock only against manual operation for motor operator
- open/closed contact and contact for tripped
- racked-in contact (in the case of withdrawable)

The ATS010 device is designed to ensure extremely high reliability for the system it controls. It contains various safety systems intrinsically related to software and hardware operation.

For software safety, a special logic prevents unwarranted operations, while a constantly operative watchdog system points out any microprocessor malfunctions via a LED on the front of the device.

Hardware safety allows integration of an electrical interlock via power relay, so that there is no need to use an external electrical interlock system. The manual selector on the front of the device can also control the entire switching procedure, even in the event of a microprocessor fault, by working electromechanically on the control relays.


General specifications

| | |
|---|--|
| Rated supply voltage (galvanically insulated from earth) | 24 V DC ± 20% 48 V DC ± 10% (maximum ripple ±5%) |
| Maximum absorbed power | 5 W @ 24 V DC 10 W @ 48 V DC |
| Rated power (mains present and circuit breakers not controlled) | 1.8 W @ 24 V DC 4.5 W @ 48 V DC |
| Operating temperature | -25 °C...+70 °C |
| Maximum humidity | 90% without condensation |
| Storage temperature | -25 °C...+80 °C |
| Protection rating | IP54 (front panel) |
| Dimensions [mm] | 144 x 144 x 85 |
| Weight [kg] | 0.8 |

Setting range for thresholds and times

| | | |
|---|--------|---------------|
| Minimum voltage | Un Min | -5%...-30% Un |
| Maximum voltage | Un Max | +5%...+30% Un |
| Fixed frequency thresholds | | 10%...+10% fn |
| t_1 : opening delay of the normal line circuit breaker due to network error | (CB-N) | 0...32s |
| t_2 : generator start-up delay due to network error | | 0...32s |
| t_3 : stopping delay of the generator | | 0...254s |
| t_4 : switching delay due to network stop | | 0...254s |
| t_5 : closing delay of the emergency line circuit breaker after detecting the generator voltage | (CB-E) | 0...32s |

Operating sequence

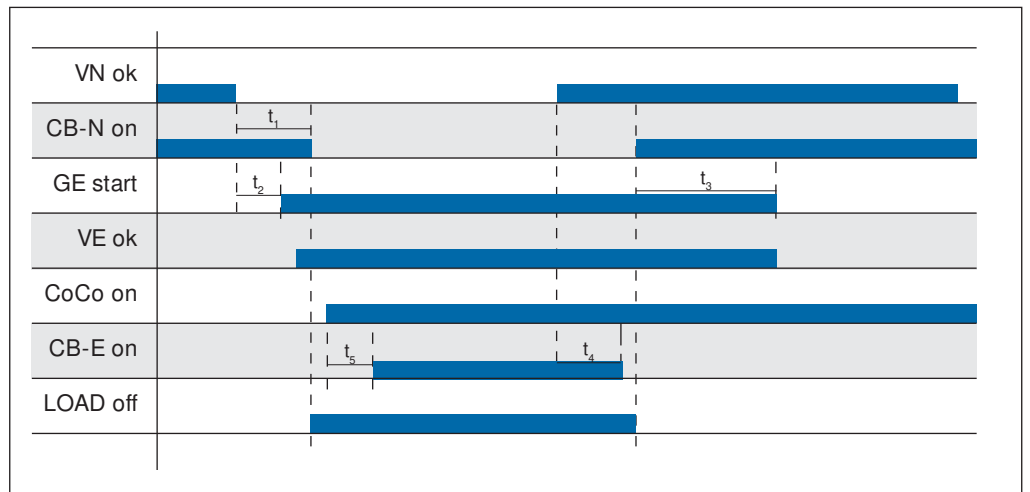


Caption

- VN** Mains voltage
- CB-N** Normal line circuit breaker closed
- GE** Generator
- VE** Emergency line voltage
- CoCo** Enable switching to emergency line
- CB-E** Emergency line circuit breaker closed
- LOAD** Disconnection of lower priority connected loads

Accessories

Automatic transfer switch - ATS010

Side panel settings

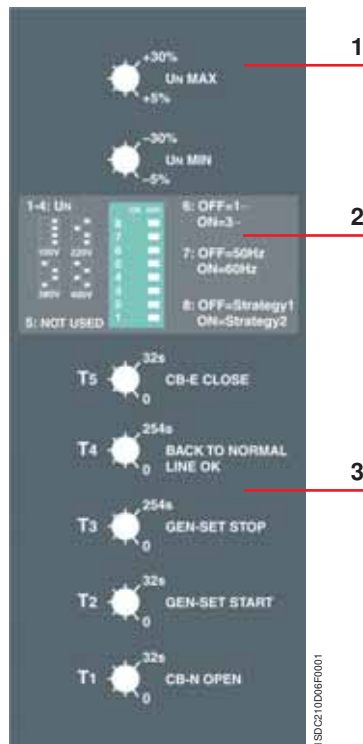

Caption

- 1 Selectors to set the under- and over-voltage thresholds
- 2 Dip-switches to set:
 - rated voltage
 - normal single-phase or three-phase line
 - mains frequency
 - switching strategy
- 3 Switching delay time settings for T1...T5

Front panel



Caption

- 1 Status of the ATS010 unit and logic
- 2 Operating mode selector
- 3 Normal line check
- 4 Normal line circuit breaker status
- 5 Voltage on the emergency line
- 6 Emergency line circuit breaker status
- 7 Generator status

Accessories

Installation accessories and spare parts

Bracket for fixing on DIN rail

This is applied to the fixed circuit breaker and allows installation on standardized DIN EN 50022 rails. It simplifies assembly of the T1 - T2 - T3 circuit breakers in standard switchboards.

The bracket for fixing on DIN rail is also available for Tmax circuit breakers combined with RC221 and RC222 residual current releases or with the solenoid operator of the side-by-side type.



1SDC210D08F0001




1SDC210D08F0001

Flange for compartment door

This is always supplied with the Tmax circuit-breakers. All the flanges in the Tmax series are of new design and do not require the use of screws for installation: fixing is greatly simplified by just a simple coupling operation. When a rotary handle operating mechanism or residual current releases is used, a dedicated flange is supplied to be used instead of the one supplied with the circuit-breaker.

For T4, T5, T6 and T7 withdrawable circuit-breakers, the flange supplied with the conversion kit must be used instead of the one supplied with the fixed circuit-breaker.

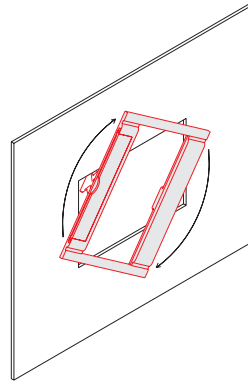

1SDC210D10F0001

Spare parts

A wide range of spare parts is available for the Tmax family of circuit-breakers. For further details about the complete range of spare parts available, please ask for the "Spare Parts Catalogue" from the Service Division of ABB SACE.

Accessories


Compatibility of internal accessories

Compatibility

An overview of the assembly compatibility of (internal) accessories with the Tmax Series circuit-breakers can be found in this section.

Possible combination among the internal accessories

The drawing represents the internal slot of the circuit-breakers. A, C and F are housed in the slots on the left of the operating lever, while B, D, E and G in the right one.

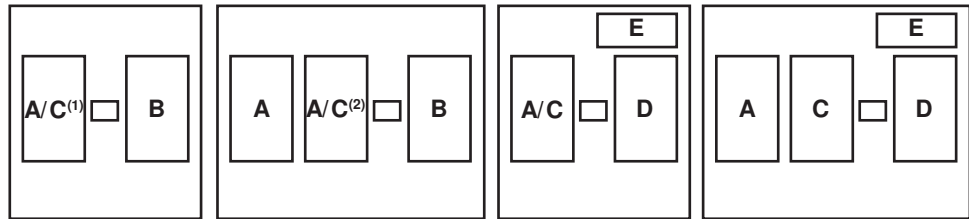


T1, T2 TMD, T3,
T4, T5, T6 3 poles

T1, T2 TMD, T3, T4,
T5, T6 4 poles

T2 PR221DS,
3 poles

T2 PR221DS,
4 poles

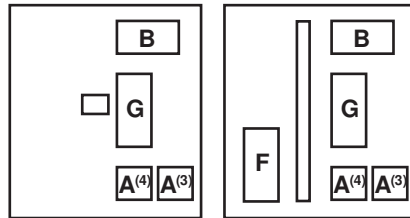

T7 3/4 poles

T7M 3/4 poles

⁽¹⁾ only for T1-T2-T3

⁽²⁾ only for T4-T5

⁽³⁾ position for assembly of the SOR

⁽⁴⁾ position for assembly of the UVR

A = Shunt opening release (SOR) or Undervoltage release (UVR)

B = Auxiliary contacts

C = Trip coil of the residual current

D = Trip coil of the electronic trip unit PR221DS

E = Auxiliary contacts for T2 with electronic trip unit PR221DS

F = Spring charging motor

G = Shunt closing release (SCR)

Index

Characteristic curves

Examples of curve readout 4/2

Trip curves for power distribution

Circuit-breakers with thermomagnetic trip units 4/3

Circuit-breakers with electronic trip units 4/7

Trip curves for zone selectivity

Circuit-breakers with PR223EF trip unit 4/13

Trip curves for motor protection

Circuit-breakers with magnetic only trip units 4/14

Circuit-breakers with PR221DS-I and PR231/P electronic trip units 4/15

Use of the trip curves of circuit-breakers with PR222MP electronic trip unit 4/16

Circuit-breakers with PR222MP electronic trip unit 4/18

Specific let-through energy curves ⁽¹⁾

230 V 4/19

400-440 V 4/21

500 V 4/23

690 V 4/25

1000 V 4/27

Limitation curves ⁽¹⁾

230 V 4/28

400-440 V 4/30

500 V 4/32

690 V 4/34

1000 V 4/36

Technical information

Temperature performances

Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors 4/37

Circuit-breakers with thermomagnetic trip units 4/51

Power losses 4/53

Magnetic trip 4/54

Special applications

Use of apparatus at 16 2/3Hz 4/55

Use of apparatus at 400 Hz 4/58

Use of direct current apparatus 4/61

Zone selectivity 4/70

⁽¹⁾ For T1 1p and T2 with PR221DS, please ask ABB SACE directly.

Examples of curve readout


Example 1 - T4N 250

Trip curves for power distribution (thermomagnetic trip unit)

Considering a T4N 250 $I_n = 250$ A circuit-breaker. By means of the thermal adjustment trimmer, the current threshold I_1 is selected, for example at $0.9 \times I_n$ (225 A); the magnetic trip threshold I_3 , adjustable from 5 to $10 \times I_n$, we select at $10 \times I_n$, equal to 2500 A.

It can be noted that, on the basis of the conditions in which the overload is presented, i.e. with the circuit-breaker at thermal running or not, the thermal relay trip varies considerably. For example, for an overload current of $2 \times I_1$, the trip time is between 21.4 and 105.3 s for hot trip, and between 105.3 and 357.8 s for cold trip.

For fault current values higher than 2500 A, the circuit-breaker trips instantaneously with the magnetic protection.

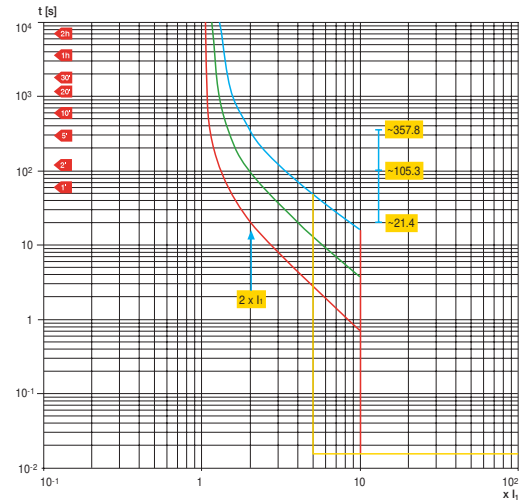


1SDC210E01P0001

Example 2 - T2S 160

Limitation curves

The following figure shows the trend of the Tmax T2S 160, $I_n = 160$ A circuit-breaker current-limiting curve. The r.m.s. of the prospective symmetrical short-circuit current is indicated on the abscissa of the diagram, whereas the peak short-circuit current value is indicated on the ordinates. The current-limiting effect can be assessed by comparing - at the same symmetrical short-circuit current value, the corresponding peak value at the prospective short-circuit current (curve A) with the limited peak value (curve B). The T2S 160 circuit-breaker with thermomagnetic trip unit $I_n = 160$ A at a voltage of 400 V limits the short-circuit current to 16.2 kA for a fault current of 40 kA, with a reduction of about 68 kA compared with the peak value of the 84 kA prospective short-circuit current.

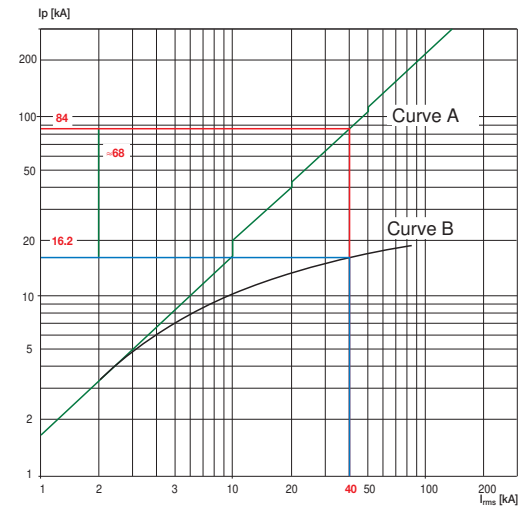

1SDC210B22F0001


Example 3 - T3S 250

Specific let-through energy curves

An example of reading the graph of the specific let-through energy curve of the T3S 250 $I_n = 160$ A circuit-breaker at a voltage of 400 V is given below.

The prospective symmetrical short-circuit current is indicated on the abscissa of the diagram, whereas the ordinates show the specific let-through energy values expressed in A^2s .

In correspondence with a short-circuit current of 20 kA, the circuit-breaker lets through a value of P_t equal to $1.17 \cdot 10^6 \cdot A^2s$.

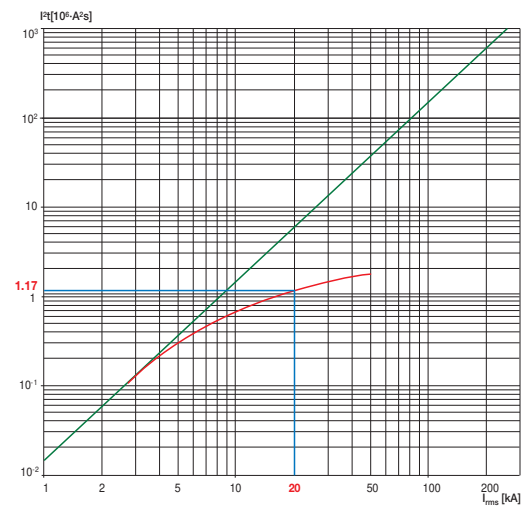

1SDC210E03P0001

Abbreviations used


- I_n = rated current of the thermomagnetic or electronic trip unit
- I_1 = set trip current for overload
- I_3 = trip current for short-circuit
- I_{rms} = prospective symmetrical short-circuit current

Trip curves for power distribution

Circuit-breakers with thermomagnetic trip units


T1 160 – TMD

$I_3 = 500 \text{ A}$
 $I_n = 16 \div 63 \text{ A}$

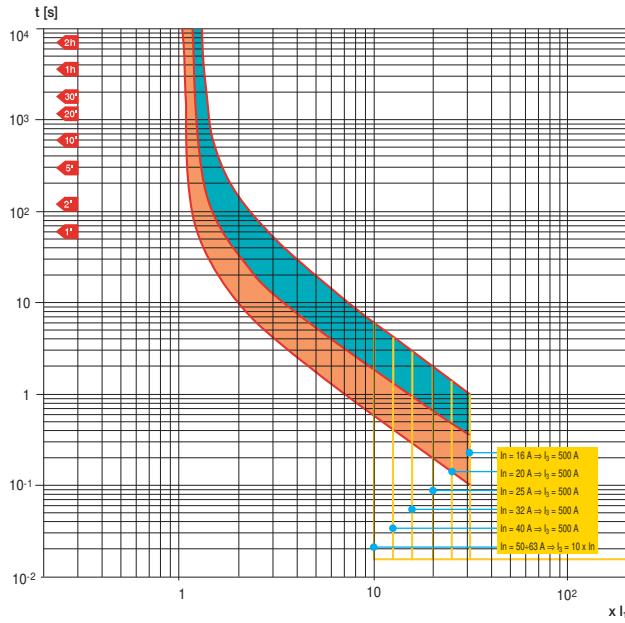


T1 160 – TMD

$I_3 = 630 \text{ A}$
 $I_n = 16 \div 63 \text{ A}$

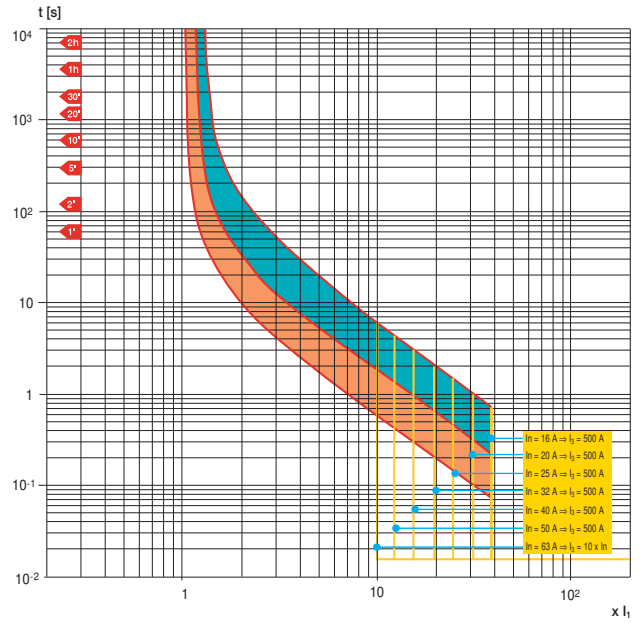


T1 160 – TMD

$I_n = 80 \div 160 \text{ A}$

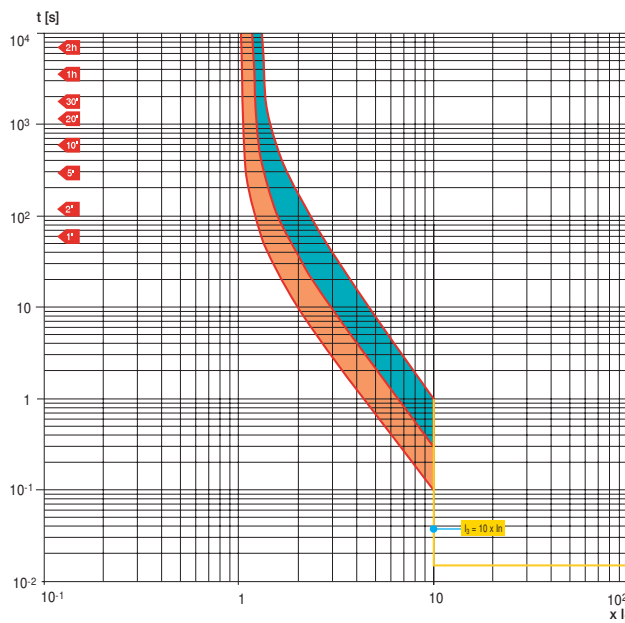

T2 160 – TMD

$I_n = 1.6 \div 100 \text{ A}$

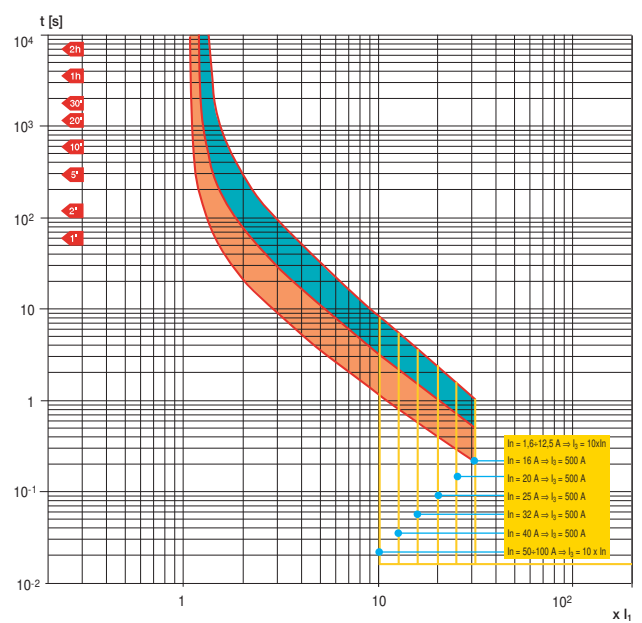


Trip curves for power distribution

Circuit-breakers with thermomagnetic trip units


T2 160 – TMD

$I_n = 125 \div 160 \text{ A}$

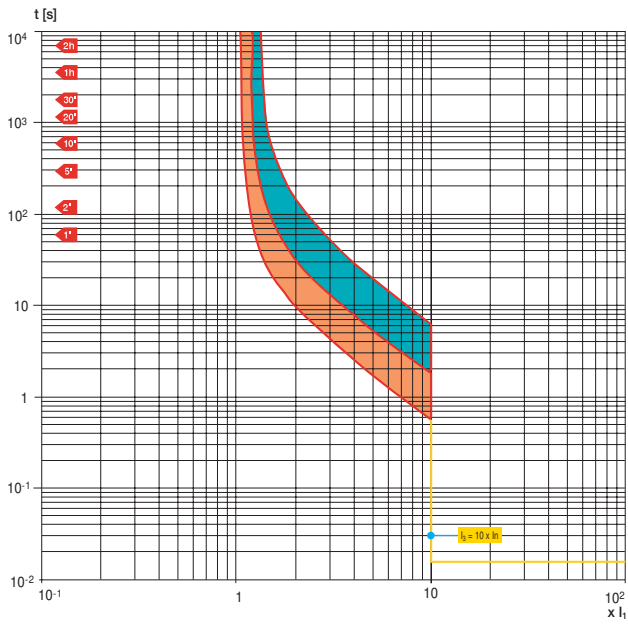

1SDC210E07P0001


T2 160 – TMG

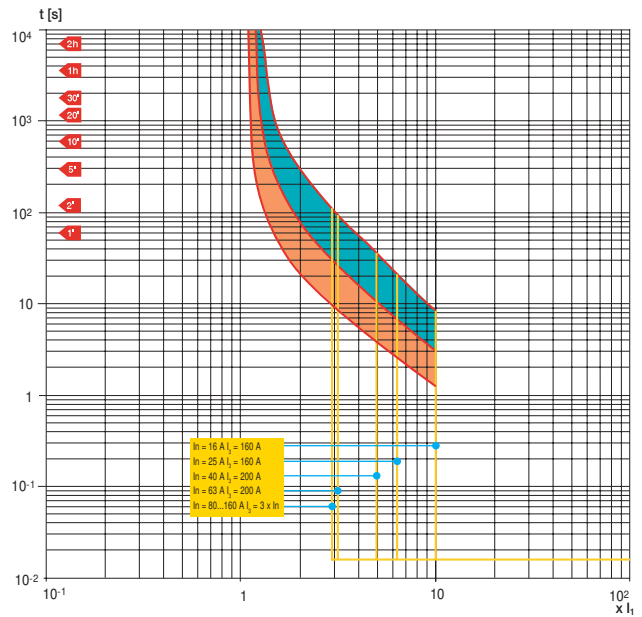

1SDC210E08P0001

T3 250 – TMD


$I_n = 63 \div 250 \text{ A}$

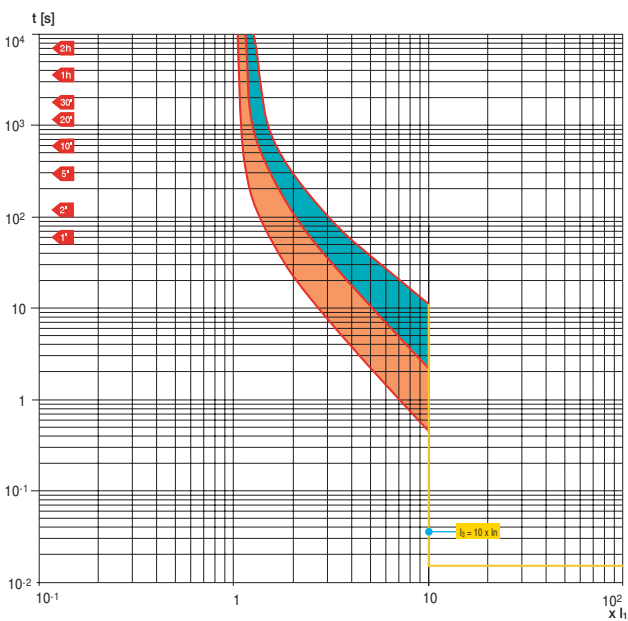

1SDC210E09P0001

T3 250 – TMG


$I_n = 63 \div 250 \text{ A}$

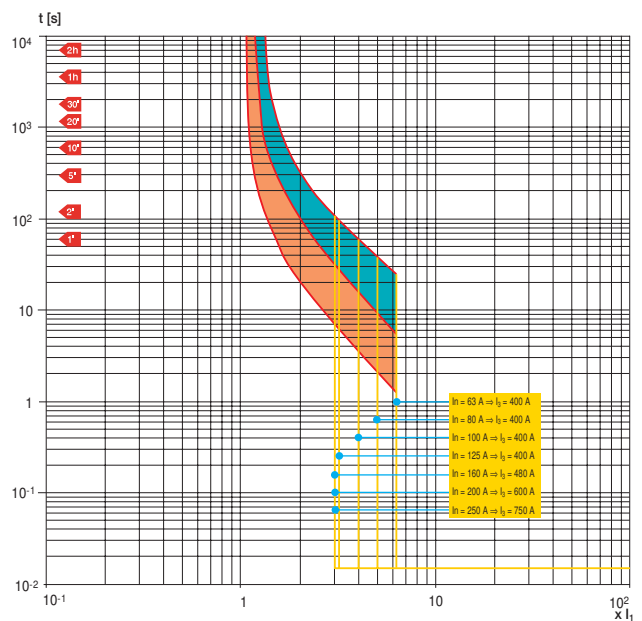

1SDC210E10P0001


T4 250 – TMD

$I_n = 20 \div 50 \text{ A}$

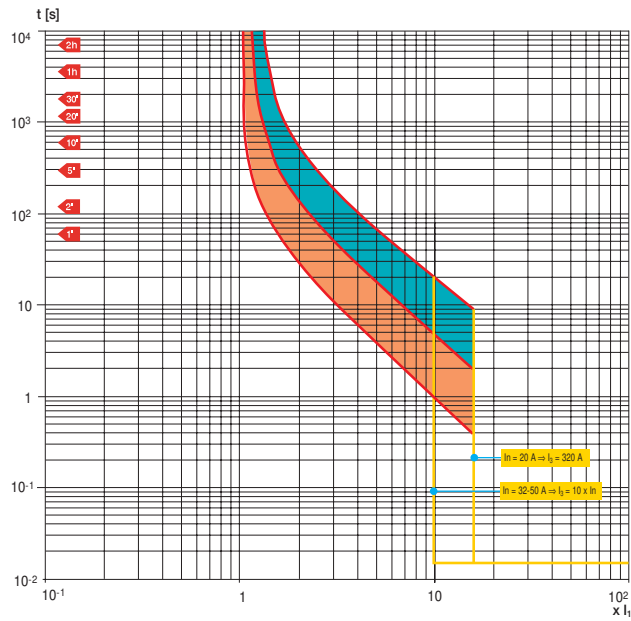


T4 250/320 – TMA

$I_n = 80 \div 250 \text{ A}$

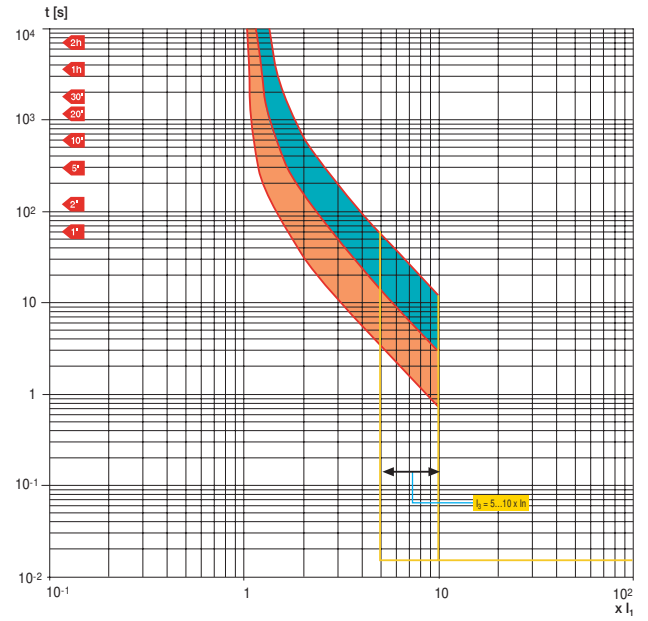


T5 400/630 – TMA

$I_n = 320 \div 500 \text{ A}$

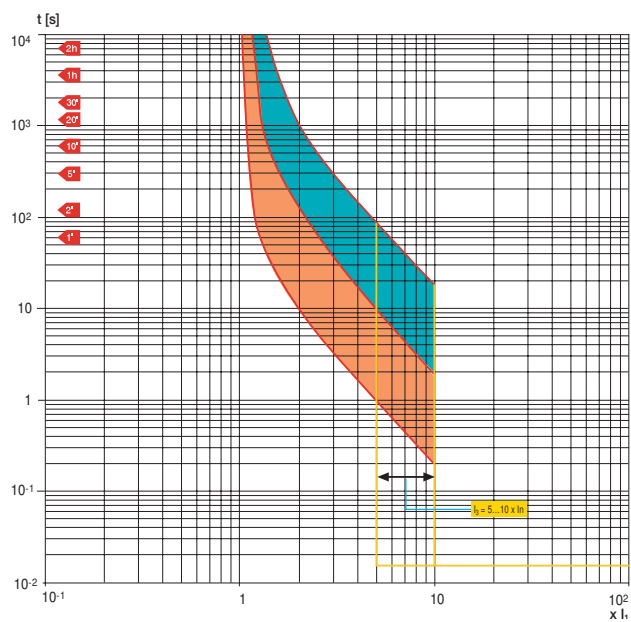

T5 400/630 – TMG

$I_n = 320 \div 500 \text{ A}$

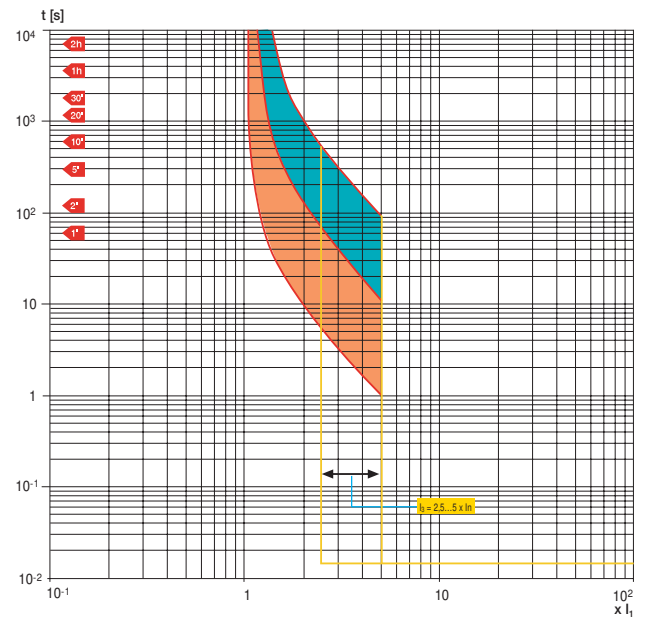


Trip curves for power distribution

Circuit-breakers with thermomagnetic trip units

T6 630 – TMA


$I_n = 630 \text{ A}$

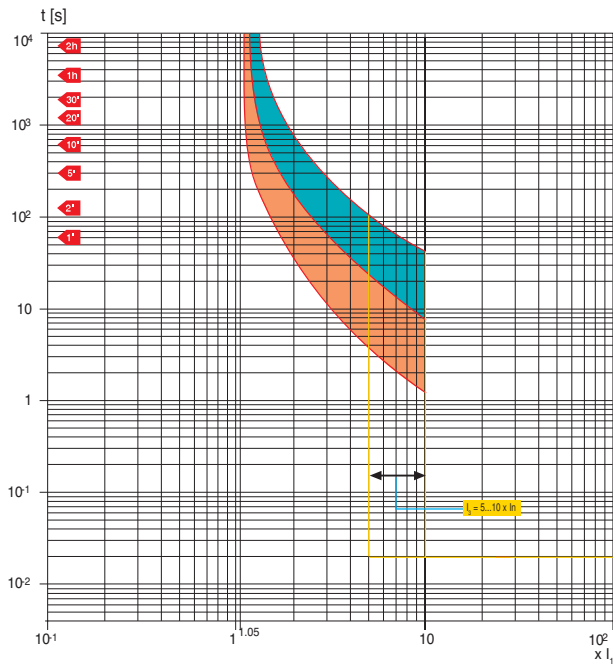

1SDC210E16F001

T6 800 – TMA

$I_n = 800 \text{ A}$

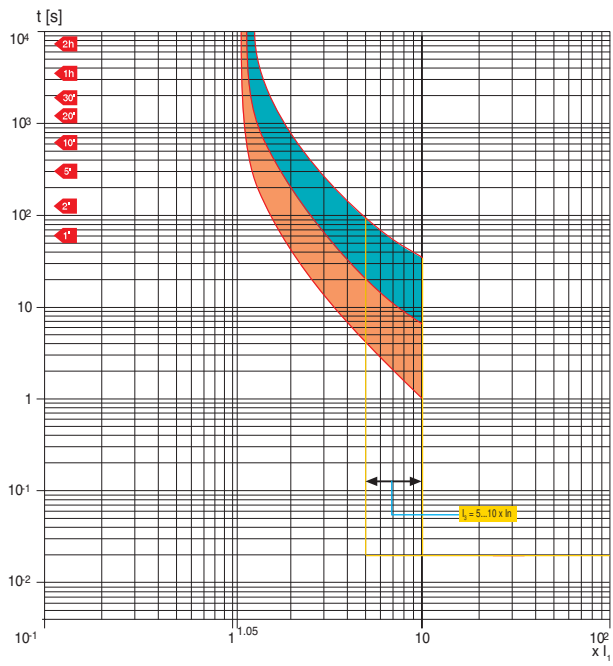


1SDC210E16F001

Trip curves for power distribution

Circuit-breakers with electronic trip units

T2 160 – PR221DS


L-I Functions

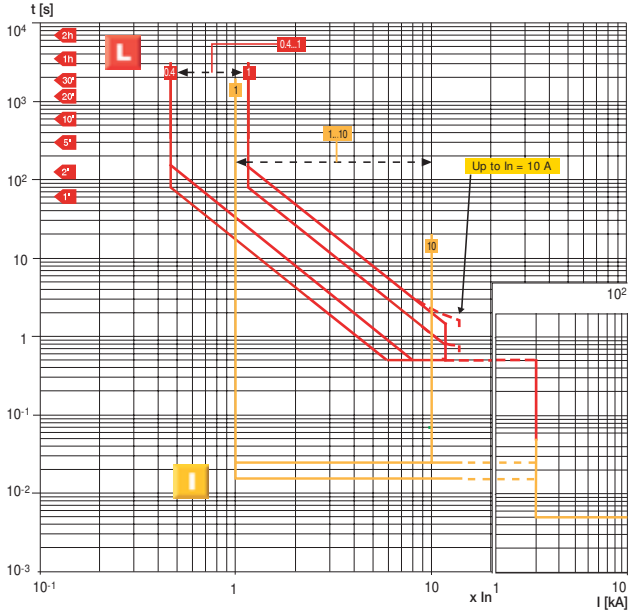

1SDC210E17P0001

T2 160 – PR221DS

L-S Functions

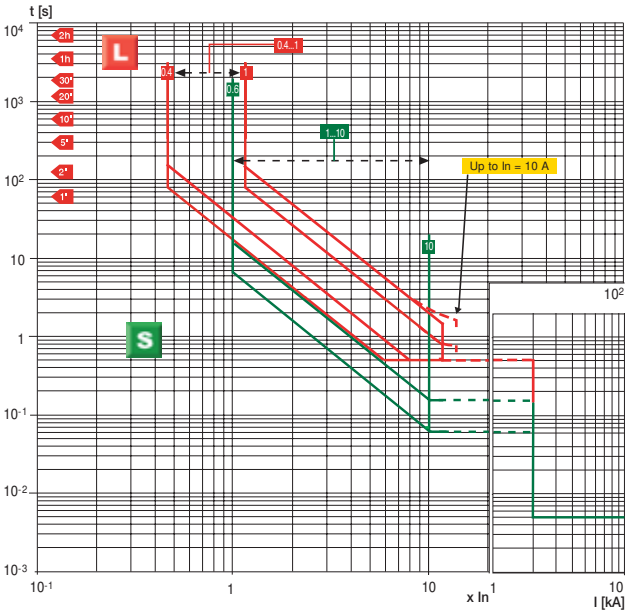


1SDC210E18P0001

T4 250/320 - T5 400/630 - T6 630/800/1000 PR221DS

L-I Functions

Note: For T4 $I_n = 320$ A, T5 $I_n = 630$ A and T6 $I_n = 1000$ A $\Rightarrow I_{max} = 8.5 \times I_n$

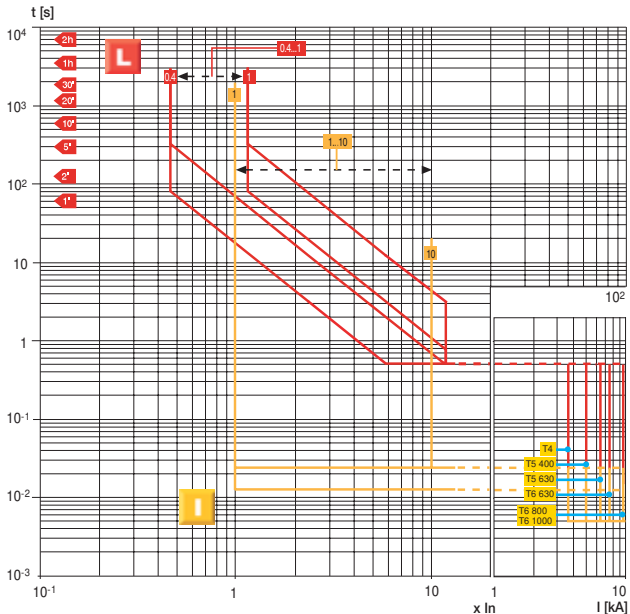


1SDC210E19P0001

T4 250/320 - T5 400/630 - T6 630/800/1000 PR221DS

L-S Functions

Note: For T4 $I_n = 320$ A, T5 $I_n = 630$ A and T6 $I_n = 1000$ A $\Rightarrow I_{max} = 8.5 \times I_n$

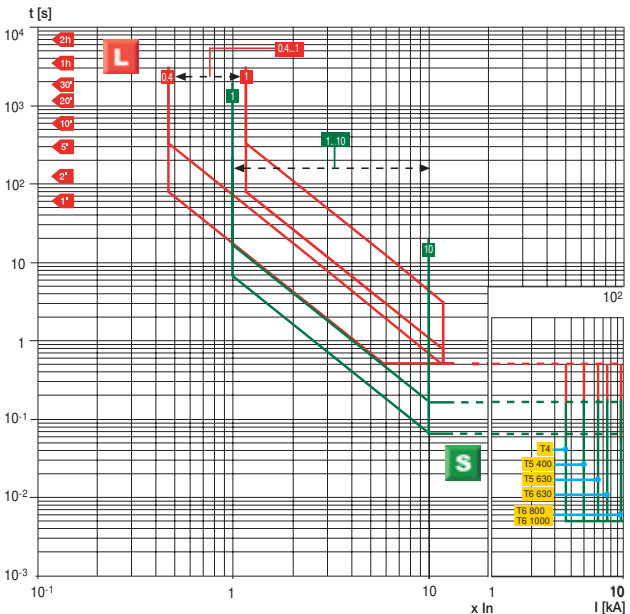

1SDC210E20P0001


Trip curves for power distribution

Circuit-breakers with electronic trip units

T4 250/320 - T5 400/630 - T6 630/800/1000 PR222DS - PR222DS/PD - PR223DS

L-S-I Functions


Note: The dotted curve of function L corresponds to the maximum delay (t_1) which can be set at $6 \times I_n$, in the case where 320 A CTs are used for T4 and 630 A for T5. For all the CT sizes $t_1 = 18$ s except with 320 A CT (T4) and 630 A CT (T5) where $t_1 = 12$ s. For T4 $I_n = 320$ A, T5 $I_n = 630$ A and T6 $I_n = 1000$ A $\Rightarrow I_{2max} = 8.8 \times I_n$, $I_{1max} = 9.5 \times I_n$.
For PR223DS the L protection function can be set to $I_1 = 0.18 \dots 1 \times I_n$.

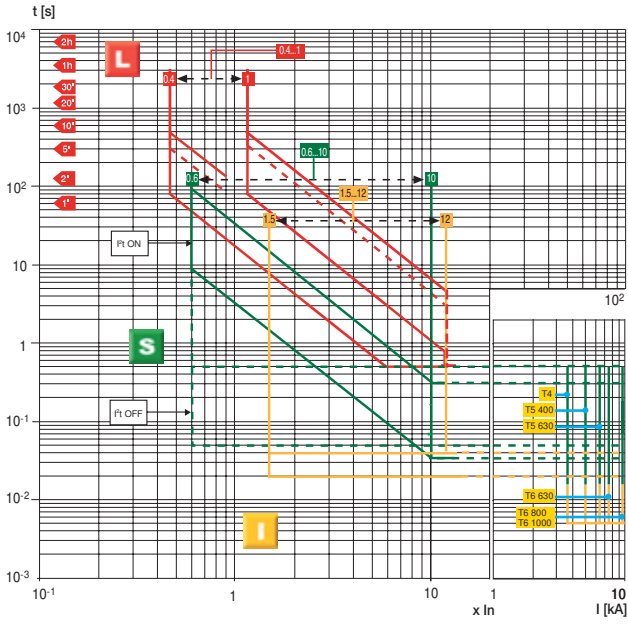

1SDC210E21F0001

T4 250/320 - T5 400/630 - T6 630/800/1000 PR222DS - PR222DS/PD - PR223DS


G Function

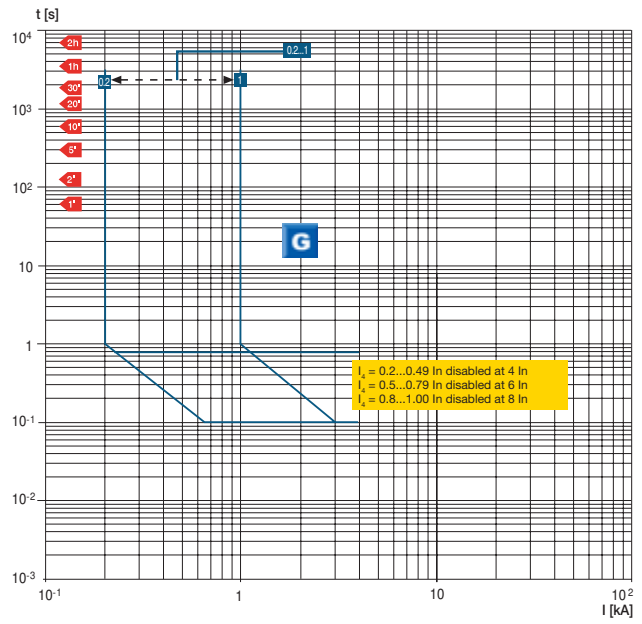

1SDC210E21F0001

T7 800/1000/1250/1600 – PR231/P


L-I Functions

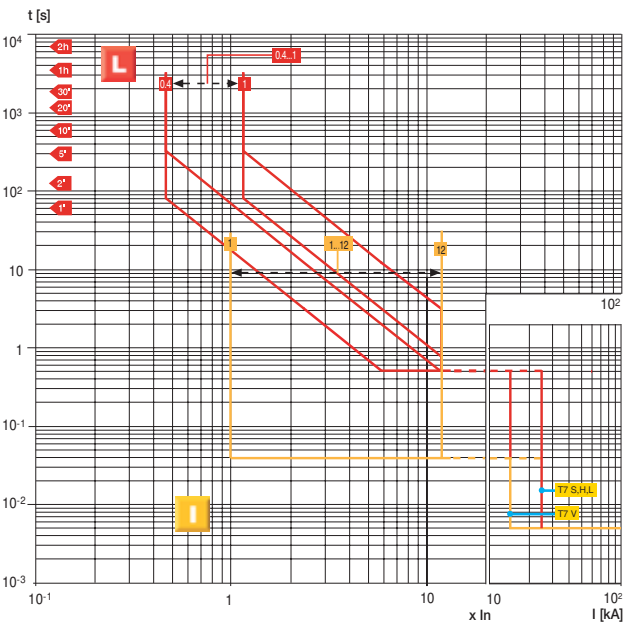

1SDC210P28F0001

T7 800/1000/1250/1600 – PR231/P


L-S Functions

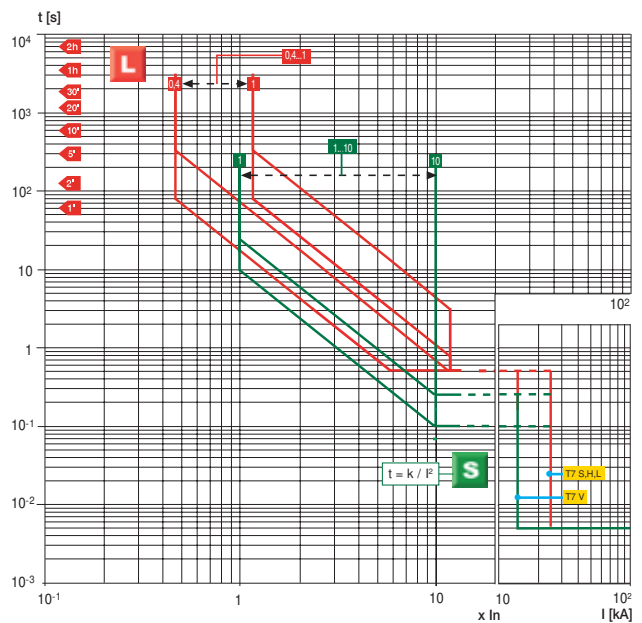

1SDC210P28F0001

T7 800/1000/1250/1600 – PR232/P


L-S-I Functions

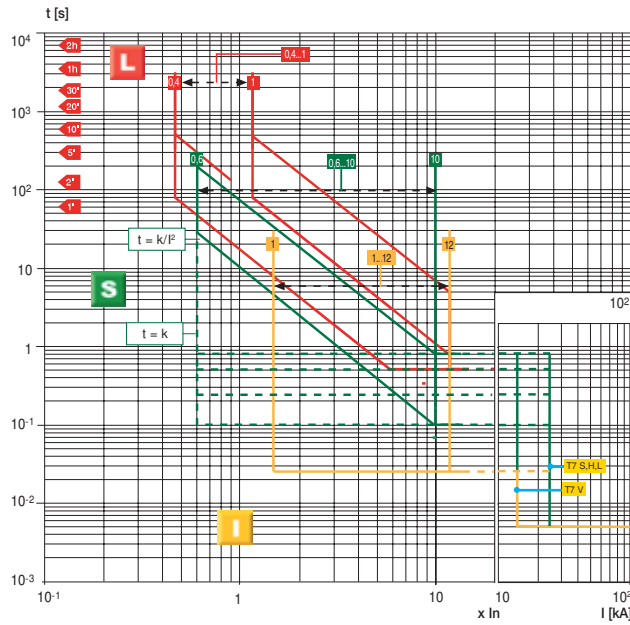

T7 800/1000/1250/1600 – PR331/P


L-S-I Functions

Note: For T7 In = 1250 A, 1600 A ⇒ I_{max} = 12 x In

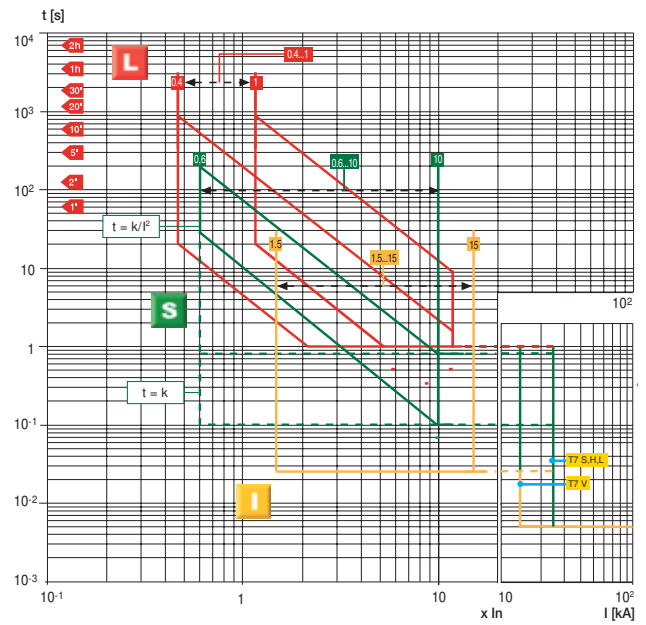

T7 800/1000/1250/1600 – PR331/P


G Function

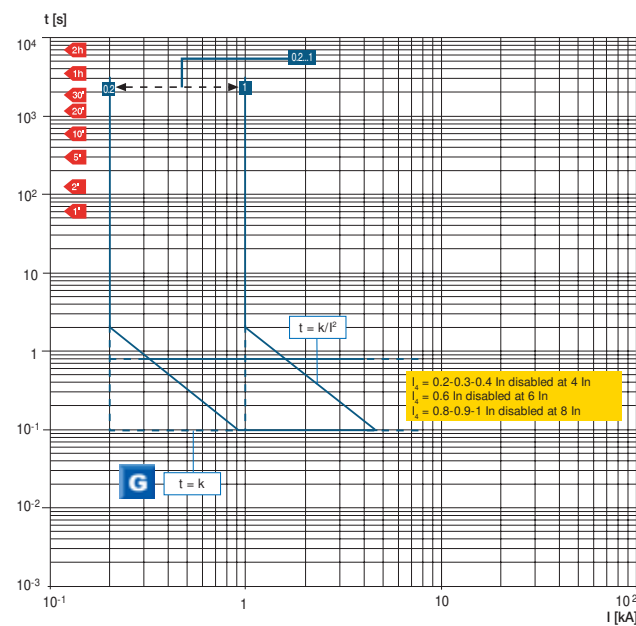

T7 800/1000/1250/1600 – PR332/P

L-I Functions

Note: For T7 In = 1250 A, 1600 A ⇒ I_{max} = 12 x In

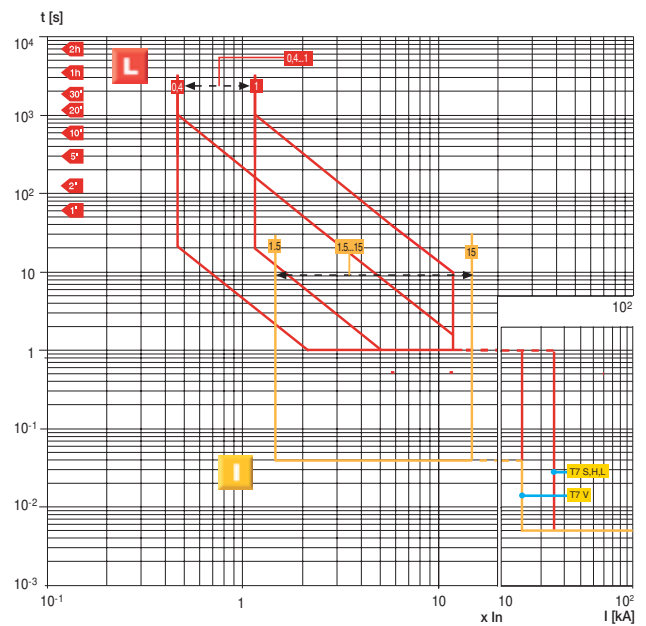


Trip curves for power distribution

Circuit-breakers with electronic trip units

T7 800/1000/1250/1600 – PR332/P

L-S-I Functions


Note: For T7 $I_n = 1250\text{ A}$, $1600\text{ A} \Rightarrow I_{3max} = 12 \times I_n$

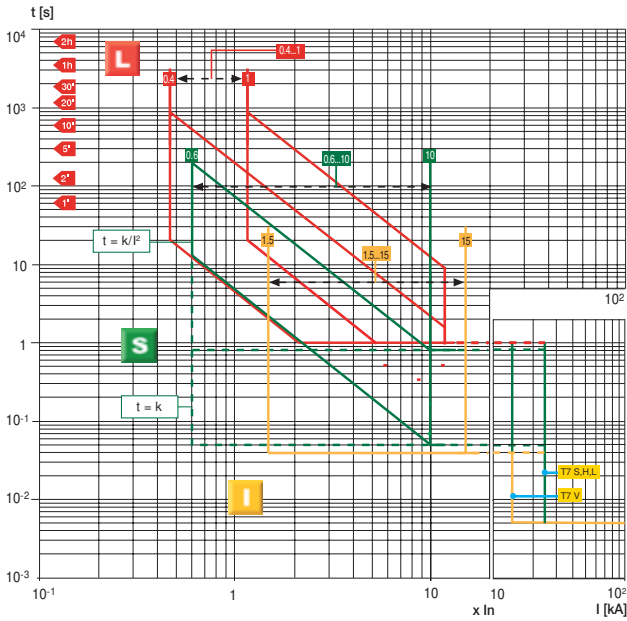

1SDC210F36R0001

T7 800/1000/1250/1600 – PR332/P


G Function

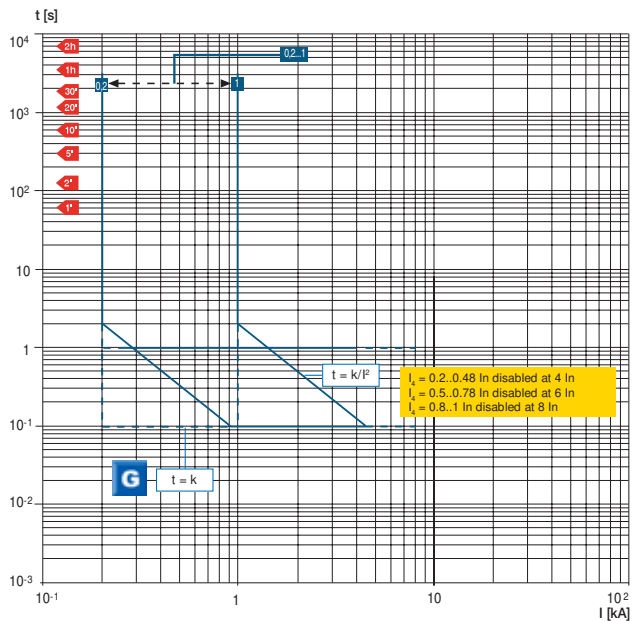

1SDC210F36R0001

T7 800/1000/1250/1600 – PR332/P


Rc Function

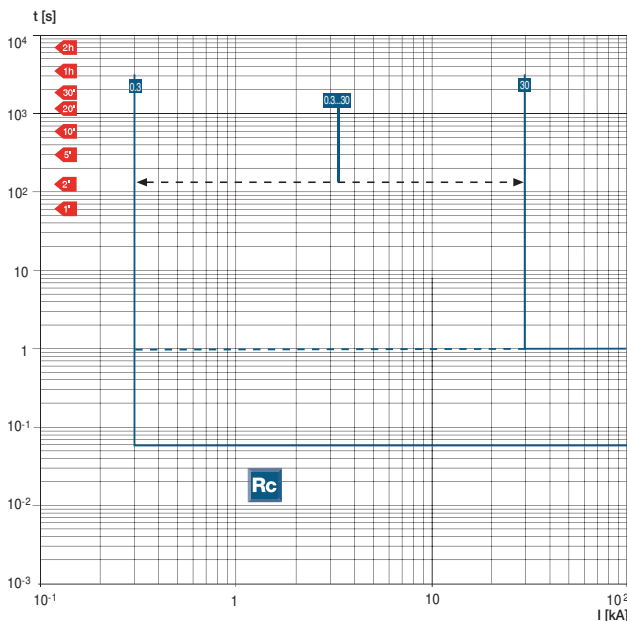

1SDC210F85R0001

T7 800/1000/1250/1600 – PR332/P


L Function according to IEC 60255-3

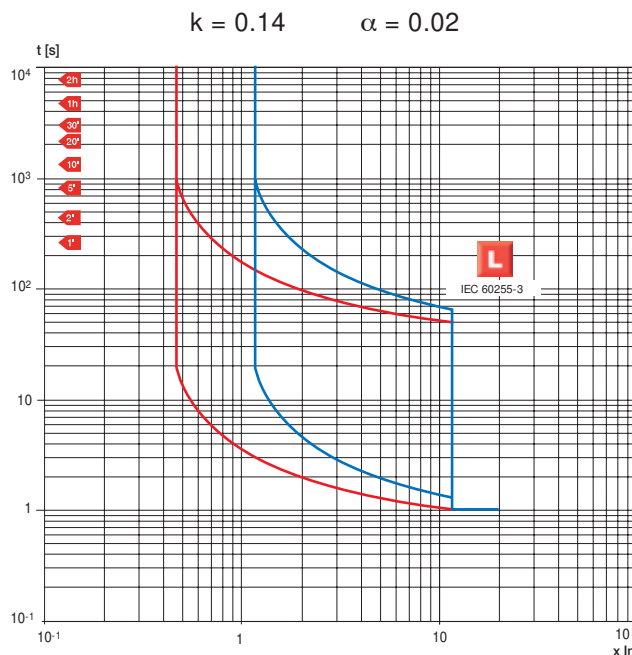

1SDC210F37R0001


T7 800/1000/1250/1600 – PR332/P

L Function according to IEC 60255-3

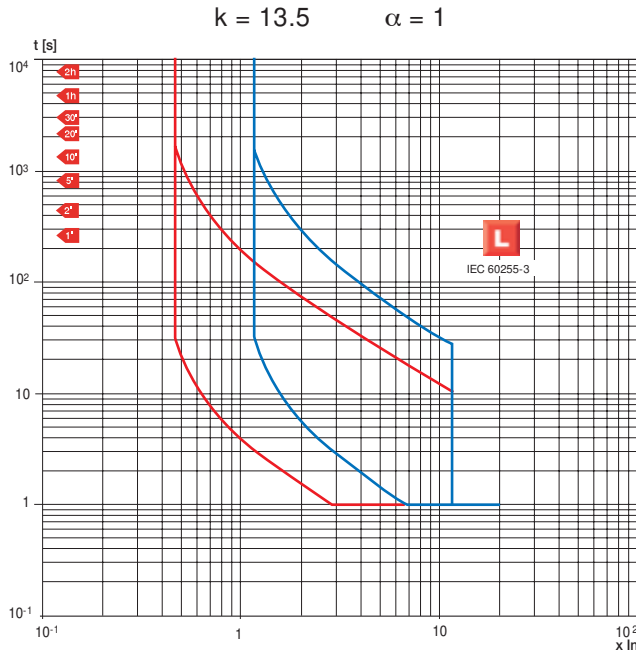


T7 800/1000/1250/1600 – PR332/P

L Function according to IEC 60255-3

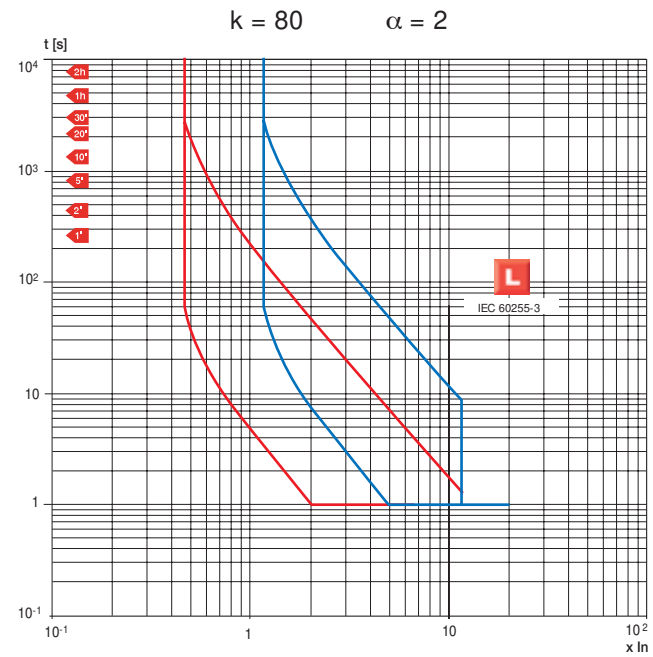

T7 800/1000/1250/1600 – PR332/P


U Function

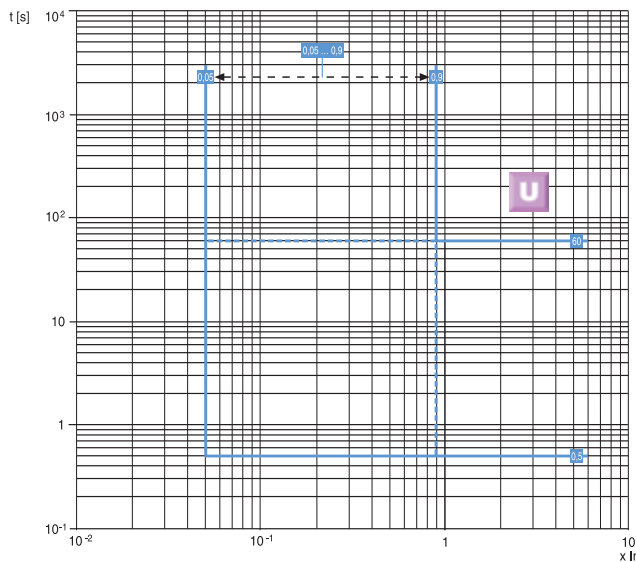

T7 800/1000/1250/1600

PR332/P with PR330/V

UV Function

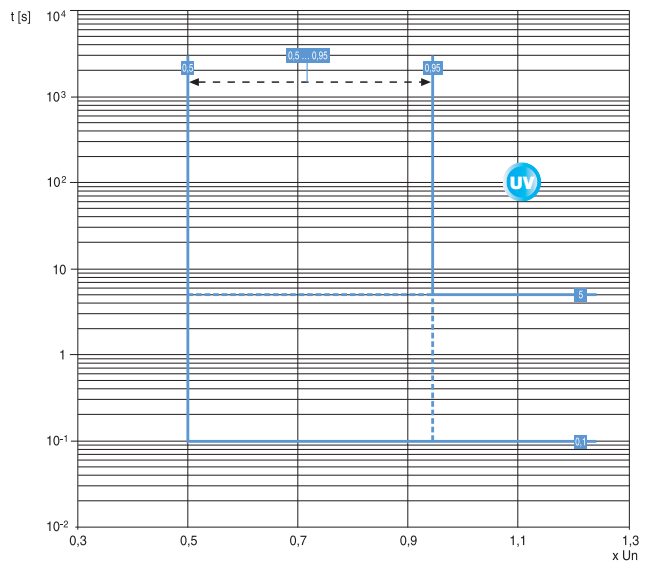


Trip curves for power distribution

Circuit-breakers with electronic trip units

T7 800/1000/1250/1600

PR332/P with PR330/V

OV Function

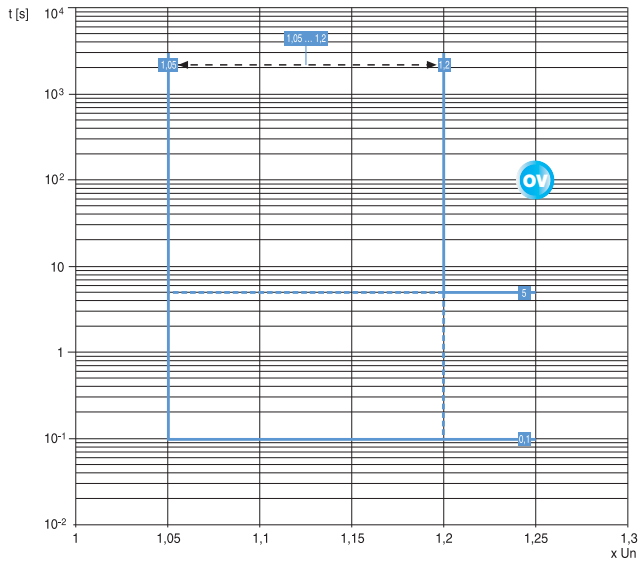


1SDC210F50R0001

T7 800/1000/1250/1600

PR332/P with PR330/V

RV Function

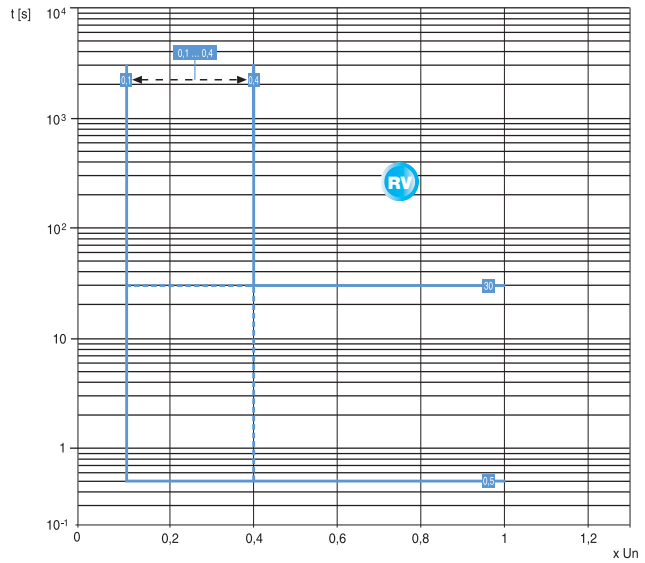


1SDC210F51R0001

T7 800/1000/1250/1600

PR332/P with PR330/V

RP Function

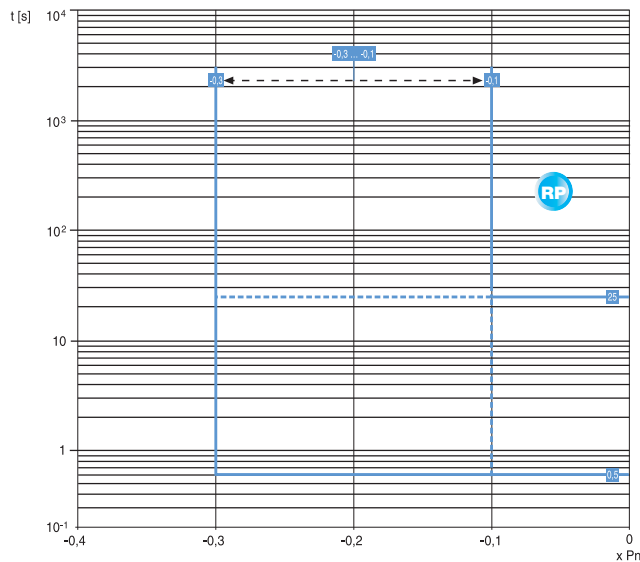

1SDC210F52R0001

4


Trip curves for zone selectivity

Circuit-breakers with PR223EF trip unit

T4L 250/320 - T5L 400/630 - T6L 630/800/1000 PR223EF - Vaux ON

L-S-EF Functions


Note: The dotted curve of function L corresponds to the maximum delay (t_1) which can be set at $6 \times I_n$, in the case where 320 A CTs are used for T4 and 630 A for T5. For all the CT sizes $t_1 = 18$ s except with 320 A CT (T4) and 630 A CT (T5) where $t_1 = 12$ s. For T4 $I_n = 320$ A, T5 $I_n = 630$ A and T6 $I_n = 1000$ A $\Rightarrow I_{p,max} = 8.8 \times I_n$ and $I_{s,max} = 9.5 \times I_n$.

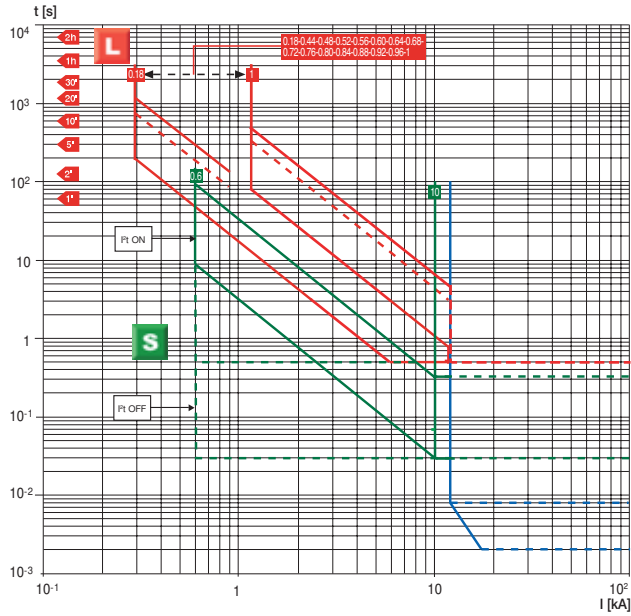

T4L 250/320 - T5L 400/630 - T6L 630/800/1000 PR223EF - Vaux OFF


L-S-I Functions

Note: The dotted curve of function L corresponds to the maximum delay (t_1) which can be set at $6 \times I_n$, in the case where 320 A CTs are used for T4 and 630 A for T5. For all the CT sizes $t_1 = 18$ s except with 320 A CT (T4) and 630 A CT (T5) where $t_1 = 12$ s. For T4 $I_n = 320$ A, T5 $I_n = 630$ A and T6 $I_n = 1000$ A $\Rightarrow I_{p,max} = 8.8 \times I_n$ and $I_{s,max} = 9.5 \times I_n$.

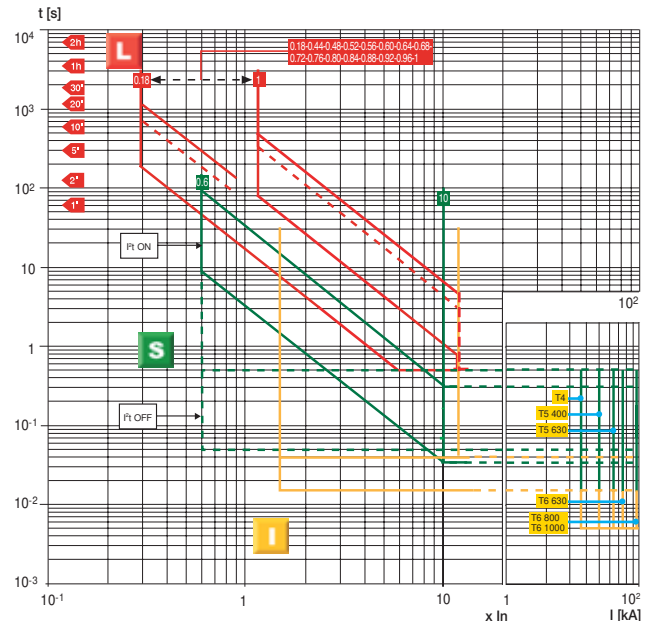

T4L 250/320 - T5L 400/630 - T6L 630/800/1000 PR223EF - Vaux ON/OFF

G Function

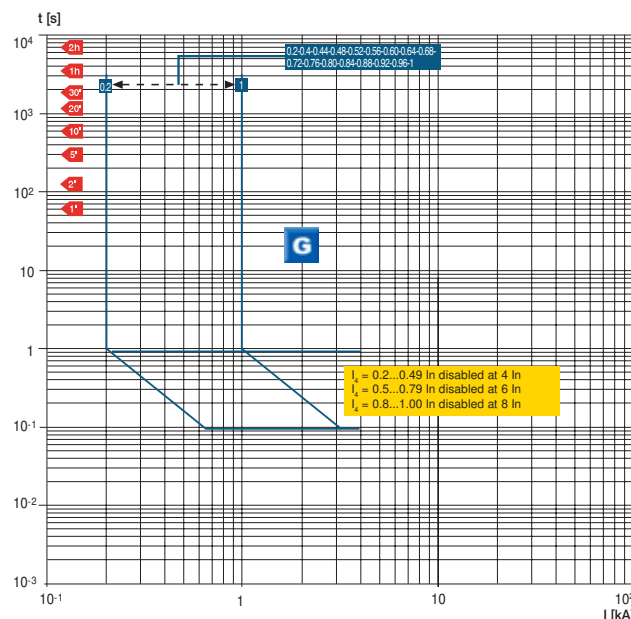


Trip curves for motor protection

Circuit-breakers with magnetic only trip units

T2 160 – MF


$$I_3 = 13 \times I_n$$

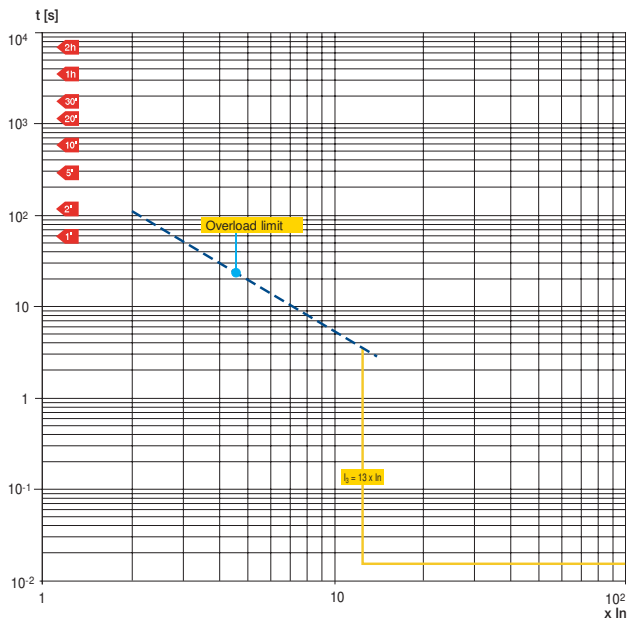

1SDC210227F0001

T2 160 - T3 250 – MA


$$I_3 = 6 \dots 12 \times I_n$$

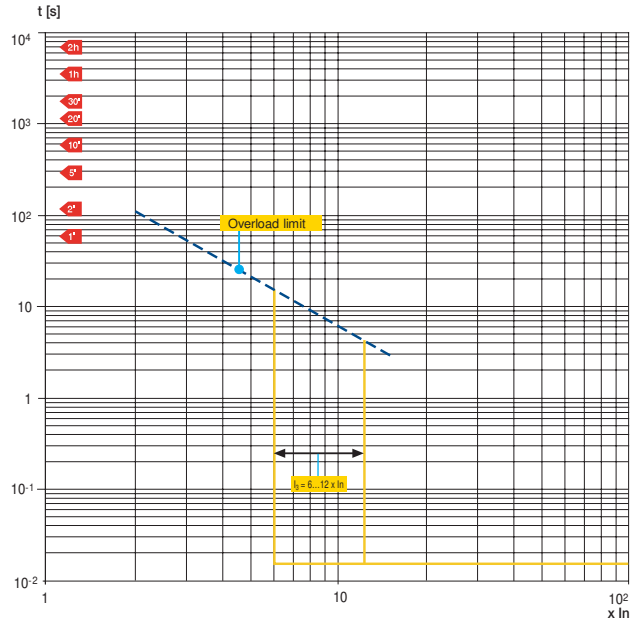

1SDC210228F0001

T4 250 – MA

$$I_3 = 6 \dots 14 \times I_n$$

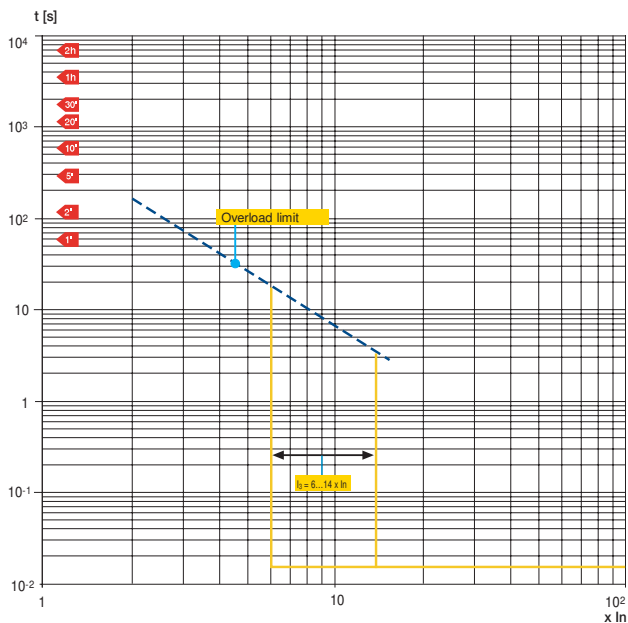


1SDC210229F0001

Trip curves for motor protection

Circuit-breakers with PR221DS-I and PR231/P electronic trip unit


T2 160 – PR221DS-I

I Function

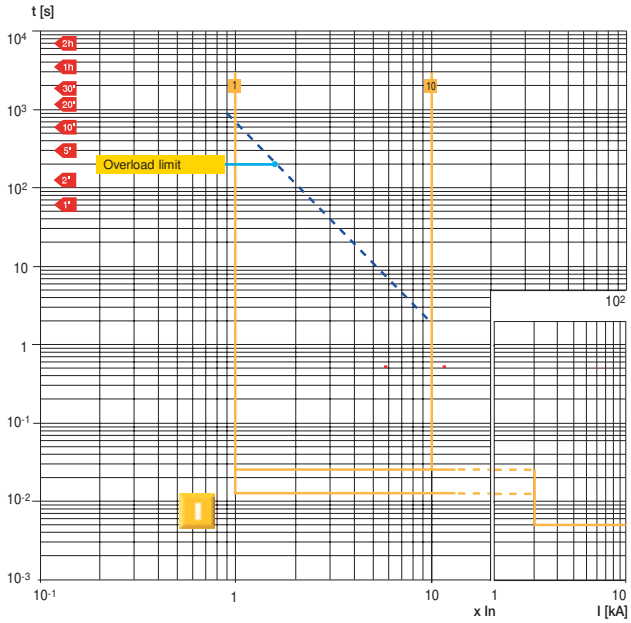


T4 250/320 - T5 400/630 - T6 630/800/1000 PR221DS-I

I Function

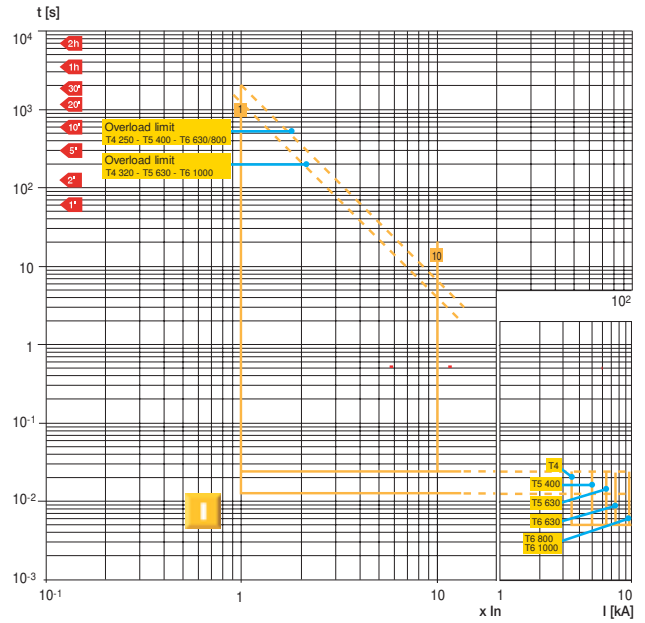

T7 800/1000/1250 – PR231/P-I

I Function

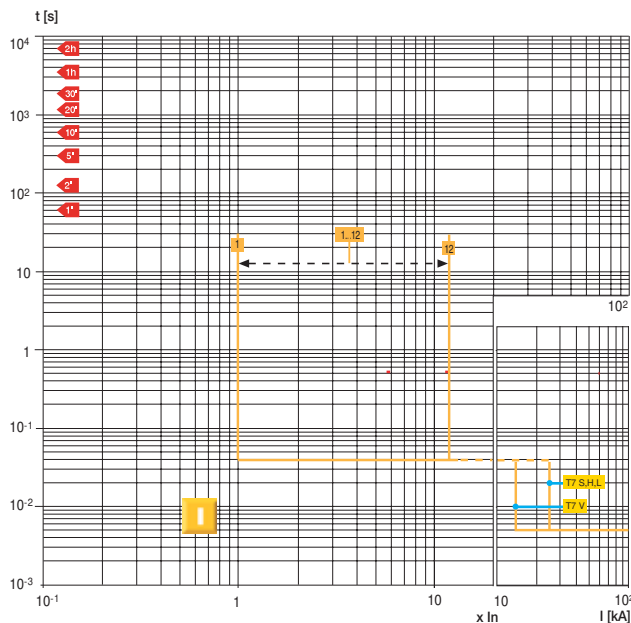

Trip curves for motor protection

Use of the trip curves of circuit-breakers with PR222MP electronic trip unit

For correct parameter setting of the SACE PR222MP electronic trip unit, it may be useful to compare the overall circuit-breaker curve with the motor starting curve.

For this purpose, with the protection function graphics shown on the following pages, it is possible to draw the overall curve required for the circuit-breaker fitted with SACE PR222MP trip unit simply and immediately.

N.B. For function L, as for all the other functions, make sure you place a glossy tracing sheet over the curve so that the times on the axis of the co-ordinates coincide.

Function L (cannot be excluded)

Protection against overload

To protect the motor against any overloads, as a first step it is necessary to adjust function L to a current I_1 higher than or equal to the rated current of the motor I_e : $I_1 \geq I_e$.

For example, if $I_e = 135$ A, an T4 250 circuit-breaker can be selected with $I_n = 160$ A and the following adjustment carried out: $I_1 = 0.85 \times I_n = 136$ A.

The second step is to select the trip class according to the motor starting time. For a motor with a start-up overload of 6 seconds, class 10 can be selected, with a trip time of 8s at $7.2 \times I_1$.

To trace the curve correctly on the glossy sheet, according to I/I_n , simply place the glossy sheet over the graph of function L so that $I/I_n = 0.85$ (on the glossy sheet) corresponds to $I/I_1 = 1$ (on the graph) and draw the curve relative to class 10.

Function R (can be excluded)

Protection against rotor blockage

Protection against rotor blockage can be set both with regard to the trip current $I_5 = 3 \dots 10 \times I_1$ (in this case $I_5 = 3 \dots 10 \times 0.85 \times 160$), and with regard to the trip time t_5 .

To trace the curve correctly on the glossy sheet, simply place the glossy sheet over the graph of function R so that $I/I_n = I_1/I_n$ (on the glossy sheet) corresponds to $I/I_1 = 1$ (on the graph). In this case $I/I_n = I_1/I_n = 0.85$, and draw the desired curve.

Function I (cannot be excluded)

Protection against short-circuit

This protection function against short-circuit recognises whether the motor is in the starting phase, thereby avoiding unwarranted trips; the trip threshold can be set from $6 \times I_n$ to $13 \times I_n$.

To trace the curve correctly on the glossy sheet, simply place the glossy sheet over the graph of function I so that $I/I_n = 1$ (on the glossy sheet) corresponds to $I/I_n = 1$ (on the graph) and draw the desired curve.


Function U (can be excluded)

Protection against loss and/or unbalance of a phase

Protection against loss or unbalance of a phase, if set to ON, intervenes when one or two phases have a current lower than $0.4 \times I_1$ ($0.4 \times 0.85 \times I_n = 0.4 \times 0.85 \times 160$ A = 54.4 A in this case).

To trace the curve correctly on the glossy sheet, simply place the glossy sheet over the graph of function U so that $I/I_n = I_1/I_n$ (on the glossy sheet) corresponds to $I/I_1 = 1$ (on the graph). In this case $I/I_n = I_1/I_n = 0.85$, and draw the desired curve.

Characteristic operating curve of an asynchronous motor

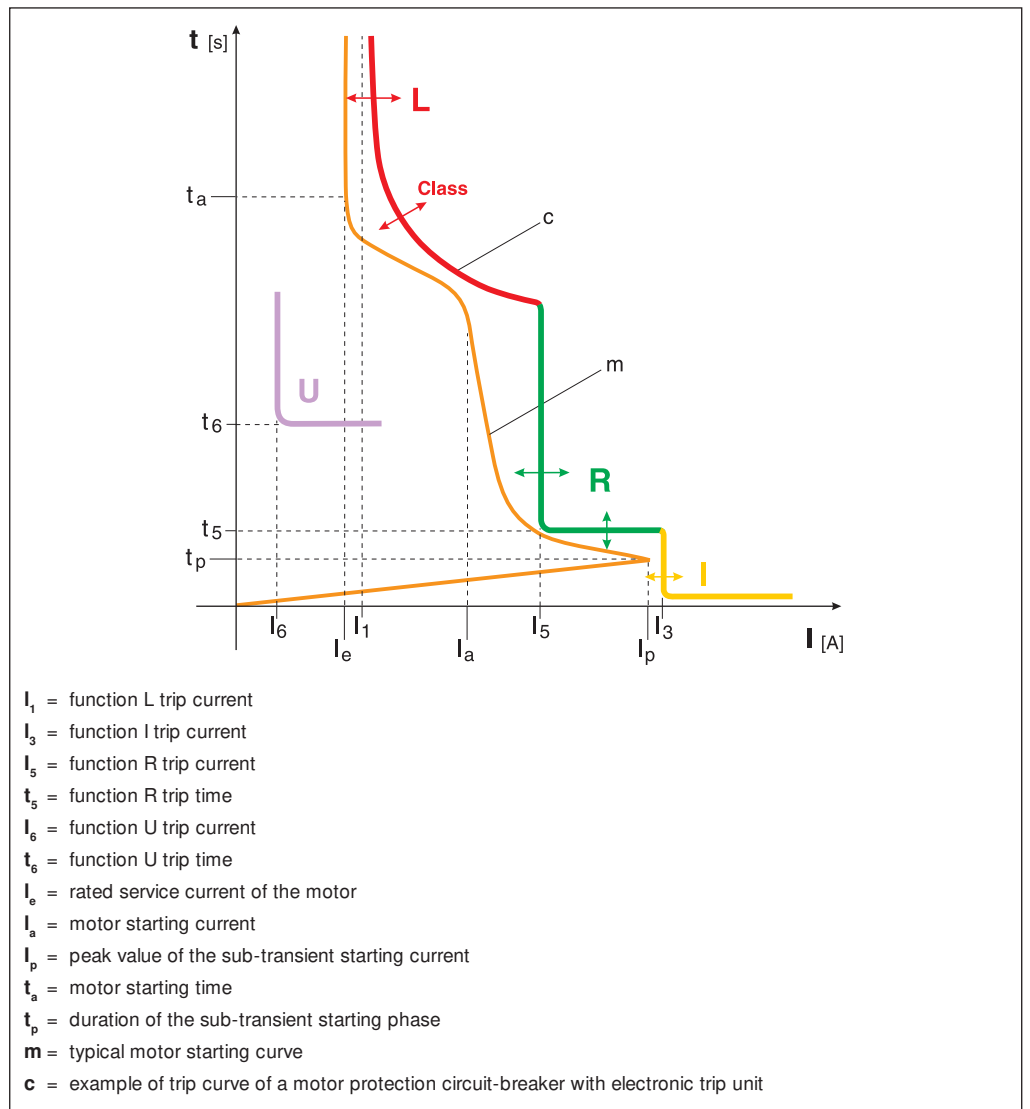


Trip curves for motor protection

Circuit-breakers with PR222MP electronic trip unit

T4 250 - T5 400 - T6 800 – PR222MP


L Function (hot and cold trip)

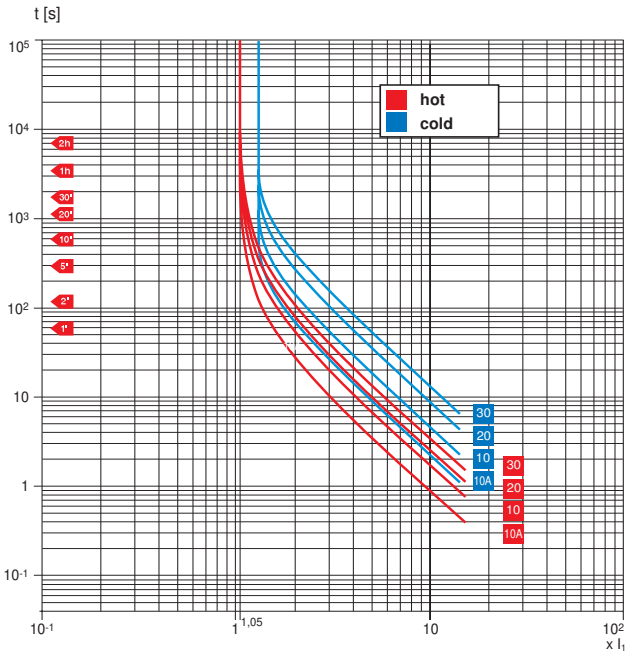

1SDC210E33F0001

T4 250 - T5 400 - T6 800 – PR222MP


L Function (hot trip with 1 or 2 phases supplied)

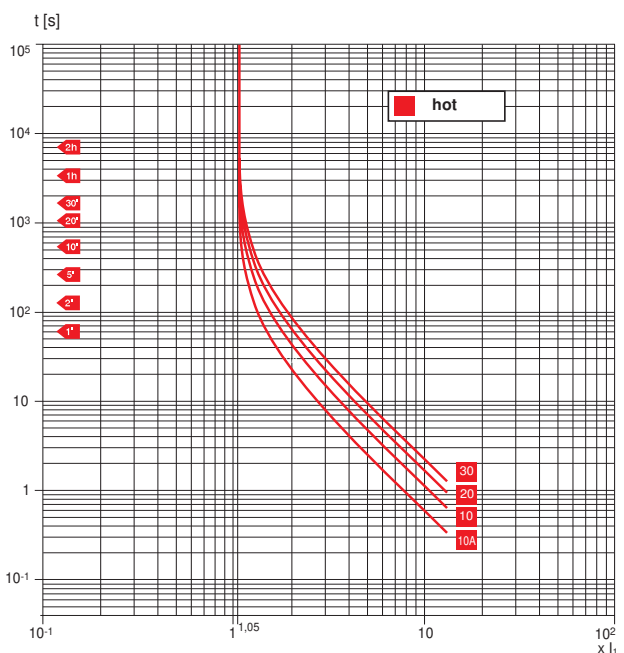

1SDC210E34F0001

T4 250 - T5 400 - T6 800 – PR222MP


R-U Functions

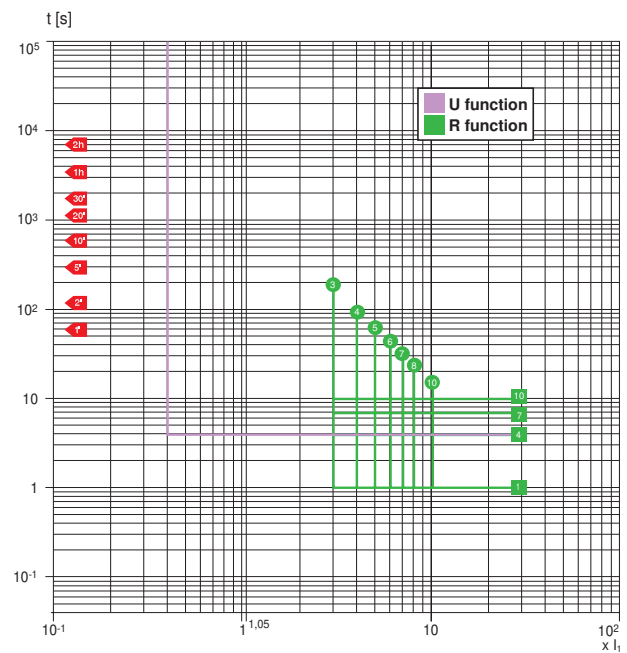

1SDC210E33F0001





T4 250 - T5 400 - T6 800 – PR222MP

I Function

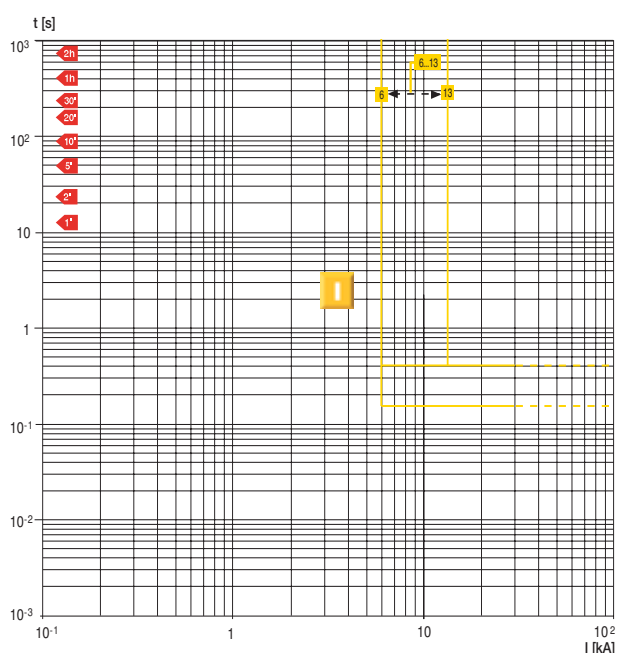

1SDC210E36F0001


Specific let-through energy curves

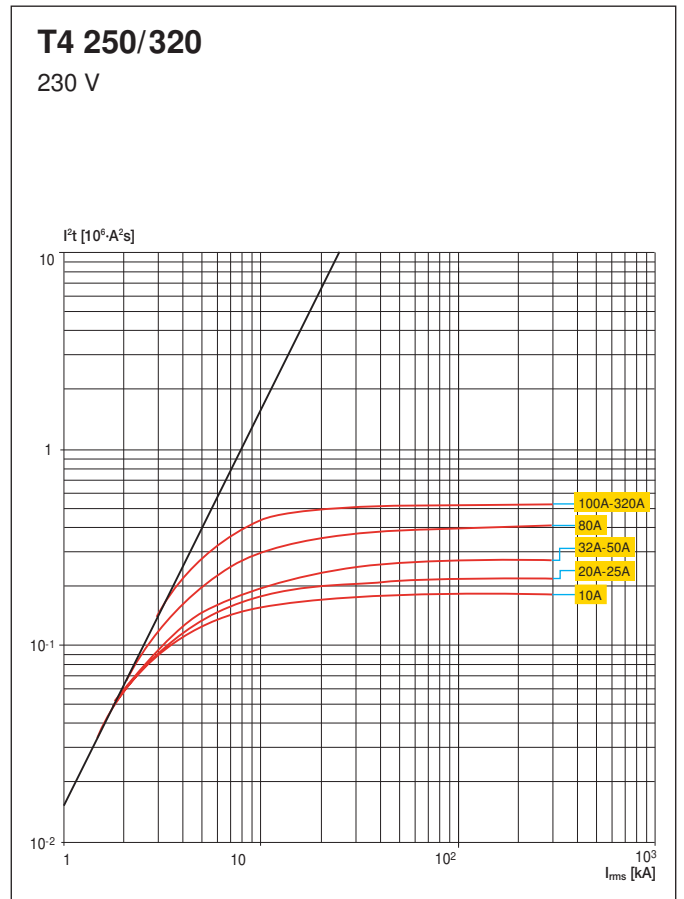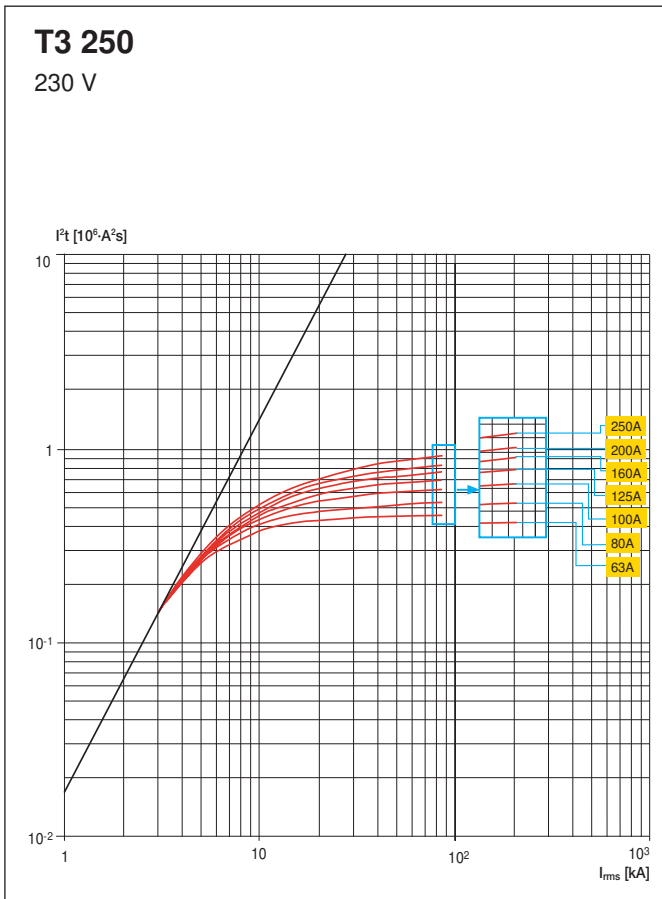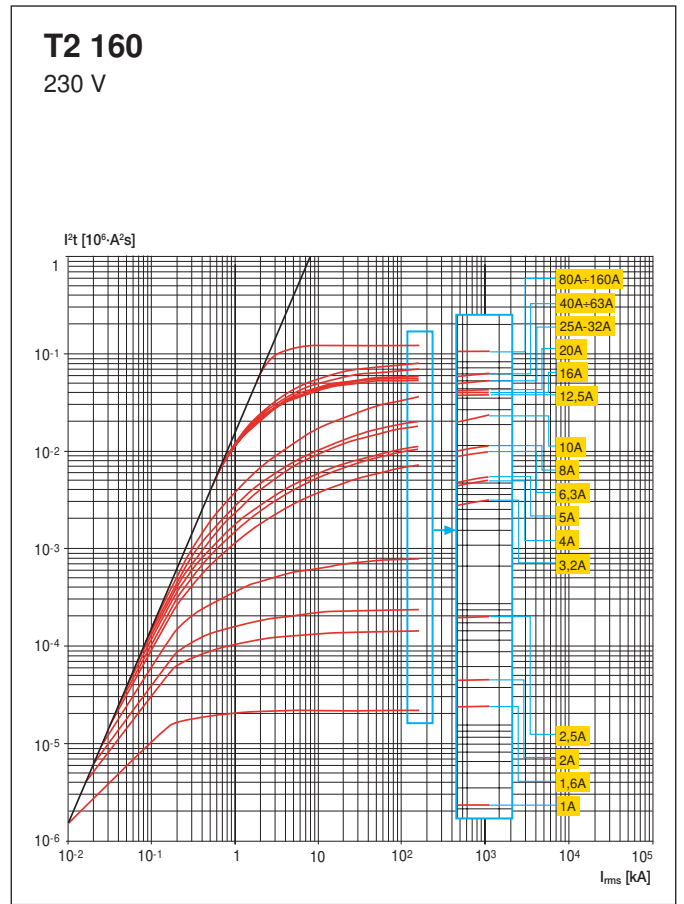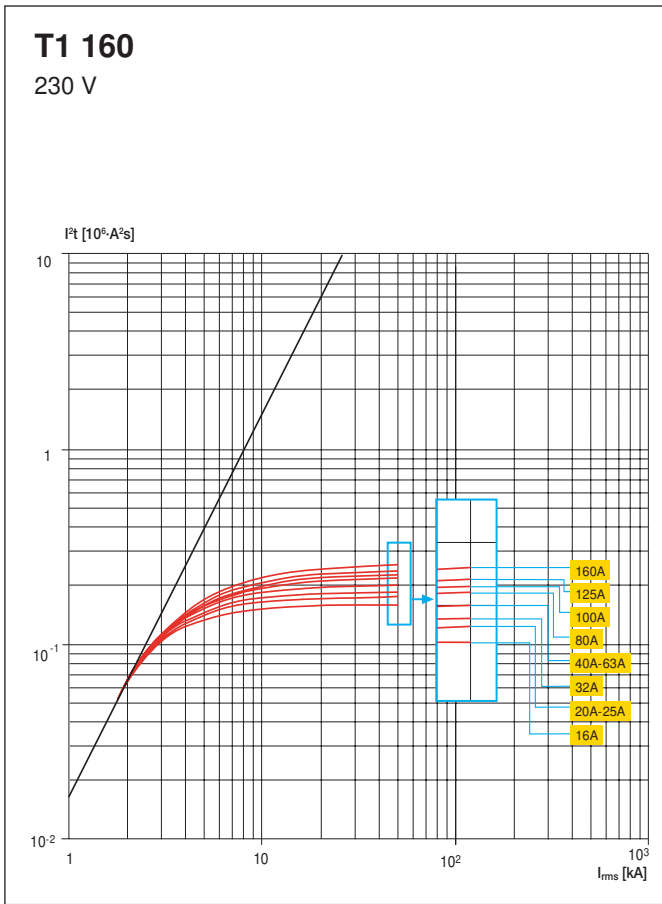

Specific let-through energy curves

T5 400/630


230 V

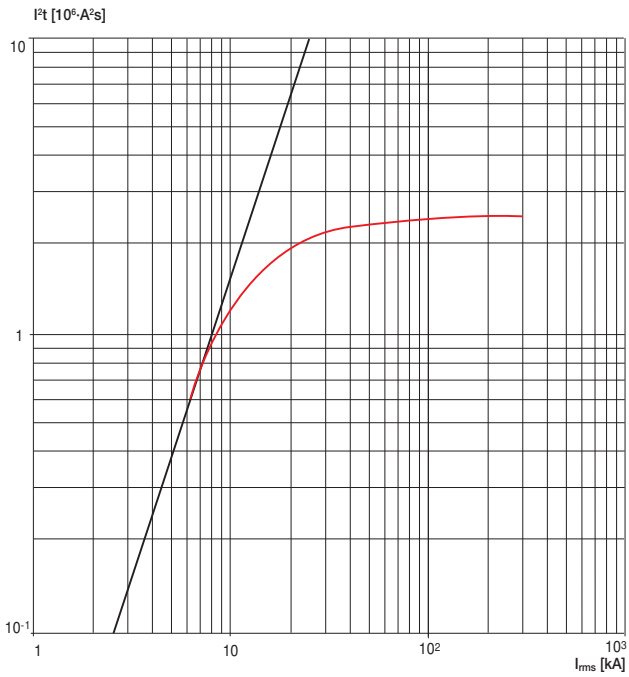

1SDC210641F0001

T6 630/800/1000


230 V

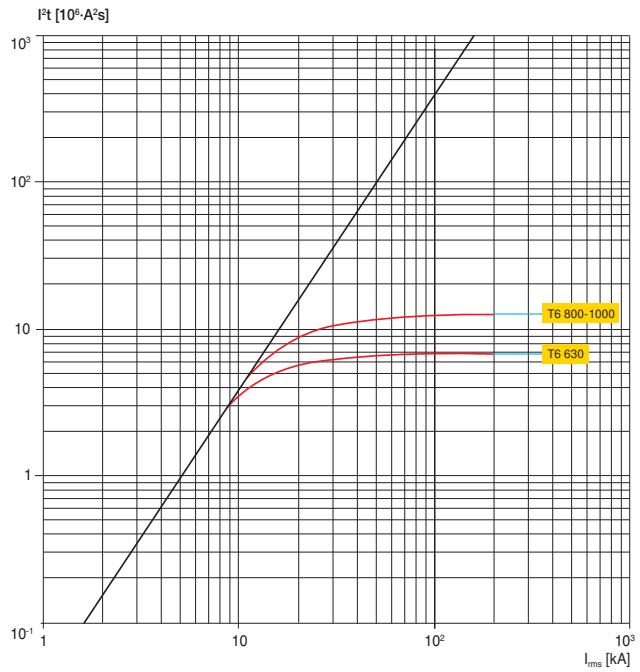

1SDC210642F0001

T7 800/1000/1250/1600

230 V

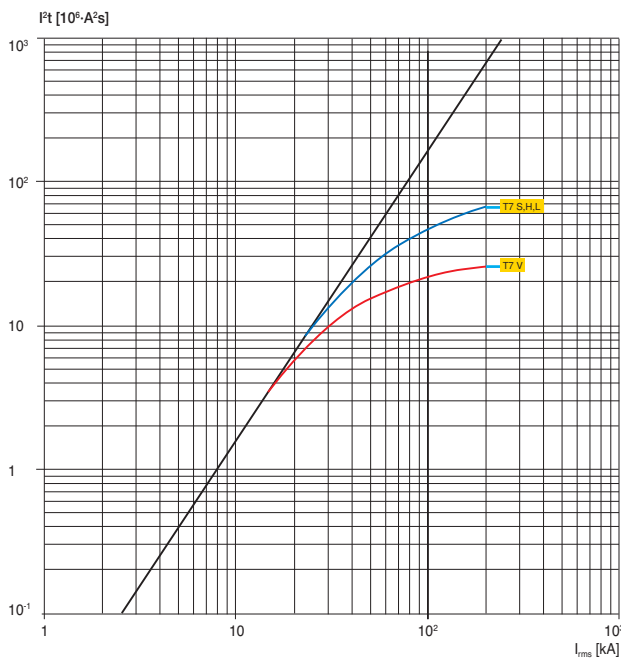


1SDC210740R0001

4

T1 160


400-440 V

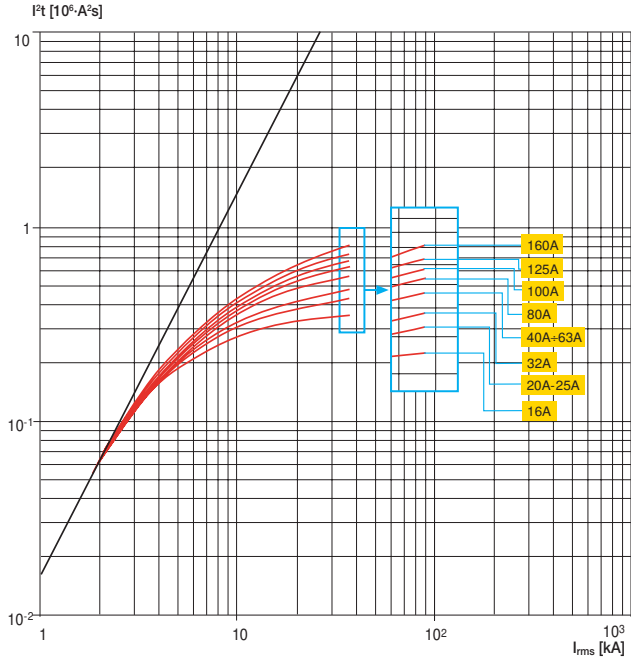

1SDC210E43F0001

T2 160


400-440 V

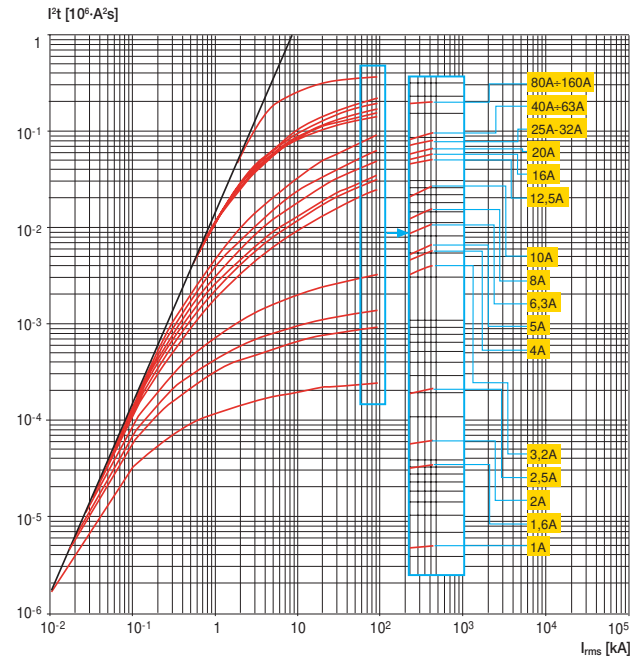

1SDC210E44F0001

T3 250


400-440 V

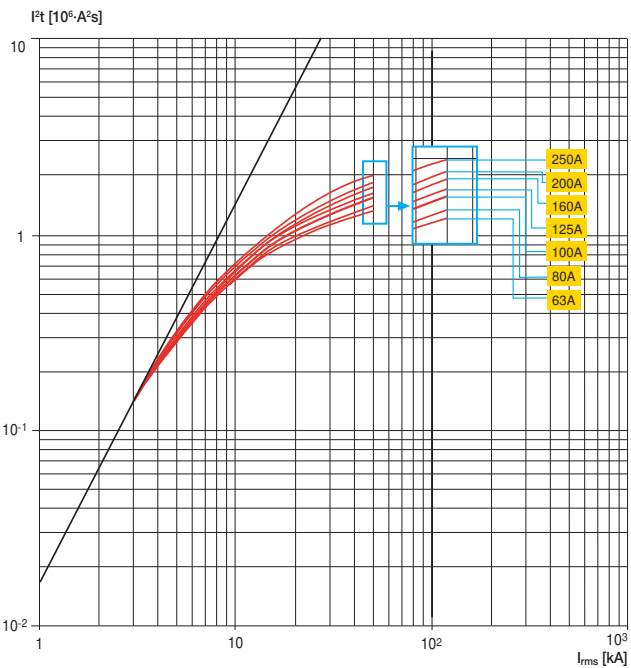

1SDC210E45F0001

T4 250/320

400-440 V

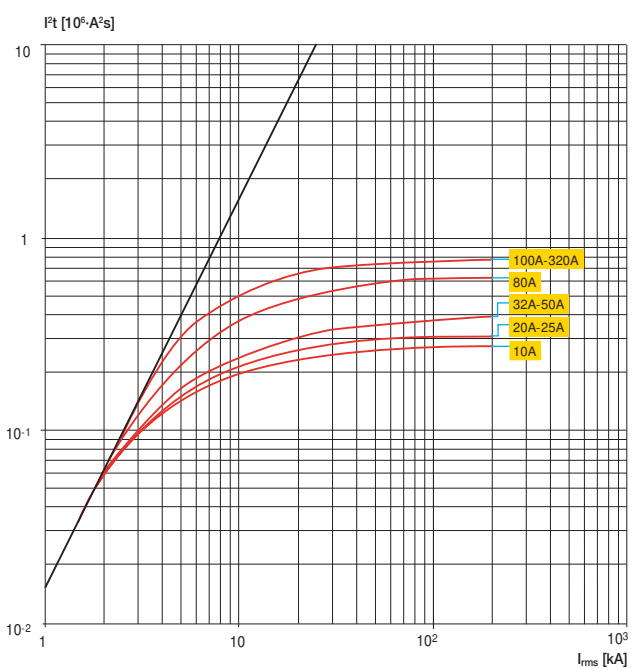


1SDC210E46F0001

Specific let-through energy curves

T5 400/630


400-440 V

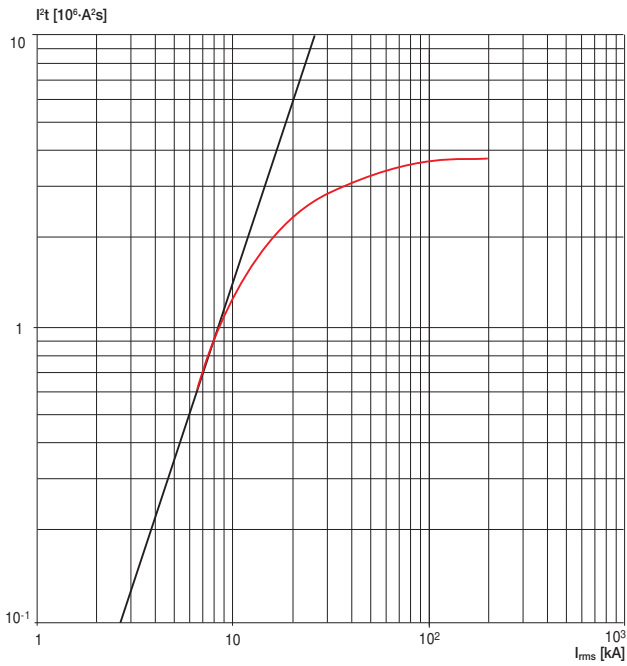

1SDC210647F0001

T6 630/800/1000


400-440 V

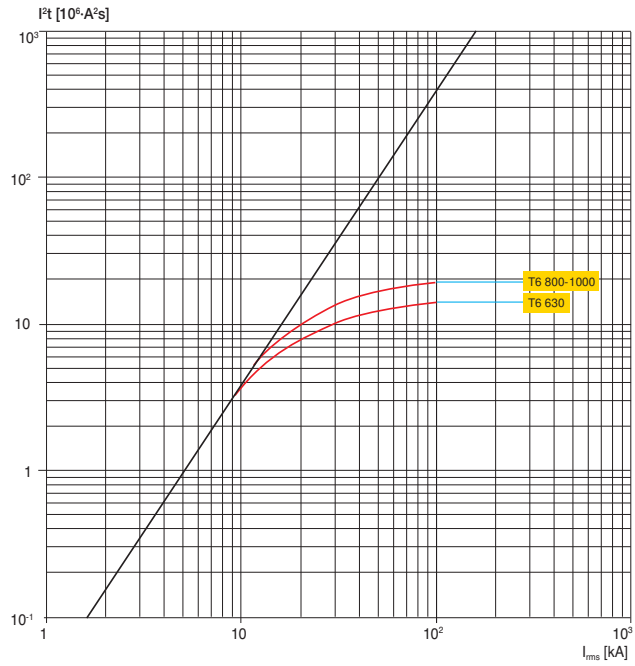

1SDC210E48F0001

T7 800/1000/1250/1600

400-440 V

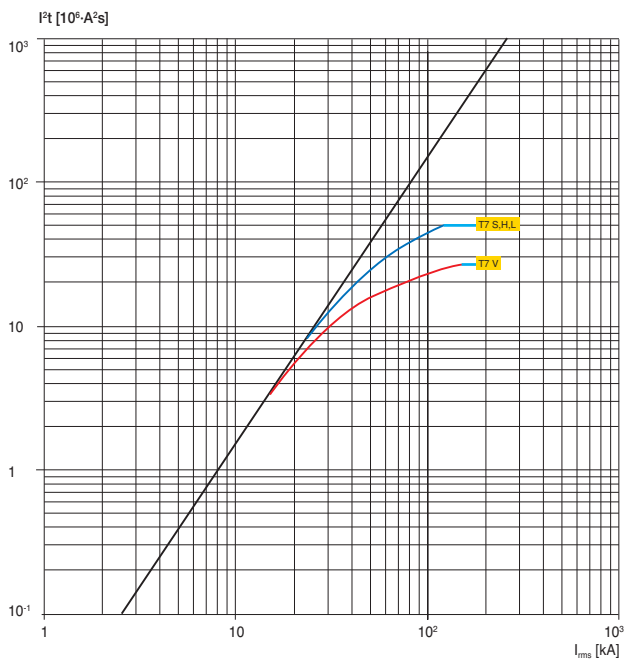


1SDC210F41F0001

4

T1 160


500 V

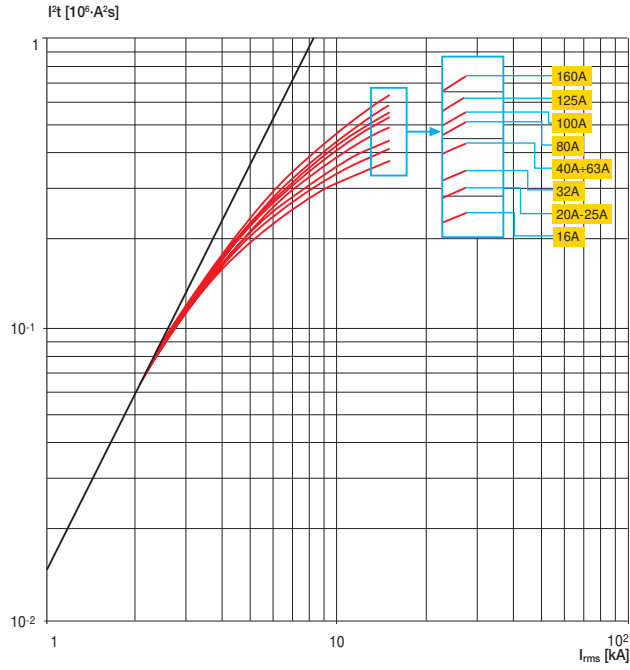

1SDC210E49F0001

T2 160


500 V

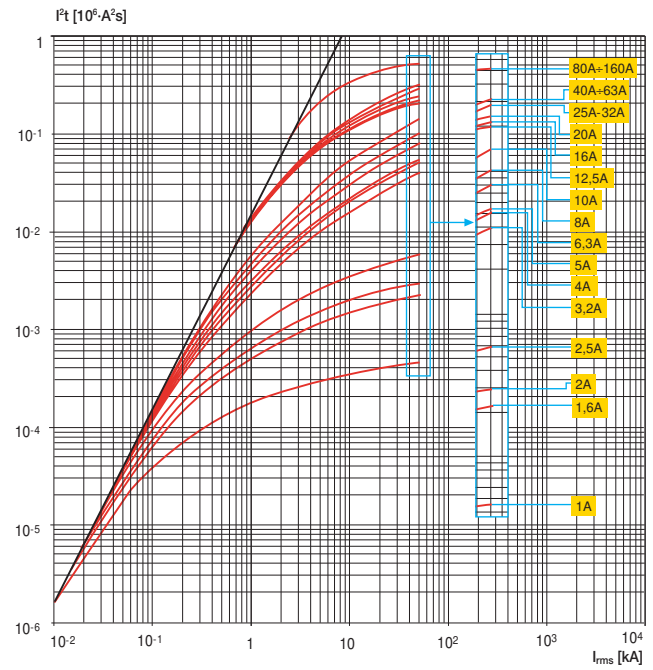

1SDC210E50F0001

T3 250


500 V

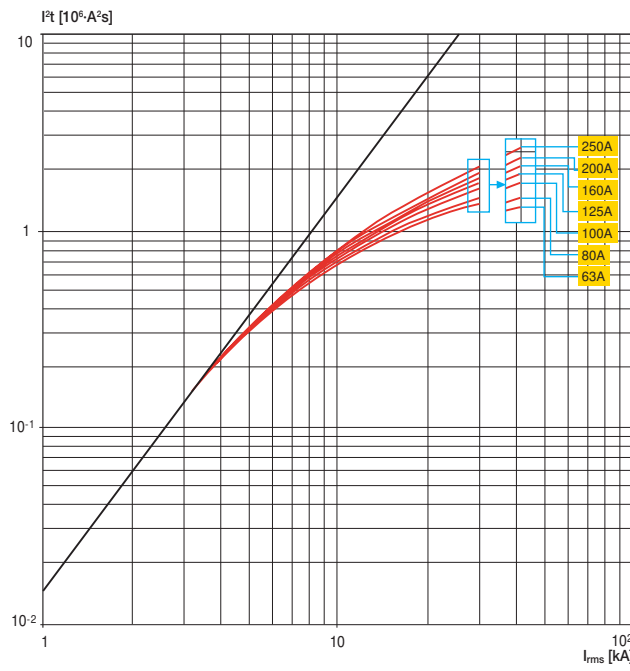

1SDC210E51F0001

T4 250/320

500 V

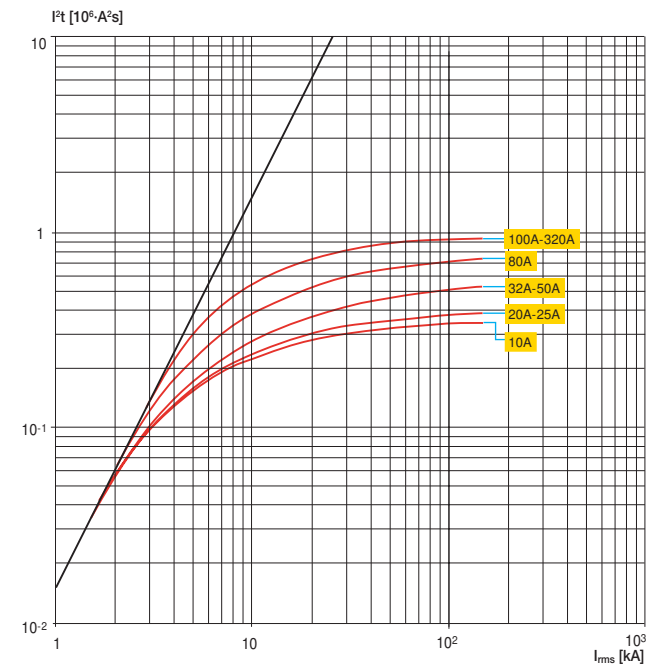


1SDC210E52F0001

Specific let-through energy curves


T5 400/630

500 V

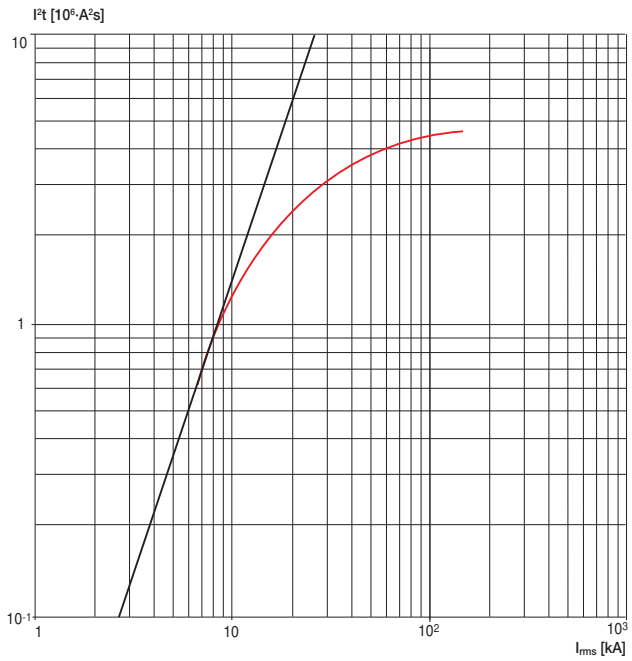


T6 630/800/1000

500 V




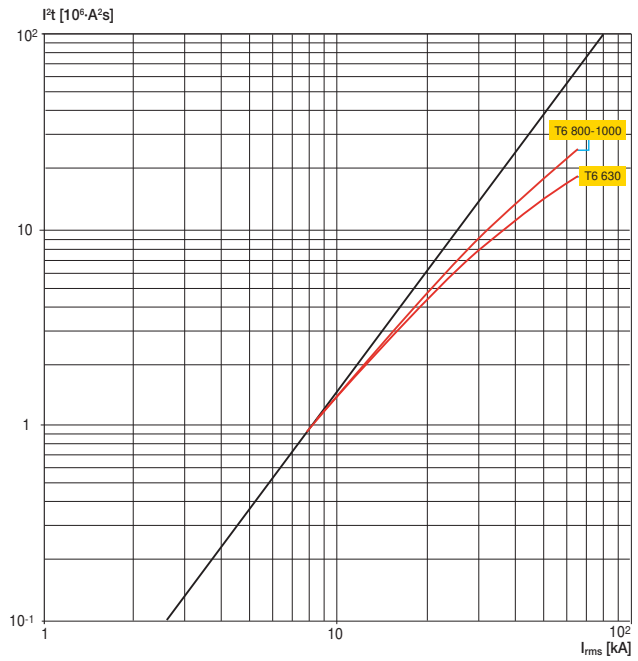


T7 800/1000/1250/1600

500 V

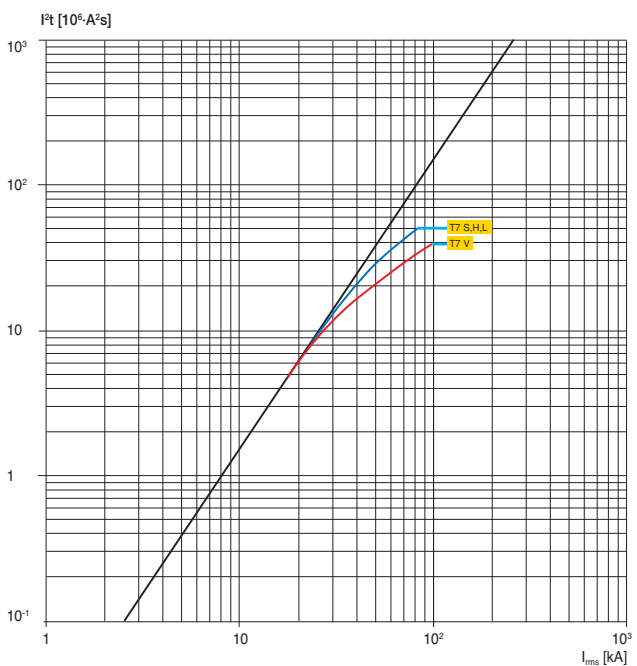


4

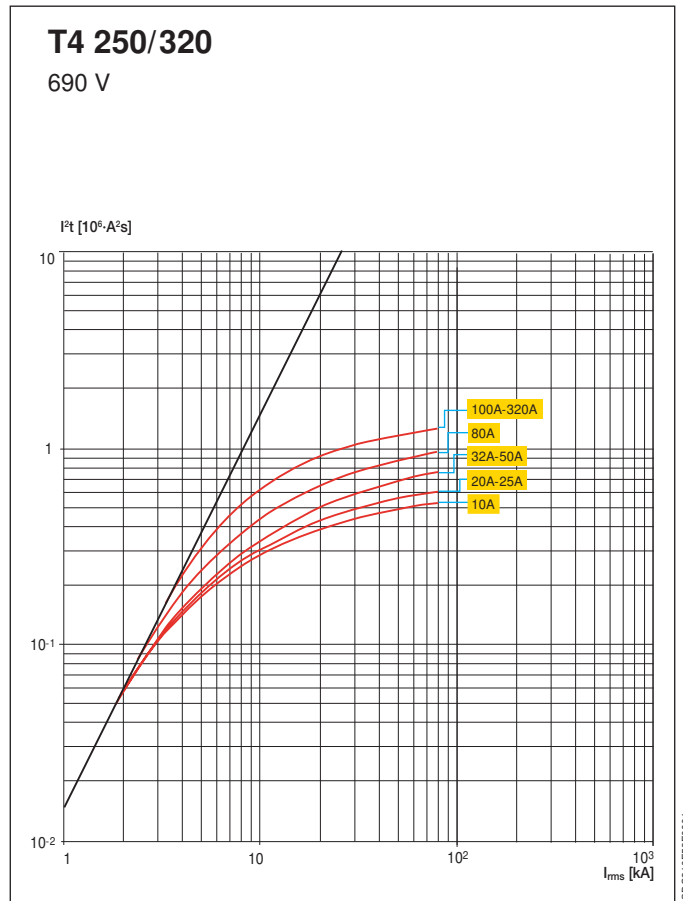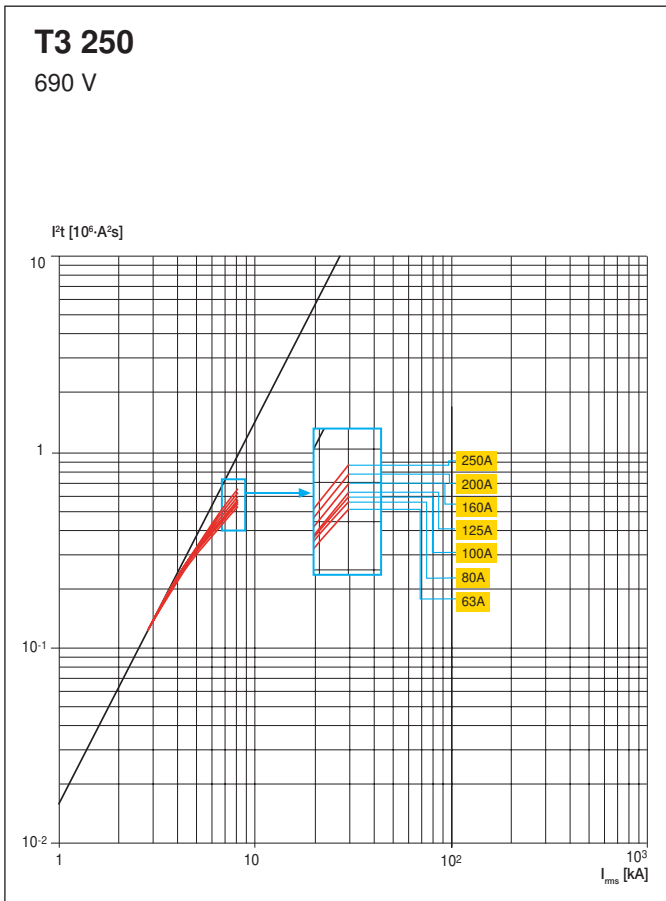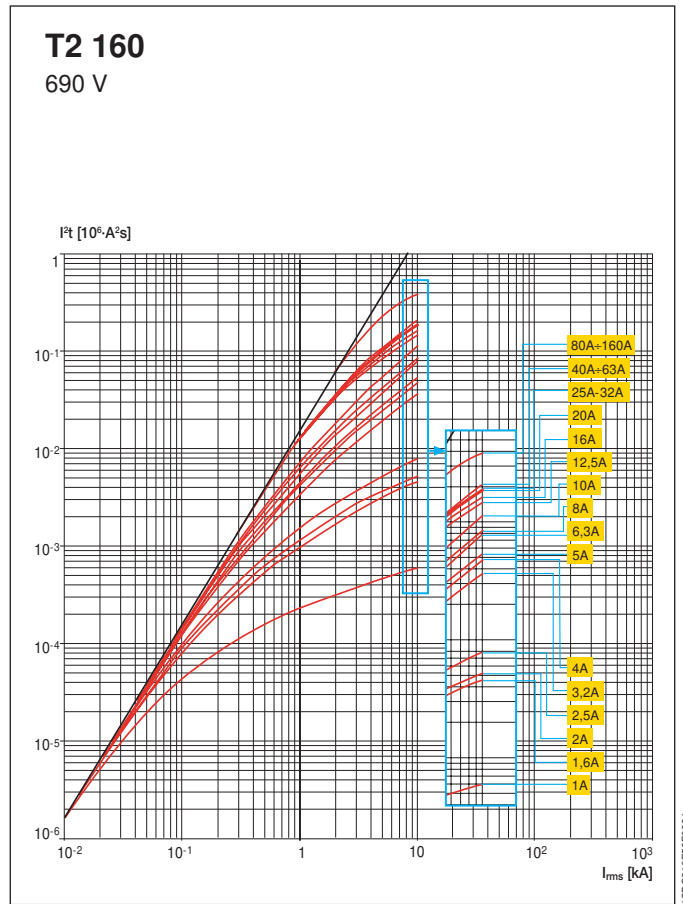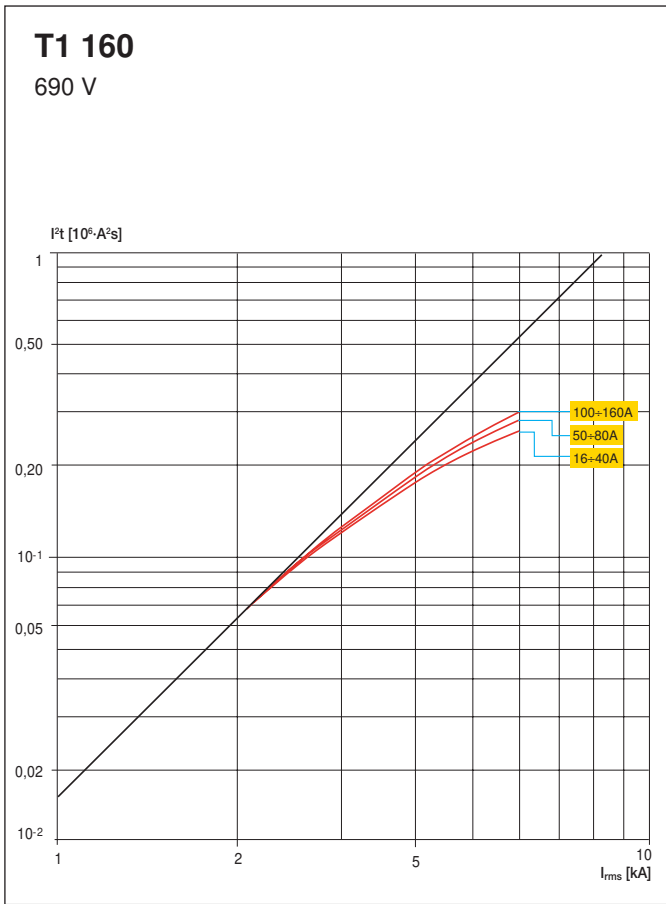

Specific let-through energy curves

T5 400/630


690 V

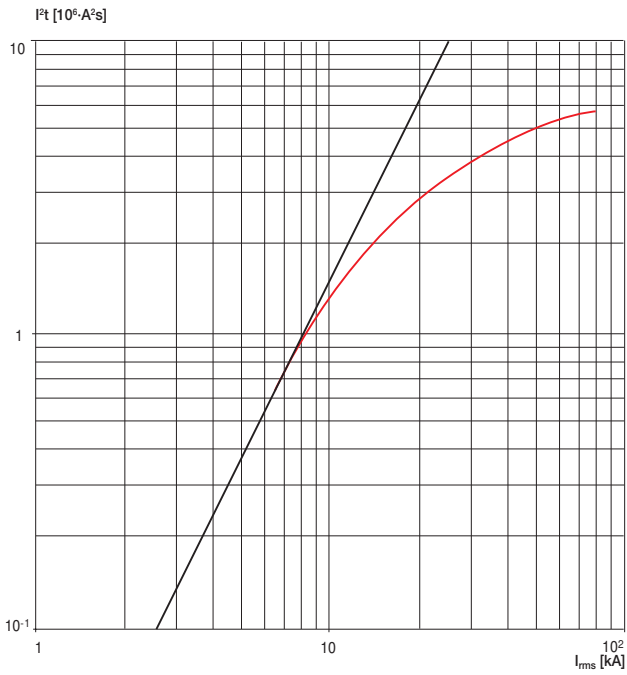

1SDC210E99F0001

T6 630/800/1000


690 V

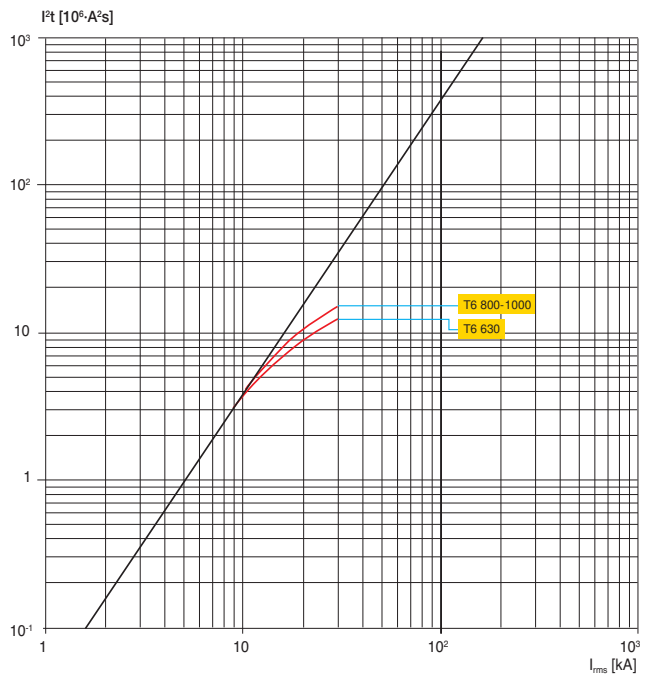

1SDC210E99F0001

T7 800/1000/1250/1600

690 V

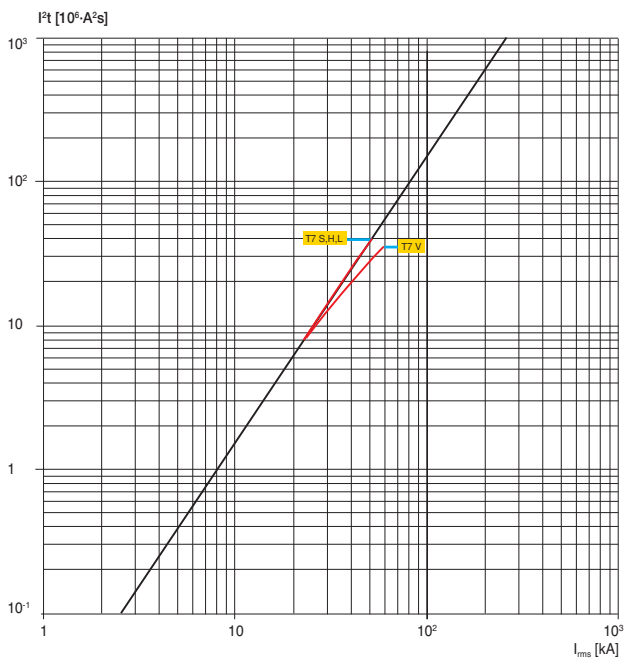


1SDC210F49F0001

4

T4 250


1000 V

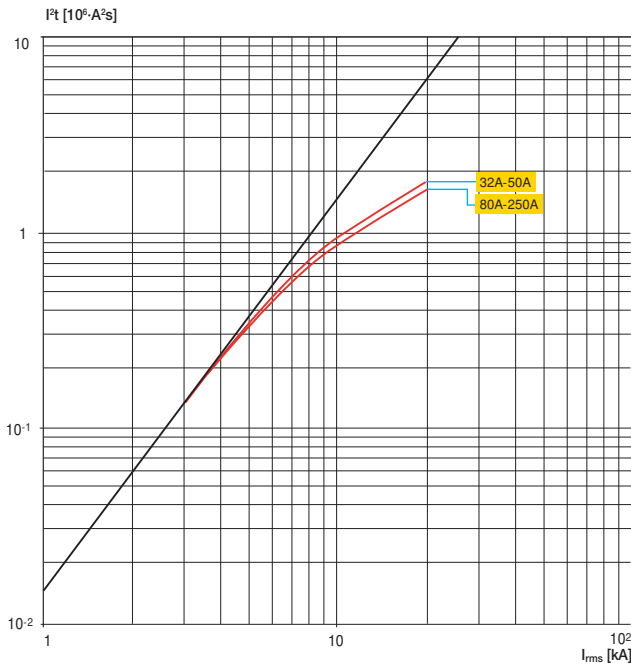

1SDC210E61P0001

T5 400/630

1000 V

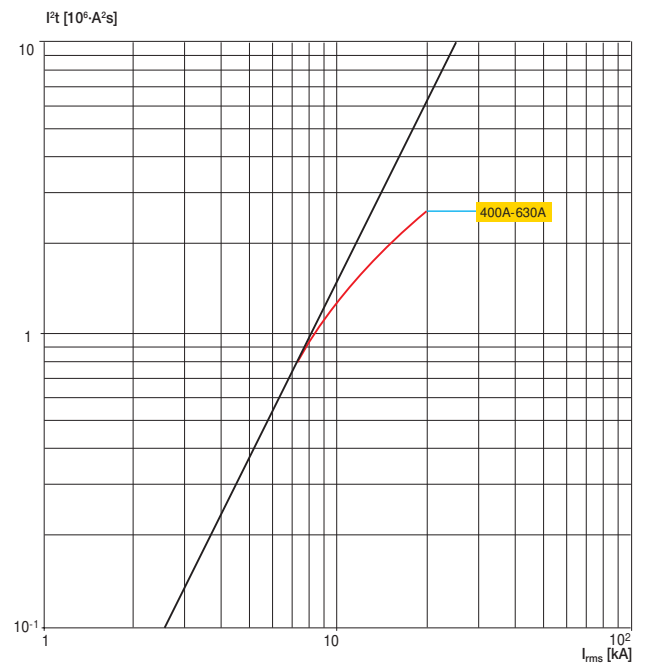


1SDC210E62P0001

Limitation curves

T1 160


230 V

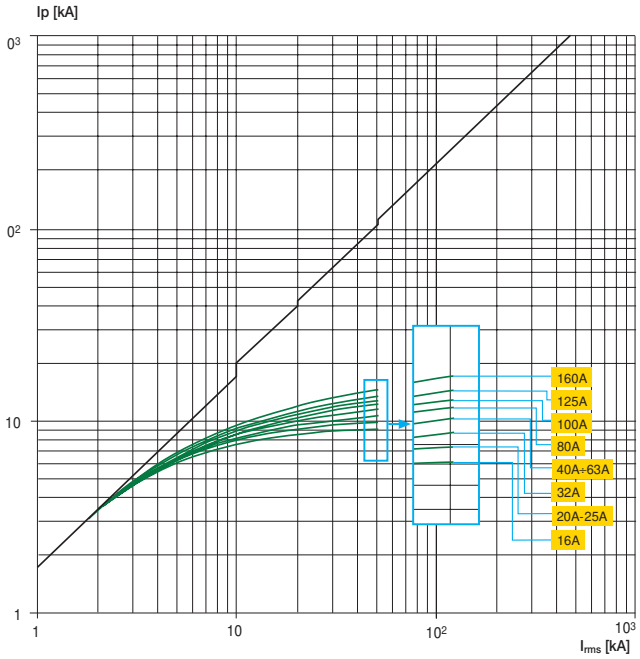

1SDC210663F0001

T2 160


230 V

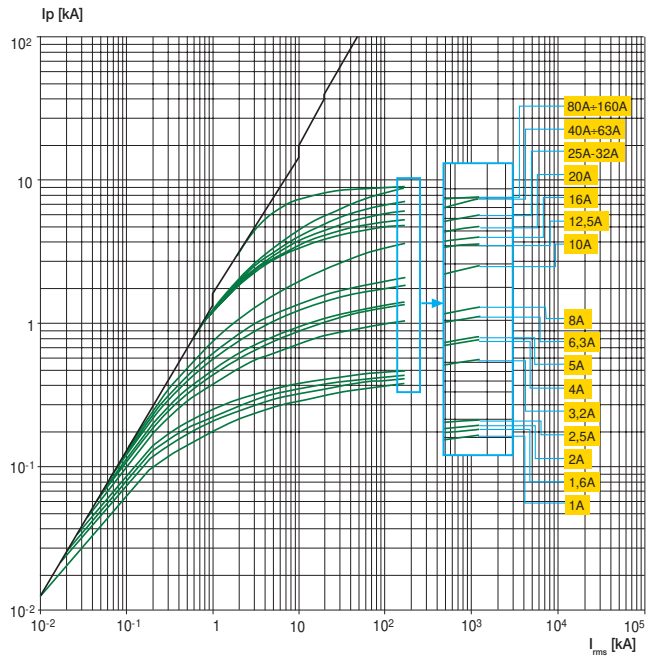

1SDC210664F0001

T3 250


230 V

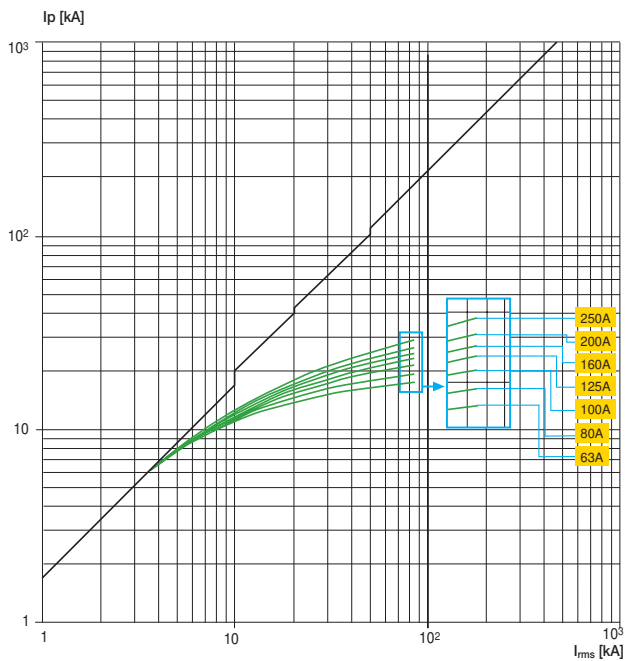

1SDC210665F0001

T4 250/320


230 V

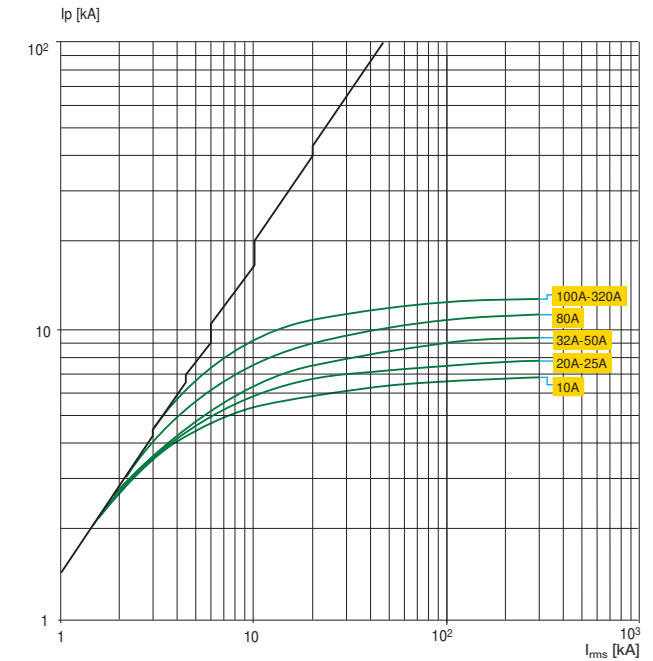

1SDC210666F0001

T5 400/630


230 V

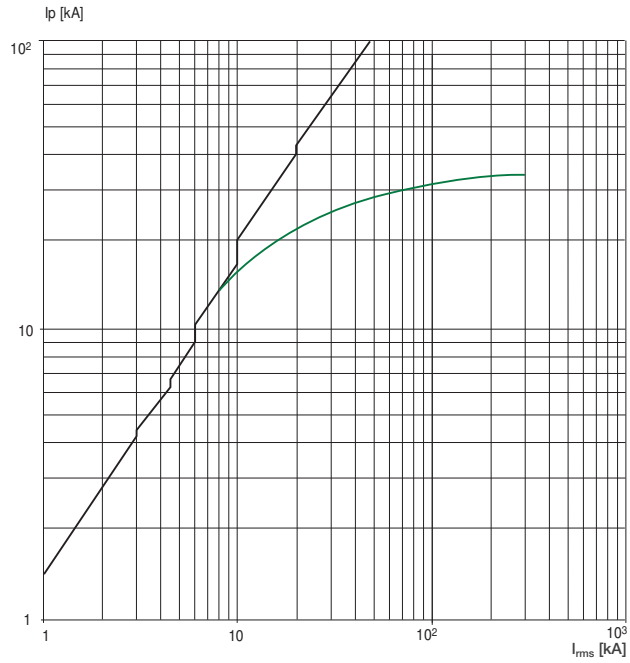

1SDC210B87P0001

T6 630/800/1000


230 V

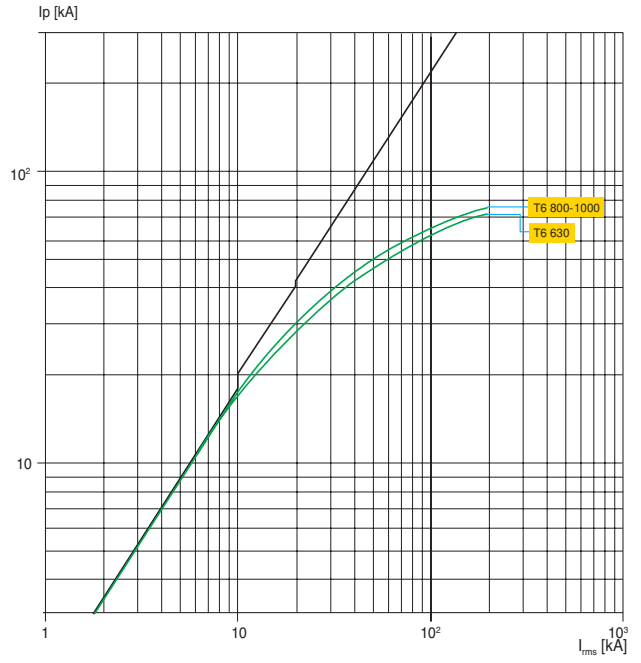

1SDC210B88P0001

T7 800/1000/1250/1600

230 V

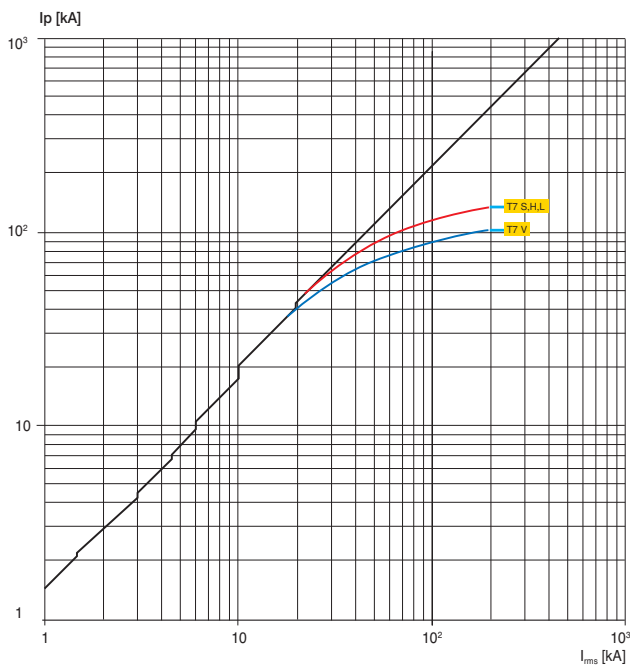


1SDC210F44P0001

Limitation curves

T1 160


400-440 V

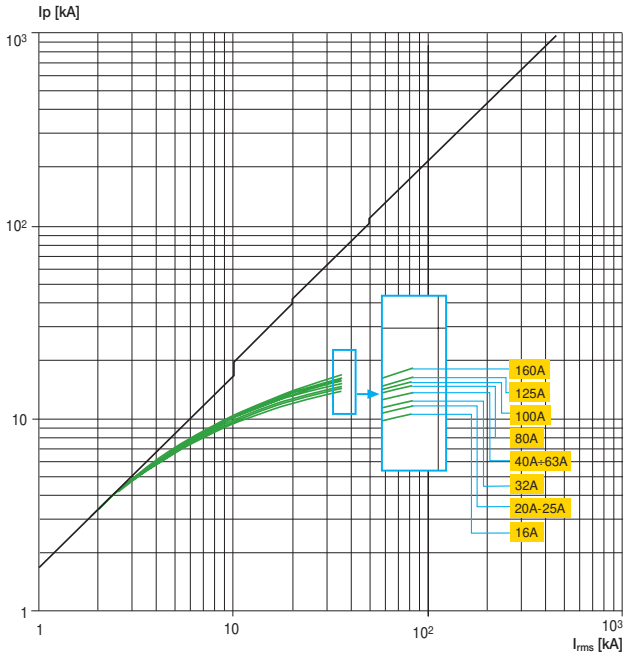

1SDC210699F0001

T2 160


400-440 V

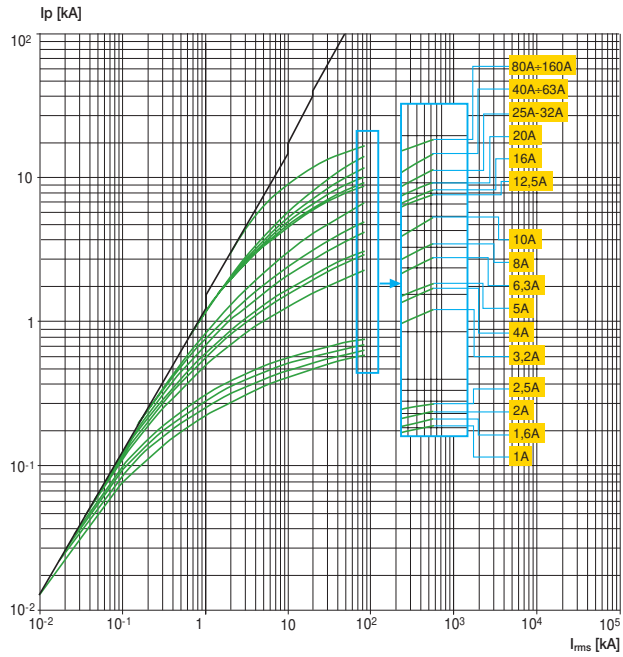

1SDC210E70F0001

T3 250


400-440 V

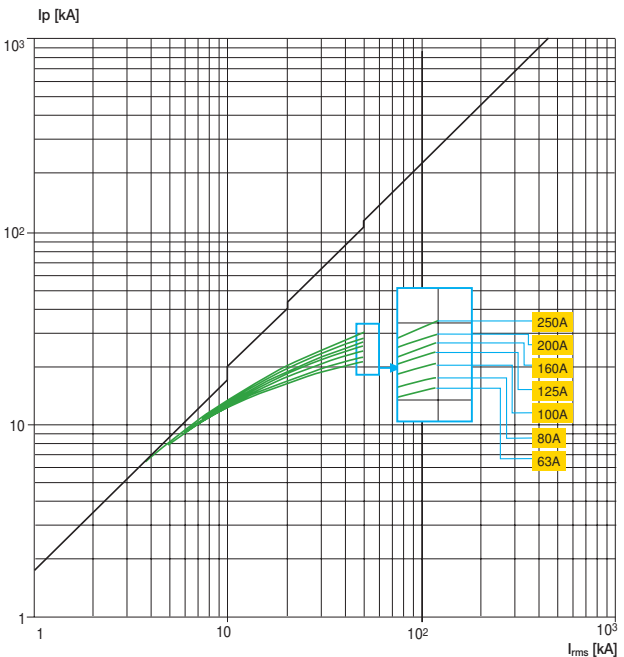

1SDC210E71F0001

T4 250/320


400-440 V

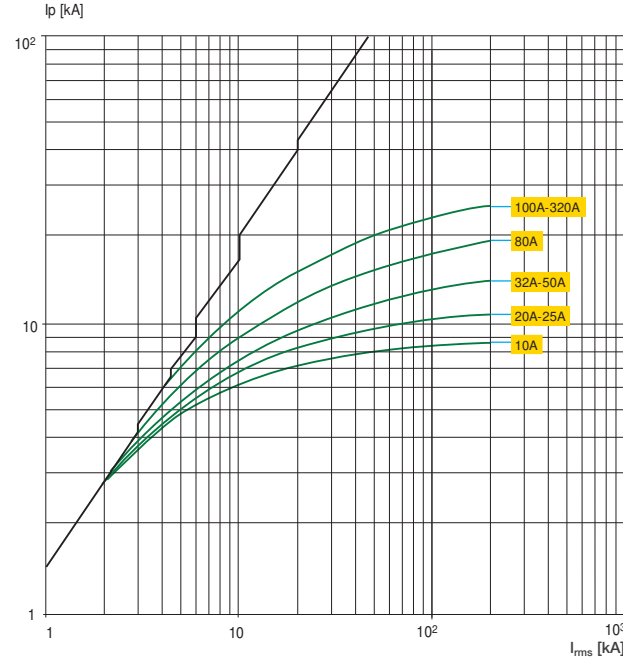

1SDC210E72F0001

T5 400/630


400-440 V

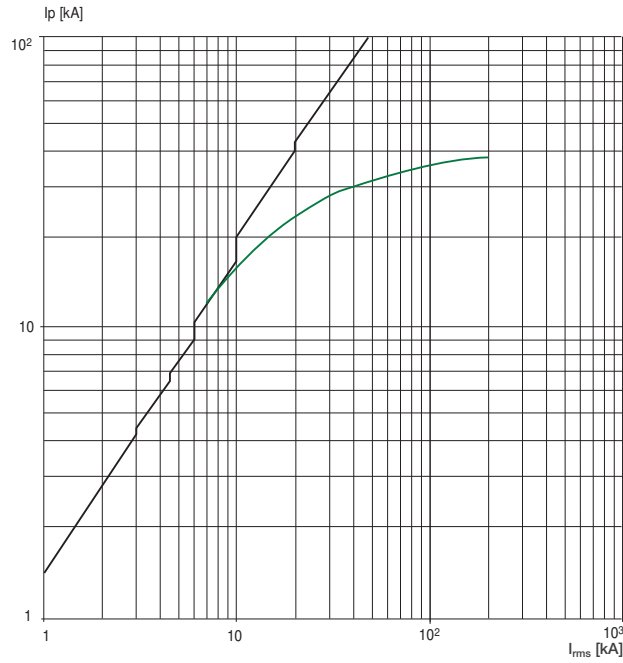

1SDC210E79F0001

T6 630/800/1000


400-440 V

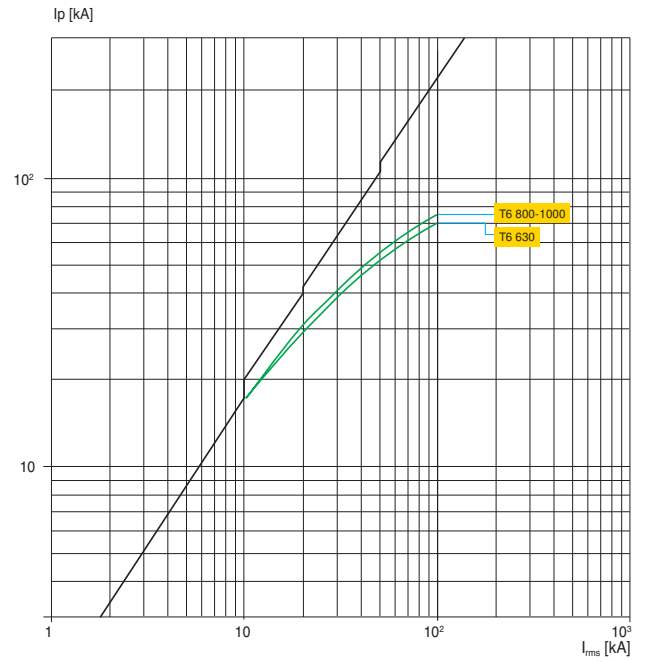

1SDC210E79F0001

T7 800/1000/1250/1600

400-440 V

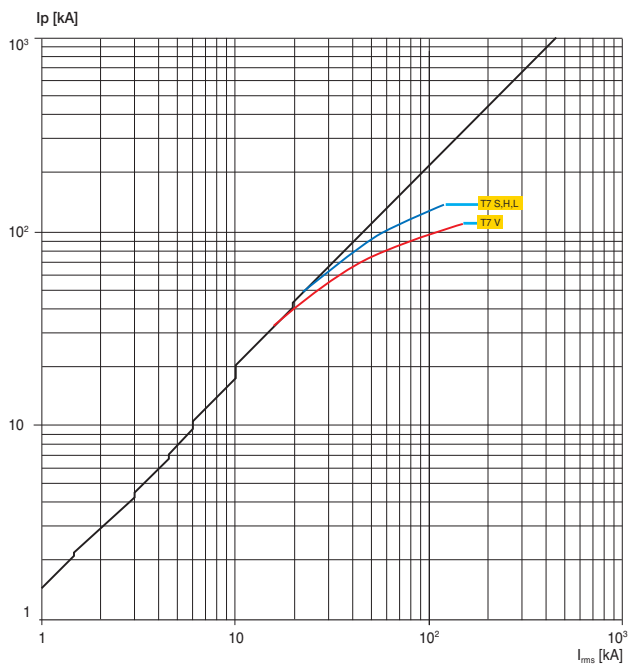


1SDC210H49F0001

Limitation curves

T1 160


500 V

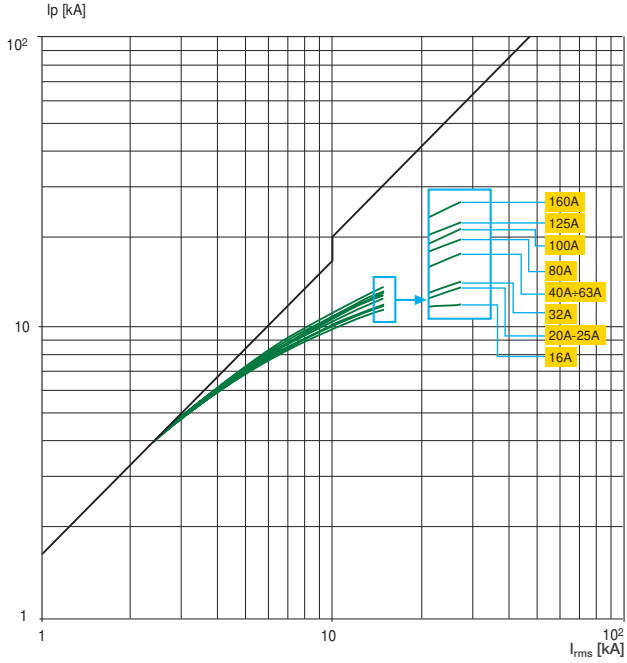

1SDC210E79F0001

T2 160


500 V

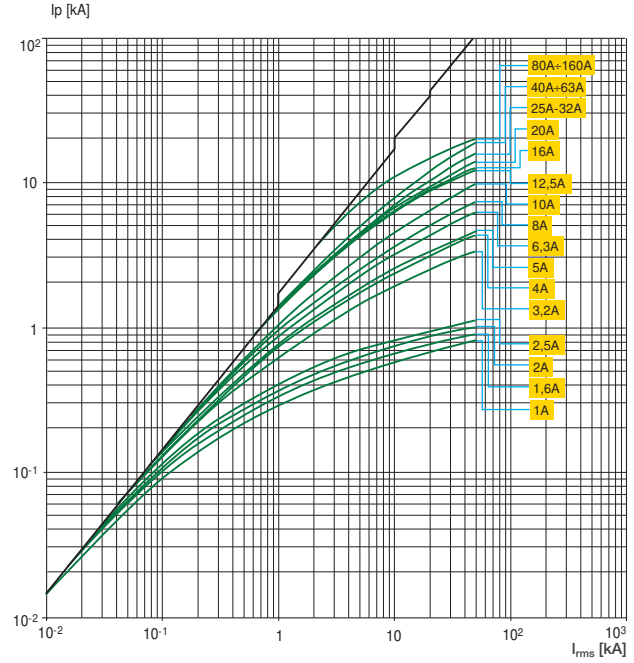

1SDC210E79F0001

T3 250


500 V

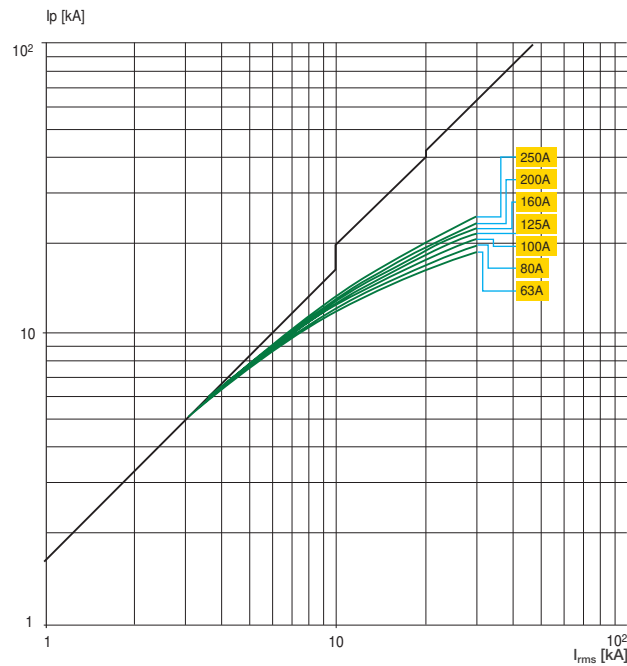

1SDC210E79F0001

T4 250/320


500 V

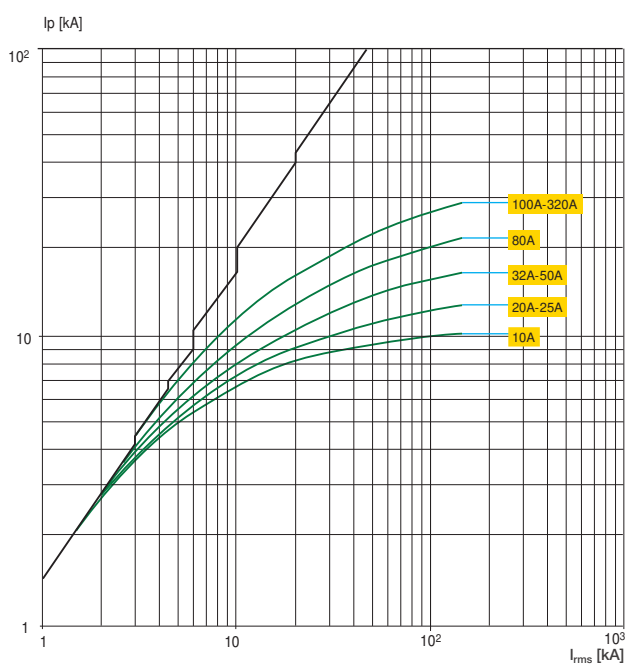

1SDC210E79F0001

T5 400/630


500 V

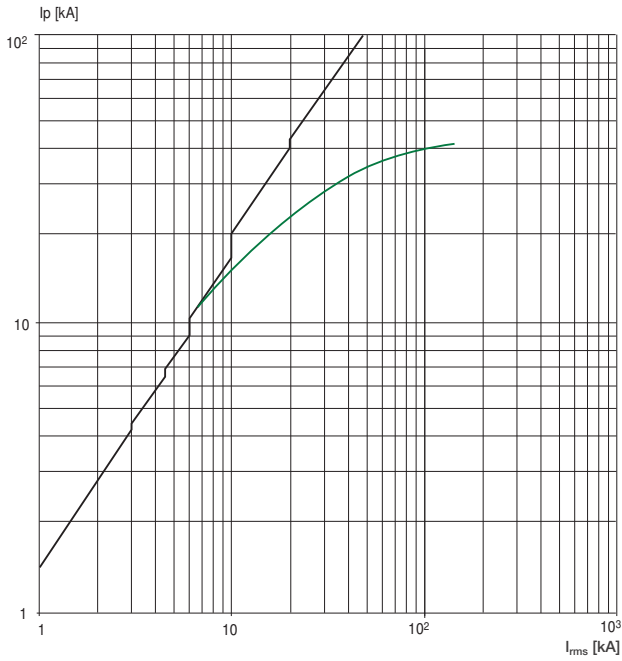

1SDC210E79R0001

T6 630/800/1000


500 V

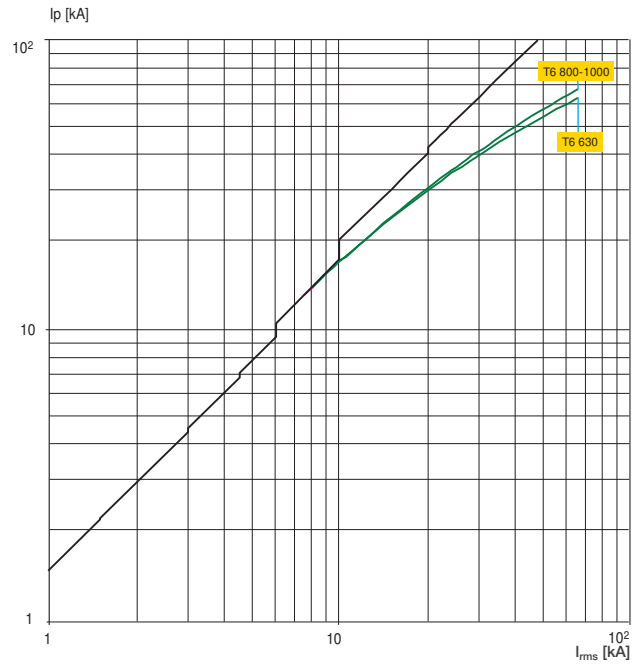

1SDC210E80F0001

T7 800/1000/1250/1600

500 V

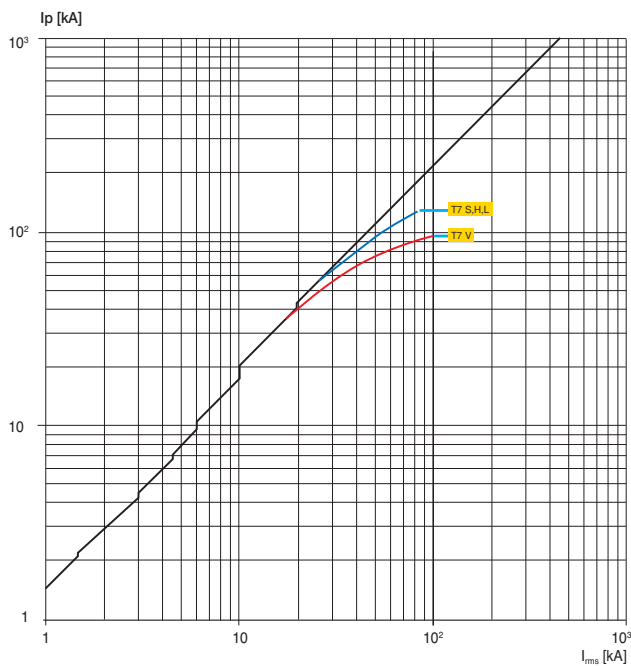


1SDC210F46F0001

Limitation curves

T1 160


690 V

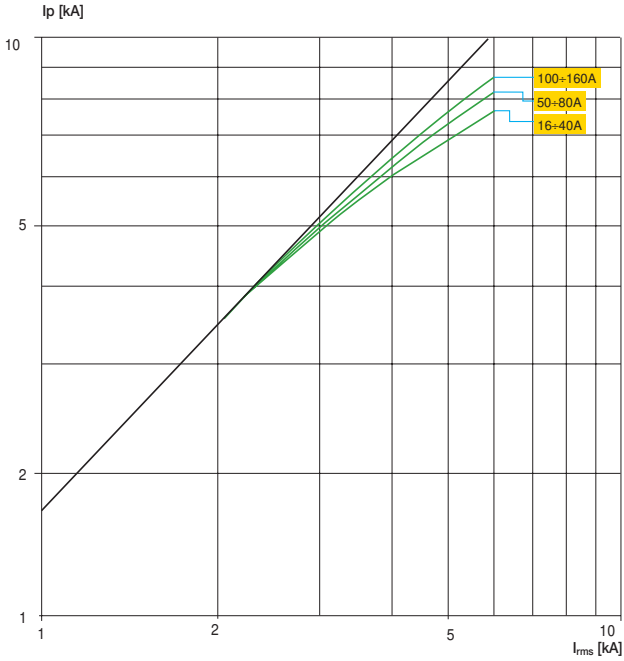

1SDC210B31F0001

T2 160


690 V

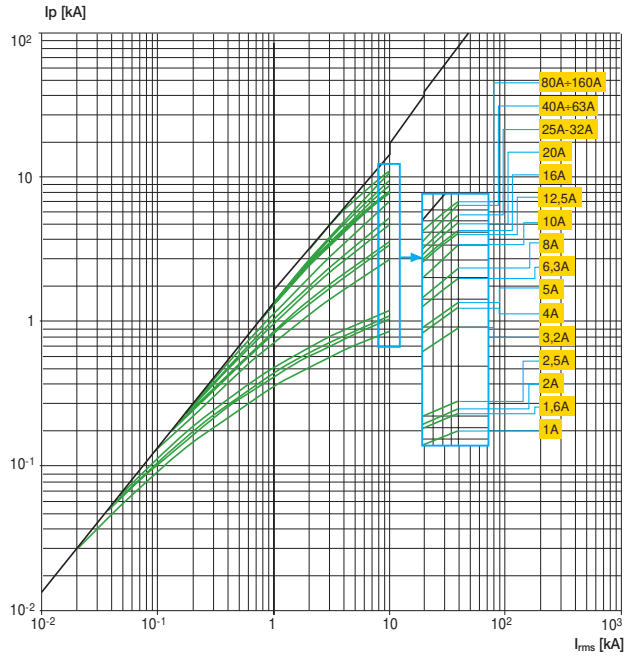

1SDC210B32F0001

T3 250


690 V

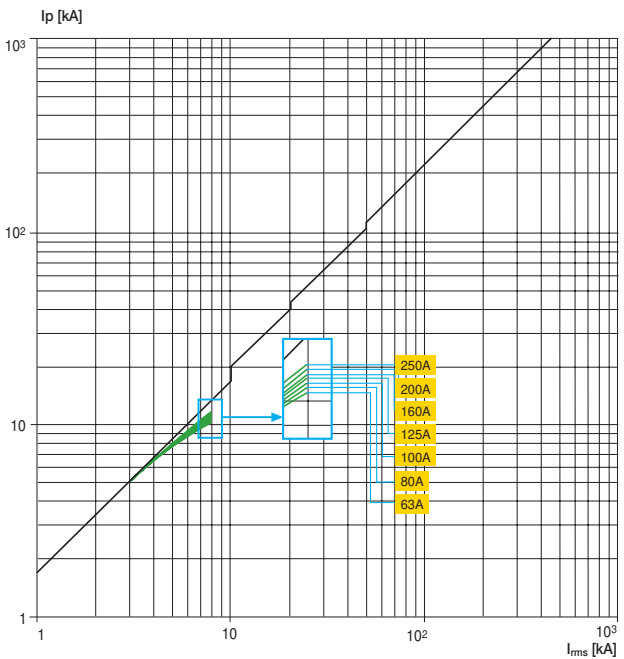

1SDC210B33F0001

T4 250/320


690 V

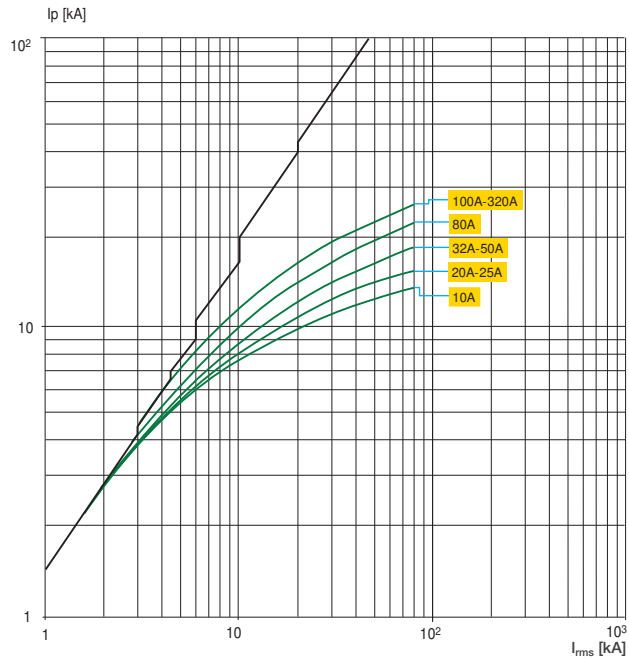

1SDC210B34F0001


T5 400/630

690 V

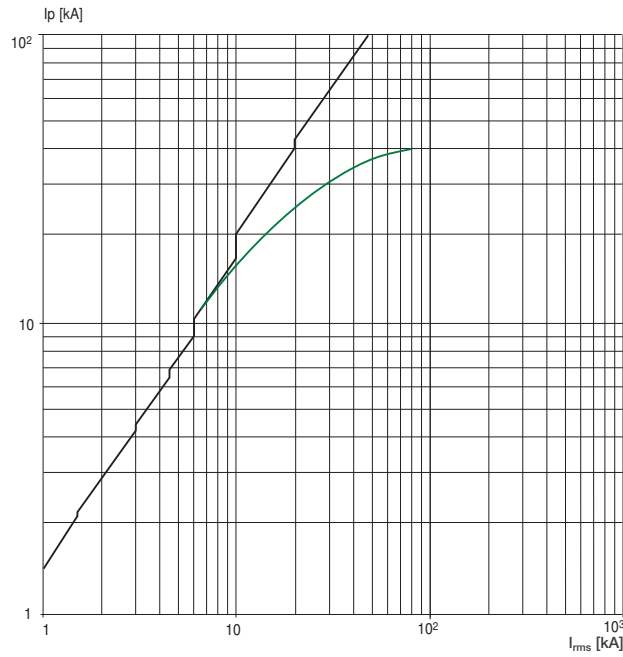


T6 630/800/1000

690 V

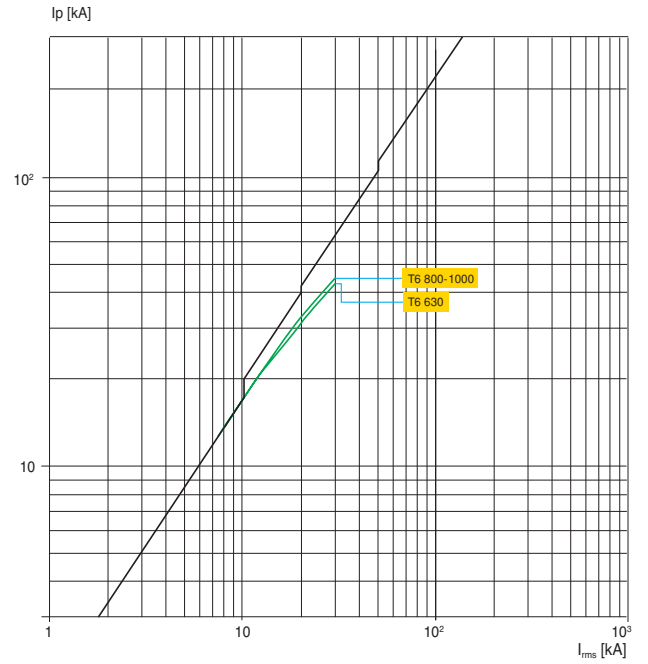

T7 800/1000/1250/1600


690 V

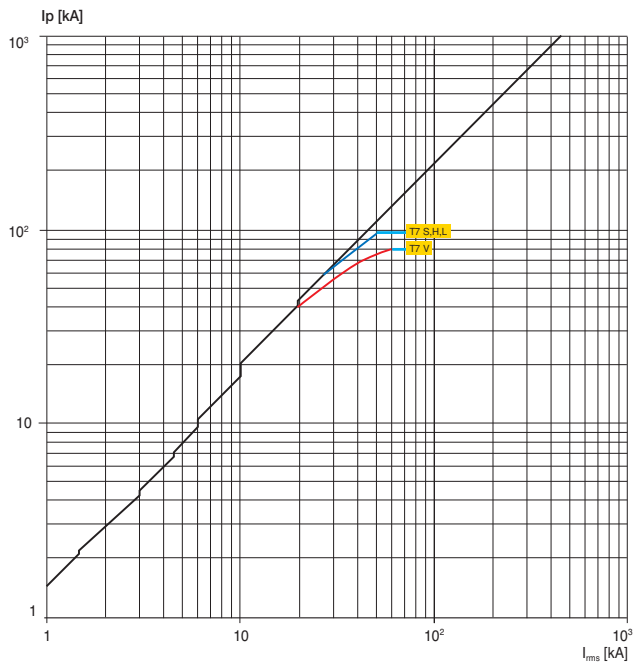

Limitation curves


T4 250

1000 V

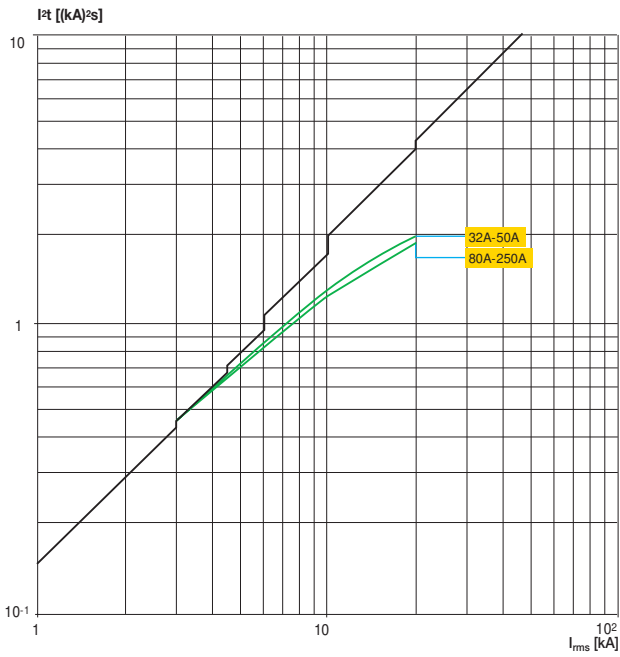

T5 400/630

1000 V

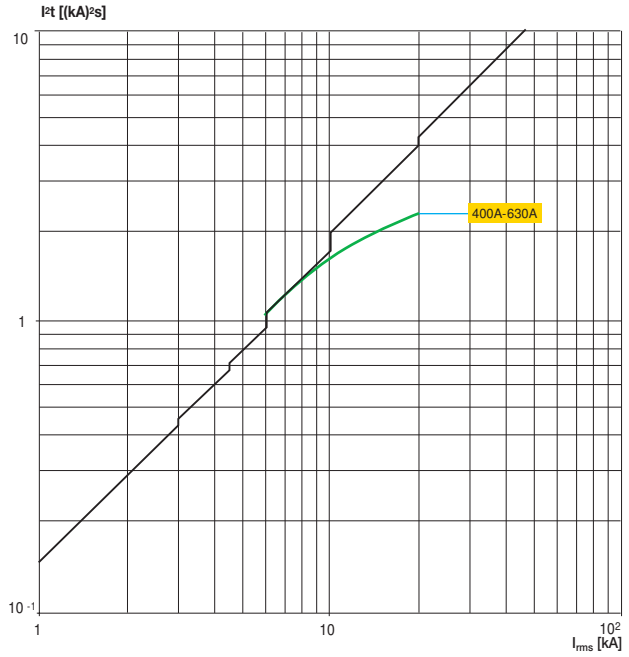

4

Temperature performances


Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T1D 160

| | up to 40 °C | 50 °C | 60 °C | 70 °C |
|----|---------------|---------------|---------------|---------------|
| | I_{max} [A] | I_{max} [A] | I_{max} [A] | I_{max} [A] |
| FC | 160 | 160 | 152 | 136 |
| F | 160 | 160 | 152 | 136 |

FC = Front cable terminals

F = Front flat terminals

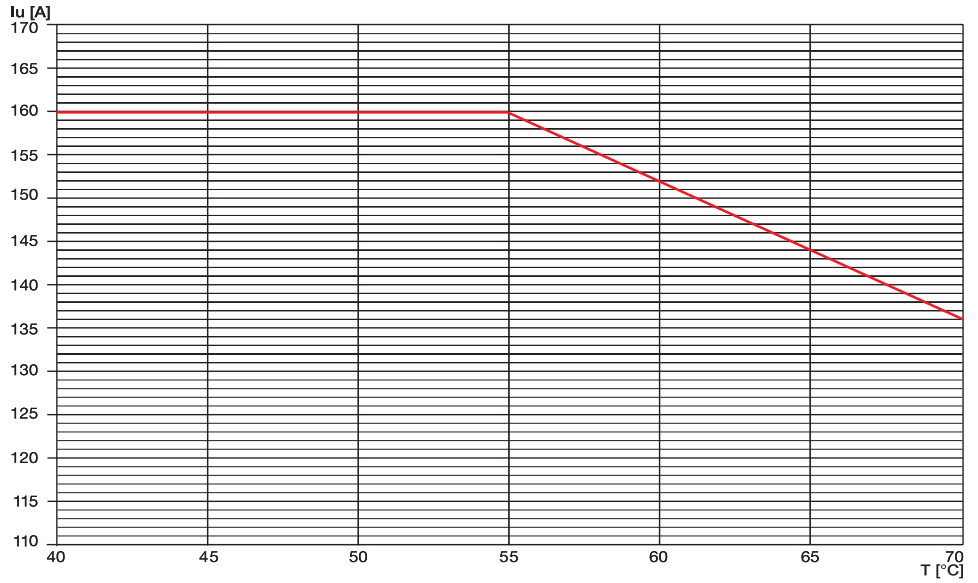

1SDC210E89P001

Temperature performances


Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T2 160

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|---------|----------------------|----------------|----------------------|----------------|----------------------|----------------|----------------------|----------------|
| | I _{max} [A] | I _t | I _{max} [A] | I _t | I _{max} [A] | I _t | I _{max} [A] | I _t |
| F | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |
| EF | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |
| ES | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |
| FC Cu | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |
| FC CuAl | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |
| R | 160 | 1 | 153.6 | 0.96 | 140.8 | 0.88 | 128 | 0.8 |

F = Front flat terminals
 FC Cu = Front terminals for copper cables
 EF = Front extended terminals
 FC CuAl = Front terminals for CuAl cables
 ES = Front extended spread terminals
 R = Rear terminals

Note: in the plug-in version the maximum setting is derated by 10% at 40 °C.

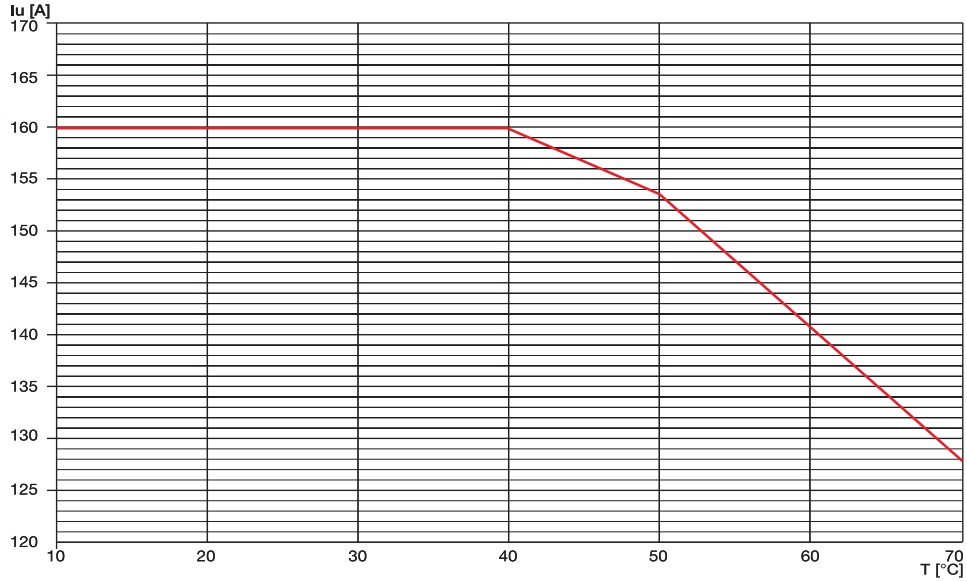


1SDC210EM/P001

T2 160 Plug-in

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|---------|----------------------|----------------|----------------------|----------------|----------------------|----------------|----------------------|----------------|
| | I _{max} [A] | I _t | I _{max} [A] | I _t | I _{max} [A] | I _t | I _{max} [A] | I _t |
| F | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |
| EF | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |
| ES | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |
| FC Cu | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |
| FC CuAl | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |
| R | 144 | 0.9 | 138 | 0.84 | 126 | 0.80 | 112 | 0.68 |

F = Front flat terminals
 FC Cu = Front terminals for copper cables
 EF = Front extended terminals
 FC CuAl = Front terminals for CuAl cables
 ES = Front extended spread terminals
 R = Rear terminals

Note: in the plug-in version the maximum setting is derated by 10% at 40 °C.

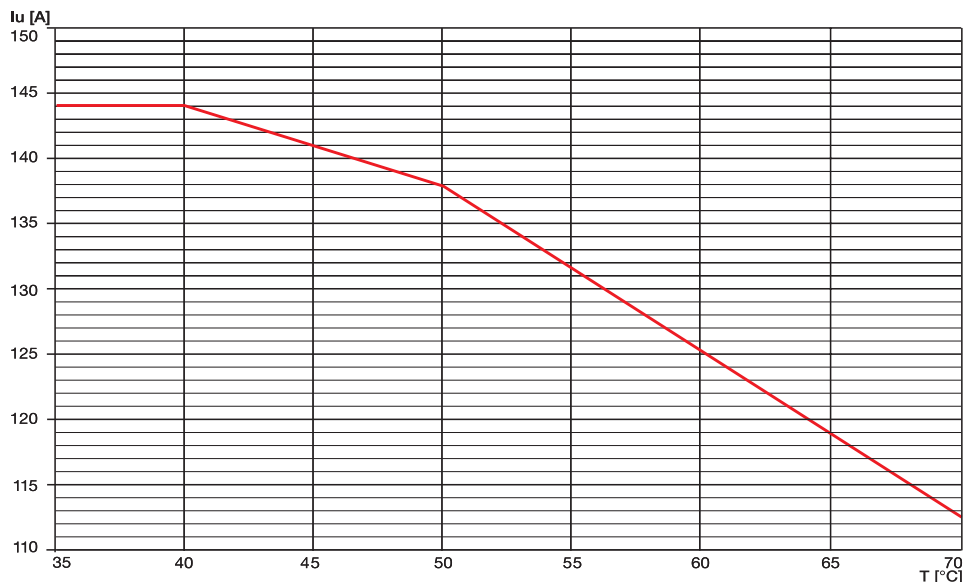


1SDC210R2/F001

T3 250 and T3D 250

| | up to 40 °C | 50 °C | 60 °C | 70 °C |
|---|---------------|---------------|---------------|---------------|
| F | I_{max} [A] | I_{max} [A] | I_{max} [A] | I_{max} [A] |
| F | 250 | 250 | 227 | 204 |

F = Front flat terminals

Note: in the plug-in version the maximum setting is derated by 10% at 40 °C.

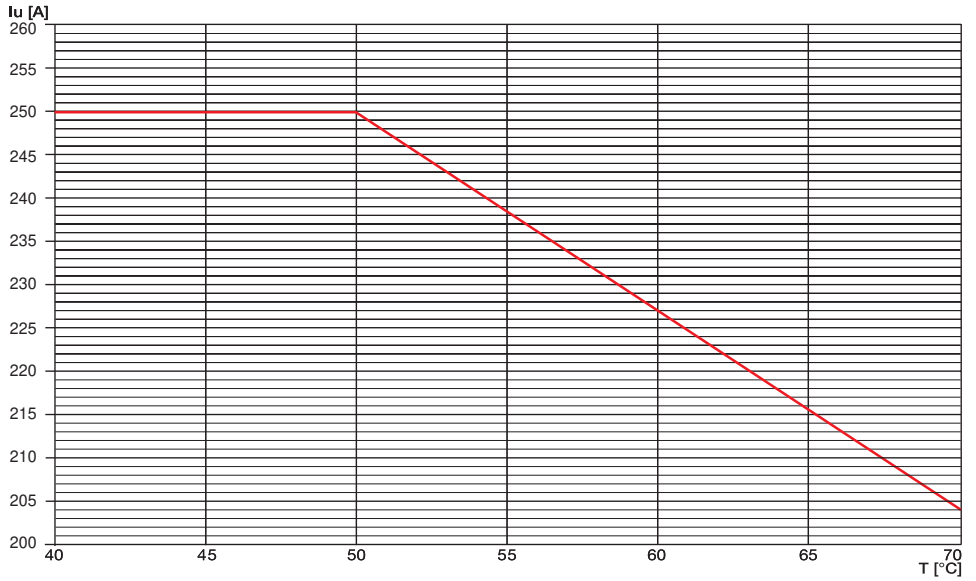


T3D 250

Plug-in

| | up to 40 °C | 50 °C | 60 °C | 70 °C |
|---------|---------------|---------------|---------------|---------------|
| F | I_{max} [A] | I_{max} [A] | I_{max} [A] | I_{max} [A] |
| F | 225 | 208 | 190 | 170 |
| EF | 225 | 208 | 190 | 170 |
| ES | 225 | 208 | 190 | 170 |
| FC Cu | 225 | 208 | 190 | 170 |
| FC CuAl | 225 | 208 | 190 | 170 |

F = Front flat terminals

Note: in the plug-in version the maximum setting is derated by 10% at 40 °C.

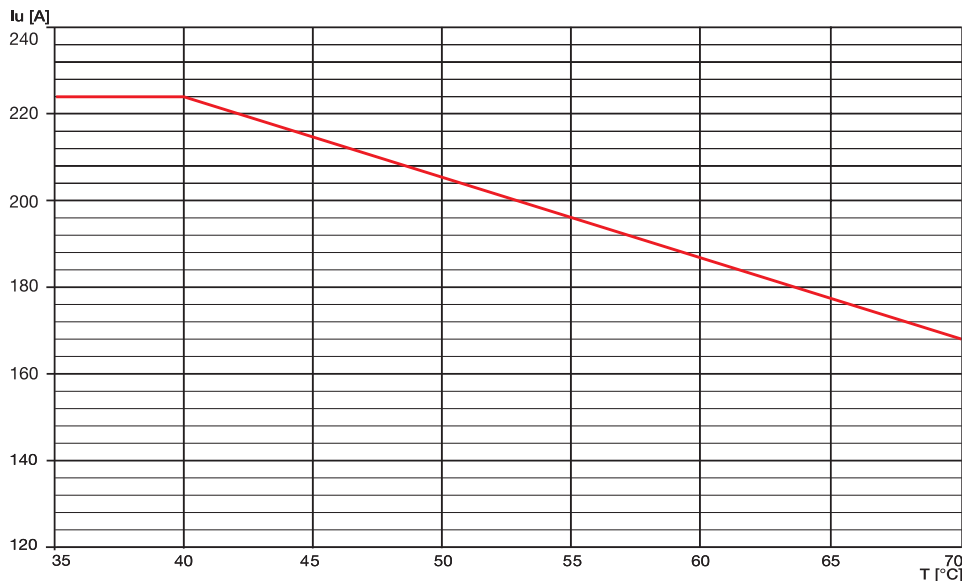

Temperature performances

Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T4 250 and T4D 250


Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 250 | 1 | 250 | 1 | 250 | 1 | 230 | 0.92 |
| F | 250 | 1 | 250 | 1 | 250 | 1 | 230 | 0.92 |
| HR | 250 | 1 | 250 | 1 | 250 | 1 | 220 | 0.88 |
| VR | 250 | 1 | 250 | 1 | 250 | 1 | 220 | 0.88 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals

HR = Rear flat horizontal terminals

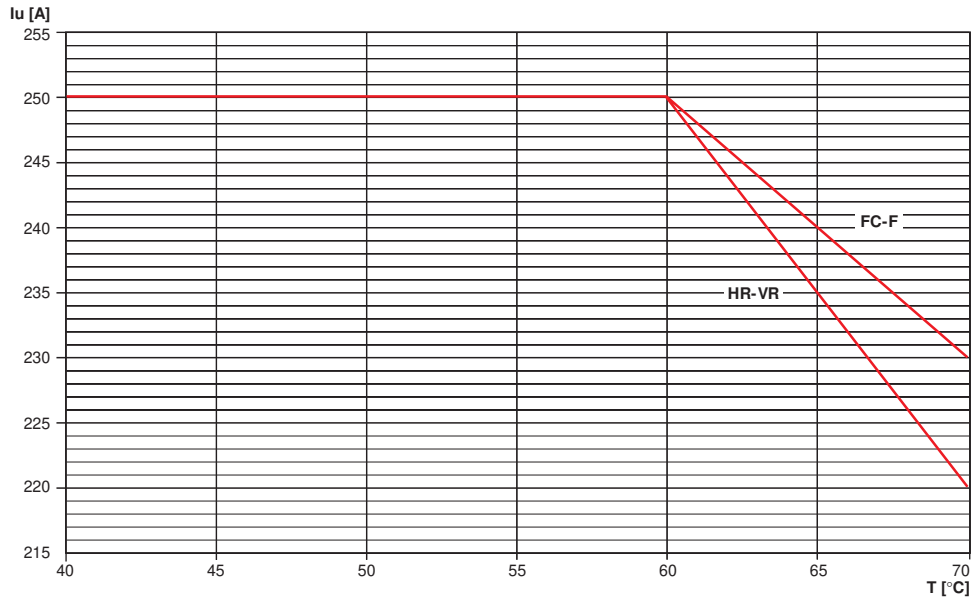

1SDC210E02PR001

T4 250 and T4D 250


Plug-in / Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 250 | 1 | 250 | 1 | 240 | 0.96 | 220 | 0.88 |
| F | 250 | 1 | 250 | 1 | 240 | 0.96 | 220 | 0.88 |
| HR | 250 | 1 | 250 | 1 | 230 | 0.92 | 210 | 0.84 |
| VR | 250 | 1 | 250 | 1 | 230 | 0.92 | 210 | 0.84 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals

HR = Rear flat horizontal terminals

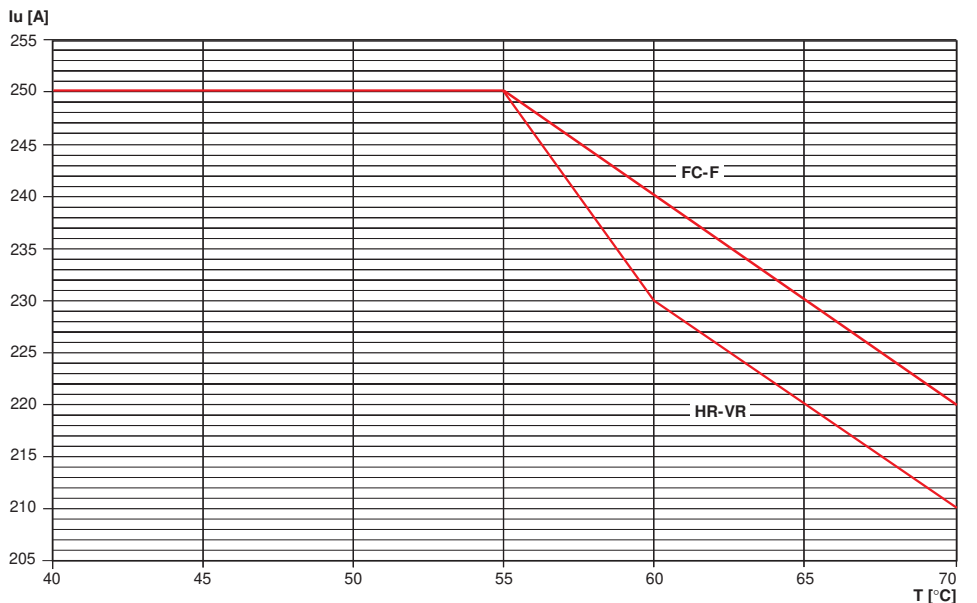

1SDC210E02PR001


T4 320 and T4D 320

Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 320 | 1 | 307 | 0.96 | 281 | 0.88 | 256 | 0.80 |
| F | 320 | 1 | 307 | 0.96 | 281 | 0.88 | 256 | 0.80 |
| HR | 320 | 1 | 294 | 0.92 | 269 | 0.84 | 243 | 0.76 |
| VR | 320 | 1 | 294 | 0.92 | 269 | 0.84 | 243 | 0.76 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals
HR = Rear flat horizontal terminals

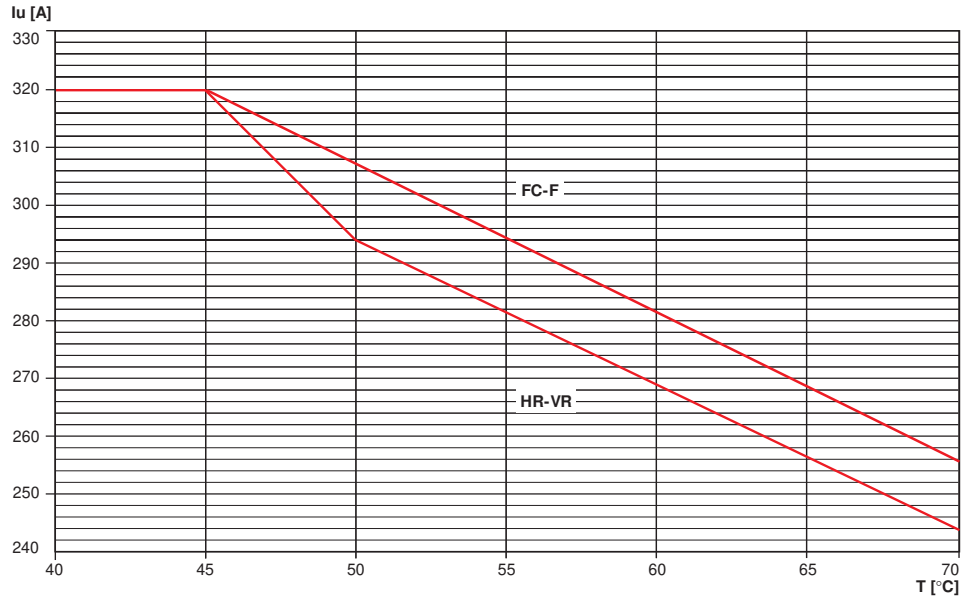


T4 320 and T4D 320

Plug-in / Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 320 | 1 | 294 | 0.92 | 268 | 0.84 | 242 | 0.76 |
| F | 320 | 1 | 307 | 0.96 | 282 | 0.88 | 256 | 0.80 |
| HR | 320 | 1 | 294 | 0.92 | 268 | 0.84 | 242 | 0.76 |
| VR | 320 | 1 | 294 | 0.92 | 268 | 0.84 | 242 | 0.76 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals
HR = Rear flat horizontal terminals

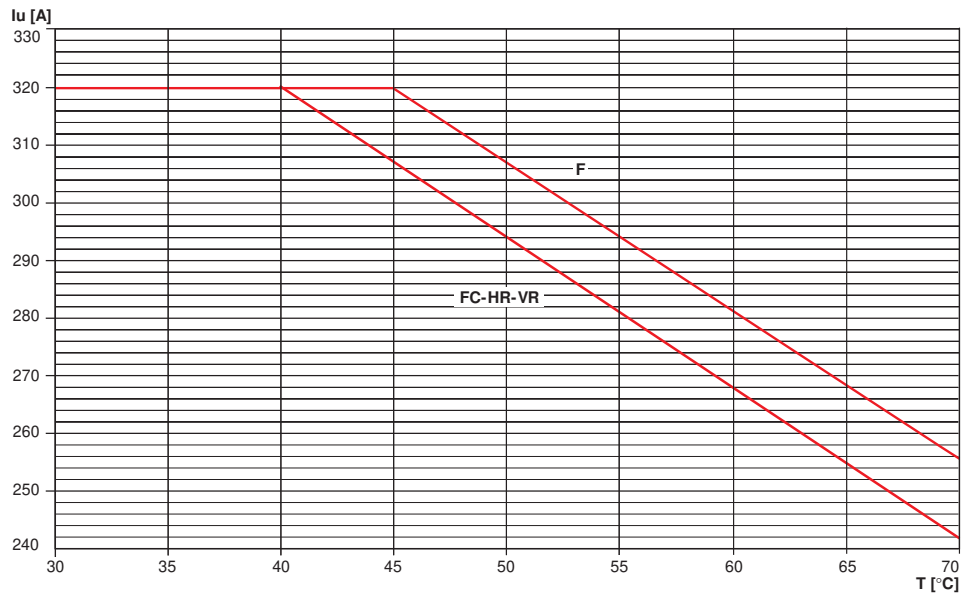

1SDC210E4FR001

1SDC210E4FR001

Temperature performances

Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T5 400 and T5D 400


Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|----|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 400 | 1 | 400 | 1 | 400 | 1 | 368 | 0.92 |
| F | 400 | 1 | 400 | 1 | 400 | 1 | 368 | 0.92 |
| HR | 400 | 1 | 400 | 1 | 400 | 1 | 352 | 0.88 |
| VR | 400 | 1 | 400 | 1 | 400 | 1 | 352 | 0.88 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals

HR = Rear flat horizontal terminals

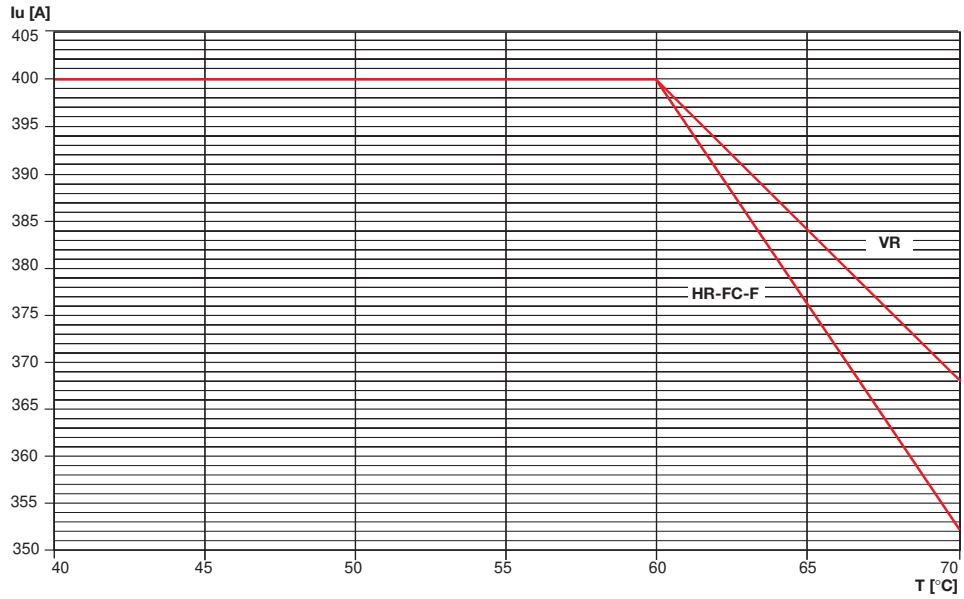

1SDC210B6F001

T5 400 and T5D 400


Plug-in / Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|----|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 400 | 1 | 400 | 1 | 382 | 0.96 | 350 | 0.88 |
| F | 400 | 1 | 400 | 1 | 382 | 0.96 | 350 | 0.88 |
| HR | 400 | 1 | 400 | 1 | 382 | 0.92 | 336 | 0.88 |
| VR | 400 | 1 | 400 | 1 | 382 | 0.92 | 336 | 0.88 |

FC = Front cables terminals
VR = Rear flat vertical terminals

F = Front flat terminals

HR = Rear flat horizontal terminals

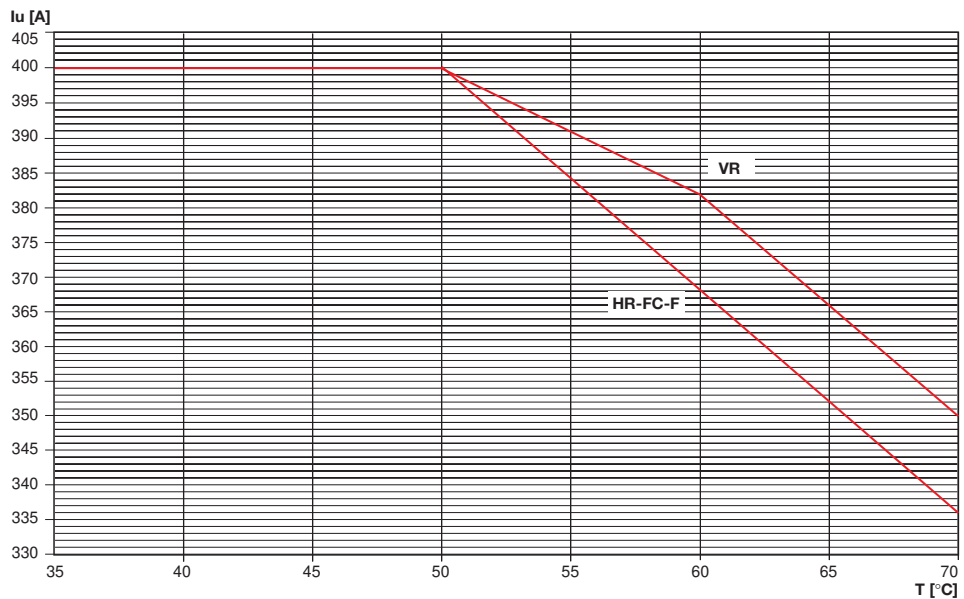

1SDC210B7F001

T5 630 and T5D 630

Fixed


| |
|-----------|
| FC |
| F |
| HR |
| VR |

FC = Front cables terminals
VR = Rear flat vertical terminals

| up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| 630 | 1 | 605 | 0.96 | 554 | 0.88 | 504 | 0.80 |
| 630 | 1 | 605 | 0.96 | 554 | 0.88 | 504 | 0.80 |
| 630 | 1 | 580 | 0.92 | 529 | 0.84 | 479 | 0.76 |
| 630 | 1 | 580 | 0.92 | 529 | 0.84 | 479 | 0.76 |

F = Front flat terminals

HR = Rear flat horizontal terminals

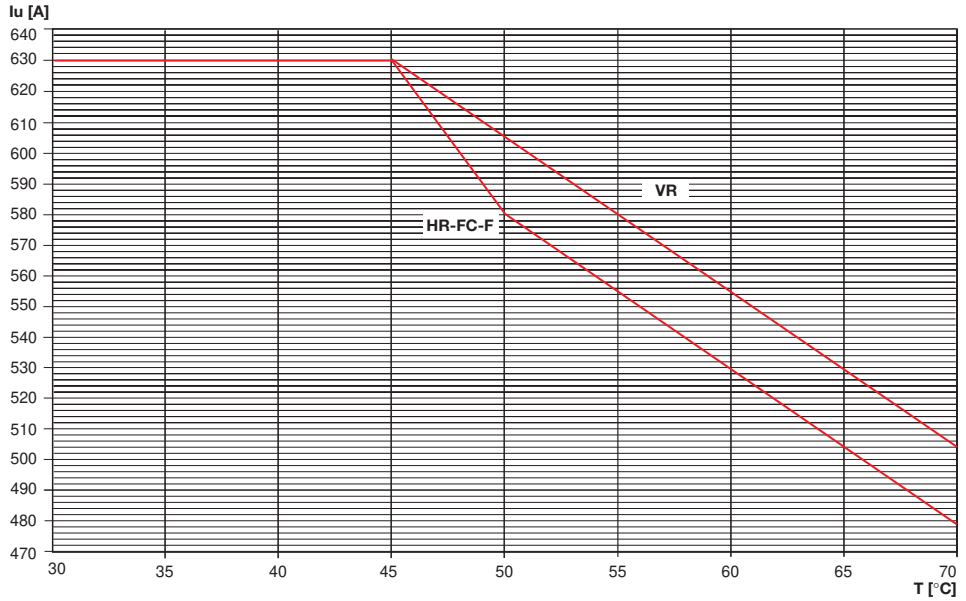

T5 630 and T5D 630

Plug-in / Withdrawable


| |
|-----------|
| F |
| HR |
| VR |

F = Front flat terminals

| up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| 630 | 1 | 607 | 0.96 | 552 | 0.88 | 476 | 0.76 |
| 630 | 1 | 580 | 0.92 | 517 | 0.82 | 454 | 0.72 |
| 630 | 1 | 580 | 0.92 | 517 | 0.82 | 454 | 0.72 |

HR = Rear flat horizontal terminals

VR = Rear flat vertical terminals

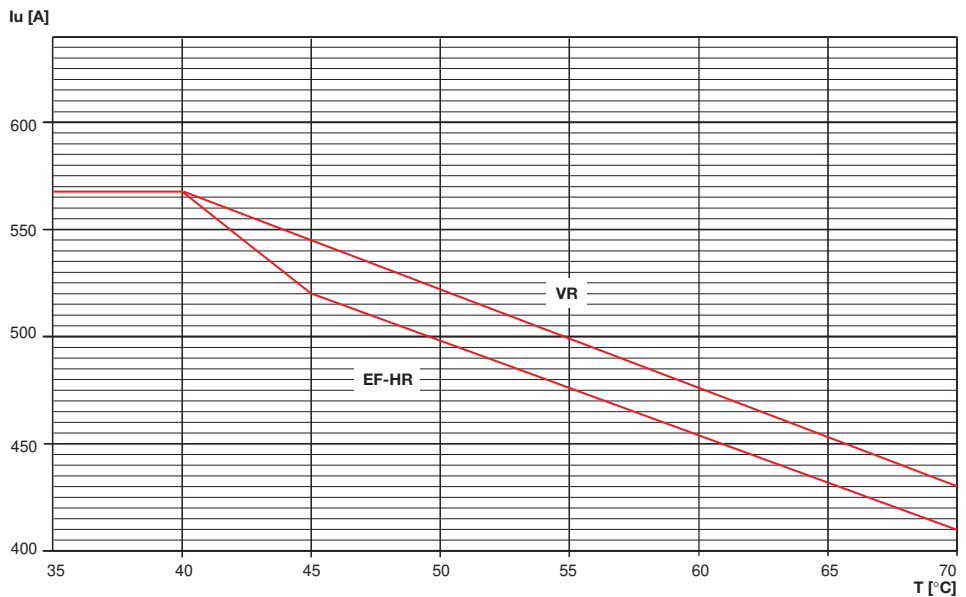

Temperature performances


Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T6 630 and T6D 630

Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|------------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t |
| F | 630 | 1 | 630 | 1 | 630 | 1 | 598.5 | 0.95 |
| FC | 630 | 1 | 630 | 1 | 598.5 | 0.95 | 567 | 0.9 |
| R (HR-VR) | 630 | 1 | 630 | 1 | 567 | 0.9 | 504 | 0.8 |

F = Front flat terminals FC = Front cables terminals R = Rear terminals

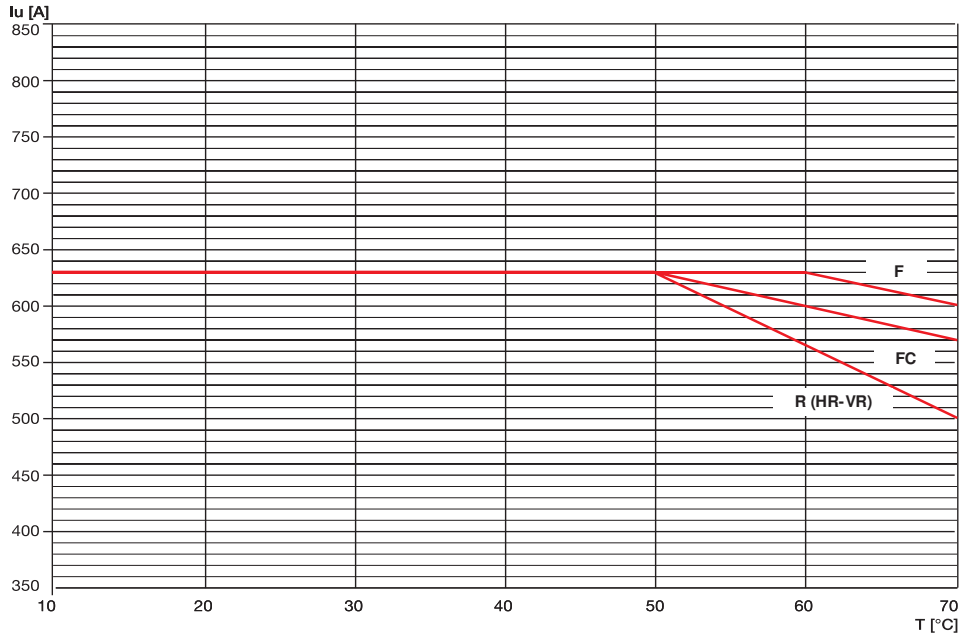


1SDC210011R0001

T6 630 and T6D 630

Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t |
| EF | 630 | 1 | 630 | 1 | 598.5 | 0.95 | 567 | 0.9 |
| VR | 630 | 1 | 630 | 1 | 598.5 | 0.95 | 567 | 0.9 |
| HR | 630 | 1 | 598.5 | 0.95 | 567 | 0.9 | 504 | 0.8 |

EF = Front extended terminals HR = Rear flat horizontal terminals VR = Rear flat vertical terminals

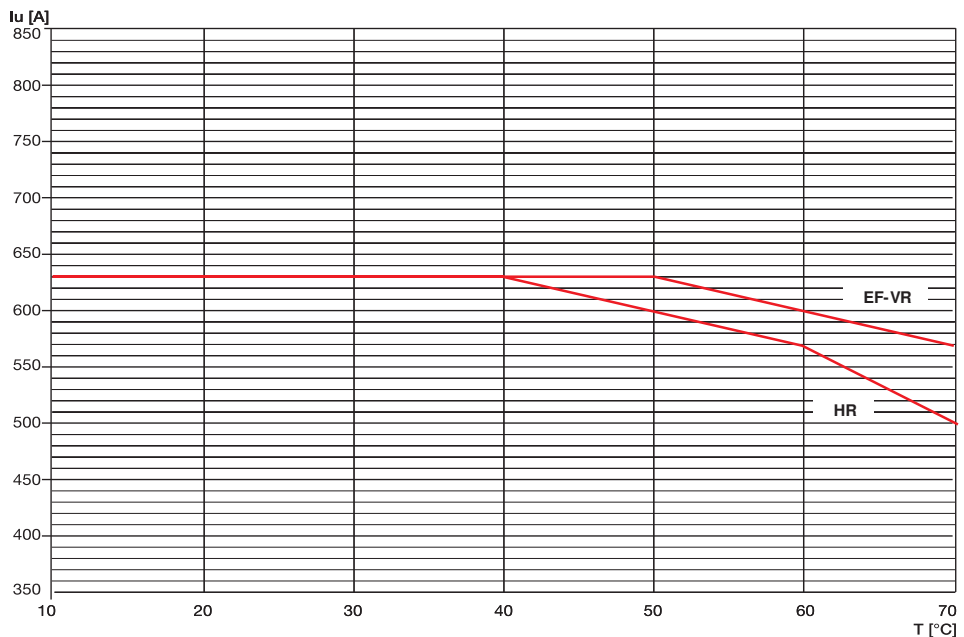

1SDC21002R0001

T6 800 and T6D 800


Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|------------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| F | 800 | 1 | 800 | 1 | 800 | 1 | 760 | 0.95 |
| FC | 800 | 1 | 800 | 1 | 760 | 0.95 | 720 | 0.9 |
| R (HR-VR) | 800 | 1 | 800 | 1 | 720 | 0.9 | 640 | 0.8 |

F = Front flat terminals

FC = Front terminals for cables

R = Rear terminals

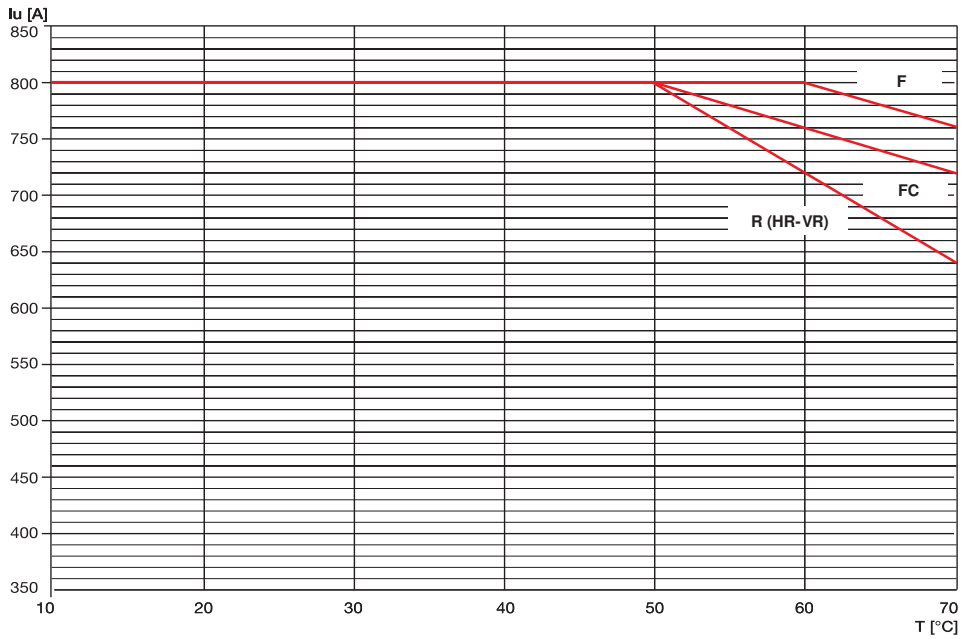

T6 800 and T6D 800


Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-----------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| EF | 800 | 1 | 800 | 1 | 760 | 0.95 | 720 | 0.9 |
| VR | 800 | 1 | 800 | 1 | 760 | 0.95 | 720 | 0.9 |
| HR | 800 | 1 | 760 | 0.95 | 720 | 0.9 | 640 | 0.8 |

EF = Front extended terminals

HR = Rear flat horizontal terminals

VR = Rear flat vertical terminals

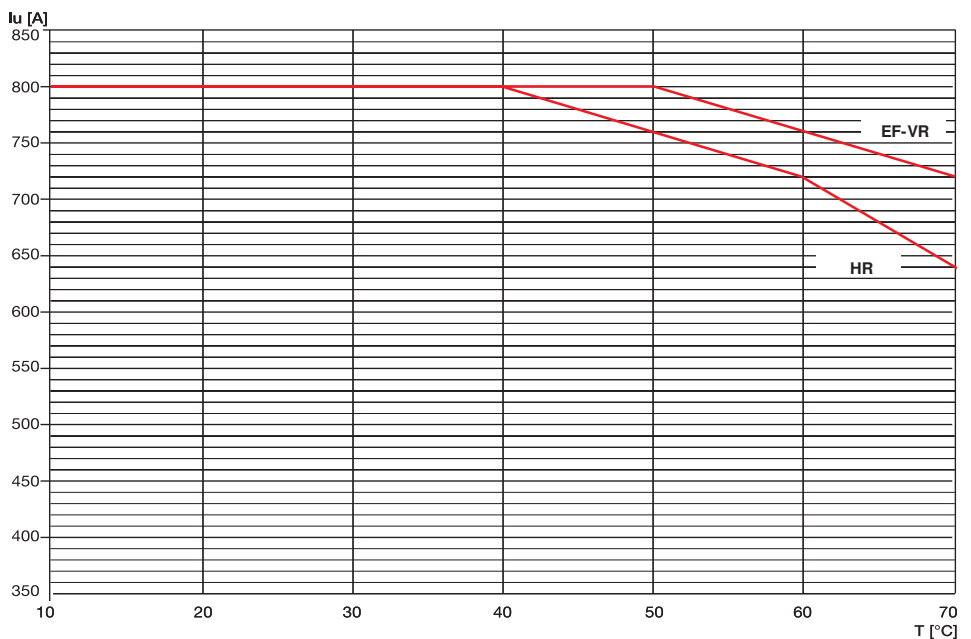

Temperature performances

Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

**T6 1000 and
T6D 1000**


Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|---------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| FC | 1000 | 1 | 1000 | 1 | 920 | 0,92 | 800 | 0,80 |
| R (HR) | 1000 | 1 | 920 | 0,92 | 840 | 0,84 | 760 | 0,76 |
| R (VR) | 1000 | 1 | 960 | 0,96 | 880 | 0,88 | 780 | 0,78 |
| ES | 1000 | 1 | 900 | 0,90 | 820 | 0,82 | 720 | 0,72 |

FC = Front terminals for cables
ES = Front extended spread terminals

R (HR) = Rear flat horizontal terminals

R (VR) = Rear flat vertical terminals

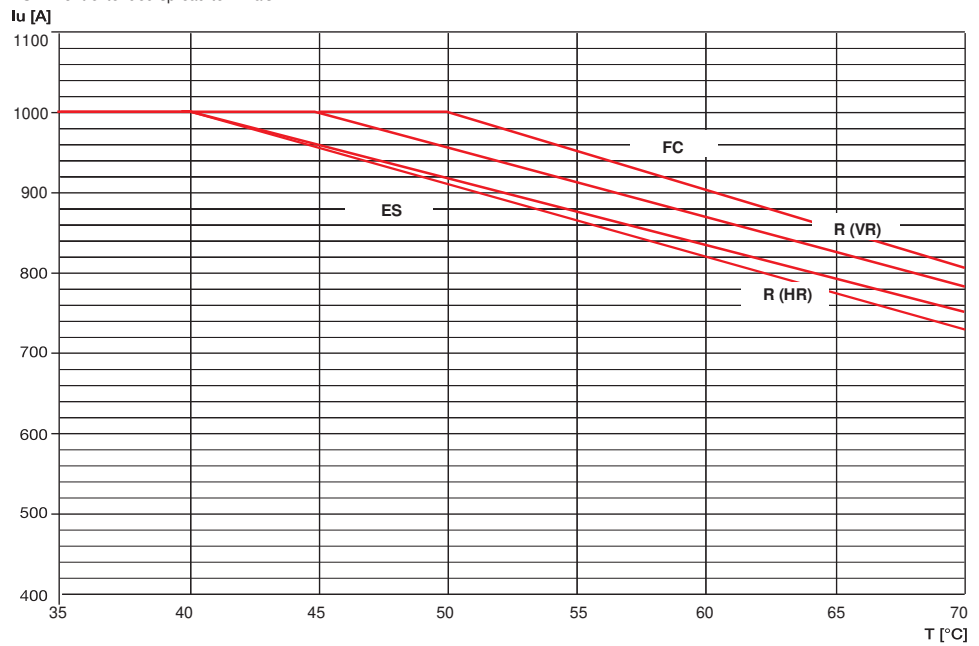

1SDC210015D0201

T7 V 1000

Fixed


| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1000 | 1 | 1000 | 1.00 | 1000 | 1.00 | 894 | 0.89 |
| EF-HR | 1000 | 1 | 1000 | 1.00 | 895 | 0.89 | 784 | 0.78 |

EF = Extended front

VR = Rear flat vertical

HR = Rear flat horizontal

Note: For ratings below 1000 A Tmax T7 does not undergo any thermal derating.

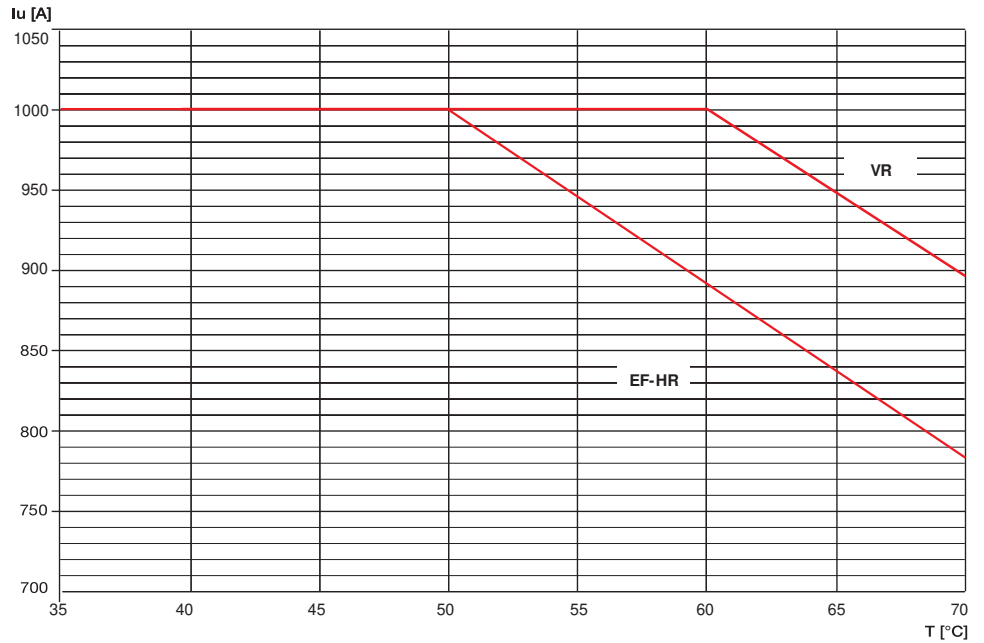

T7 V 1000


Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1000 | 1 | 1000 | 1.00 | 913 | 0.91 | 816 | 0.82 |
| EF-HR | 1000 | 1 | 1000 | 1.00 | 895 | 0.89 | 784 | 0.78 |

EF = Extended front

VR = Rear flat vertical

HR = Rear flat horizontal

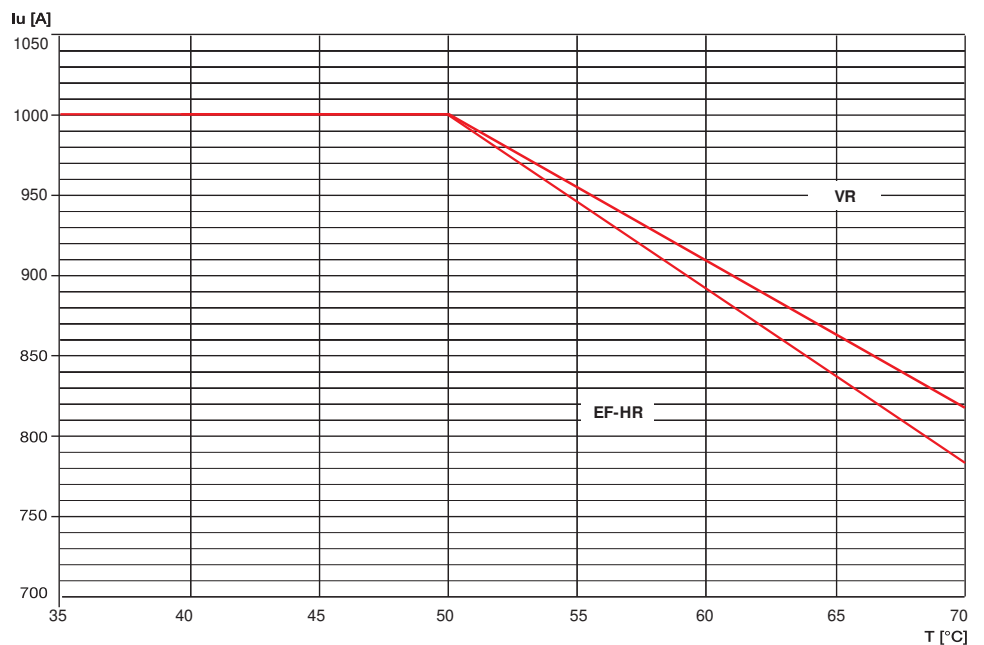

Temperature performances


Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T7 S,H,L, 1250 and T7D 1250

Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1250 | 1 | 1250 | 1.00 | 1250 | 1.00 | 1118 | 0.89 |
| EF-HR | 1250 | 1 | 1250 | 1.00 | 1118 | 0.89 | 980 | 0.78 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

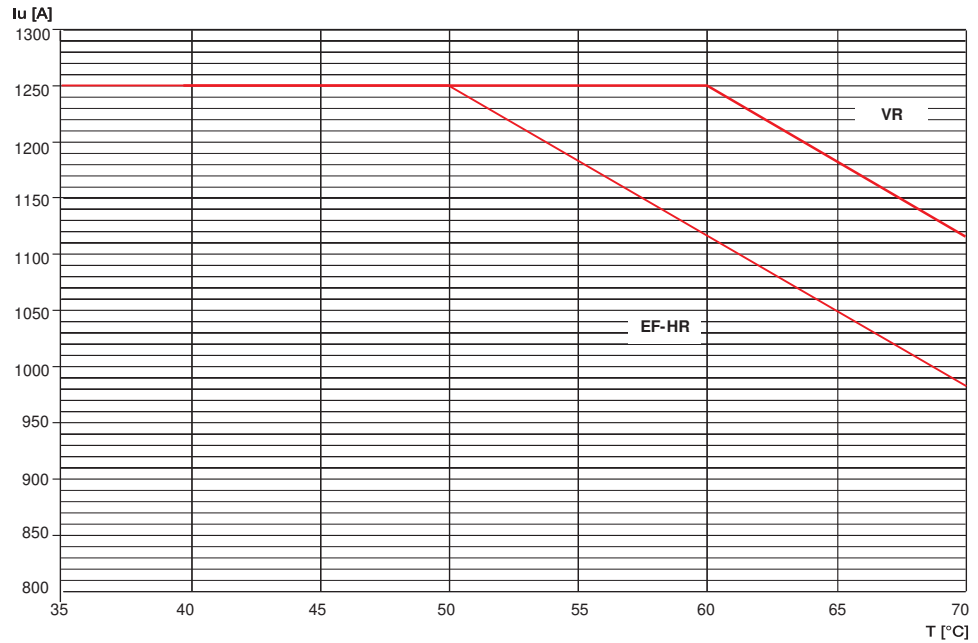


T7 V 1250

Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1250 | 1 | 1201 | 0.96 | 1096 | 0.88 | 981 | 0.78 |
| EF-HR | 1250 | 1 | 1157 | 0.93 | 1056 | 0.85 | 945 | 0.76 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

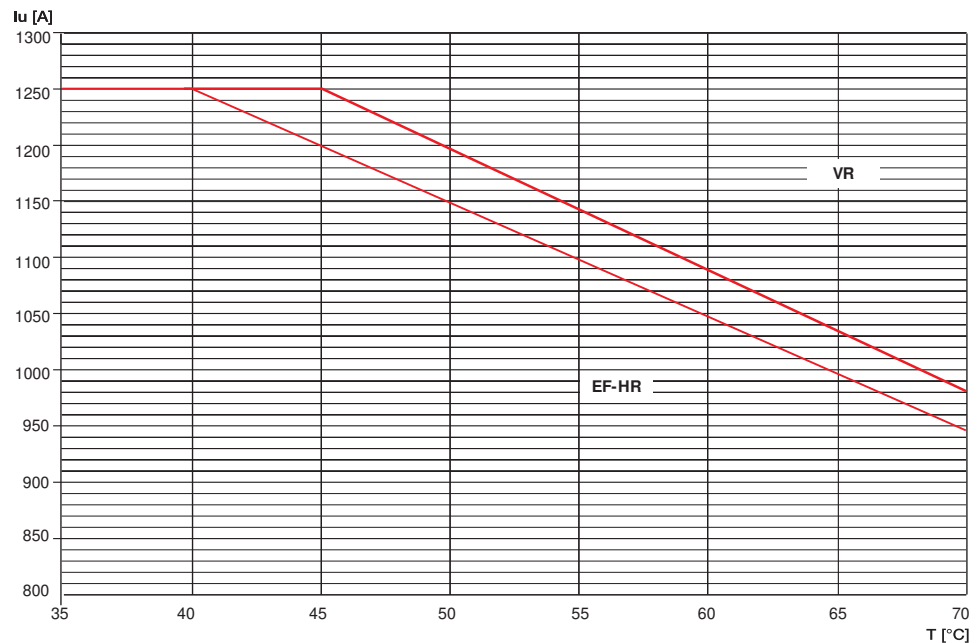


T7 S,H,L, 1250 and T7D 1250

Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1250 | 1 | 1250 | 1.00 | 1141 | 0.91 | 1021 | 0.82 |
| EF-HR | 1250 | 1 | 1250 | 1.00 | 1118 | 0.89 | 980 | 0.78 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

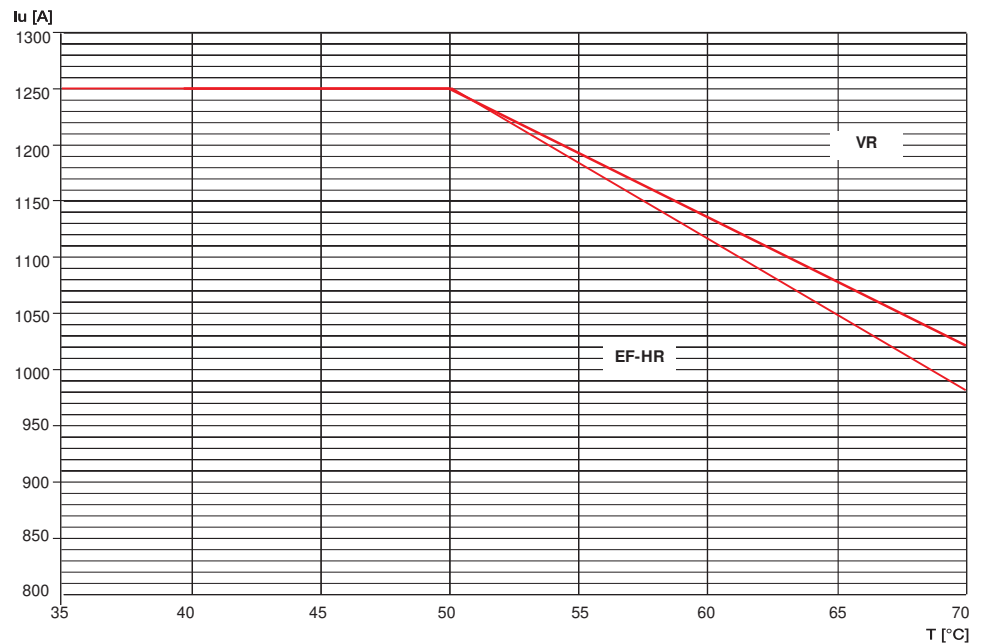


T7 V 1250

Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 | I_{max} [A] | I_1 |
| VR | 1250 | 1 | 1157 | 0.93 | 1056 | 0.85 | 945 | 0.76 |
| EF-HR | 1250 | 1 | 1000 | 0.80 | 913 | 0.73 | 816 | 0.65 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

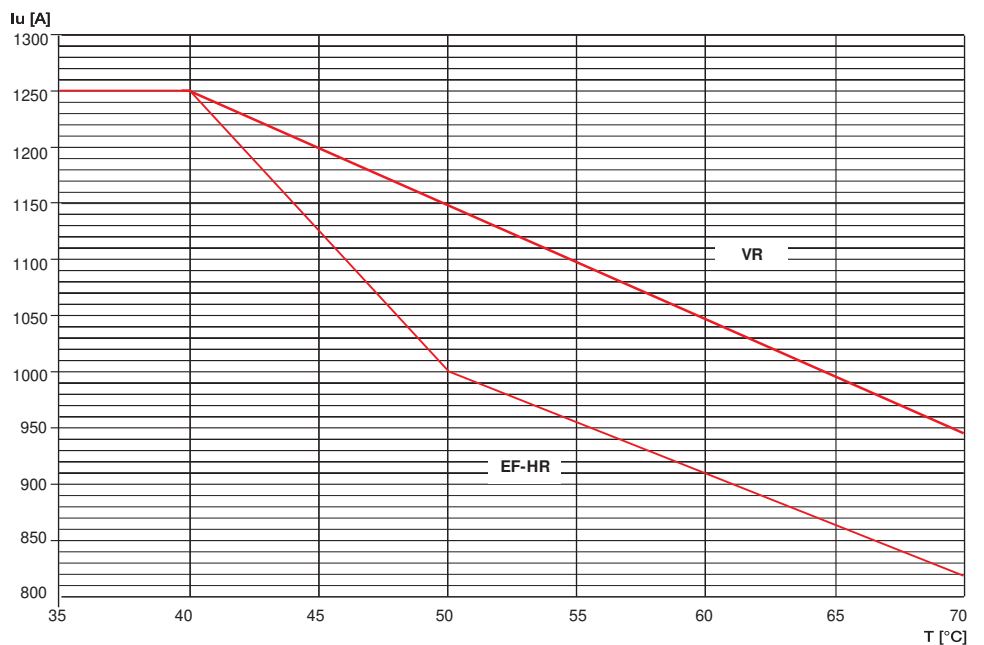

Temperature performances


Circuit-breakers with magnetic only or electronic trip units and switch-disconnectors

T7 S,H,L, 1600 and T7D 1600

Fixed

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t |
| VR | 1600 | 1 | 1537 | 0.96 | 1403 | 0.88 | 1255 | 0.78 |
| EF-HR | 1600 | 1 | 1481 | 0.93 | 1352 | 0.85 | 1209 | 0.76 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

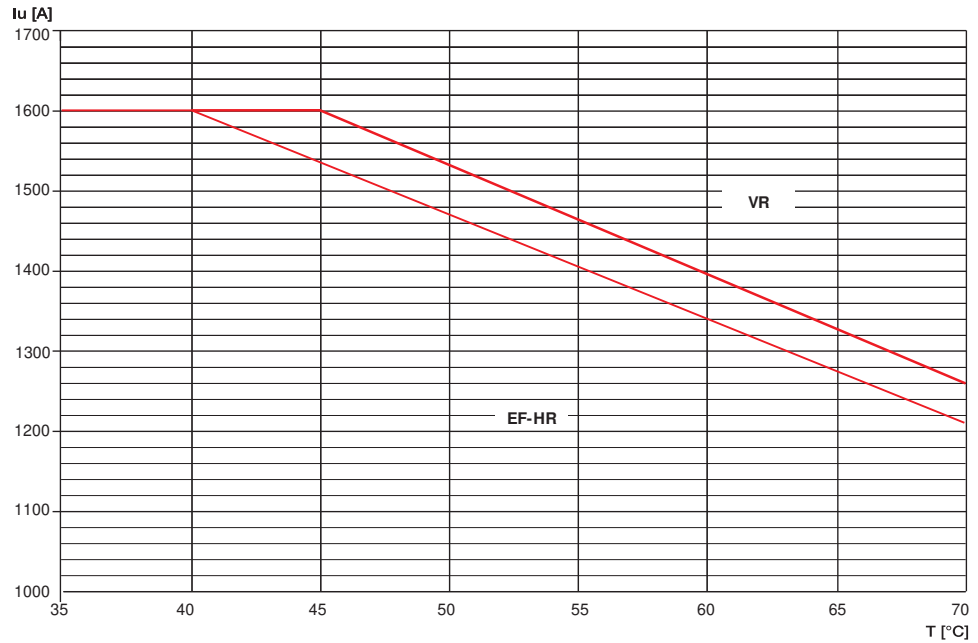


T7 S,H,L, 1600 and T7D 1600

Withdrawable

| | up to 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|-------|---------------|-------|---------------|-------|---------------|-------|---------------|-------|
| | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t | I_{max} [A] | I_t |
| VR | 1600 | 1 | 1481 | 0.93 | 1352 | 0.85 | 1209 | 0.76 |
| EF-HR | 1600 | 1 | 1280 | 0.80 | 1168 | 0.73 | 1045 | 0.65 |

EF = Extended front VR = Rear flat vertical HR = Rear flat horizontal

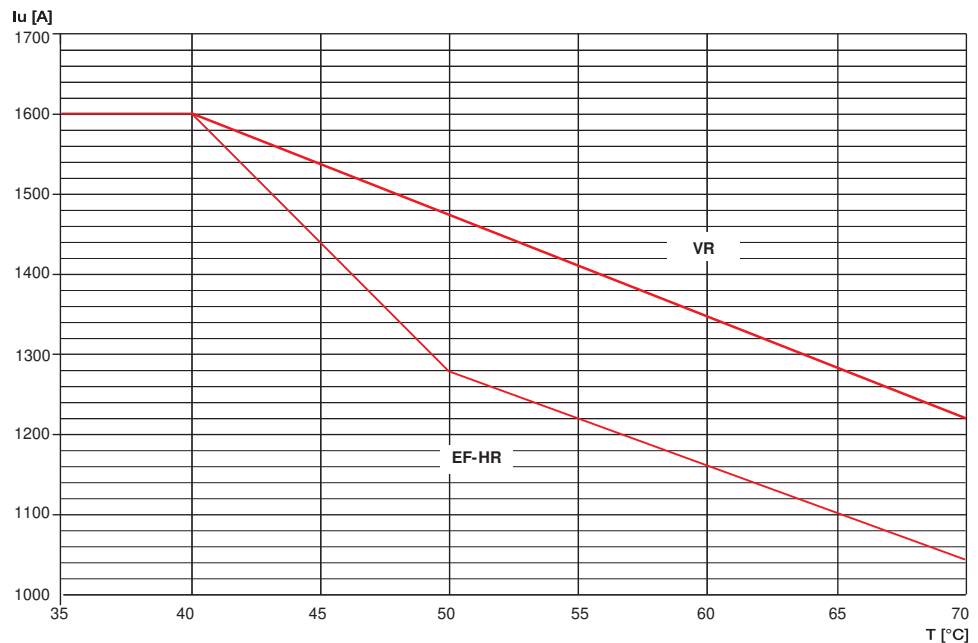

Temperature performances

Circuit-breakers with thermomagnetic trip units

Tmax T1 and T1 1P ⁽¹⁾

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 16 | 13 | 18 | 12 | 18 | 12 | 17 | 11 | 16 | 11 | 15 | 10 | 14 | 9 | 13 |
| 20 | 16 | 23 | 15 | 22 | 15 | 21 | 14 | 20 | 13 | 19 | 12 | 18 | 11 | 16 |
| 25 | 20 | 29 | 19 | 28 | 18 | 26 | 18 | 25 | 16 | 23 | 15 | 22 | 14 | 20 |
| 32 | 26 | 37 | 25 | 35 | 24 | 34 | 22 | 32 | 21 | 30 | 20 | 28 | 18 | 26 |
| 40 | 32 | 46 | 31 | 44 | 29 | 42 | 28 | 40 | 26 | 38 | 25 | 35 | 23 | 33 |
| 50 | 40 | 58 | 39 | 55 | 37 | 53 | 35 | 50 | 33 | 47 | 31 | 44 | 28 | 41 |
| 63 | 51 | 72 | 49 | 69 | 46 | 66 | 44 | 63 | 41 | 59 | 39 | 55 | 36 | 51 |
| 80 | 64 | 92 | 62 | 88 | 59 | 84 | 56 | 80 | 53 | 75 | 49 | 70 | 46 | 65 |
| 100 | 81 | 115 | 77 | 110 | 74 | 105 | 70 | 100 | 66 | 94 | 61 | 88 | 57 | 81 |
| 125 | 101 | 144 | 96 | 138 | 92 | 131 | 88 | 125 | 82 | 117 | 77 | 109 | 71 | 102 |
| 160 | 129 | 184 | 123 | 176 | 118 | 168 | 112 | 160 | 105 | 150 | 98 | 140 | 91 | 130 |

(*) For the T1 1p circuit-breaker (fitted with TMF fixed thermomagnetic trip unit), only consider the column corresponding to the maximum adjustment of the TMD trip units.

Tmax T2

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|-------|------|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 1.6 | 1.3 | 1.8 | 1.2 | 1.8 | 1.2 | 1.7 | 1.1 | 1.6 | 1 | 1.5 | 1 | 1.4 | 0.9 | 1.3 |
| 2 | 1.6 | 2.3 | 1.5 | 2.2 | 1.5 | 2.1 | 1.4 | 2 | 1.3 | 1.9 | 1.2 | 1.7 | 1.1 | 1.6 |
| 2.5 | 2 | 2.9 | 1.9 | 2.8 | 1.8 | 2.6 | 1.8 | 2.5 | 1.6 | 2.3 | 1.5 | 2.2 | 1.4 | 2 |
| 3.2 | 2.6 | 3.7 | 2.5 | 3.5 | 2.4 | 3.4 | 2.2 | 3.2 | 2.1 | 3 | 1.9 | 2.8 | 1.8 | 2.6 |
| 4 | 3.2 | 4.6 | 3.1 | 4.4 | 2.9 | 4.2 | 2.8 | 4 | 2.6 | 3.7 | 2.4 | 3.5 | 2.3 | 3.2 |
| 5 | 4 | 5.7 | 3.9 | 5.5 | 3.7 | 5.3 | 3.5 | 5 | 3.3 | 4.7 | 3 | 4.3 | 2.8 | 4 |
| 6.3 | 5.1 | 7.2 | 4.9 | 6.9 | 4.6 | 6.6 | 4.4 | 6.3 | 4.1 | 5.9 | 3.8 | 5.5 | 3.6 | 5.1 |
| 8 | 6.4 | 9.2 | 6.2 | 8.8 | 5.9 | 8.4 | 5.6 | 8 | 5.2 | 7.5 | 4.9 | 7 | 4.5 | 6.5 |
| 10 | 8 | 11.5 | 7.7 | 11 | 7.4 | 10.5 | 7 | 10 | 6.5 | 9.3 | 6.1 | 8.7 | 5.6 | 8.1 |
| 12.5 | 10.1 | 14.4 | 9.6 | 13.8 | 9.2 | 13.2 | 8.8 | 12.5 | 8.2 | 11.7 | 7.6 | 10.9 | 7.1 | 10.1 |
| 16 | 13 | 18 | 12 | 18 | 12 | 17 | 11 | 16 | 10 | 15 | 10 | 14 | 9 | 13 |
| 20 | 16 | 23 | 15 | 22 | 15 | 21 | 14 | 20 | 13 | 19 | 12 | 17 | 11 | 16 |
| 25 | 20 | 29 | 19 | 28 | 18 | 26 | 18 | 25 | 16 | 23 | 15 | 22 | 14 | 20 |
| 32 | 26 | 37 | 25 | 35 | 24 | 34 | 22 | 32 | 21 | 30 | 19 | 28 | 18 | 26 |
| 40 | 32 | 46 | 31 | 44 | 29 | 42 | 28 | 40 | 26 | 37 | 24 | 35 | 23 | 32 |
| 50 | 40 | 57 | 39 | 55 | 37 | 53 | 35 | 50 | 33 | 47 | 30 | 43 | 28 | 40 |
| 63 | 51 | 72 | 49 | 69 | 46 | 66 | 44 | 63 | 41 | 59 | 38 | 55 | 36 | 51 |
| 80 | 64 | 92 | 62 | 88 | 59 | 84 | 56 | 80 | 52 | 75 | 49 | 70 | 45 | 65 |
| 100 | 80 | 115 | 77 | 110 | 74 | 105 | 70 | 100 | 65 | 93 | 61 | 87 | 56 | 81 |
| 125 | 101 | 144 | 96 | 138 | 92 | 132 | 88 | 125 | 82 | 117 | 76 | 109 | 71 | 101 |
| 160 | 129 | 184 | 123 | 178 | 118 | 168 | 112 | 160 | 105 | 150 | 97 | 139 | 90 | 129 |

Tmax T3

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 63 | 51 | 72 | 49 | 69 | 46 | 66 | 44 | 63 | 41 | 59 | 38 | 55 | 35 | 51 |
| 80 | 64 | 92 | 62 | 88 | 59 | 84 | 56 | 80 | 52 | 75 | 48 | 69 | 45 | 64 |
| 100 | 80 | 115 | 77 | 110 | 74 | 105 | 70 | 100 | 65 | 93 | 61 | 87 | 56 | 80 |
| 125 | 101 | 144 | 96 | 138 | 92 | 132 | 88 | 125 | 82 | 116 | 76 | 108 | 70 | 100 |
| 160 | 129 | 184 | 123 | 176 | 118 | 168 | 112 | 160 | 104 | 149 | 97 | 139 | 90 | 129 |
| 200 | 161 | 230 | 154 | 220 | 147 | 211 | 140 | 200 | 130 | 186 | 121 | 173 | 112 | 161 |
| 250 | 201 | 287 | 193 | 278 | 184 | 263 | 175 | 250 | 163 | 233 | 152 | 216 | 141 | 201 |

Temperature performances

Circuit-breakers with thermomagnetic trip units

Tmax T4

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 20 | 19 | 27 | 18 | 24 | 16 | 23 | 14 | 20 | 12 | 17 | 10 | 15 | 8 | 13 |
| 32 | 26 | 43 | 24 | 39 | 22 | 36 | 19 | 32 | 16 | 27 | 14 | 24 | 11 | 21 |
| 50 | 37 | 62 | 35 | 58 | 33 | 54 | 30 | 50 | 27 | 46 | 25 | 42 | 22 | 39 |
| 80 | 59 | 98 | 55 | 92 | 52 | 86 | 48 | 80 | 44 | 74 | 40 | 66 | 32 | 58 |
| 100 | 83 | 118 | 80 | 113 | 74 | 106 | 70 | 100 | 66 | 95 | 59 | 85 | 49 | 75 |
| 125 | 103 | 145 | 100 | 140 | 94 | 134 | 88 | 125 | 80 | 115 | 73 | 105 | 63 | 95 |
| 160 | 130 | 185 | 124 | 176 | 118 | 168 | 112 | 160 | 106 | 150 | 100 | 104 | 90 | 130 |
| 200 | 162 | 230 | 155 | 220 | 147 | 210 | 140 | 200 | 133 | 190 | 122 | 175 | 107 | 160 |
| 250 | 200 | 285 | 193 | 275 | 183 | 262 | 175 | 250 | 168 | 240 | 160 | 230 | 150 | 220 |

Tmax T5

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 320 | 260 | 368 | 245 | 350 | 234 | 335 | 224 | 320 | 212 | 305 | 200 | 285 | 182 | 263 |
| 400 | 325 | 465 | 310 | 442 | 295 | 420 | 280 | 400 | 265 | 380 | 250 | 355 | 230 | 325 |
| 500 | 435 | 620 | 405 | 580 | 380 | 540 | 350 | 500 | 315 | 450 | 280 | 400 | 240 | 345 |

Tmax T6

| In [A] | 10 °C | | 20 °C | | 30 °C | | 40 °C | | 50 °C | | 60 °C | | 70 °C | |
|--------|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|-------|-----|
| | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX | MIN | MAX |
| 630 | 520 | 740 | 493 | 705 | 462 | 660 | 441 | 630 | 405 | 580 | 380 | 540 | 350 | 500 |
| 800 | 685 | 965 | 640 | 905 | 605 | 855 | 560 | 800 | 520 | 740 | 470 | 670 | 420 | 610 |

Power losses

| Power [W/pole] | In [A] | T1/T1 1P | T2 | | T3 | | T4 | | T5 | | T6 | | T7 S,H,L | | T7 V | |
|----------------|--------|----------|-----|------|------|------|------|------|------|------|------|------|----------|------|------|-------|
| | | F | F | P | F | P | F | P/W | F | P/W | F | W | F | W | F | W |
| TMD | 1 | | 1.5 | 1.7 | | | | | | | | | | | | |
| TMA | 1.6 | | 2.1 | 2.5 | | | | | | | | | | | | |
| TMG | 2 | | 2.5 | 2.9 | | | | | | | | | | | | |
| MF | 2.5 | | 2.6 | 3 | | | | | | | | | | | | |
| MA | 3.2 | | 2.9 | 3.4 | | | | | | | | | | | | |
| | 4 | | 2.6 | 3 | | | | | | | | | | | | |
| | 5 | | 2.9 | 3.5 | | | | | | | | | | | | |
| | 6.3 | | 3.5 | 4.1 | | | | | | | | | | | | |
| | 8 | | 2.7 | 3.2 | | | | | | | | | | | | |
| | 10 | | 3.1 | 3.6 | | | | | | | | | | | | |
| | 12.5 | | 1.1 | 1.3 | | | | | | | | | | | | |
| | 16 | 1.5 | 1.4 | 1.6 | | | | | | | | | | | | |
| | 20 | 1.8 | 1.7 | 2 | | | 3.6 | 3.6 | | | | | | | | |
| | 25 | 2 | 2.3 | 2.8 | | | | | | | | | | | | |
| | 32 | 2.1 | 2.7 | 3.2 | | | 3.7 | 3.7 | | | | | | | | |
| | 40 | 2.6 | 3.9 | 4.6 | | | | | | | | | | | | |
| | 50 | 3.7 | 4.3 | 5 | | | 3.9 | 4.1 | | | | | | | | |
| | 63 | 4.3 | 5.1 | 6 | 4.3 | 5.1 | | | | | | | | | | |
| | 80 | 4.8 | 6.1 | 7.2 | 4.8 | 5.8 | 4.6 | 5 | | | | | | | | |
| | 100 | 7 | 8.5 | 10 | 5.6 | 6.8 | 5.2 | 5.8 | | | | | | | | |
| | 125 | 10.7 | 12 | 14.7 | 6.6 | 7.9 | 6.2 | 7.2 | | | | | | | | |
| | 160 | 15 | 17 | 20 | 7.9 | 9.5 | 7.4 | 9 | | | | | | | | |
| | 200 | | | | 13.2 | 15.8 | 9.9 | 12.4 | | | | | | | | |
| | 250 | | | | 17.8 | 21.4 | 13.7 | 17.6 | | | | | | | | |
| | 320 | | | | | | | | 13.6 | 20.9 | | | | | | |
| | 400 | | | | | | | | 19.5 | 31 | | | | | | |
| | 500 | | | | | | | | 28.8 | 36.7 | | | | | | |
| | 630 | | | | | | | | | | 30.6 | 30 | | | | |
| | 800 | | | | | | | | | | 31 | 39.6 | | | | |
| PR22.. | 10 | | 0.5 | 0.6 | | | | | | | | | | | | |
| PR23.. | 25 | | 1 | 1.2 | | | | | | | | | | | | |
| PR33.. | 63 | | 3.5 | 4 | | | | | | | | | | | | |
| | 100 | | 8 | 9.2 | | | 1.7 | 2.3 | | | | | | | | |
| | 160 | | 17 | 20 | | | 4.4 | 6 | | | | | | | | |
| | 250 | | | | | | 10.7 | 14.6 | | | | | | | | |
| | 320 | | | | | | 17.6 | 24 | 10.6 | 17.9 | | | | | | |
| | 400 | | | | | | | | 16.5 | 28 | | | 5 | 9 | 8 | 12 |
| | 630 | | | | | | | | 41 | 53.6 | | | 12 | 22 | 20 | 30 |
| | 800 | | | | | | | | | | 32 | 41.6 | 19.3 | 35.3 | 32 | 48 |
| | 1000 | | | | | | | | | | | | 30 | 55 | 50 | 75 |
| | 1250 | | | | | | | | | | | | 47 | 86 | 78.3 | 117.3 |
| | 1600 | | | | | | | | | | | | 77 | 141 | | |

Magnetic trip values

| | Release | I_n [A] | I_3 [A] | Single-phase trip current (% I_3) ⁽¹⁾ |
|-----------------------|----------------------|------------|--------------------|---|
| T1 1p 160 | TMF | 16...160 | 500...1600 | |
| T1 160 | TMD | 16...50 | 500 | 150% |
| | | 16...50 | 630 ⁽²⁾ | 200% |
| | | 63...160 | 630...1600 | 200% |
| T2 160 | TMD | 1.6...25 | 16...500 | 200% |
| | | 32...50 | 500 | 180% |
| | | 63...160 | 630...1600 | 150% |
| | MF/MA | 1...20 | 13...240 | 200% |
| | | 32...52 | 192...624 | 180% |
| | | 80...100 | 480...1200 | 150% |
| T3 250 | PR221DS | 10...160 | 1...10 x I_n | 100% |
| | TMG | 63...250 | 400...750 | 150% |
| | TMD | 63...250 | 630...2500 | 150% |
| | MA | 100...200 | 600...2400 | 150% |
| T4 250/320 | TMD | 20...50 | 320...500 | 150% |
| | TMA | 80...250 | 400...2500 | 150% |
| | MA | 10...200 | 60...2800 | 150% |
| | PR221DS | 100...320 | 1...10 x I_n | 100% |
| | PR222DS/P-PR222DS/PD | 100...320 | 1...12 x I_n | 100% |
| | PR223DS | 100...320 | 1.5...12 x I_n | 100% |
| T5 400/630 | TMG | 320...500 | 1600...2500 | 150% |
| | TMA | 320...500 | 3200...5000 | 150% |
| | PR221DS | 320...630 | 1...10 x I_n | 100% |
| | PR222DS/P-PR222DS/PD | 320...630 | 1...12 x I_n | 100% |
| | PR223DS | 320...630 | 1.5...12 x I_n | 100% |
| | TMA | 630...800 | 3150...8000 | 150% |
| T6 630/800/1000 | PR221DS | 630...1000 | 1...10 x I_n | 100% |
| | PR222DS/P-PR222DS/PD | 630...1000 | 1...12 x I_n | 100% |
| | PR223DS | 630...1000 | 1.5...12 x I_n | 100% |
| | TMA | 630...800 | 3150...8000 | 150% |
| T7 800/1000/1250/1600 | PR231/P-PR232/P | 400...1600 | 1.5...12 x I_n | 100% |
| | PR331/P-PR332/P | 400...1600 | 1.5...15 x I_n | 100% |

I_3 = instantaneous trip current
 TMF = thermomagnetic release with fixed thermal and magnetic threshold
 TMD = thermomagnetic release with adjustable thermal and fixed magnetic threshold
 TMA = thermomagnetic release with adjustable thermal and magnetic threshold
 TMG = thermomagnetic release for generator protection
 PR22_, PR23_, PR33_ = electronic releases

⁽¹⁾ Satisfies the requirements of the IEC 60947-2 Standard, section 8.3.3.1.2

⁽²⁾ Only T1B and T1C

Special applications

Use of apparatus at 16 2/3 Hz

The series of thermomagnetic Tmax circuit-breakers are suitable for operation at 16 2/3 Hz frequencies - an application mainly used in the railway sector.


The electrical performances are given below (Breaking capacity I_{cu}) according to the voltage and the number of poles to be connected in series with reference to the connection diagrams.

| I _{cu} [kA] | Connection diagram | T1 | | | T2 | | | | T3 | | T4 | | | | | T5 | | | | | T6 | | | |
|--|--------------------|----|----|----|----|----|----|-----|----|----|----|----|----|-----|-----|----|----|----|-----|-----|----|----|----|-----|
| | | B | C | N | N | S | H | L | N | S | N | S | H | L | V | N | S | H | L | V | N | S | H | L |
| 250 V (AC) 2 poles in series | A | 16 | 25 | 36 | 36 | 50 | 70 | 85 | 36 | 50 | 36 | 50 | 70 | 100 | 150 | 36 | 50 | 70 | 100 | 150 | 36 | 50 | 70 | 100 |
| 250 V (AC) 3 poles in series | B-C | 20 | 30 | 40 | 40 | 55 | 85 | 100 | 40 | 55 | - | - | - | - | - | - | - | - | - | - | - | - | - | - |
| 500 V (AC) 2 poles in series | A | - | - | - | - | - | - | - | - | - | 25 | 36 | 50 | 70 | 100 | 25 | 36 | 50 | 70 | 100 | 20 | 35 | 50 | 70 |
| 500 V (AC) 3 poles in series | B-C | 16 | 25 | 36 | 36 | 50 | 70 | 85 | 36 | 50 | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| 750 V (AC) 3 poles in series | B-C | - | - | - | - | - | - | - | - | - | 16 | 25 | 36 | 50 | 70 | 16 | 25 | 36 | 50 | 70 | 16 | 20 | 36 | 50 |
| 750 V (AC) 4 poles in series ⁽¹⁾ | D | - | - | - | - | - | - | 50 | - | - | - | - | - | - | - | - | - | - | - | - | - | - | - | |
| 1000 V (AC) 4 poles in series ⁽²⁾ | D | - | - | - | - | - | - | - | - | - | - | - | - | 40 | - | - | - | - | 40 | - | - | - | 40 | |

⁽¹⁾ Circuit-breakers with neutral at 100%
⁽²⁾ Use 1000 V DC version circuit-breakers


Connection diagrams

Diagram A: Interruption with one pole for polarity

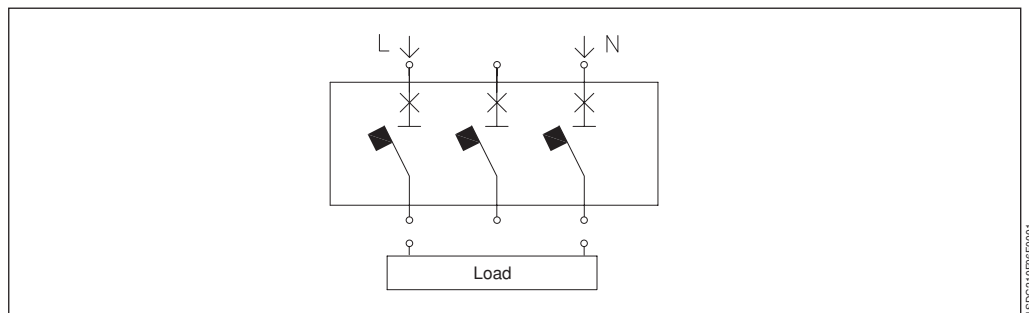

Note: Without neutral connected to earth, the installation method must be such as to make the probability of a second earth fault nil.

Diagram B: Interruption with two poles in series for one polarity and one pole for the other polarity

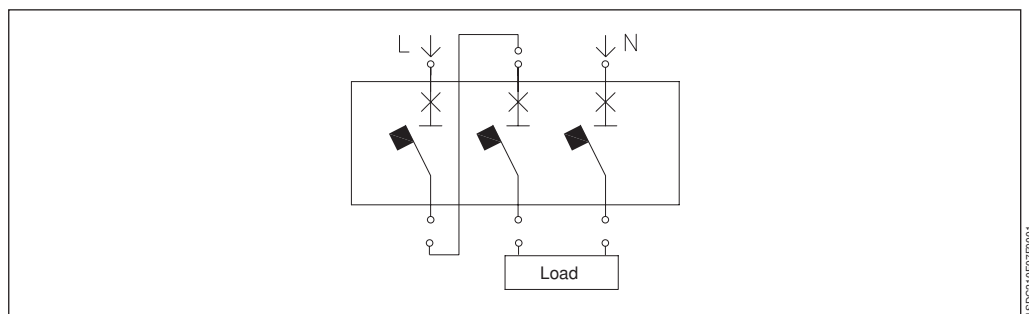

Note: Without neutral connected to earth, the installation method must be such as to make the probability of a second earth fault nil.

Special applications

Use of apparatus at 16 2/3 Hz

Diagram C: Interruption with three poles in series for one polarity (with neutral earthed)

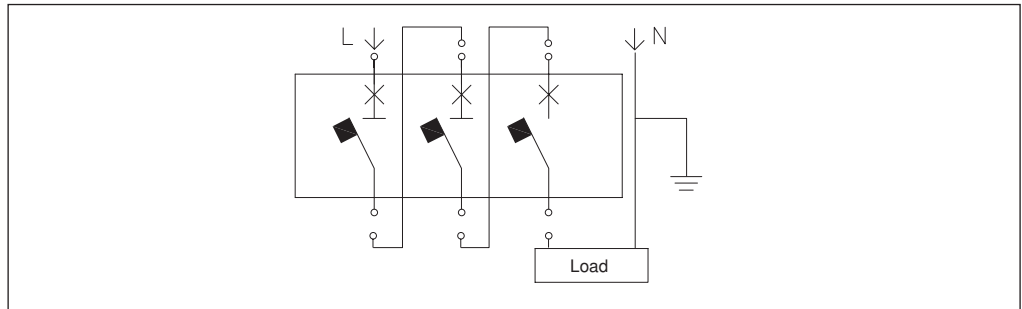


Diagram D: Interruption with four poles in series for one polarity (with neutral earthed)


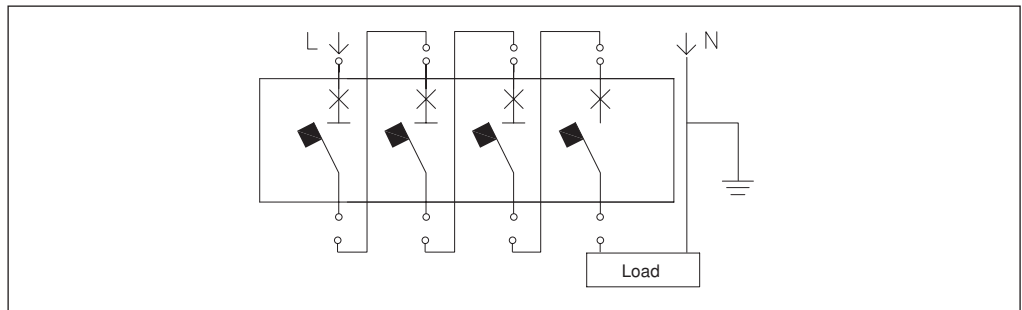


Diagram E: Interruption with three poles in series for one polarity and one pole for the other polarity, and interruption with two poles in series for each polarity

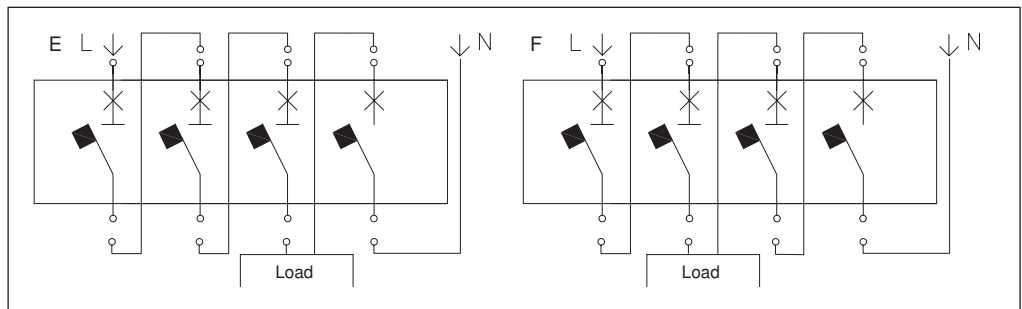

Note: Without neutral connected to earth, the installation method must be such as to make the probability of a second earth fault negligible

Trip thresholds

The thermal threshold of the circuit-breaker is the same as the normal version.

For the magnetic threshold, a correction coefficient must be used to be made on the protection thresholds as indicated in the table:

| Circuit-breaker | Diagram A | Diagram B-C | Diagram D |
|-----------------|-----------|-------------|-----------|
| T1 | 1 | 1 | – |
| T2 | 0.9 | 0.9 | 0.9 |
| T3 | 0.9 | 0.9 | – |
| T4 | 0.9 | 0.9 | 0.9 |
| T5 | 0.9 | 0.9 | 0.9 |

Setting adjustment of the magnetic threshold

The correction factor takes into consideration the phenomena that, with frequencies differing from 50-60 Hz, modifies the tripping value of protection threshold against short circuit. The value that must be set on the trip unit is therefore the real wanted tripping value divided by the correction factor.

Example

- Service current: $I_b = 200 \text{ A}$
- Circuit-breaker: T4 250 In = 250 A
- Desired magnetic protection: $I_3 = 2000 \text{ A}$
- Magnetic threshold value to be set:

$$\text{Set: } \frac{I_3}{k_m}$$

therefore in this specific case, the setting for the adjustment value for the magnetic threshold is:

$$\text{Set: } \frac{2000}{0.9} = 2222 \text{ A (roughly equal to } 9 I_n)$$

Special applications

Use of apparatus at 400 Hz

At high frequencies, the performances of the circuit-breakers are reclassified to take the following phenomena into account:

- the increase in the skin effect and increase in the inductive reactance, in a way directly proportional to the frequency, cause overheating of the conductor or of the copper components which normally carry the current in the circuit-breaker;
- the elongation of the hysteresis ring and the reduction in the magnetic saturation value, with consequent variation in the forces associated with the magnetic field at a given current value.

In general, these phenomena have effects on the behaviour of both the thermomagnetic releases and of the elements of the circuit-breaker for interrupting the current.

The following tables refer to circuit-breakers with thermomagnetic releases, with a breaking capacity of less than 36 kA. This value is normally more than sufficient for protection of 400 Hz plants, normally characterised by fairly low short-circuit currents.

As can be seen from the data indicated, the trip threshold of the thermal component (I_n) decreases as the frequency increases due to the reduced conductivity of the materials and to the increase in associated thermal phenomena. In general, derating of this performance is equal to 10%.

Vice versa, the magnetic threshold (I_3) increases as the frequency increases: for this reason, use of a 5- I_n version is recommended. In these tables, K_m is the multiplication factor of I_3 due to the induced magnetic fields.

T1 160 - TMD 16÷80 A

| | I_1 (400 Hz) | | | I_3 | | | |
|----------------|----------------|-----|------|-------|---------------|-------|----------------|
| | I_n | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T1B 160 | 16 | 10 | 12 | 14 | 500 | 2 | 1000 |
| T1C 160 | 20 | 12 | 15 | 18 | 500 | 2 | 1000 |
| T1N 160 | 25 | 16 | 19 | 22 | 500 | 2 | 1000 |
| | 32 | 20 | 24.5 | 29 | 500 | 2 | 1000 |
| | 40 | 25 | 30.5 | 36 | 500 | 2 | 1000 |
| | 50 | 31 | 38 | 45 | 500 | 2 | 1000 |
| | 63 | 39 | 48 | 57 | 630 | 2 | 1260 |
| | 80 | 50 | 61 | 72 | 800 | 2 | 1600 |

T2 160 - TMD 1.6÷80 A

| | I_1 (400 Hz) | | | I_3 | | | |
|----------------|----------------|-----|------|-------|---------------|-------|----------------|
| | I_n | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T2N 160 | 1.6 | 1 | 1.2 | 1.4 | 16 | 1.7 | 27.2 |
| | 2 | 1.2 | 1.5 | 1.8 | 20 | 1.7 | 34 |
| | 2.5 | 1.5 | 1.9 | 2.2 | 25 | 1.7 | 42.5 |
| | 3.2 | 2 | 2.5 | 2.9 | 32 | 1.7 | 54.4 |
| | 4 | 2.5 | 3 | 3.6 | 40 | 1.7 | 68 |
| | 5 | 3 | 3.8 | 4.5 | 50 | 1.7 | 85 |
| | 6.3 | 4 | 4.8 | 5.7 | 63 | 1.7 | 107.1 |
| | 8 | 5 | 6.1 | 7.2 | 80 | 1.7 | 136 |
| | 10 | 6.3 | 7.6 | 9 | 100 | 1.7 | 170 |
| | 12.5 | 7.8 | 9.5 | 11.2 | 125 | 1.7 | 212.5 |
| | 16 | 10 | 12 | 14 | 500 | 1.7 | 850 |
| | 20 | 12 | 15 | 18 | 500 | 1.7 | 850 |
| | 25 | 16 | 19 | 22 | 500 | 1.7 | 850 |
| | 32 | 20 | 24.5 | 29 | 500 | 1.7 | 850 |
| | 40 | 25 | 30.5 | 36 | 500 | 1.7 | 850 |
| | 50 | 31 | 38 | 45 | 500 | 1.7 | 850 |
| | 63 | 39 | 48 | 57 | 630 | 1.7 | 1071 |
| | 80 | 50 | 61 | 72 | 800 | 1.7 | 1360 |

T2 160 - TMG 16÷160 A

| | I_1 (400 Hz) | | | | I_3 | | |
|----------------|----------------|-----|------|-----|---------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T2N 160 | 16 | 10 | 12 | 14 | 160 | 1.7 | 272 |
| | 25 | 16 | 19 | 22 | 160 | 1.7 | 272 |
| | 40 | 25 | 30.5 | 36 | 200 | 1.7 | 340 |
| | 63 | 39 | 48 | 57 | 200 | 1.7 | 340 |
| | 80 | 50 | 61 | 72 | 240 | 1.7 | 408 |
| | 100 | 63 | 76.5 | 90 | 300 | 1.7 | 510 |
| | 125 | 79 | 96 | 113 | 375 | 1.7 | 637.5 |
| | 160 | 100 | 122 | 144 | 480 | 1.7 | 816 |

T3 250 - TMG 63÷250 A

| | I_1 (400 Hz) | | | | I_3 | | |
|----------------|----------------|-----|------|-----|---------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T3N 250 | 63 | 39 | 48 | 57 | 400 | 1.7 | 680 |
| | 80 | 50 | 61 | 72 | 400 | 1.7 | 680 |
| | 100 | 63 | 76.5 | 90 | 400 | 1.7 | 680 |
| | 125 | 79 | 96 | 113 | 400 | 1.7 | 680 |
| | 160 | 100 | 122 | 144 | 480 | 1.7 | 816 |
| | 200 | 126 | 153 | 180 | 600 | 1.7 | 1020 |
| | 250 | 157 | 191 | 225 | 750 | 1.7 | 1275 |

T3 250 - TMD 63÷125 A

| | I_1 (400 Hz) | | | | I_3 | | |
|----------------|----------------|-----|------|-----|---------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T3N 250 | 80 | 50 | 61 | 72 | 800 | 1.7 | 1360 |
| | 100 | 63 | 76.5 | 90 | 1000 | 1.7 | 1700 |
| | 125 | 79 | 96 | 113 | 1250 | 1.7 | 2125 |

T4 250 - TMD 20÷50 A

| | I_1 (400 Hz) | | | | I_3 | | |
|----------------|----------------|-----|------|-----|---------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T4N 250 | 20 | 12 | 15 | 18 | 320 | 1.7 | 544 |
| | 32 | 20 | 24.5 | 29 | 320 | 1.7 | 544 |
| | 50 | 31 | 38 | 45 | 500 | 1.7 | 850 |

T4 250/320 - TMA 80÷250 A

| | I_1 (400 Hz) | | | | I_3 settings (MIN=5xIn) | | |
|--------------------|----------------|-----|------|-----|---------------------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T4N 250/320 | 80 | 50 | 61 | 72 | 400 | 1.7 | 680 |
| | 100 | 63 | 76.5 | 90 | 500 | 1.7 | 850 |
| | 125 | 79 | 96 | 113 | 625 | 1.7 | 1060 |
| | 160 | 100 | 122 | 144 | 800 | 1.7 | 1360 |
| | 200 | 126 | 153 | 180 | 1000 | 1.7 | 1700 |
| | 250 | 157 | 191 | 225 | 1250 | 1.7 | 2125 |

Special applications

Use of apparatus at 400 Hz

T5 400/630 - TMA 320÷500 A

| | I_1 (400 Hz) | | | | I_3 settings (MIN=5xIn) | | |
|----------------|----------------|-----|-----|-----|---------------------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T5N | 320 | 201 | 244 | 288 | 1600 | 1.5 | 2400 |
| 400/630 | 400 | 252 | 306 | 360 | 2000 | 1.5 | 3000 |
| | 500 | 315 | 382 | 450 | 2500 | 1.5 | 3750 |

T5 400/630 - TMG 320÷500 A

| | I_1 (400 Hz) | | | | I_3 settings (MIN=5xIn) | | |
|----------------|----------------|-----|-----|-----|---------------------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T5N | 320 | 201 | 244 | 288 | 800...1600 | 1.5 | 1200...2400 |
| 400/630 | 400 | 252 | 306 | 360 | 1000...2000 | 1.5 | 1500...3000 |
| | 500 | 315 | 382 | 450 | 1250...2500 | 1.5 | 1875...3750 |

T6 630/800 - TMA

| | I_1 (400 Hz) | | | | I_3 settings (MIN=5xIn) | | |
|----------------|----------------|-----|-----|-----|---------------------------|-------|----------------|
| | In | MIN | MED | MAX | I_3 (50 Hz) | K_m | I_3 (400 Hz) |
| T6N 630 | 630 | 397 | 482 | 567 | 3150 | 1.5 | 4725 |
| T6N 800 | 800 | 504 | 602 | 720 | 4000 | 1.5 | 6000 |

Example

Network data:

- rated voltage 400 V AC
- rated frequency 400 Hz
- load current 240 A (I_b)
- current carrying capacity of cable 260 A (I_z)
- short circuit current 32 kA

To decide which circuit-breaker is suitable for this application, the two fundamental conditions for correct use of the circuit-breaker at 400Hz must be remembered:

- derating of the thermal protection equal to 10%;
- increase in the magnetic threshold according to the K_m coefficient.

Should the installation be at power frequency (50/60 Hz), a T4N 250 TMA In=250 circuit-breaker would be adequate, based on the rated load current (240 A) and on the installation short-circuit current.

However, since the circuit-breaker must be sized for an application at 400 Hz, it is necessary to consider the prescriptions listed above and, in particular, the derating of the thermal protection means a maximum adjustment of:

$$I_{1 \max 400 \text{ Hz}} = 250 - \left(\frac{250 \cdot 10}{100} \right) = 225 \text{ A}$$

As can be noted, this value is less than the load current and the circuit-breaker with In = 250 A is not adequate. It is therefore necessary to use a T4N 320 TMA In =320 circuit-breaker, since by adjusting the thermomagnetic release to the median value (0.85) and considering the derating of 10%, the following magnetic trip threshold is obtained:

$$I_{1 \text{ med } 400 \text{ Hz}} = 0.85 \cdot \left[320 - \left(\frac{320 \cdot 10}{100} \right) \right] \approx 244 \text{ A}$$

This value is higher than the rated load current and lower than the current-carrying capacity of the cable and therefore the circuit-breaker is adequate for 400 Hz application. With regard to the magnetic threshold, an adjustment at the minimum of the settings available is recommended (5 x In for a TMA) so as not to have too high a trip value:

$$I_3 = 5 \cdot I_n \cdot K_m = 5 \cdot 320 \cdot 1.7 = 2720 \text{ A}$$

Special applications


Use of direct current apparatus

Use of direct current apparatus

To obtain the number of poles in series needed to guarantee the required breaking capacity at the various operating voltages, suitable connection diagrams must be used. For the breaking capacity (I_{cu}), according to the voltage and the number of poles connected in series with reference to the connection diagrams, please refer to the table on page 4/55.


Protection and isolation of the circuit with three-pole circuit-breakers

Diagram A: Interruption with one pole for polarity

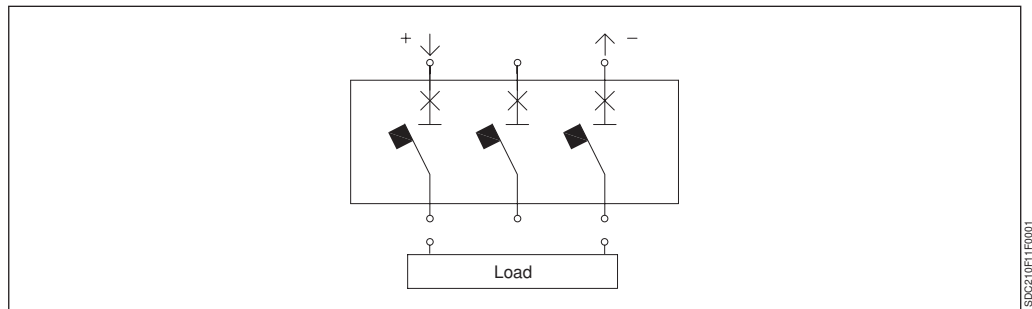


Note: With negative polarity not connected to earth, the installation method must be such as to make the probability of a second earth fault nil.

Diagram B: Interruption with two poles in series for one polarity and one pole for the other polarity

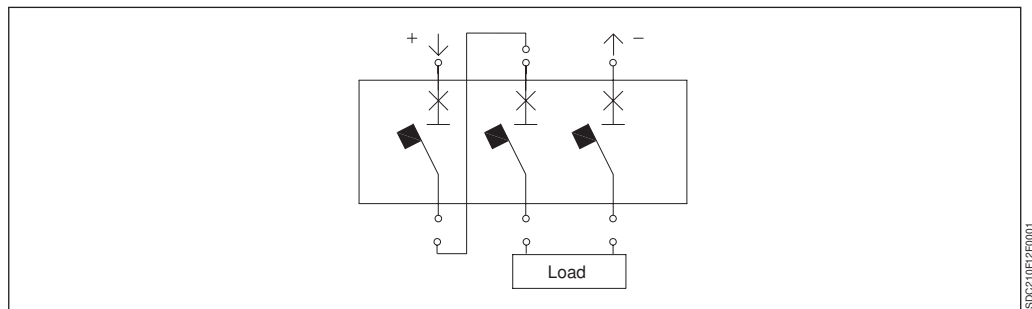

Note: With negative polarity not connected to earth, the installation method must be such as to make the probability of a second earth fault nil.


Diagram C: Interruption with three poles in series for polarity

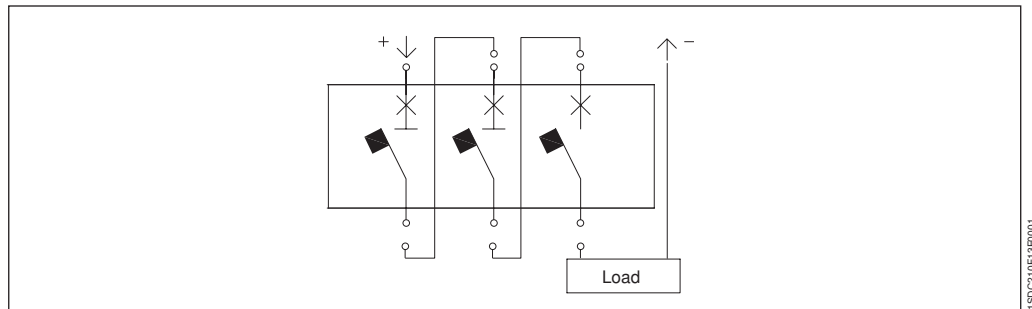

Special applications


Use of direct current apparatus

Diagram D: Interruption with four poles in series for one polarity (for use at 1000 V DC)

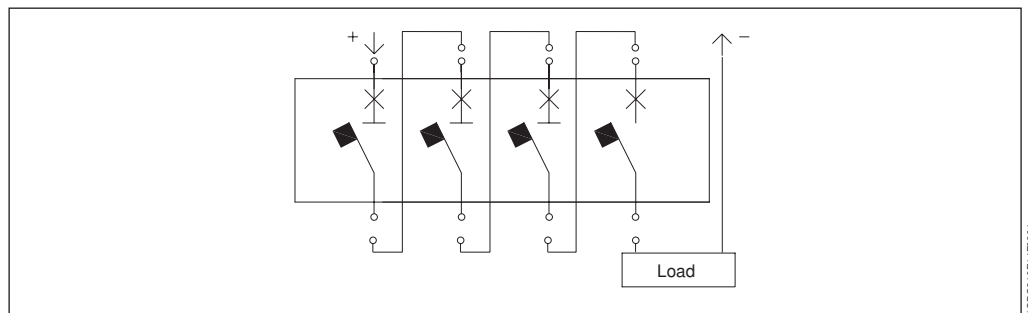

1SDC210F14R001


Diagram E: Interruption with three poles in series on one polarity and one pole on the remaining polarity

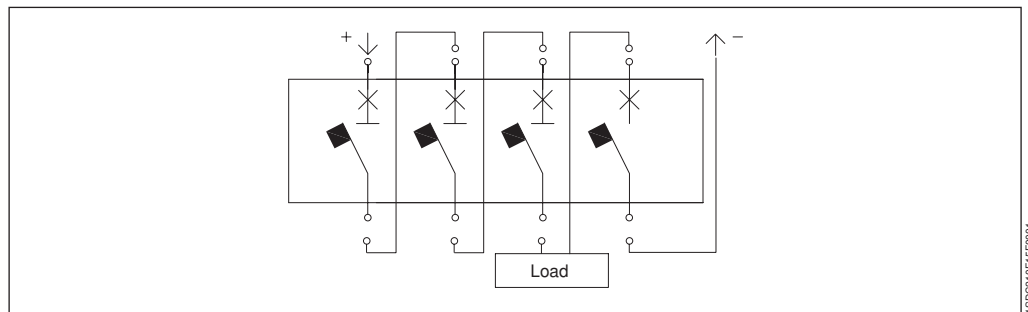

1SDC210F15R001

Note: With negative polarity not connected to earth, the installation method must be such as to make the probability of a second earth fault nil.

Diagram F: Interruption with two poles in series for polarity

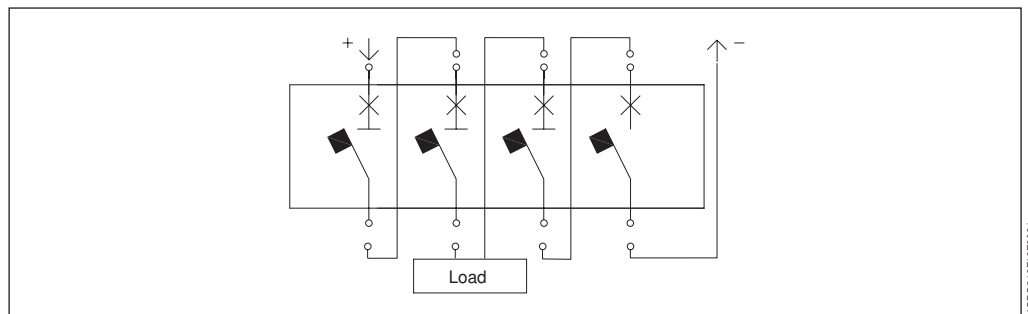

1SDC210F16R001

Note: With negative polarity not connected to earth, the installation method must be such as to make the probability of a second earth fault nil.

The following table shows which connection diagram to use according to the number of poles to be connected in series to obtain the required breaking capacity, in relation to the type of distribution network:

Distribution system

| Rated voltage [V] | Protection function | Isolation | Earth-insulated network | Network with one polarity ⁽¹⁾ earthed | Network with a middle point earthed |
|-------------------|---------------------|-----------|-------------------------|--|-------------------------------------|
| ≤ 250 | ■ | ■ | A | A | A |
| | ■ | – | – | – | – |
| ≤ 500 | ■ | ■ | A | B | A |
| | ■ | – | – | C | – |
| ≤ 750 | ■ | ■ | B | E | F |
| | ■ | – | – | C | – |
| ≤ 1000 | ■ | ■ | E, F | – | F |
| | ■ | – | – | D | – |

⁽¹⁾ It is presumed that the negative polarity is earthed

Notes:

- 1) The risk of double earth fault is nil, therefore the fault current only involves a part of the interruption poles.
- 2) For rated voltages higher than 750 V, the 1000 V range for direct current is required.
- 3) For connections with four poles in series, circuit-breakers with neutral at 100% of the phase settings must be used.

In the following table, the correction value to be used for the protection thresholds against short circuit is indicated for each circuit-breaker (the thermal threshold does not undergo any alteration).

| Circuit-breaker | Diagram A | Diagram B | Diagram C | Diagram D | Diagram E | Diagram F |
|-----------------|-----------|-----------|-----------|-----------|-----------|-----------|
| T1 | 1.3 | 1 | 1 | – | – | – |
| T2 | 1.3 | 1.15 | 1.15 | – | – | – |
| T3 | 1.3 | 1.15 | 1.15 | – | – | – |
| T4 | 1.3 | 1.15 | 1.15 | 1 | 1 | 1 |
| T5 | 1.1 | 1 | 1 | 0.9 | 0.9 | 0.9 |
| T6 | 1.1 | 1 | 1 | 0.9 | 0.9 | 0.9 |

Special applications

Use of direct current apparatus

Example of setting the trip thresholds in DC - Diagram A

| Setting In [A] | T1 160 | | T2 160 | | T3 250 | | T4 250 | |
|-------------------|-----------------------------|---------------------|-----------------------------|---------------------|-----------------------------|---------------------|-----------------------------|---------------------|
| | $I_1=0.7 \div 1 \times I_n$ | $I_3=10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=10 \times I_n$ |
| 1.6 | | | 1.12 ÷ 1.6 | 20.8 | | | | |
| 2 | | | 1.4 ÷ 2 | 26 | | | | |
| 2.5 | | | 1.75 ÷ 2.5 | 32.5 | | | | |
| 3.2 | | | 2.24 ÷ 3.2 | 41.6 | | | | |
| 4 | | | 2.8 ÷ 4 | 52 | | | | |
| 5 | | | 3.5 ÷ 5 | 65 | | | | |
| 6.3 | | | 4.41 ÷ 6.3 | 81.9 | | | | |
| 8 | | | 5.6 ÷ 8 | 104 | | | | |
| 10 | | | 7 ÷ 10 | 130 | | | | |
| 12.5 | | | 8.75 ÷ 12.5 | 162.5 | | | | |
| 16 | 11.2 ÷ 16 | 650 | 11.2 ÷ 16 | 650 | | | | |
| 20 | 14 ÷ 20 | 650 | 14 ÷ 20 | 650 | | | 14 ÷ 20 | 416 |
| 25 | 17.5 ÷ 25 | 650 | 17.5 ÷ 25 | 650 | | | | |
| 32 | 22.4 ÷ 32 | 650 | 22.4 ÷ 32 | 650 | | | 22.4 ÷ 32 | 416 |
| 40 | 28 ÷ 40 | 650 | 28 ÷ 40 | 650 | | | | |
| 50 | 35 ÷ 50 | 650 | 35 ÷ 50 | 650 | | | 35 ÷ 50 | 650 |
| 63 | 44.1 ÷ 63 | 819 | 44.1 ÷ 63 | 819 | 44.1 ÷ 63 | 819 | | |
| 80 | 56 ÷ 80 | 1040 | 56 ÷ 80 | 1040 | 56 ÷ 80 | 1040 | 56 ÷ 80 | 5200 ÷ 1040 |
| 100 | 70 ÷ 100 | 1300 | 70 ÷ 100 | 1300 | 70 ÷ 100 | 1300 | 70 ÷ 100 | 650 ÷ 1300 |
| 125 | 87.5 ÷ 125 | 1625 | 87.5 ÷ 125 | 1625 | 87.5 ÷ 125 | 1625 | 87.5 ÷ 125 | 812.5 ÷ 1625 |
| 160 | 112 ÷ 160 | 2080 | 112 ÷ 160 | 2080 | 112 ÷ 160 | 2080 | 112 ÷ 160 | 1040 ÷ 2080 |
| 200 | | | | | 140 ÷ 200 | 260 | 140 ÷ 200 | 1300 ÷ 2600 |
| 250 | | | | | 175 ÷ 250 | 325 | 175 ÷ 250 | 1625 ÷ 3250 |

| Setting In [A] | T4 320 | | T5 400 | | T5 630 | | T6 630 | | T6 800 | |
|-------------------|-----------------------------|----------------------------|-----------------------------|----------------------------|-----------------------------|----------------------------|-----------------------------|----------------------------|-----------------------------|----------------------------|
| | $I_1=0.7 \div 1 \times I_n$ | $I_3=5 \div 10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=5 \div 10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=5 \div 10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=5 \div 10 \times I_n$ | $I_1=0.7 \div 1 \times I_n$ | $I_3=5 \div 10 \times I_n$ |
| 20 | 14 ÷ 20 | 416 | | | | | | | | |
| 25 | | | | | | | | | | |
| 32 | 22.4 ÷ 32 | 416 | | | | | | | | |
| 40 | | | | | | | | | | |
| 50 | 35 ÷ 50 | 650 | | | | | | | | |
| 63 | | | | | | | | | | |
| 80 | 56 ÷ 80 | 5200 ÷ 1040 | | | | | | | | |
| 100 | 70 ÷ 100 | 650 ÷ 1300 | | | | | | | | |
| 125 | 87.5 ÷ 125 | 812.5 ÷ 1625 | | | | | | | | |
| 160 | 112 ÷ 160 | 1040 ÷ 2080 | | | | | | | | |
| 200 | 140 ÷ 200 | 1300 ÷ 2600 | | | | | | | | |
| 250 | 175 ÷ 250 | 1625 ÷ 3250 | | | | | | | | |
| 320 | | | 224 ÷ 320 | 1760 ÷ 3520 | | | | | | |
| 400 | | | 280 ÷ 400 | 2200 ÷ 4400 | | | | | | |
| 500 | | | | | 350 ÷ 500 | 2750 ÷ 5500 | | | | |
| 630 | | | | | | | 441 ÷ 630 | 3465 ÷ 6930 | | |
| 800 | | | | | | | | | 480 ÷ 800 | 4000 ÷ 8000 |

Setting adjustment of the magnetic threshold

The correction factor takes into consideration the phenomena that, with direct current applications, modifies the tripping value of the protection threshold against short circuit.

The value that must be set on the trip unit is therefore the real and wanted trip value divided by the correction factor.

Example

- Service current: $I_b = 550$ A
- Circuit-breaker: T6 630 $I_n = 630$ A
- Desired magnetic protection: $I_3 = 5500$ A
- Magnetic threshold value to be set (according to diagram A):

$$\text{Set: } \frac{I_3}{k_m}$$

therefore, in this specific case, setting of the adjustment value for the magnetic threshold is:

$$\text{Set: } \frac{5500}{1.1} = 5000 \text{ A (roughly equal to } 8 I_n)$$

Special applications

Use of direct current apparatus

The residual current trip units are associated with the circuit-breaker in order to obtain two main functions in a single device:

- protection against overloads and short-circuits;
- protection against indirect contacts (presence of voltage on exposed conductive parts due to loss of insulation).

Besides, they can guarantee an additional protection against the risk of fire deriving from the evolution of small fault or leakage currents which are not detected by the standard protections against overload.

Residual current devices having a rated residual current not exceeding 30 mA are also used as a means for additional protection against direct contact in case of failure of the relevant protective means.


Their logic is based on the detection of the vectorial sum of the line currents through an internal or external toroid.

This sum is zero under service conditions or equal to the earth fault current (I_{Δ}) in case of earth fault.

When the trip unit detects a residual current different from zero, it opens the circuit-breaker through an opening solenoid.


As we can see in the picture the protection conductor or the equipotential conductor have to be installed outside the eventual external toroid.

Distribution system (IT, TT, TN)

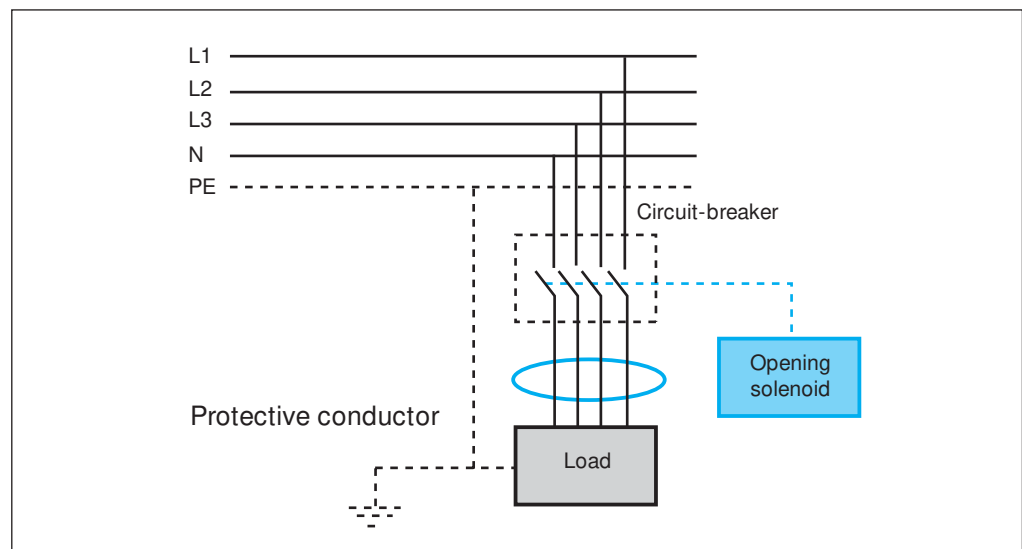

The operating principle of the residual current release makes it suitable for TT, IT distribution systems (although with particular attention to the latter) and TN-S, but not for the TN-C systems. In fact, in these systems the neutral is also used as a protection conductor and therefore determination of the residual current would not be possible even if the neutral, called PEN in these distribution systems, passed through the toroid, since the vectorial sum of the currents would always be equal to zero. One of the main characteristics of a residual current protection is its minimum rated current $I_{\Delta n}$. This represents the sensitivity of the release.

- According to their sensitivity to the fault current the RCDs are classified as:
- type **AC**: the tripping is ensured for residual sinusoidal alternating currents
 - type **A**: the tripping is ensured for residual sinusoidal alternating currents in the presence of specified residual pulsating direct currents
 - type **B**: like the type A and also in presence of residual direct currents

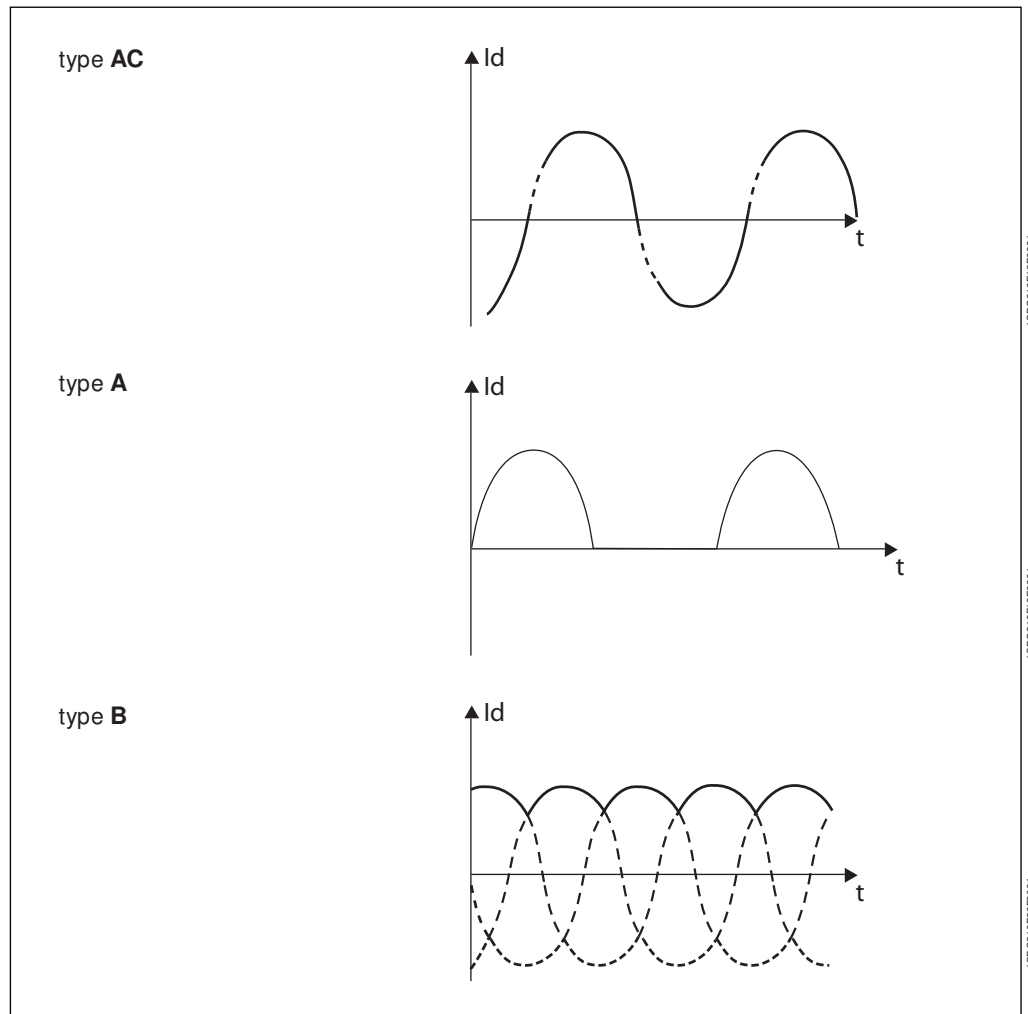


In presence of electrical apparatuses with electronic components (computers, photocopiers, fax etc.) the earth fault current might assume a non sinusoidal shape but a type of a pulsating unidirectional dc shape. In these cases it is necessary to use a residual current trip unit classified as type A. In presence of rectifying circuits (i.e. single phase connection with capacitive load causing smooth direct current, three pulse star connection or six pulse bridge connection, two pulse connection line-to-line) the earth fault current might assume a unidirectional DC shape. In these case it is necessary to use a residual current trip unit classifield as type B.

Special applications

Residual current protection

Standard EN 50178 "Electronic equipment for use in power installations" shows several examples of electronic circuits where it is correct to use a type B RCD.

A relevant example of the using of the type B RCD RC223 is a network supplying a three-phase bridge rectifier:

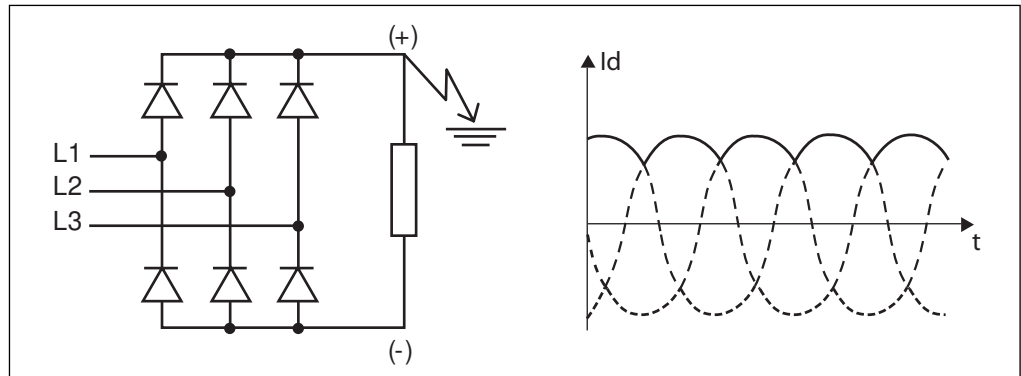

In fact, in the case of an earth fault occurring in the plant section with direct current supply, a fault current with marked "direct" characteristics shall practically flow through the section with alternate current.

The RCD, both A as well as AC type, could be not sensitive to this current and, consequently, not able to trip the circuit by disconnecting the fault.

On the contrary, the type B RCD results to be suitable to detect the residual currents with continuous components and thus able to interrupt the circuit in case of earth fault.

The following table shows the main characteristics of ABB SACE residual current devices; they can be mounted both on circuit-breakers as well as on switch disconnectors (in case of fault currents to earth lower than the apparatus breaking capacity), are type A devices and they do not need auxiliary supply since they are self-supplied.

4

| | RC221 | | RC222 | | RC223 |
|--|--------------------------|------------------------------------|------------------------------------|------------------------------------|---------------------------------|
| Suitable for circuit-breaker type/switch-disconnectors | T1-T2-T3 T1D-T3D | T1-T2-T3 T1D-T3D | T4 T4D | T5 T5D | T4 T4D |
| Primary service voltage [V] | 85-500 | 85-500 | 85-500 | 85-500 | 110...500 |
| Rated service current [A] | 250 | 250 | 250 | 250 | 250 |
| Rated residual current trip $I_{\Delta n}$ [A] | 0.03-0.1-0.3- 0.5-1-3 | 0.03-0.05-0.1- 0.3-0.5-1-3-5-10 | 0.03-0.05-0.1- 0.3-0.5-1-3-5-10 | 0.03-0.05-0.1- 0.3-0.5-1-3-5-10 | 0.03-0.05-0.1- 0.3-0.5-1 |
| Time limit for non-trip (s) | instantaneous | inst. -0.1-0.2-0.3 0.5-1-2-3 | inst. -0.1-0.2-0.3 0.5-1-2-3 | inst. -0.1-0.2-0.3 0.5-1-2-3 | inst. -0.1-0.2-0.3 0.5-1-2-3 |
| Tolerance over trip times [%] | | ±20% | ±20% | ±20% | ±20% |

Tmax T7 can be equipped with a toroid fitted on the back of the circuit-breaker so as to ensure protection against earth faults. In particular, the electronic trip unit types able to perform this function are:

- PR332/P-LSIG
- PR332/P-LSIRc

Furthermore ABB SACE moulded-case circuit-breakers serie Tmax can be combined with the switchboard residual current relay type RCQ, type A, with separate toroid (to be installed externally on the line conductors).


| | | | RCQ |
|--|---------------------------|-----|-------------------------------|
| Power supply voltage | AC | [V] | 80-500 |
| | DC | [V] | 48-125 |
| Trip threshold adjustments $I\Delta n$ | | | |
| | 1st range of adjustments | [A] | 0.03-0.05-0.1-0.3-0.5 |
| | 2st range of adjustments | [A] | 1-3-5-10-30 |
| | Trip time adjustment | [s] | 0-0.1-0.2-0.3-0.5-0.7-1-2-3-5 |
| | Tolerance over trip times | [%] | ±20% |

The versions with adjustable trip times allow to obtain a residual current protection system coordinated from a discrimination point of view, from the main switchboard up to the ultimate load.

Special applications

Zone selectivity

This type of coordination, a development of time coordination, is made by means of logic connections between current measuring devices which, once the set threshold having been exceeded is detected, allow just the fault area to be identified and to have its power supply cut off. By means of zone selectivity it is possible obtain selectivity considerably reducing the trip times and therefore the thermal stresses all the plant components are subjected to during the fault.

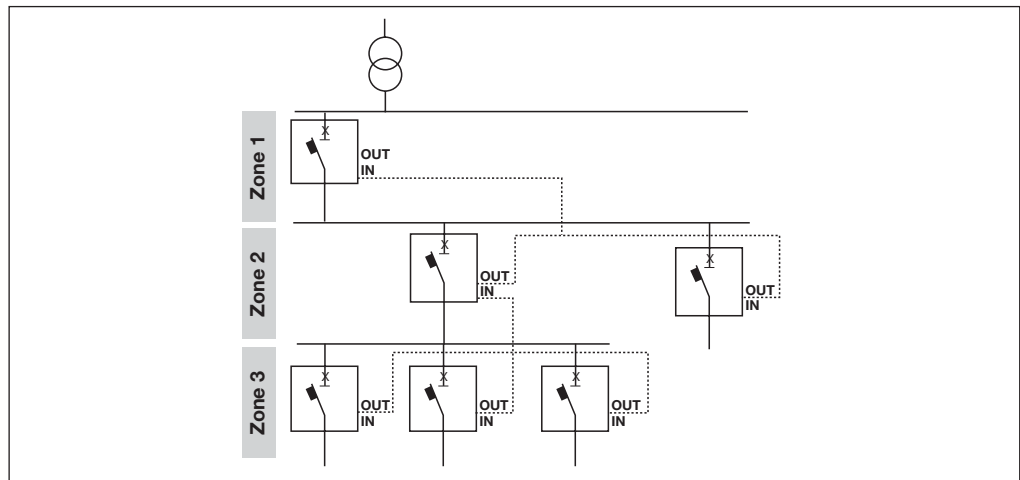

EFDP Zone selectivity (T4L-T5L-T6L with PR223EF)

By means of the new PR223EF electronic trip unit, it is possible to realise EFDP zone selectivity between moulded-case circuit-breakers of the Tmax T4L, T5L and T6L series, obtaining total selectivity between these circuit-breakers.

The PR223EF implements the new EF protection function, capable of detecting the short-circuit at its onset. This is thanks to “predicting” the fault, based on analysis of the trend of the current derivative in relation to the time, $di(t)/dt$ vs $i(t)$.

If the EF protection is enabled, it intervenes for faults of considerable size, replacing the I protection function against instantaneous short-circuit when there is an auxiliary power supply.

Between PR223EF trip units, EFDP zone selectivity is implemented simultaneously on functions S, G and EF. It is carried out by means of an interlocking protocol (Interlocking, IL), guaranteed by a couple of shielded twisted pair cables for modbus RS485 which connect the circuit-breakers equipped with the PR223EF (ask ABB for further information about cable type).

In the case of a short-circuit, the circuit-breaker immediately to the supply side sends a lock signal to the hierarchically higher level protection by means of the bus and, before tripping, checks that a similar lock signal has not come from the load-side protection.

System integrity is controlled by a monitoring function: in the case of a short-circuit, if a fault is found in the interlocking system, the EF protection function trips (with trip times in the order of tens of ms), but zone selectivity is not guaranteed.

Furthermore, if the load-side circuit-breaker does not manage to trip, it asks the supply-side circuit-breaker for help and the latter opens even if it does not detect the fault (SOS function).

A 24 V DC auxiliary power supply is required for operation of the EF protection and zone selectivity. All the protection functions can be programmed remotely, exploiting the dialogue function on the trip unit, or locally by means of the PR010/T, which can be connected to a serial port on the front of the PR223EF.


One of the main advantages in using zone selectivity between MCCBs is the reduction in size of the circuit-breakers it makes possible.

In fact, in looking for selectivity between moulded-case circuit-breakers with the classic techniques, it is often necessary to increase the size of the supply-side circuit-breakers to obtain selectivity limits congruous with the short-circuit current of the installation.

An example is given below of how, by means of zone selectivity between moulded-case circuit-breakers, a reduction in sizes and a considerable reduction in the peak current and specific energy let through by the circuit-breakers is possible, whilst still maintaining total selectivity.

The main parameters, characteristic of the trip unit, are:

| | |
|--------------------------|--|
| Trip delayed | Enabling this parameter introduces a trip delay in the case when, on the load side of a trip unit, Tmax or modular circuit-breakers are installed. The aim of this parameter is to obtain selectivity with the other devices on the load side not equipped with PR223EF. This parameter is only enabled in the circuit-breakers which have the device outside the zone selectivity chain on the load side. |
| EF enable/disable | Enabling/disabling protection EF. If protection EF is enabled: the presence of Vaux leads to automatic exclusion of function I and enabling of protection EF, the lack of Vaux leads to exclusion of protection EF and to the return of function I (if enabled). |
| 16 | Maximum number of trip units which can be connected to the BUS of a level. |
| 200 meters | Maximum overall length of the connection cable. Cabling the different trip units is carried out as in the classic "Bus topology" (see figure) |

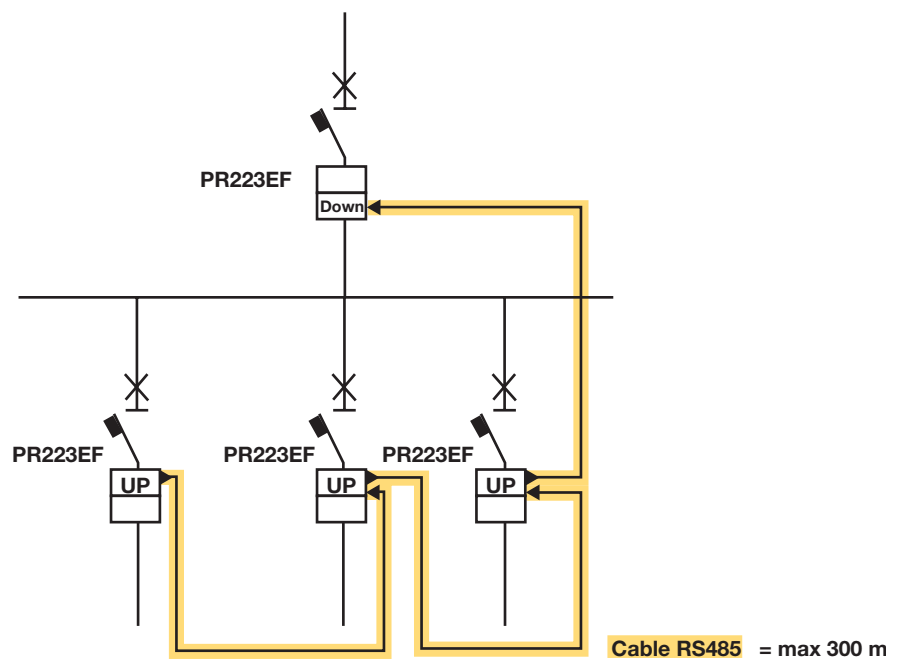


Special applications

Zone selectivity

Example of application

The following example shows an installation where selectivity is obtained through EFDP system available on PR223EF. Besides, in brackets, the circuit-breakers to obtain selectivity with the traditional solution are reported.

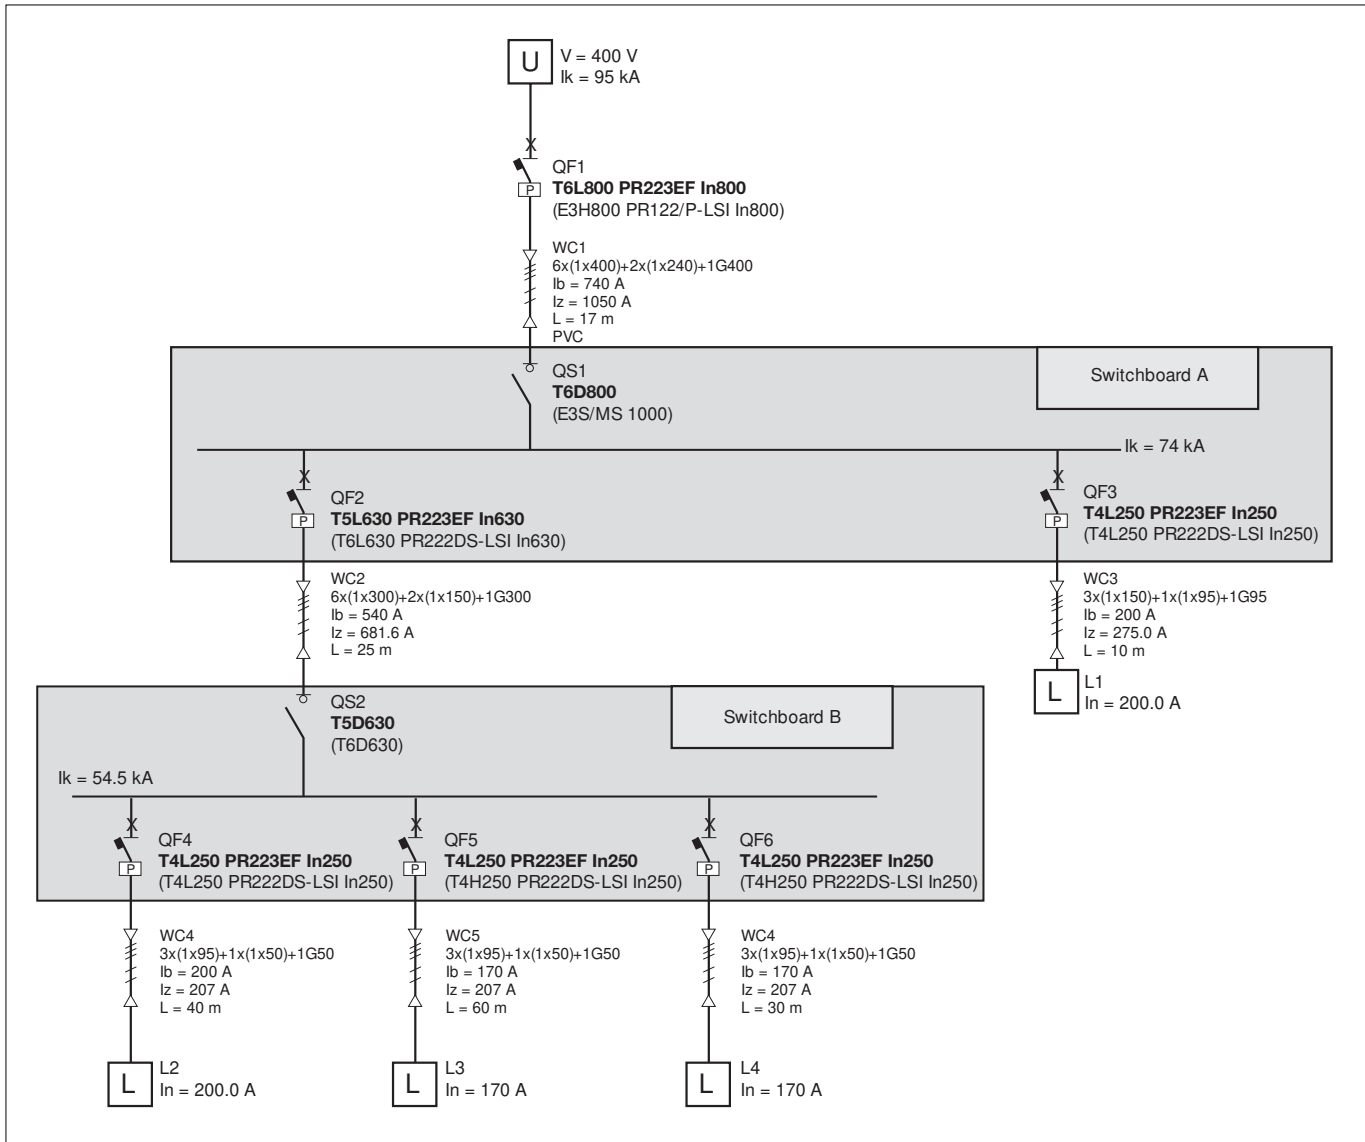

It is evident that selectivity through the traditional techniques affects deeply the choice of the protection devices and direct it towards differentiated sizes according to the location of the circuit-breakers in the installation.


The following table summarizes the advantages from a dimensional and economical point of view which derive from the use of the new electronic trip unit.

| | Traditional solution | Solution with EFDP |
|------------|----------------------|--------------------|
| QF1 | E3H800 PR122/P | T6L800 PR223EF |
| QS1 | E3S/MS1000 | T6D800 |
| QF2 | T6L630 PR221DS | T5L630 PR223EF |
| QS2 | T6D630 | T5D630 |

Zone selectivity with IM210 interlocking module

By means of the IM210 interlocking module, it is possible to extend zone selectivity from PR223EF trip unit to the following trip units on the supply side:

- PR332/P for Tmax T7;
- PR332/P and PR333/P for Emax X1;
- PR122/P and PR123/P for Emax E1...E6 circuit-breakers.

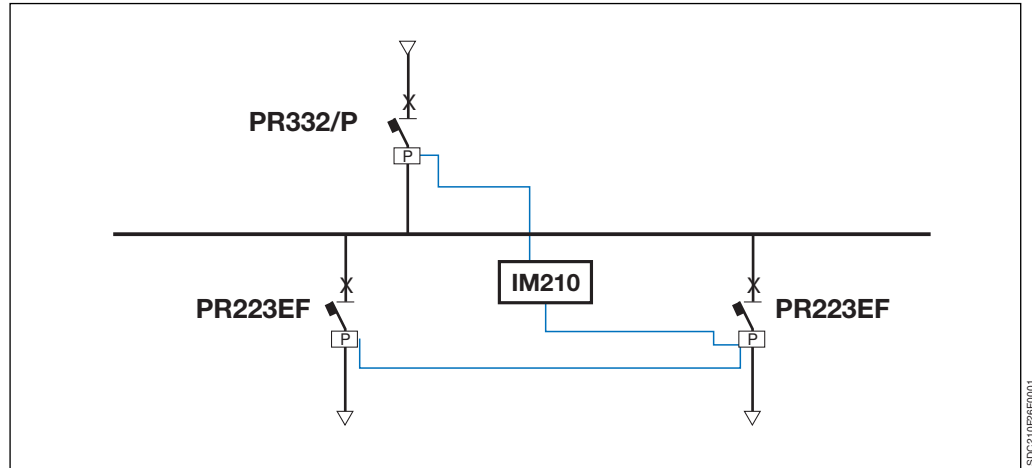

Index

| | |
|--|------|
| Information for reading - Circuit-breakers T1...T6..... | 5/2 |
| Information for reading - Circuit-breakers T7..... | 5/6 |
| Information for reading - ATS010..... | 5/10 |
| Graphic symbols (IEC 60617 and CEI 3-14...3-26 Standards)..... | 5/11 |
| Wiring diagram of the T1...T6 circuit-breakers..... | 5/12 |
| Wiring diagram of the T7 circuit-breakers..... | 5/14 |
| Electrical accessories for T1...T6..... | 5/15 |
| Electrical accessories for T7..... | 5/24 |
| Automatic transfer-switch ATS010..... | 5/28 |

Wiring diagrams

Information for reading - Circuit-breakers T1...T6

State of operation represented

The diagram is shown in the following conditions:

- plug-in version circuit-breaker open and racked-in
- contactor for motor starting open
- circuits de-energised
- trip units not tripped
- motor operator with springs charged.

Version

The diagram shows a circuit-breaker or switch-disconnector in the plug-in version (only T2, T3, T4, T5 and T6), but is also valid for the fixed and withdrawable version circuit-breakers or switch-disconnectors. With the fixed version circuit-breakers or switch-disconnectors, the applications indicated in figures 26-27-28-29-30-31 and 32 cannot be provided.

Caption

| | |
|-----------|--|
| □ | = Figure number of the diagram |
| * | = See note indicated by the letter |
| A1 | = Circuit-breaker applications |
| A11 | = FDU interfacing unit (front display) |
| A12 | = AUX-E type signalling unit, with auxiliary relays for electrical signalling of circuit-breaker open and circuit-breaker tripped |
| A13 | = PR021/K type signalling unit, with auxiliary relays for electrical signalling of the protection functions of electronic trip unit |
| A14 | = MOE-E type actuation unit, with auxiliary relays for carrying out the commands coming from the dialogue unit |
| A15 | = PR212/CI type contactor control unit for motor starting |
| A16 | = Solenoid operating mechanism |
| A17 | = Unit for M motor electrical latching |
| A18 | = VM210 type voltage measuring unit |
| A2 | = Applications of the solenoid operator or motor operator |
| A3 | = Applications of the RC221 or RC222 type residual current release |
| A4 | = Indication apparatus and connections for control and signalling, outside the circuit-breaker |
| D | = Electronic time-delay device of the undervoltage release (outside the circuit-breaker) |
| H, H1 | = Signalling lamps |
| K | = Contactor for motor starting |
| K51 | = Electronic trip unit: <ul style="list-style-type: none">– PR221DS type overcurrent release, with the following protection functions:<ul style="list-style-type: none">- L against overload with inverse long time delay- S against short-circuit with inverse or definite short time delay- I against short-circuit with instantaneous trip– PR222DS/P, PR222DS/PD, PR223DS or PR223EF, type overcurrent release, with the following protection functions:<ul style="list-style-type: none">- L against overload with inverse long time delay- S against short-circuit with inverse or definite short time delay- I against short-circuit with instantaneous trip time- G against earth fault with short time trip– EFD protection (Earth Fault Detector Prevention) for PR223EF trip unit only– PR222MP motor protection type trip unit, with the following protection functions:<ul style="list-style-type: none">- against overload (thermal protection)- against rotor block- against short-circuit- against missing or unbalanced current between the phases |
| K87 | = RC221 or RC222 type residual current trip unit |
| M | = Motor for circuit-breaker opening and circuit-breaker closing spring charging |
| M1 | = Three-phase asynchronous motor |
| Q | = Main circuit-breaker |
| Q/0,1,2,3 | = Auxiliary circuit-breaker contacts |
| R | = Resistor (see note F) |
| R1 | = Motor thermistor |
| R2 | = Thermistor in the motor operator |
| S1, S2 | = Contacts controlled by the cam of the motor operator |
| S3 | = Contact controlled by the key lock of the solenoid operator or motor operator |

| | |
|---------------|---|
| S4/1-2 | = Contacts activated by the circuit-breaker rotary handle (see note C) |
| S51/1...8 | = Contacts for electrical signalling of the protection functions of the electronic trip unit |
| S51/S | = Contact for electrical signalling of overload in progress (start) |
| S75I/1...3 | = Contacts for electrical signalling of circuit-breaker in racked-in position (only provided with circuit-breakers in plug-in and withdrawable version) |
| S75S/1...3 | = Contacts for electrical signalling of circuit-breaker in racked-out position (only provided with circuit-breakers in plug-in and withdrawable version) |
| S87/1 | = Contact for electrical signalling of RC222 type residual current release pre-alarm |
| S87/2 | = Contact for electrical signalling of RC222 type residual current release alarm |
| S87/3 | = Contact for electrical signalling of circuit-breaker open due to RC221 or RC222 type residual current release trip |
| SC | = Pushbutton or contact for closing the circuit-breaker |
| SC3 | = Pushbutton for motor starting |
| SD | = Switch-disconnector of the power supply of the RC221 or RC222 type residual current release |
| SO | = Pushbutton or contact for opening the circuit-breaker |
| SO1, SO2 | = Pushbuttons or contacts for the circuit-breaker opening (see Resetting instructions for circuit-breaker tripped by trip units) |
| SO3 | = Pushbutton for stopping the motor |
| SQ | = Contact for electrical signalling of circuit-breaker open |
| SY | = Contact for electrical signalling of circuit-breaker open due to YO, YO1, YO2 or YU thermomagnetic trip unit intervention (tripped position) |
| TI | = Toroidal current transformer |
| TI/L1 | = Current transformer placed on phase L1 |
| TI/L2 | = Current transformer placed on phase L2 |
| TI/L3 | = Current transformer placed on phase L3 |
| TI/N | = Current transformer placed on the neutral |
| W1 | = Serial interface with the control system (EIA RS485 interface. See note D) |
| W2 | = Interface to upstream circuit-breaker for zone selectivity interlocking (for PR223EF trip unit only) |
| W3 | = Interface to downstream circuit-breaker for zone selectivity interlocking (for PR223EF trip unit only) |
| X1,X2,X5...X9 | = Connectors for the circuit-breaker auxiliary circuits (in the case of circuit-breakers in plug-in version, removal of the connectors takes place simultaneously with that of the circuit-breaker. See note E) |
| X11 | = Back-up terminal box |
| X3,X4 | = Connectors for the circuits of the electronic trip unit (in the case of circuit-breakers in the plug-in version, removal of the connectors takes place simultaneously with that of the circuit-breaker) |
| XA | = Interfacing connector of the PR222DS/P, PR222DS/PD, PR223DS or PR223EF trip unit |
| XA1 | = Three-way connector for YO/YU (see note E) |
| XA10 | = Six-way connector for solenoid operator |
| XA2 | = Twelve-way connector for auxiliary contacts (see note E) |
| XA5 | = Three-way connector for contact of electrical signalling of circuit-breaker open due to trip of the RC221 or RC222 type residual current release (see note E) |
| XA6 | = Three-way connector for contact of electrical signalling of circuit-breaker open due to trip of the overcurrent release (see note E) |
| XA7 | = Six-way connector for auxiliary contacts (see note E) |
| XA8 | = Six-way connector for contacts operated by the rotary handle or for the motor operator (see note E) |
| XA9 | = Six-way connector for the electrical signalling of RC222 type residual current release pre-alarm and alarm and for opening by means of the release itself (see note E) |
| XB,XC,XE | = Interfacing connectors of the AUX-E unit |
| XD | = Interfacing connector of the FDU unit |
| XF | = Interfacing connector of the MOE-E unit |
| X0 | = Connector for the YO1 trip coil |
| X01 | = Connector for the YO2 trip coil |
| XV | = Terminal boxes of the applications |
| YC | = Closing release of the motor operating mechanism |
| YO | = Opening release |
| YO1 | = Trip coil of the electronic trip unit |
| YO2 | = Trip coil of the RC221 or RC222 type residual current release |
| YO3 | = Shunt opening release of the solenoid operator |
| YU | = Undervoltage release (see note B). |

Wiring diagrams

Information for reading - Circuit-breakers T1...T6

Description of figures

- Fig. 1 = Opening release.
- Fig. 2 = Permanent opening release.
- Fig. 3 = Instantaneous undervoltage release (see note B and F).
- Fig. 4 = Undervoltage release with electronic time-delay device outside the circuit-breaker (see note B).
- Fig. 5 = Instantaneous undervoltage release in version for machine tools with one contact in series (see note B, C, and F).
- Fig. 6 = Instantaneous undervoltage release in version for machine tools with two contacts in series (see note B, C, and F).
- Fig. 7 = One changeover contact for electrical signalling of circuit-breaker open due to RC221 or RC222 type residual current release trip.
- Fig. 8 = RC222 type residual current release circuits.
- Fig. 9 = Two electrical signalling contacts for RC222 type residual current release pre-alarm and alarm.
- Fig. 10 = Solenoid operator.
- Fig. 11 = Stored energy motor operator.
- Fig. 12 = One changeover contact for electrical signalling of motor operator locked with key.
- Fig. 21 = Three changeover contacts for electrical signalling of circuit-breaker open or closed and one changeover contact for electrical signalling of circuit-breaker open due to YO, YO1, YO2 and YU thermomagnetic trip unit intervention (tripped position).
- Fig. 22 = One changeover contact for electrical signalling of circuit-breaker open or closed and a changeover contact for electrical signalling of circuit-breaker open due to YO, YO1, YO2 or YU the thermomagnetic trip unit intervention (tripped position).
- Fig. 23 = Two changeover contacts for electrical signalling of circuit-breaker open or closed.
- Fig. 24 = One changeover contact for electrical signalling of circuit-breaker open due to overcurrent release trip.
- Fig. 25 = One contact for electrical signalling of circuit-breaker open due to overcurrent release trip.
- Fig. 26 = First position of circuit-breaker changeover contact, for electrical signalling of racked-in.
- Fig. 27 = Second position of circuit-breaker changeover contact, for electrical signalling of racked-in.
- Fig. 28 = Third position of circuit-breaker changeover contact, for electrical signalling of racked-in.
- Fig. 29 = First position of circuit-breaker changeover contact, for electrical signalling of isolated.
- Fig. 30 = Second position of circuit-breaker changeover contact, for electrical signalling of isolated.
- Fig. 31 = Third position of circuit-breaker changeover contact, for electrical signalling of isolated.
- Fig. 32 = Circuit of the current transformer on neutral conductor outside the circuit-breaker (for plug-in version circuit-breaker).
- Fig. 39 = Auxiliary circuits of the PR223DS trip units connected to VM210 voltage measuring unit.
- Fig. 40 = Auxiliary circuits of the PR223EF trip units connected to VM210 voltage measuring unit.
- Fig. 41 = Auxiliary circuits of the PR222DS/P, PR223DS or PR223EF electronic trip unit connected with FDU front display unit.
- Fig. 42 = Auxiliary circuits of the PR222DS/PD, PR223DS or PR223EF electronic trip unit connected with PR021/K type signalling unit.
- Fig. 43 = Auxiliary circuits of the PR222DS/PD, PR223DS or PR223EF electronic trip unit connected with FDU front display unit and with PR021/K type signalling unit.
- Fig. 44 = Auxiliary circuits of the PR222DS/PD, PR223DS or PR223EF electronic trip unit connected with the AUX-E auxiliary contacts.
- Fig. 45 = Auxiliary circuits of the PR222DS/PD, PR223DS or PR223EF electronic trip unit connected with the auxiliary contacts AUX-E and with MOE-E type actuation unit.
- Fig. 46 = Auxiliary circuits of the PR222DS/PD, PR223DS or PR223EF electronic trip unit connected with FDU front display unit and with the AUX-E auxiliary contacts.
- Fig. 47 = Auxiliary circuits of the PR222MP electronic trip unit connected with PR021/K signalling unit.
- Fig. 48 = Auxiliary circuits of the PR222MP electronic trip unit connected with PR021/K signalling unit and with PR212/CI type contactor control unit for motor starting.
- Fig. 49 = Auxiliary circuits of the PR222MP electronic trip unit connected with PR021/K signalling unit and with PR212/CI type contactor control unit and an ABB series AF contactor.
- Fig. 50 = Auxiliary circuits of the PR222MP electronic trip unit connected with PR021/K signalling unit and an ABB series AF contactor with SSIMP interface.

Incompatibility

The circuits indicated by the following figures cannot be supplied at the same time on the same circuit-breaker:

1 - 2 - 3 - 4 - 5 - 6

5 - 6 - 11

10 - 11 - 45

10 - 12

21 - 22 - 23 - 44 - 45 - 46

24 - 25

26 - 32

39 - 40 - 41 - 42 - 43 - 44 - 45 - 46 - 47 - 48 - 49 - 50

Notes

- A) The circuit-breaker is only fitted with the applications specified in the ABB SACE order confirmation. To make out the order, please consult this catalogue.
- B) The undervoltage release is supplied for power supply branched on the supply side of the circuit-breaker or from an independent source: circuit-breaker closing is only allowed with the release energised (the lock on closing is made mechanically).
- C) The S4/1 and S4/2 contacts shown in figures 5-6 open the circuit with the circuit-breaker open and close it again when a manual closing command is given by means of the rotary handle, in accordance with the Standards regarding machine tools (in any case, closing does not take place if the undervoltage release is not supplied).
- E) Connectors XA1, XA2, XA5, XA6, XA7, XA8 and XA9 are supplied on request. They are always supplied with T2 and T3 circuit-breakers in the plug-in version.
Connectors X1, X2, X5, X6, X7, X8 and X9 are supplied on request. They are always supplied with circuit-breakers in the plug-in version and with T4 and T5 circuit-breakers in the fixed version.
- F) Additional external resistor for undervoltage release supplied at 250 V DC, 380/440 V AC and 480/500 V AC.
- G) In the case of fixed version circuit-breaker with current transformer on external neutral conductor outside the circuit-breaker, when the circuit-breaker is to be removed, it is necessary to short-circuit the terminals of the TI/N transformer.

Wiring diagrams

Information for reading - Circuit-breakers T7

Warning

Before installing the circuit-breaker, carefully read notes F and O on the circuit diagrams.

Operating status shown

The circuit diagram is for the following conditions:

- withdrawable circuit-breaker, open and racked-in
- circuits de-energised
- releases not tripped
- motor operating mechanism with springs discharged.

Versions

Though the diagram shows a circuit-breaker in withdrawable version, it can be applied to a fixed version circuit-breaker as well.

Fixed version

The control circuits are fitted between terminals XV (connectors X12-X13-X14-X15 are not supplied). With this version, the applications indicated in figure 31A cannot be provided.

Withdrawable version

The control circuits are fitted between the poles of connectors X12-X13-X14-X15 (terminal box XV is not supplied).

Version without overcurrent release

With this version, the applications indicated in figures 13A, 14A, 41A, 42A, 43A, 44A, 45A, 62A cannot be provided.

Version with PR231/P or PR232/P electronic trip unit

With this version, the applications indicated in figures 41A, 42A, 43A, 44A, 45A, 62A cannot be provided.

Version with PR331/P electronic trip unit

With this version, the applications indicated in figures 42A, 43A, 44A, 45A cannot be provided.

Version with PR332/P electronic trip unit

With this version, the applications indicated in figure 41A cannot be provided.

Caption

| | |
|-------------------|---|
| □ | = Circuit diagram figure number |
| * | = See note indicated by letter |
| A1 | = Circuit-breaker accessories |
| A3 | = Accessories applied to the fixed part of the circuit-breaker (for withdrawable version only) |
| A4 | = Example switchgear and connections for control and signalling, outside the circuit-breaker |
| A13 | = PR021/K signalling unit (outside the circuit-breaker) |
| A19 | = PR330/R actuation unit |
| AY | = SOR TEST UNIT Test/monitoring Unit (see note R) |
| D | = Electronic time-delay device of the undervoltage release, outside the circuit-breaker |
| K51 | = PR231/P, PR232/P, PR331/P, PR332/P type electronic trip unit with the following protection functions: <ul style="list-style-type: none">– L overload protection with inverse long time-delay trip - setting I_1– S short-circuit protection with inverse or definite short time-delay trip - setting I_2– I short-circuit protection with instantaneous time-delay trip - setting I_3– G earth fault protection with inverse short time-delay trip - setting I_4 |
| K51/1...8 | = Contacts of the PR021/K signalling unit |
| K51/GZin (DBin) | = Zone selectivity: input for protection G or "reverse" direction input for protection D (only with Uaux. and PR332/P trip unit) |
| K51/GZout (DBout) | = Zone selectivity: output for protection G or "reverse" direction output for protection D (only with and PR332/P trip unit) |
| K51/SZin (DFin) | = Zone selectivity: input for protection S or "direct" input for protection D (only with Uaux. and PR332/P trip unit) |
| K51/SZout (DFout) | = Zone selectivity: output for protection S or "direct" output for protection D (only with Uaux. and PR332/P trip unit) |
| K51/YC | = Closing control from PR332/P electronic trip unit with communication module PR330/D-M and PR330/R actuation unit |

| | |
|------------|--|
| K51/YO | = Opening control from PR332/P electronic trip unit with communication module PR330/D-M and PR330/R actuation unit |
| M | = Motor for charging the closing springs |
| Q | = Circuit-breaker |
| Q/1...5 | = Circuit-breaker auxiliary contacts |
| S33M/1...3 | = Limit contacts for spring-charging motor |
| S4/1-2-3 | = Contacts activated by the rotary handle of the circuit-breaker – only for circuit-breakers with manual control (see note C) |
| S43 | = Switch for setting remote/local control |
| S51 | = Contact for electrical signalling of circuit-breaker open due to tripping of the overcurrent trip unit. The circuit-breaker may be closed only after pressing the reset pushbutton, or after energizing the coil for electrical reset (if available) |
| S51/S | = Contact for electrical signalling of overload in progress (start) |
| S75E/1...2 | = Contacts for electrical signalling of circuit-breaker in racked-out position (only with withdrawable circuit-breakers) |
| S75I/1...7 | = Contacts for electrical signalling of circuit-breaker in racked-in position (only with withdrawable circuit-breakers) |
| S75T/1..2 | = Contacts for electrical signalling of circuit-breaker in test isolated position (only with withdrawable circuit-breakers) |
| SC | = Pushbutton or contact for closing the circuit-breaker |
| SO | = Pushbutton or contact for opening the circuit-breaker |
| SO1 | = Pushbutton or contact for opening the circuit-breaker with delayed trip |
| SO2 | = Pushbutton or contact for opening the circuit-breaker with instantaneous trip |
| SR | = Pushbutton or contact for electrical circuit-breaker reset |
| SRTC | = Contact for electrical signalling of circuit-breaker open, with springs charged and ready to close |
| SY | = Contact for electrical signalling of circuit-breaker open due to thermomagnetic trip units tripped, YO, YO1, YO2, YU (tripped position) only for circuit-breakers with direct control |
| TI/L1 | = Current transformer located on phase L1 |
| TI/L2 | = Current transformer located on phase L2 |
| TI/L3 | = Current transformer located on phase L3 |
| TU | = Isolation voltage transformer |
| Uaux. | = Auxiliary power supply voltage (see note F) |
| UI/L1 | = Current sensor (Rogowski coil) located on phase L1 |
| UI/L2 | = Current sensor (Rogowski coil) located on phase L2 |
| UI/L3 | = Current sensor (Rogowski coil) located on phase L3 |
| UI/N | = Current sensor (Rogowski coil) located on neutral |
| UI/O | = Current sensor (Rogowski coil) located on the conductor connecting to earth the star point of the MV/LV transformer (see note G) |
| W1 | = Serial interface with control system (external bus): EIA RS485 interface (see note E) |
| W2 | = Serial interface with the accessories of PR331/P and PR332/P trip units (internal bus) |
| X12...X15 | = Delivery connectors for auxiliary circuits of withdrawable version circuit-breaker |
| XB1...XB7 | = Connectors for the accessories of the circuit-breaker |
| XF | = Delivery terminal box for the position contacts of the withdrawable circuit-breaker (located on the fixed part of the circuit-breaker) |
| XO | = Connector for YO1 release |
| XR1 – XR2 | = Connector for power circuits of PR231/P, PR232/P, PR331/P, and PR332/P trip units |
| XR5 – XR13 | = Connector for power circuits of PR332/P trip unit |
| XV | = Delivery terminal box for the auxiliary circuits of the fixed circuit-breaker |
| YC | = Shunt closing release |
| YO | = Shunt opening release |
| YO1 | = Overcurrent shunt opening release (trip coil) |
| YO2 | = Second shunt opening release (see note Q) |
| YR | = Coil to electrically reset the circuit-breaker |
| YU | = Undervoltage release (see notes B, C and Q) |

Wiring diagrams

Information for reading - Circuit-breakers T7

Description of figures

- Fig. 1A = Motor circuit to charge the closing springs.
- Fig. 2A = Circuit of shunt closing release.
- Fig. 4A = Shunt opening release.
- Fig. 6A = Instantaneous undervoltage release (see notes B, C and Q).
- Fig. 7A = Undervoltage release with electronic time-delay device, outside the circuit-breaker (see notes B and Q).
- Fig. 8A = Second shunt opening release (see note Q).
- Fig. 11A = Contact for electrical signalling of springs charged or discharged.
- Fig. 12A = Contact for electrical signalling of circuit-breaker open, with springs charged, and ready to close.
- Fig. 13A = Contact for electrical signalling of circuit-breaker open due to tripping of the overcurrent release. The circuit-breaker may be closed only after pressing the reset pushbutton.
- Fig. 14A = Contact for electrical signalling of circuit-breaker open due to tripping of the overcurrent release and electrical reset coil. The circuit-breaker may be closed only after pressing the reset pushbutton or energizing the coil.
- Fig. 15A = Contact operated by the circuit-breaker rotary handle – for circuit-breakers with manual control only (see note C).
- Fig. 21A = Circuit-breaker auxiliary contacts (for circuit-breakers with manual control only).
- Fig. 22A = Circuit-breaker auxiliary contacts (for circuit-breakers with motor control only).
- Fig. 31A = First set of contacts for electrical signalling of circuit-breaker in racked-in, test isolated, racked out position.
- Fig. 41A = Auxiliary circuits of PR331/P trip unit (see note F).
- Fig. 42A = Auxiliary circuits of PR332/P trip units (see notes F and N).
- Fig. 43A = Circuits of the measuring module PR330/V of the PR332/P trip units internally connected to the circuit-breaker (optional).
- Fig. 44A = Circuits of the measuring module PR330/V of the PR332/P trip units externally connected to the circuit-breaker (optional; see note O).
- Fig. 45A = Circuits of the PR332/P trip unit with communication module PR330/D-M connected to PR330/V actuation unit (see notes E, F and N).
- Fig. 61A = SOR TEST UNIT Test/monitoring unit (see note R).
- Fig. 62A = Circuits of the PR021/K signalling module (outside the circuit-breaker).

Incompatibilities

The circuits indicated in the following figures cannot be supplied simultaneously on the same circuit-breaker:

6A - 7A - 8A
13A - 14A
21A - 22A
41A - 42A - 45A

Notes

- A) The circuit-breaker is only fitted with the applications specified in the ABB SACE order confirmation. To make out the order, please consult this catalogue.
- B) The undervoltage release is supplied for operation using a power supply branched on the supply side of the circuit-breaker or from an independent source. The circuit-breaker can only close when the release is energized (there is a mechanical lock on closing).
- C) In conformity with the Standards governing machine tools, contacts S4 shown in Fig. 15A can be used to open the Yu undervoltage release circuit (Fig. 6A) when the circuit-breaker is open and close it again upon a manual closing command from the rotary handle.
- E) For the EIA RS485 serial interface connection see document RH0298 regarding MODBUS communication.
- F) The auxiliary voltage V_{aux} allows actuation of all operations of the PR331/P, PR332/P and trip units.
Having requested a V_{aux} insulated from earth, one must use "galvanically separated converters" in compliance with IEC 60950 (UL 1950) or equivalent standards that ensure a common mode current or leakage current (see IEC 478/1, CEI 22/3) not greater than 3.5 mA, IEC 60364-41 and CEI 64-8.
- G) Earth fault protection is available with the PR332/P trip unit by means of a current sensor located on the conductor connecting to earth the star centre of the MV/LV transformer.
The connections between terminals 1 and 2 (or 3) of current transformer UI/O and poles T7 and T8 of the X (or XV) connector must be made with a two-pole shielded and stranded cable (see user manual), no more than 15 m long. The shield must be earthed on the circuit-breaker side and current sensor side.
- N) With PR332/P trip unit, the connections to the zone selectivity inputs and outputs must be made with a two-pole shielded and stranded cable (see user manual), no more than 300 m long. The shield must be earthed on the selectivity input side.
- O) Systems with rated voltage greater than 690V require the use of an insulation voltage transformer to connect to the busbars (connect according to the insertion diagrams provided in the manual 1SDH000460R0508).
- P) With PR332/P trip unit with communication module PR330/D-M, the coils YO and YC can be controlled directly from contacts K51/YO and K51/YC with maximum voltages of 110-120 V DC e 240-250 V AC.
- Q) The second opening release may be installed as an alternative to the undervoltage release.
- R) The SACE SOR TEST UNIT + opening release (YO) is guaranteed to operate starting at 75% of the V_{aux} of the opening release itself.
While the YO power supply contact is closing (short-circuit on terminals 4 and 5), the SACE SOR TEST UNIT is unable to detect the opening coil status. Consequently:
– For continuously powered opening coil, the TEST FAILED and ALARM signals will be activated
– If the coil opening command is of the pulsing type, the TEST FAILED signal may appear at the same time. In this case, the TEST FAILED signal is actually an alarm signal only if it remains lit for more than 20s.

Wiring diagrams

Information for reading - ATS010

State of operation represented

The circuit diagram is for the following conditions:

- circuit-breakers open and racked-in #
- generator not in alarm
- closing springs discharged
- overcurrent relays not tripped *
- ATS010 not powered
- generator in automatic mode and not started
- generator switching enabled
- circuits de-energised
- logic enabled via input provided (terminal 47).

The present diagram shows withdrawable circuit-breakers, but is also valid for fixed circuit-breakers: connect terminal 17 to 20 and terminal 35 to 38 on the ATS010 device.

* The present diagram shows circuit-breakers with overcurrent trip unit (T4-T5), but is also valid for circuit-breakers with thermomagnetic trip unit and to circuit-breakers with out relay (switch-disconnectors): connect terminal 18 to 20 and terminal 35 to 37 of the ATS010 device.

@ The present diagram shows four-pole circuit-breakers but is also valid for two-pole circuit-breakers: use only terminals 26 and 24 (phase and neutral) for the voltage connection of the normal power supply to the ATS010 device; also use the Q61/2 two-pole rather than four-pole auxiliary protection circuit-breaker.

Caption

| | |
|-----------|---|
| A | = Device type ATS010 for the automatic transfer switch of two circuit-breakers |
| K1 | = Auxiliary contactor for the emergency supply voltage presence |
| K2 | = Auxiliary contactor for the normal supply voltage presence |
| K51/Q1 | = Overcurrent release for emergency supply line* |
| K51/Q2 | = Overcurrent release for normal supply line* |
| M | = Motor with series energization for the circuit-breaker opening and closing |
| Q/0 | = Limit contact of BA for cutting off the power supply in the release tripped and open position |
| Q/1 | = Circuit-breaker auxiliary contact |
| Q1 | = Circuit-breaker for emergency supply line |
| Q2 | = Circuit-breaker for normal supply line |
| Q61/1-2 | = Miniature circuit-breakers for auxiliary circuits protection @ |
| S1, S2 | = Position contact operated by a cam of the operating mechanism |
| S3 | = Key lock contact operated by the remote opening trip unit or the operating mechanism |
| S11...S16 | = Contacts for the ATS010 device inputs |
| S75/1 | = Contact signalling circuit-breaker in withdrawable version connected # |
| SY | = Contact signalling circuit-breaker tripped through trip units operation (tripped position)* |
| TV... | = Current transformers feeding the overcurrent relay |
| X2 | = Connector for the circuit-breaker auxiliary circuits |
| XV | = Terminal boards of the accessories. |

Wiring diagrams


Graphic symbols (IEC 60617 and CEI 3-14...3-26 Standards)

| | | | | | | | |
|--|--|--|--|--|--|--|---|
| | Thermal effect | | Connection of conductors | | Position switch (limit switch), break contact | | Differential current relay |
| | Electromagnetic effect | | Terminal | | Position switch (limit switch) change-over break before make contact | | Phase-failure detection relay in a three-phase system |
| | Delay | | Plug and socket (male and female) | | Contactor (contact open in the unoperated position) | | Locked-rotor detection relay operating by current sensing |
| | Mechanical connection (link) | | Resistor (general symbol) | | Circuit-breaker disconnecter with automatic trip unit | | Lamp, general symbol |
| | Manually operated control (general case) | | Temperature dependent resistor | | Switch-disconnector (on-load isolating switch) | | Mechanical interlock between two devices |
| | Operated by turning | | Motor (general symbol) | | Operating device (general symbol) | | Operated by electric motor |
| | Operated by pushing | | Induction motor, three-phase, squirrel cage | | Thermal relay | | Motor with series energization |
| | Operated by key | | Current transformer | | Instantaneous overcurrent or rate-of-rise relay | | Screen, shield (it may be drawn in any convenient shape) |
| | Operated by cam | | Current transformer with four threaded winding and with one permanent winding with one tapping | | Overcurrent relay with adjustable short time-lag characteristic | | Equipotentiality |
| | Hearth, ground (general symbol) | | Make contact | | Overcurrent relay with inverse short time-lag characteristic | | Voltage transformer |
| | Converter with galvanic separator | | Break contact | | Overcurrent relay with inverse long time-lag characteristic | | Winding of three-phase transformer, connection star |
| | Conductors in a screened cable, two conductors shown | | Change-over break before make contact | | Earth fault overcurrent relay with inverse short time-lag characteristic | | Current sensing element |
| | Twisted conductors, two conductors shown | | Position switch (limit switch), make contact | | Phase-balance current relay | | |


Wiring diagrams

Wiring diagram of the T1...T6 circuit-breakers


State of operation

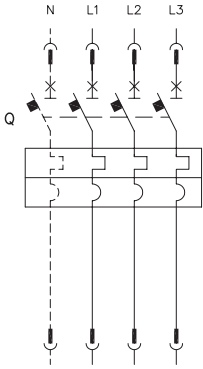


Three-pole or four-pole circuit-breaker with thermomagnetic trip unit

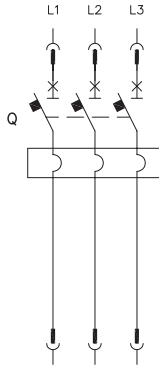


Three-pole circuit-breaker with magnetic trip unit

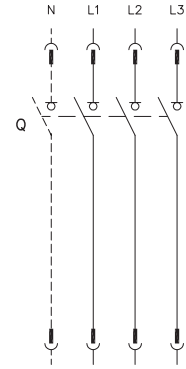


Three-pole or four-pole switch-disconnector (on-load isolating switch)

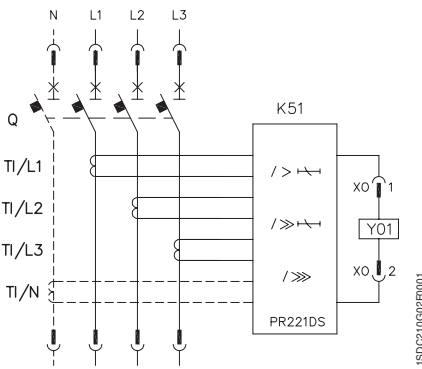


Three-pole or four-pole circuit-breaker with PR221DS electronic trip unit

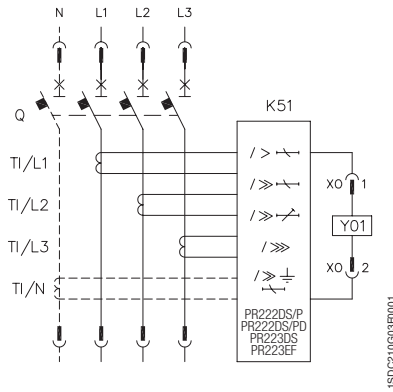

Three-pole or four-pole circuit-breaker with PR222DS/P, PR222DS/PD, PR223DS or PR223EF electronic trip unit (for T4, T5 and T6)

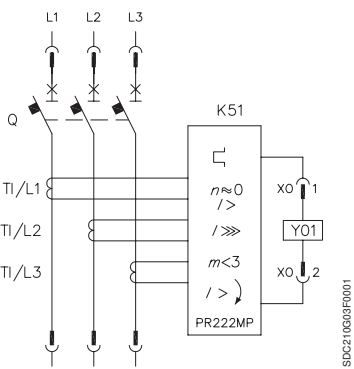


Three-pole circuit-breaker with PR222MP electronic trip unit

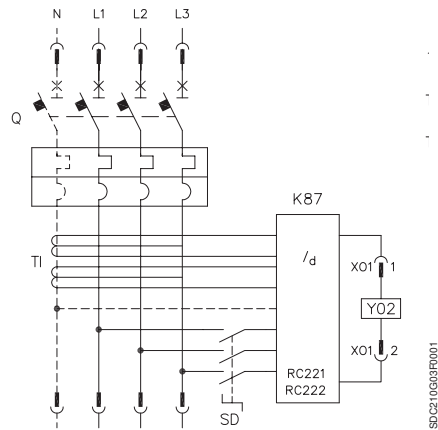


Three-pole or four-pole circuit-breaker with RC221 or RC222 residual current trip unit


5

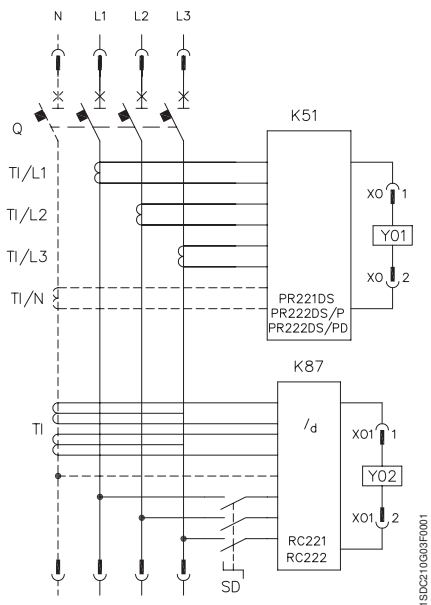

Three-pole or four-pole circuit-breaker with PR221DS, PR222DS/P or PR222DS/PD electronic trip unit and RC221 or RC222 residual current trip unit (for T4, T5 and T6 four-pole only)

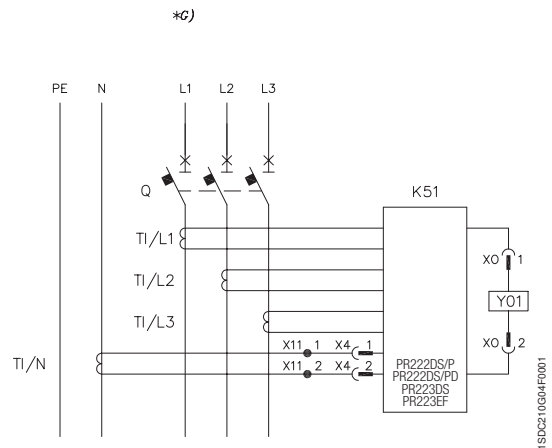

Fixed version three-pole circuit-breaker with current transformer on neutral conductor, external to circuit-breaker (for T4, T5 and T6)

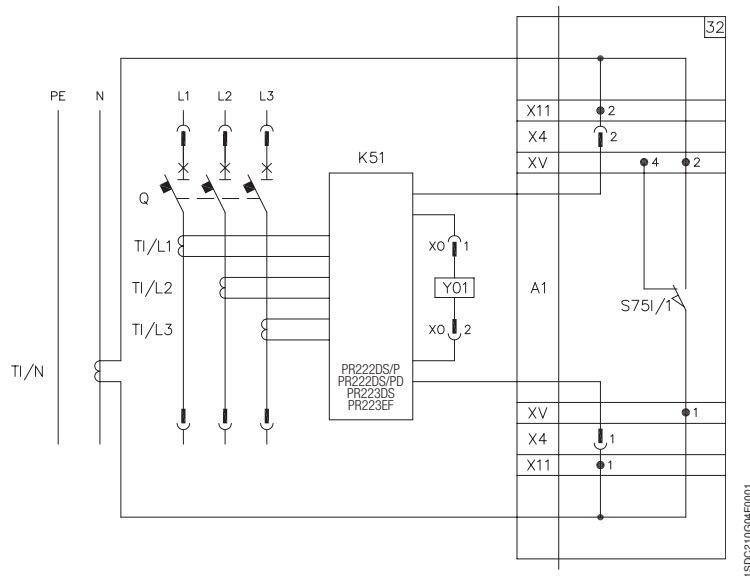


Plug-in or withdrawable version three-pole circuit-breaker with current transformer on neutral conductor, external to circuit-breaker (for T4, T5 and T6)


Wiring diagrams

Wiring diagram of the T7 circuit-breakers

State of operation

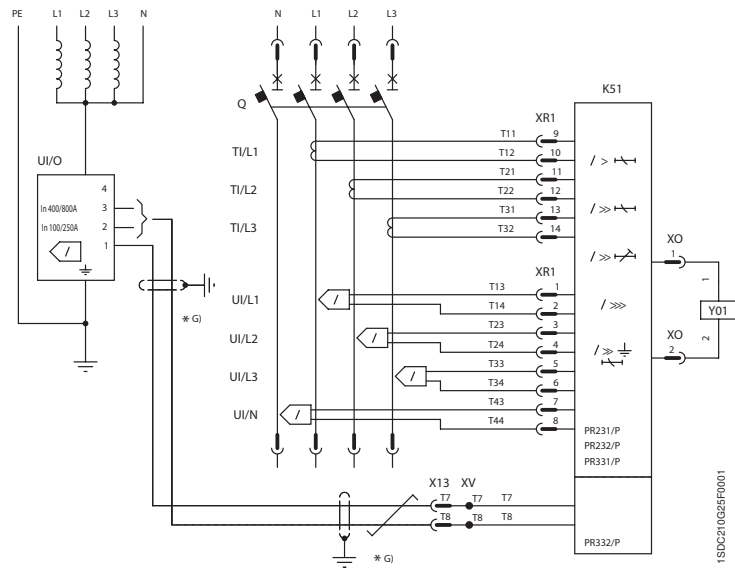

Three-pole circuit-breaker with PR231/P, PR232/P, PR331/P, PR332/P electronic trip unit

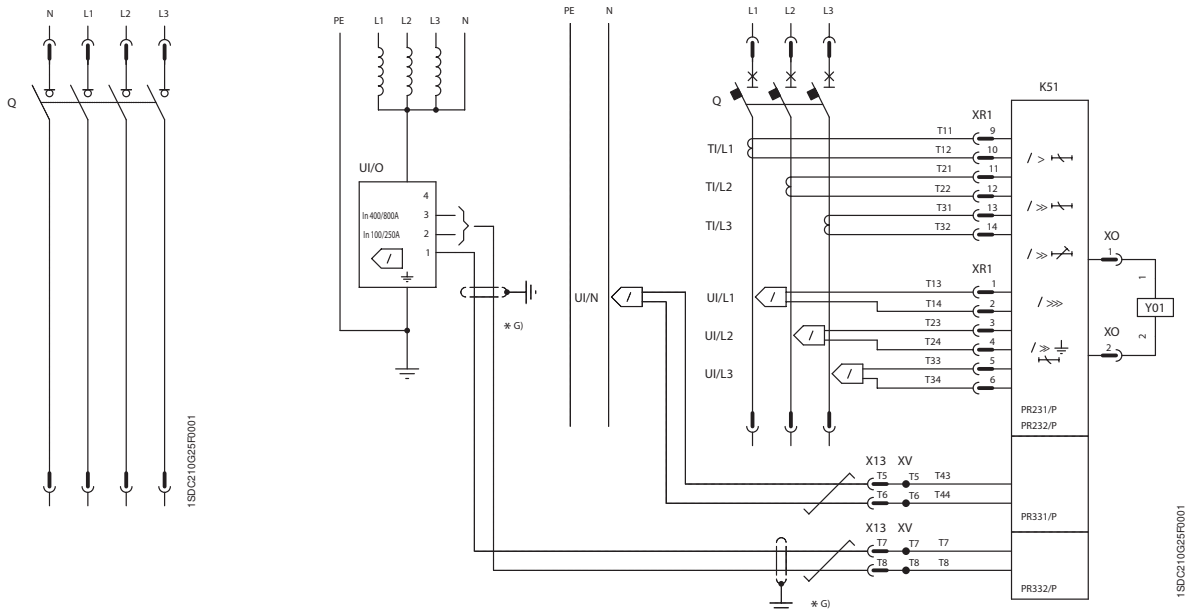


Three- or four-pole switch-disconnector

Four-pole circuit-breaker with PR231/P, PR232/P, PR331/P, PR332/P electronic trip unit


Wiring diagrams

Electrical accessories for T1...T6

Shunt opening and undervoltage releases

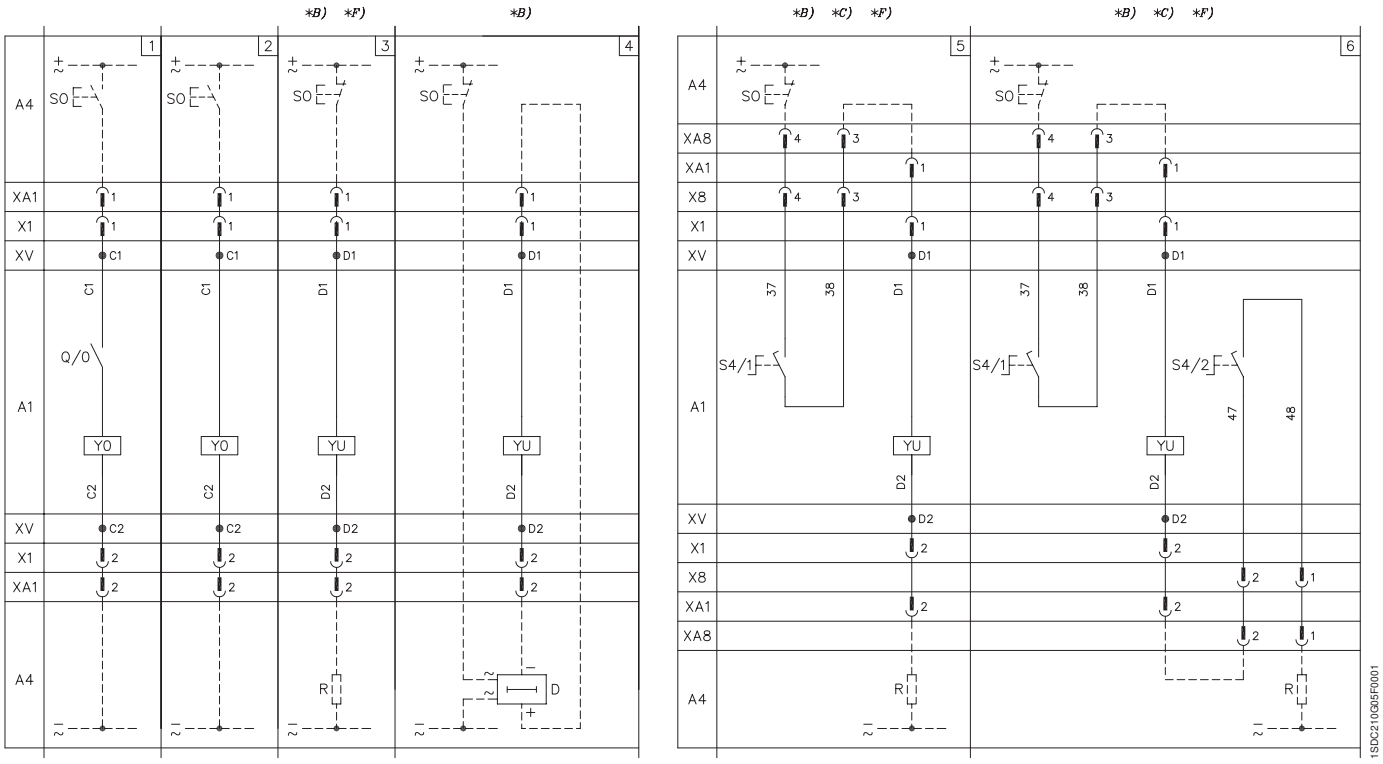


Residual current releases and remote controls

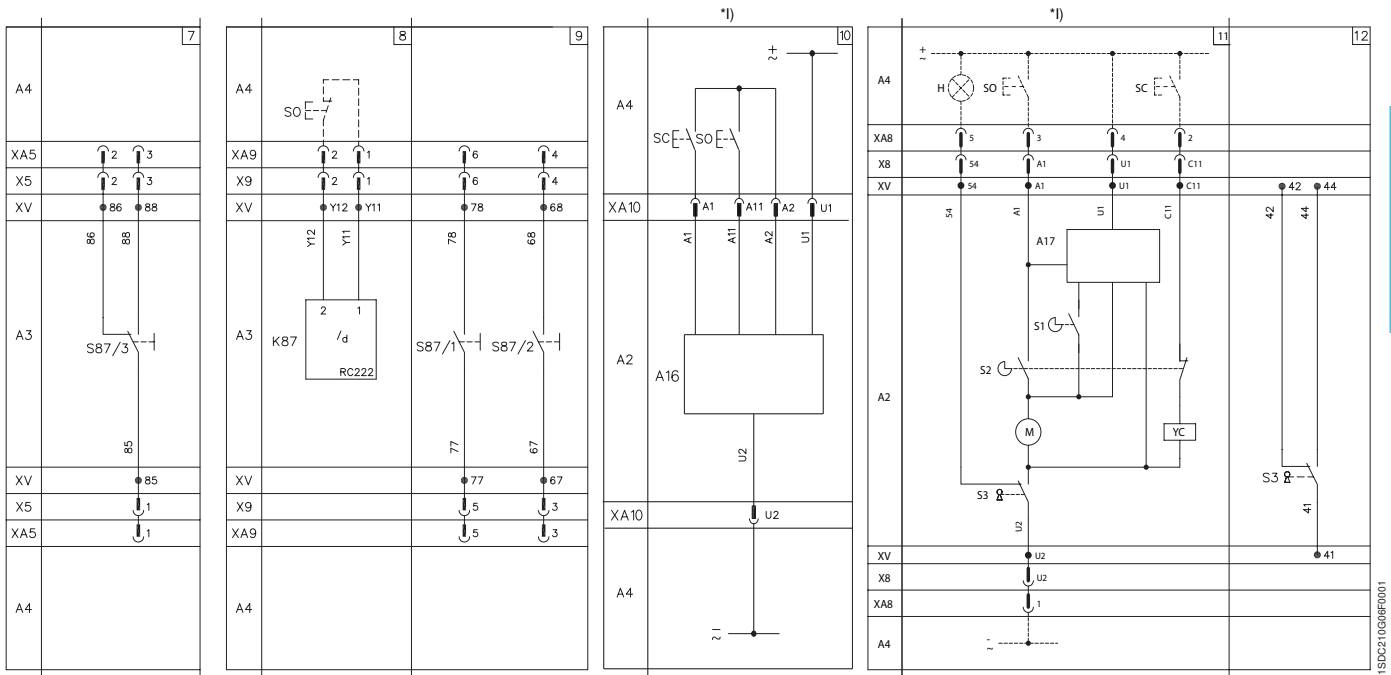

Wiring diagrams


Electrical accessories for T1...T6

Auxiliary contacts

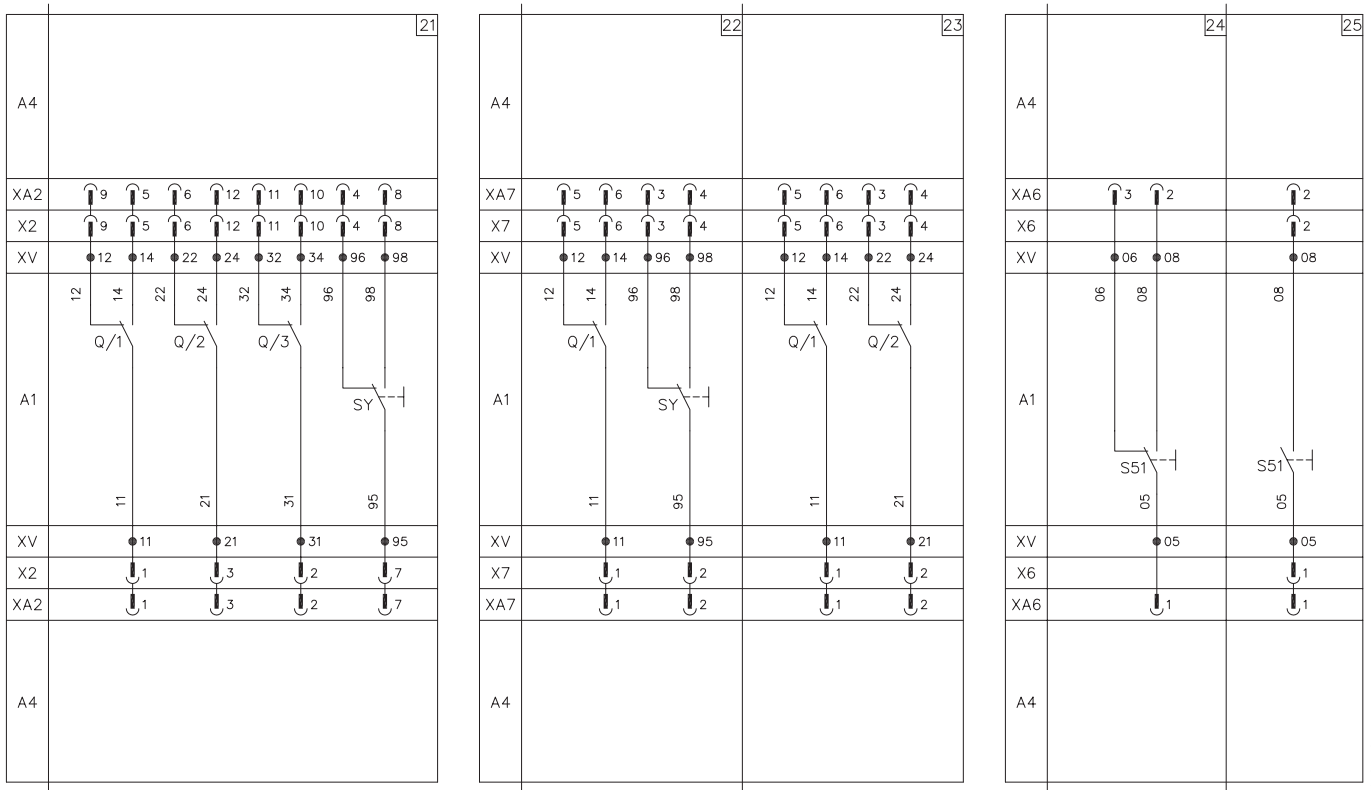


1SDC21007F0001

Position contacts

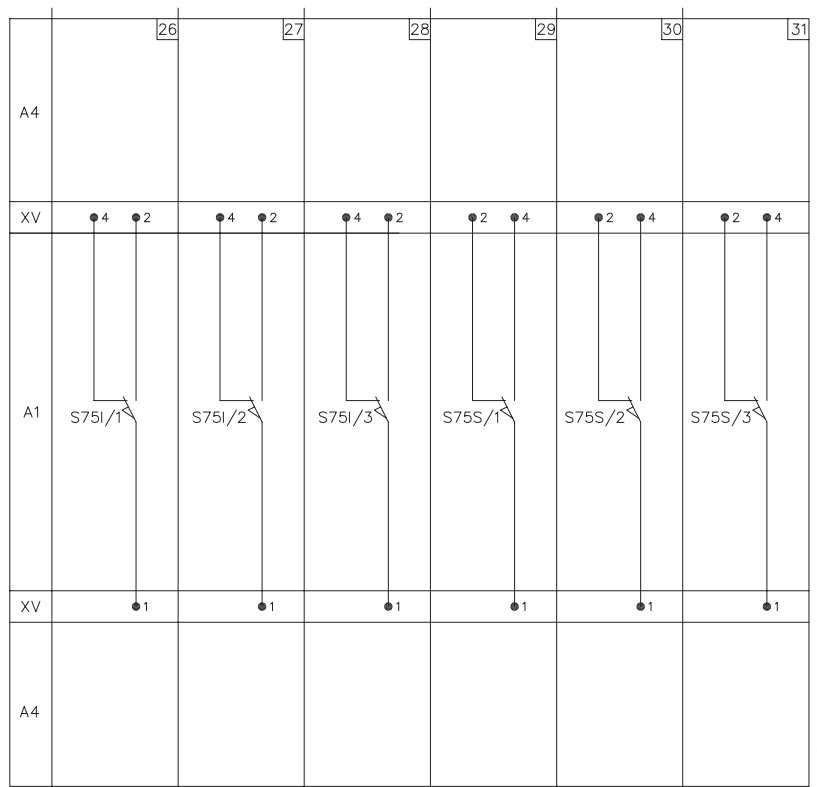


1SDC21008F0001

PR222DS/P electronic trip unit connected with the FDU front display unit

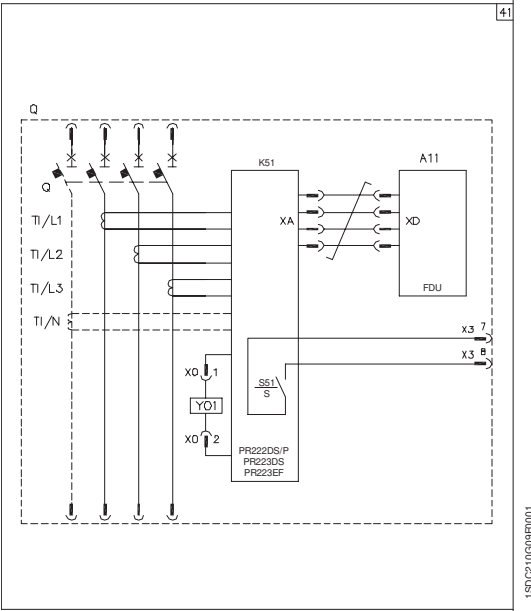


PR222DS/PD electronic trip unit connected with the PR021/K signalling unit

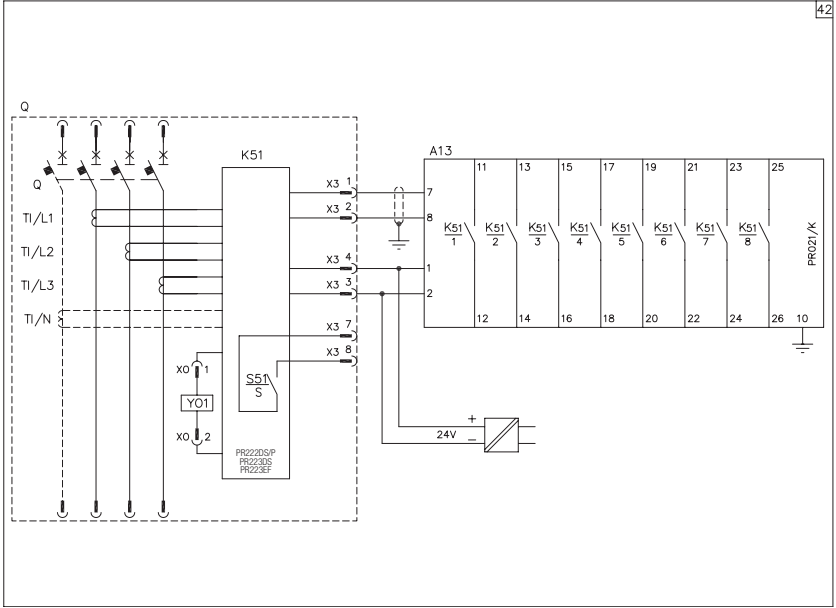


Wiring diagrams

Electrical accessories for T1...T6

PR222DS/PD electronic trip unit connected with the FDU front display unit and the PR021/K signalling unit

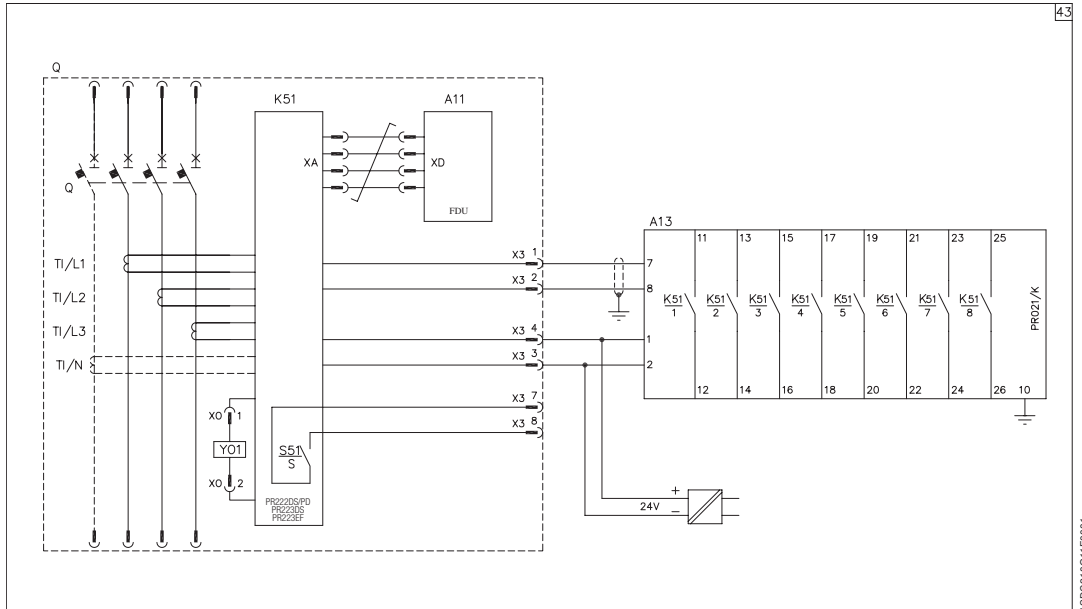


PR222DS/PD electronic trip unit connected with the AUX-E auxiliary contacts

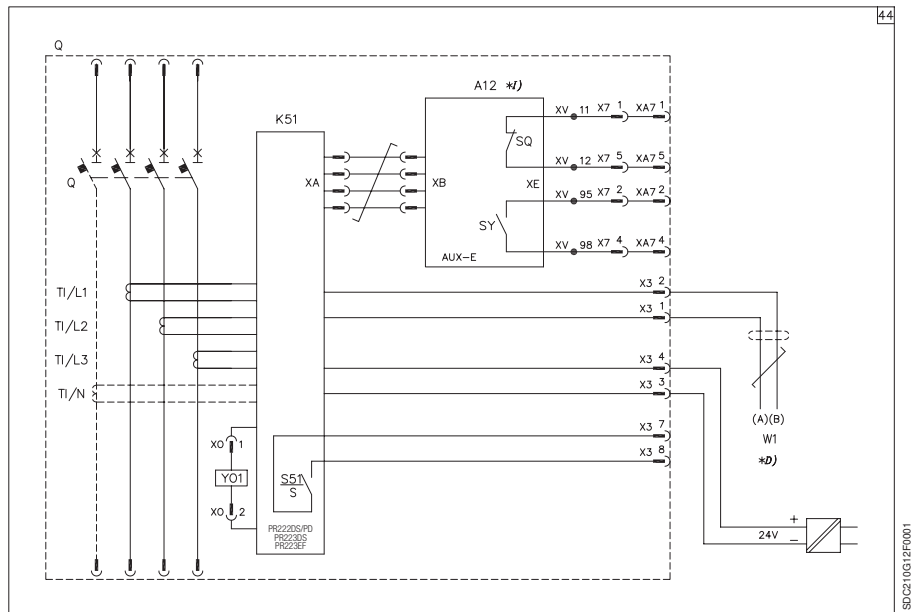


5

PR222DS/PD electronic trip unit connected with the AUX-E auxiliary contacts and the MOE-E actuation unit

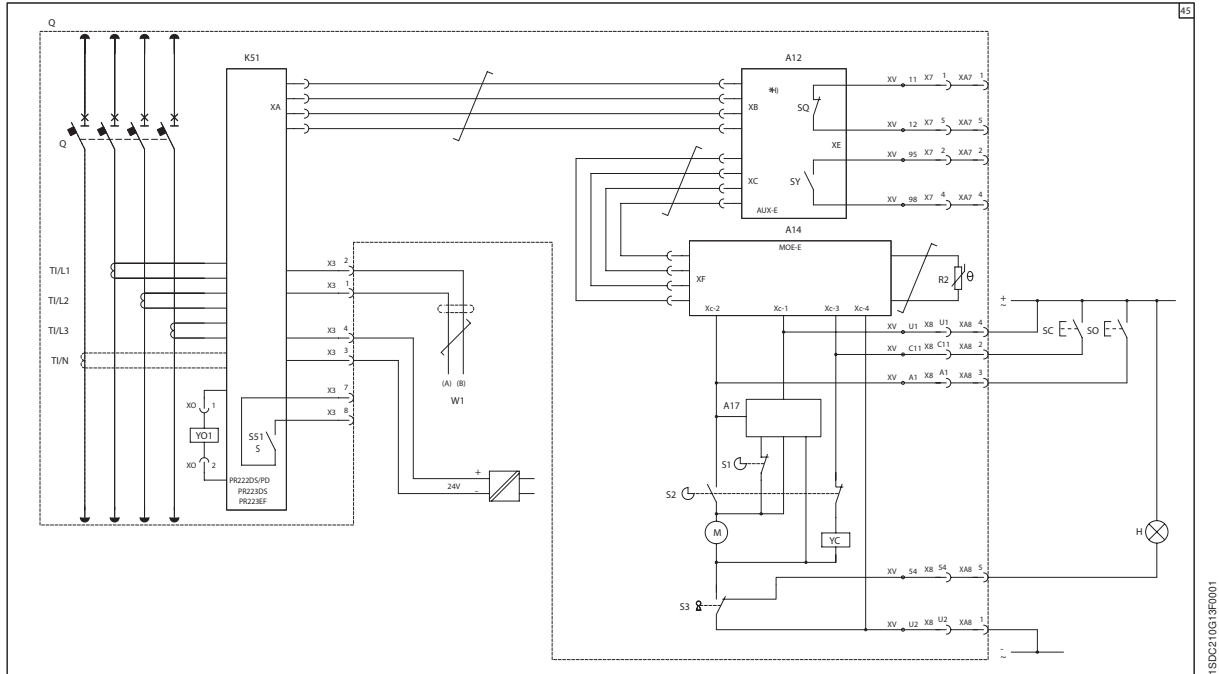


PR222DS/PD electronic trip unit connected with the FDU front display unit and with the AUX-E auxiliary contacts

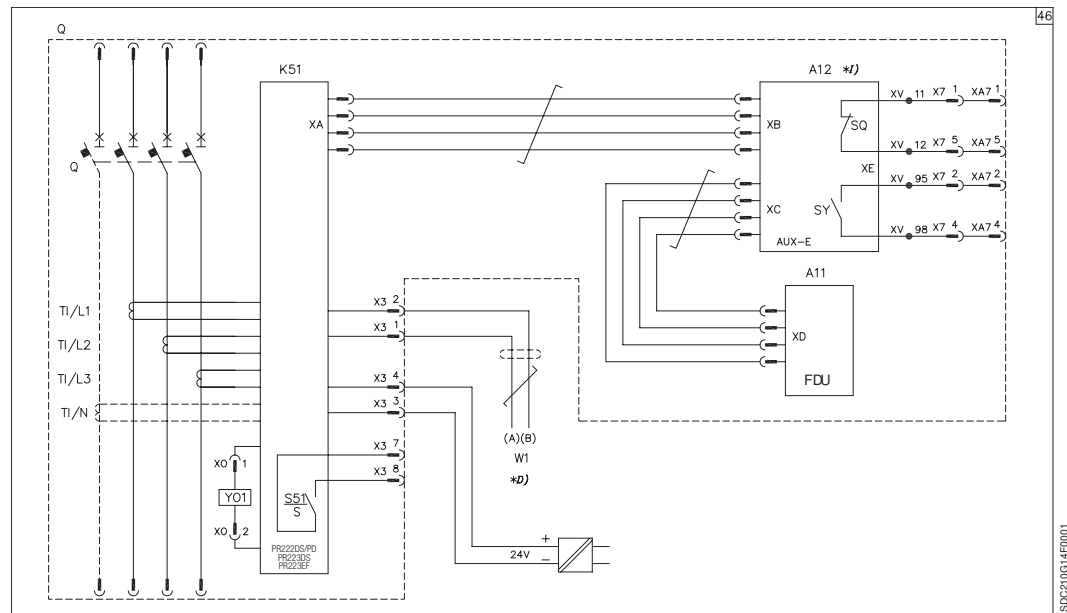


Wiring diagrams

Electrical accessories for T1...T6


PR22MP electronic trip unit connected with the PR021/K signalling unit

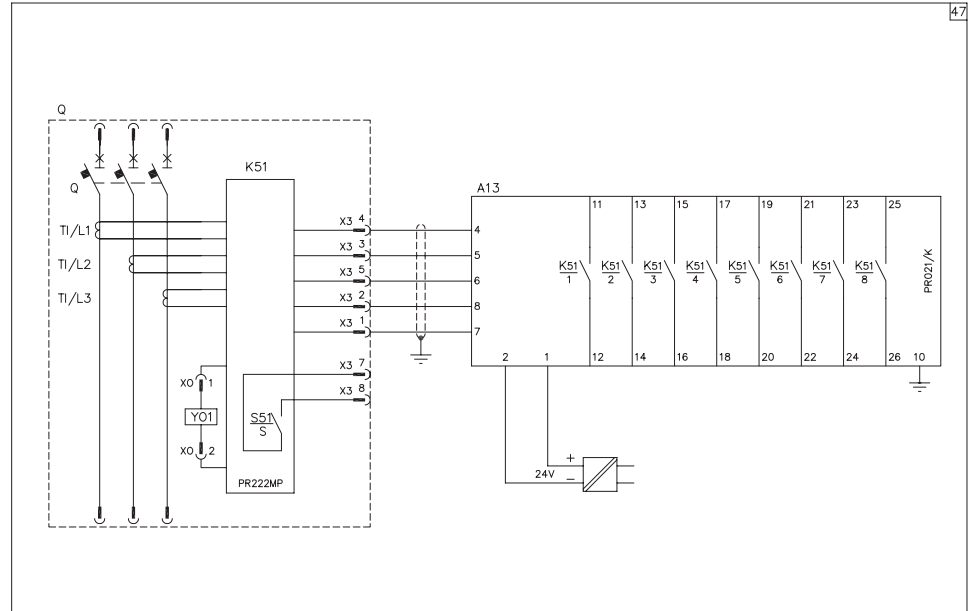

PR22MP electronic trip unit connected with the PR021/K signalling unit and with the PR212/CI contactor control unit

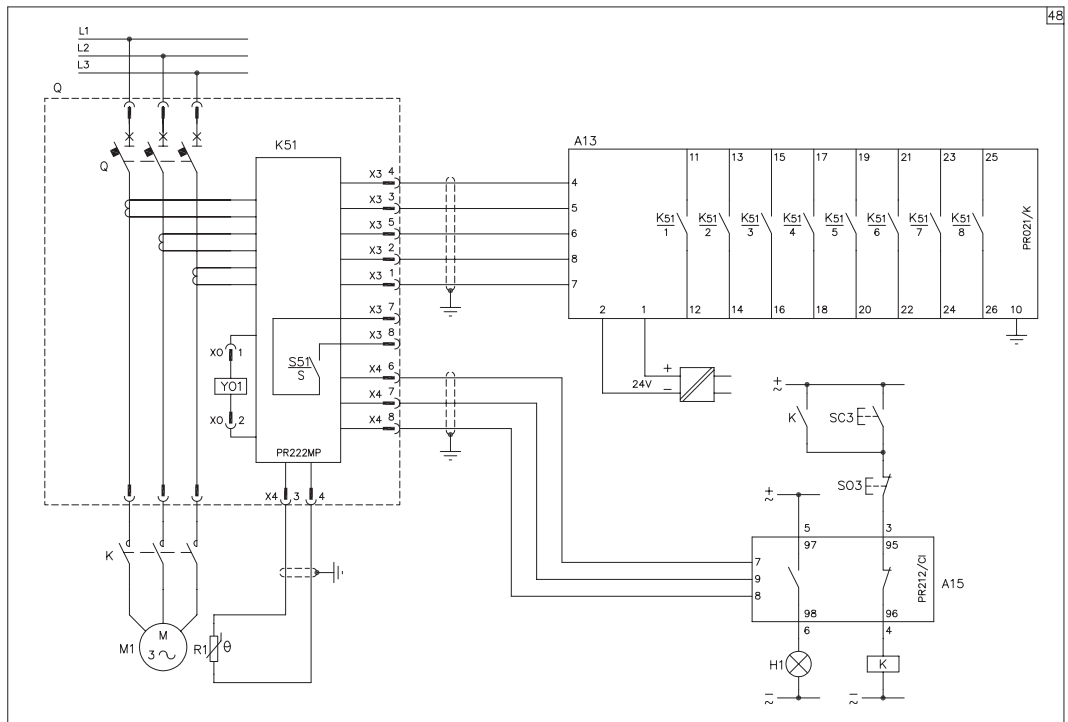


PR222MP electronic trip unit connected with the PR021/K signalling unit, with the PR212/CI contactor control unit and with a contactor

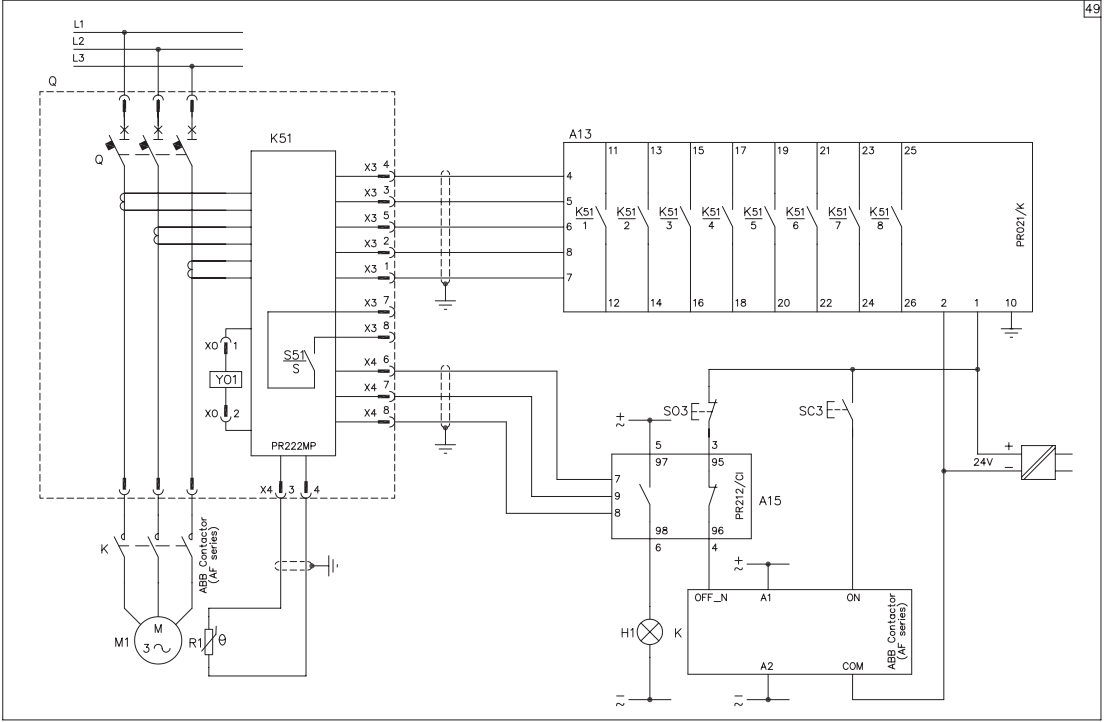

1SDC210G17F0001

PR222MP electronic trip unit connected with the PR021/K signalling unit and with a contactor

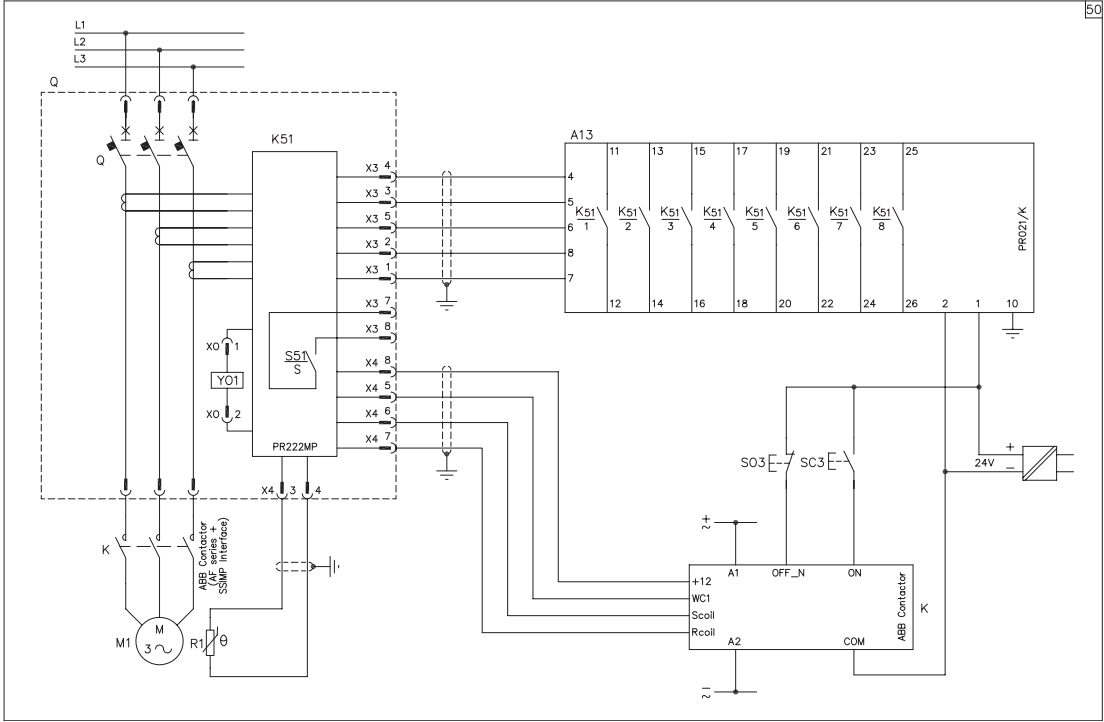


1SDC210G18F0001

Wiring diagrams


Electrical accessories for T1...T6

PR222MP electronic trip unit with auxiliary power supply and PR212/CI contactor control unit

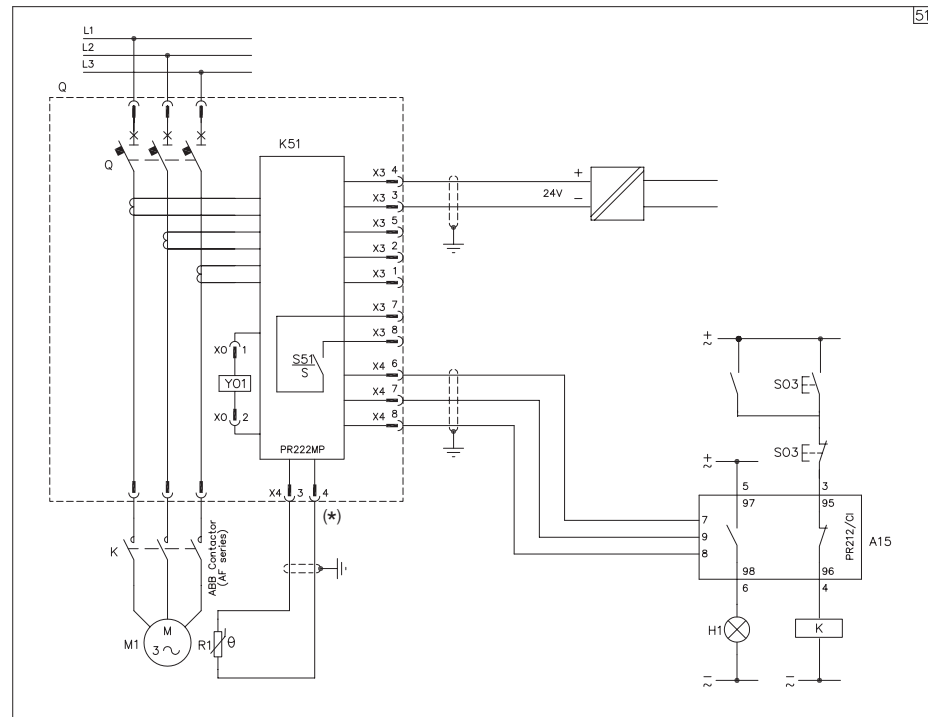


*) As an alternative to generic contact 0/1

PR223DS electronic trip unit connected with the VM210 voltage measuring device

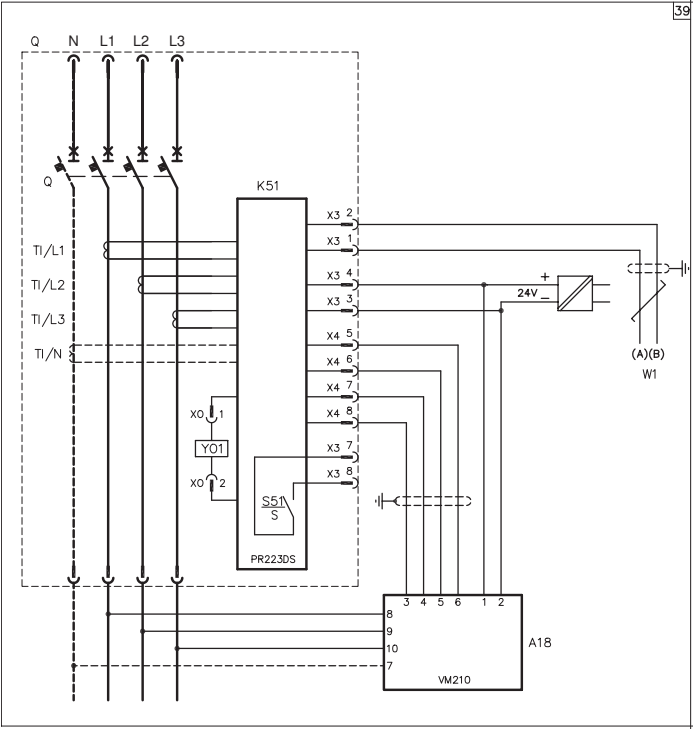


PR223EF electronic trip unit connected with the VM210 voltage measuring device

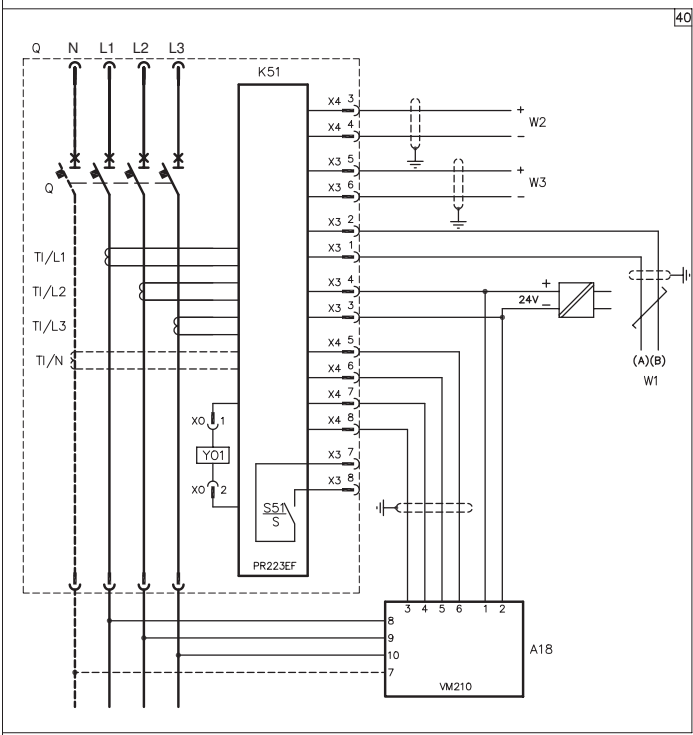


Wiring diagrams

Electrical accessories for T7


Motor operating mechanism, opening, closing and undervoltage releases

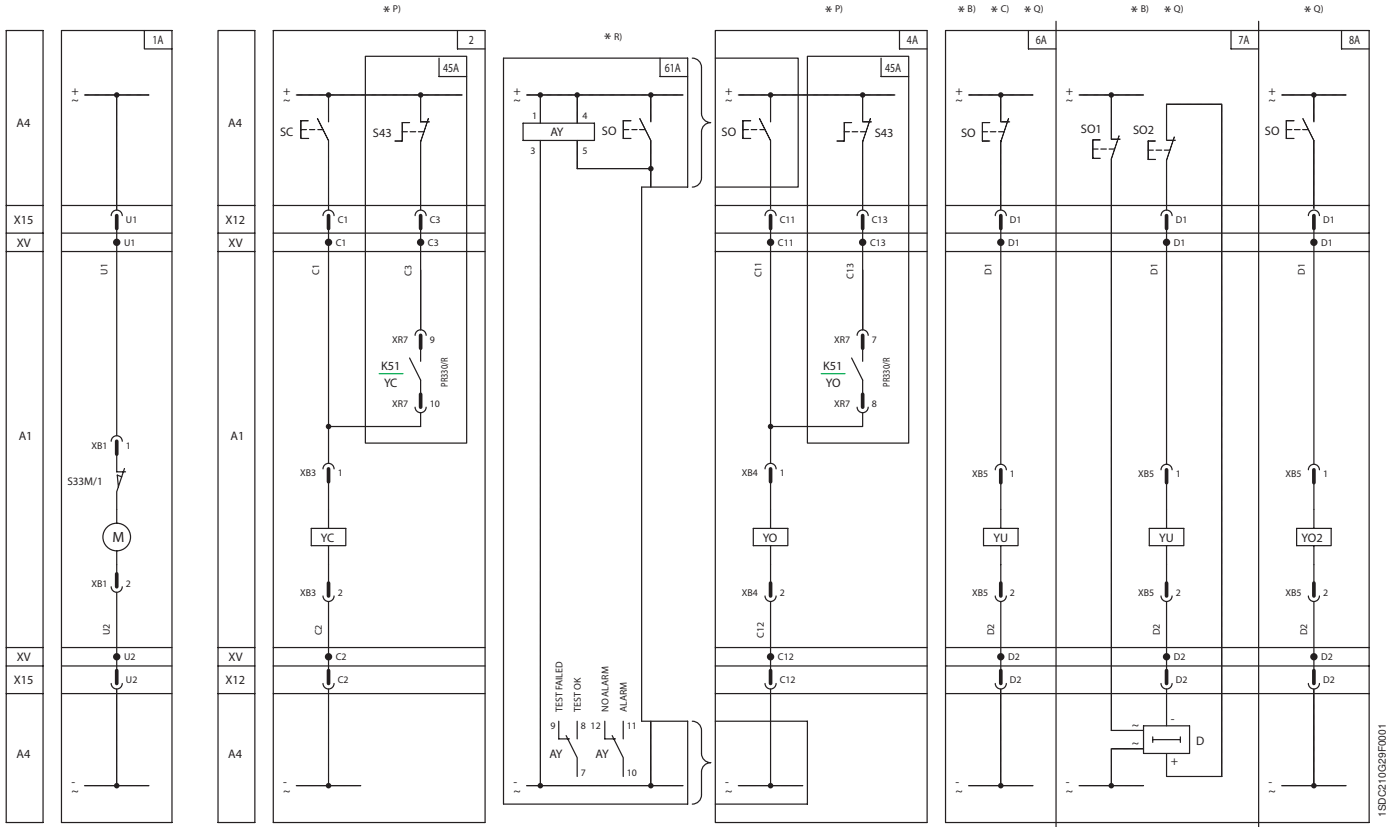

Signalling contacts

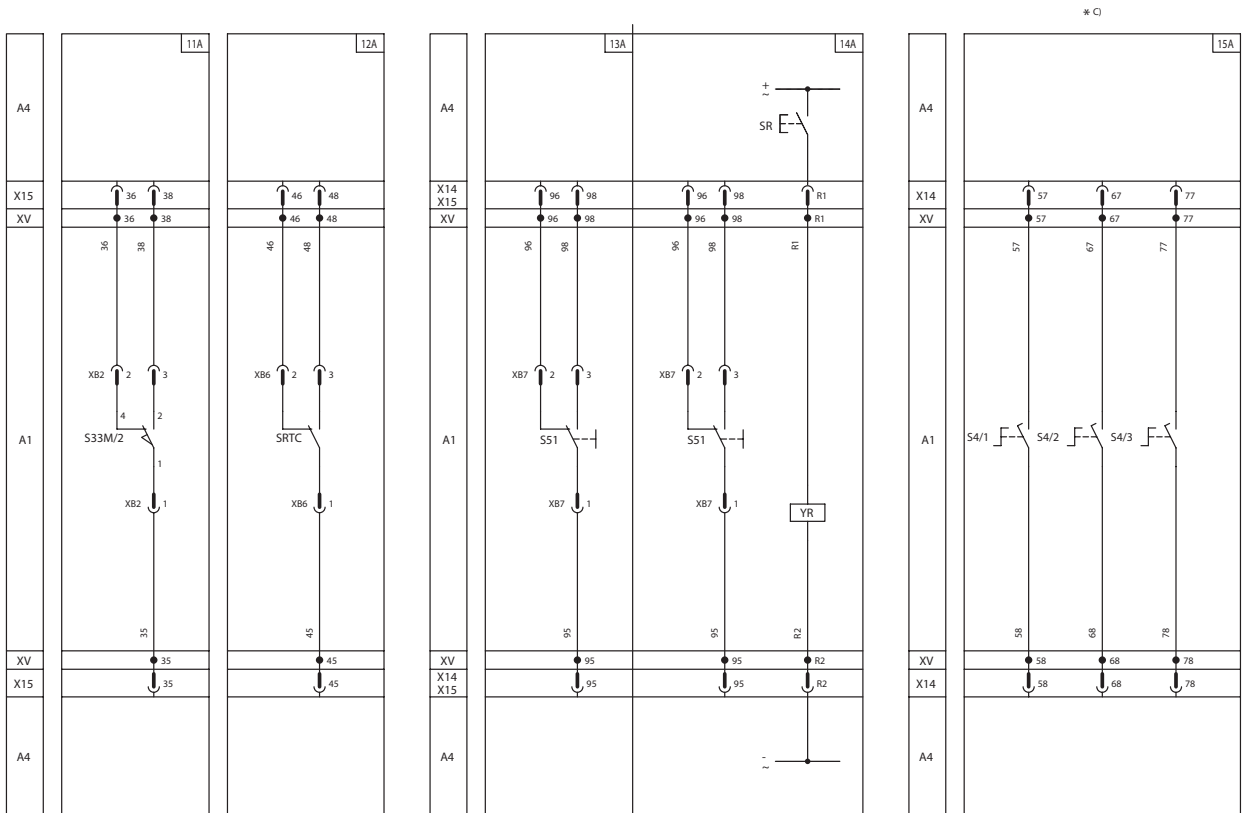


Signalling contacts

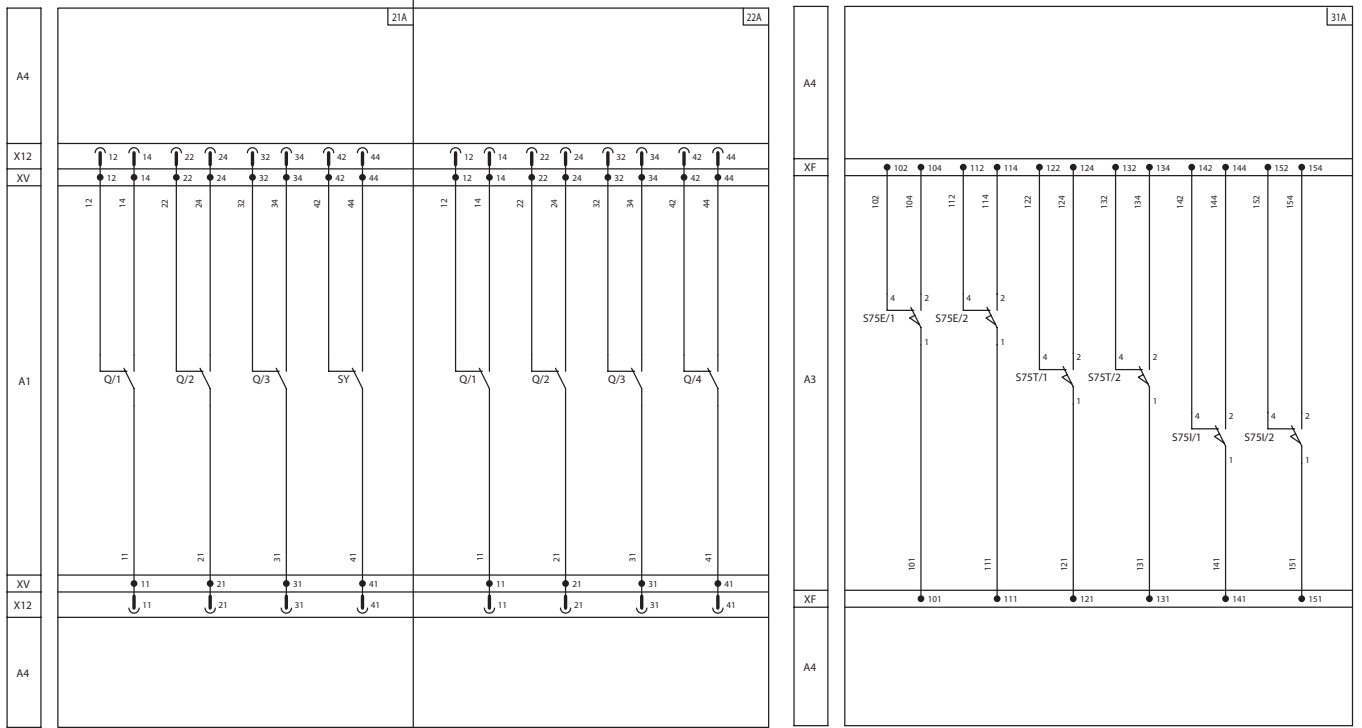


1SDC210G31 F0001

Auxiliary circuits of the PR331/P and PR332/P trip units

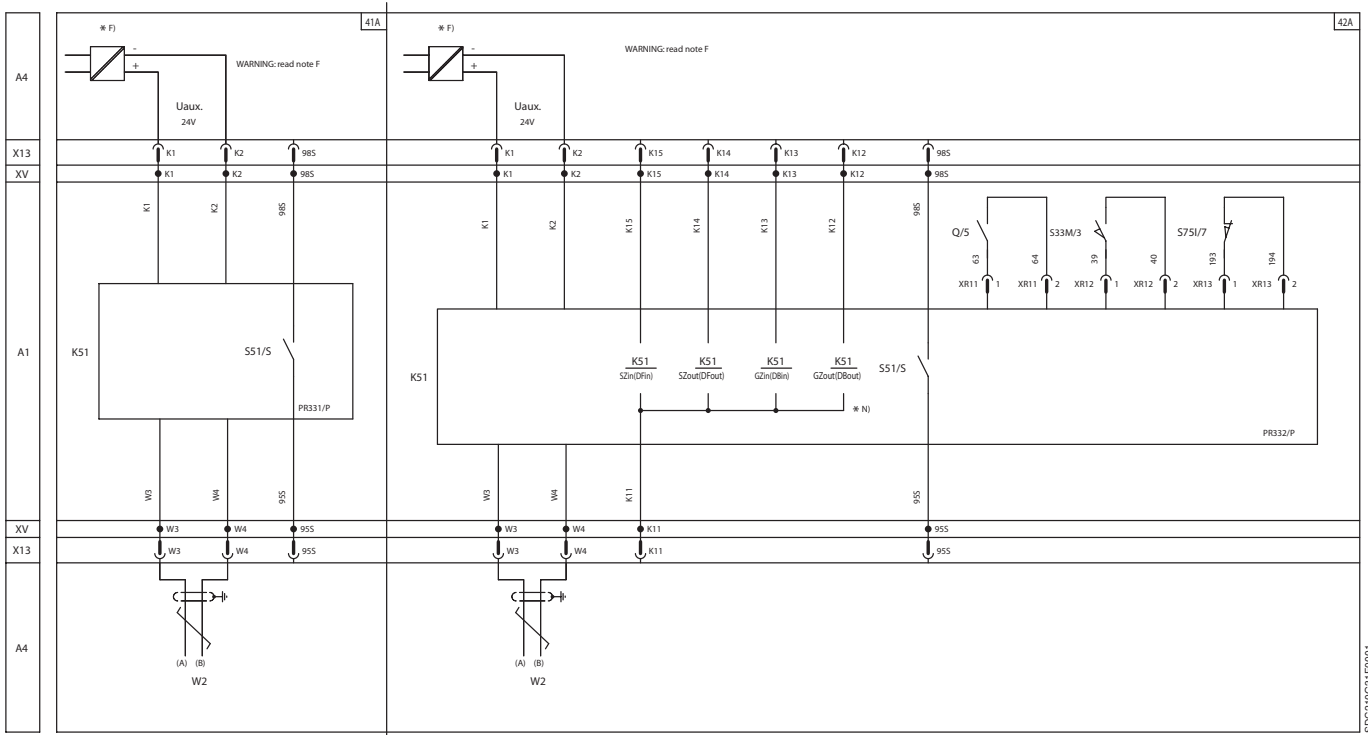

1SDC210G31 F0001

PR021/K signalling unit for PR331/P and PR332/P

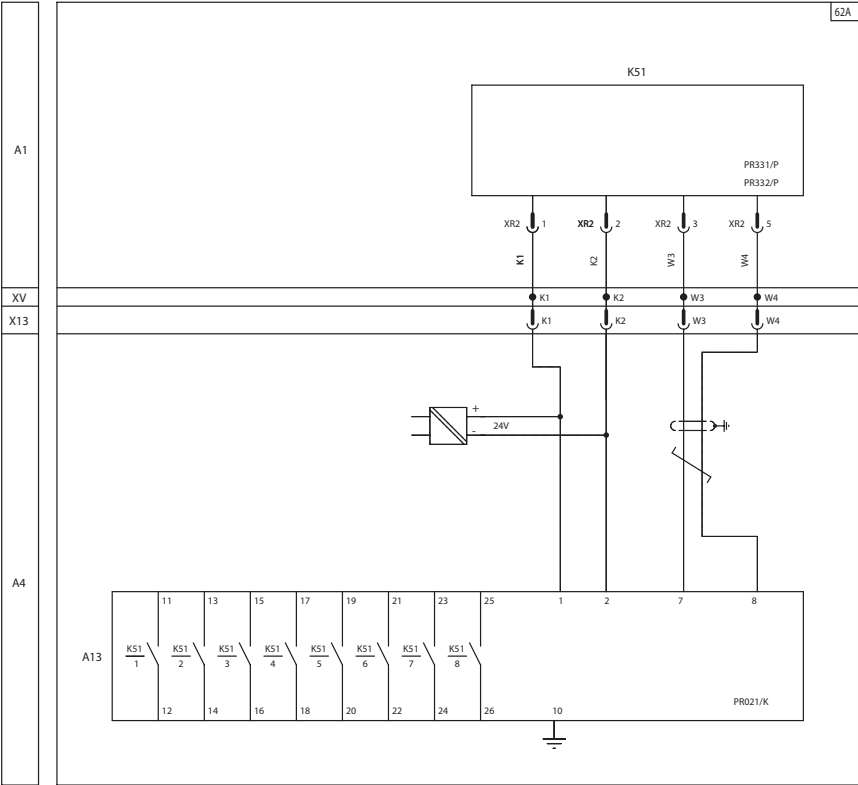


1SDC21066R0001

Wiring diagrams


Automatic transfer-switch ATS010

ATS010 device for the automatic transfer switch of two T4-T5-T6 circuit-breakers without safety auxiliary voltage supply

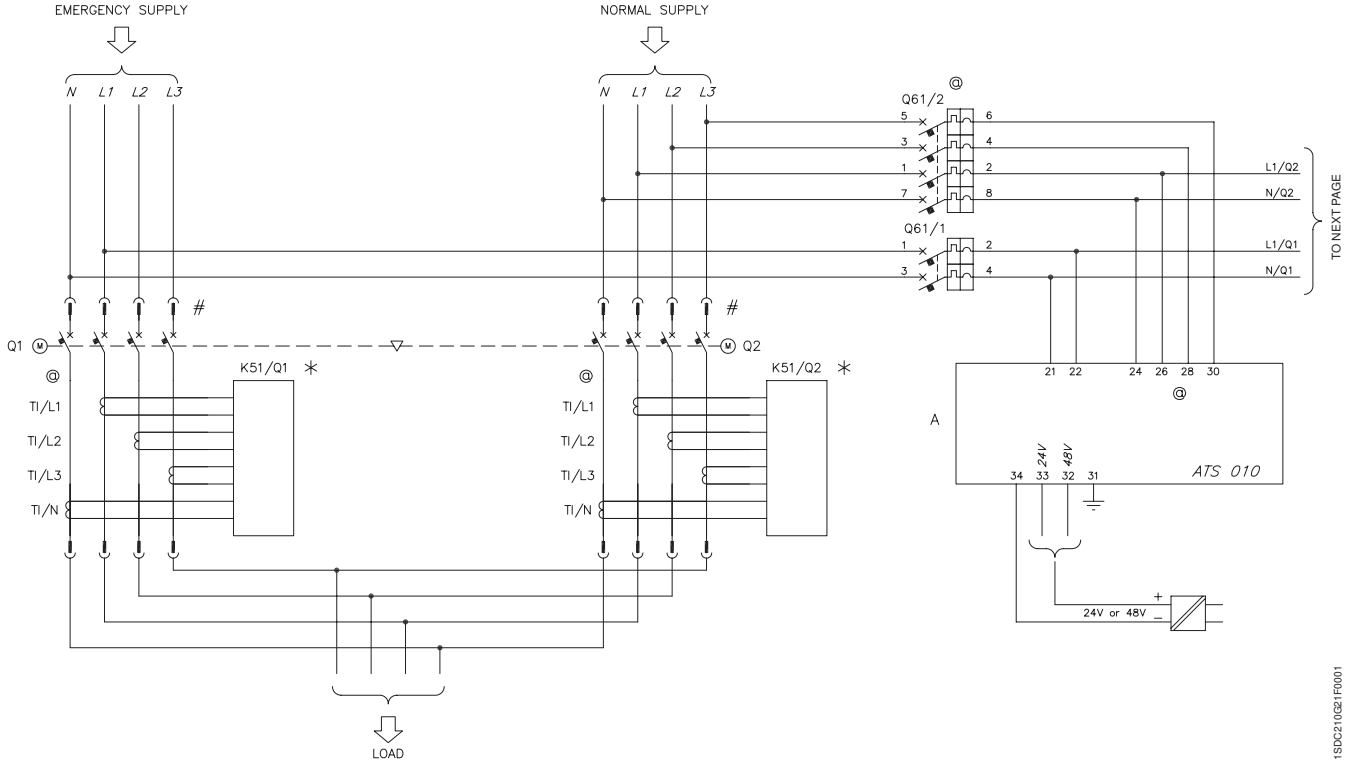


1SDC210G21F0001

5

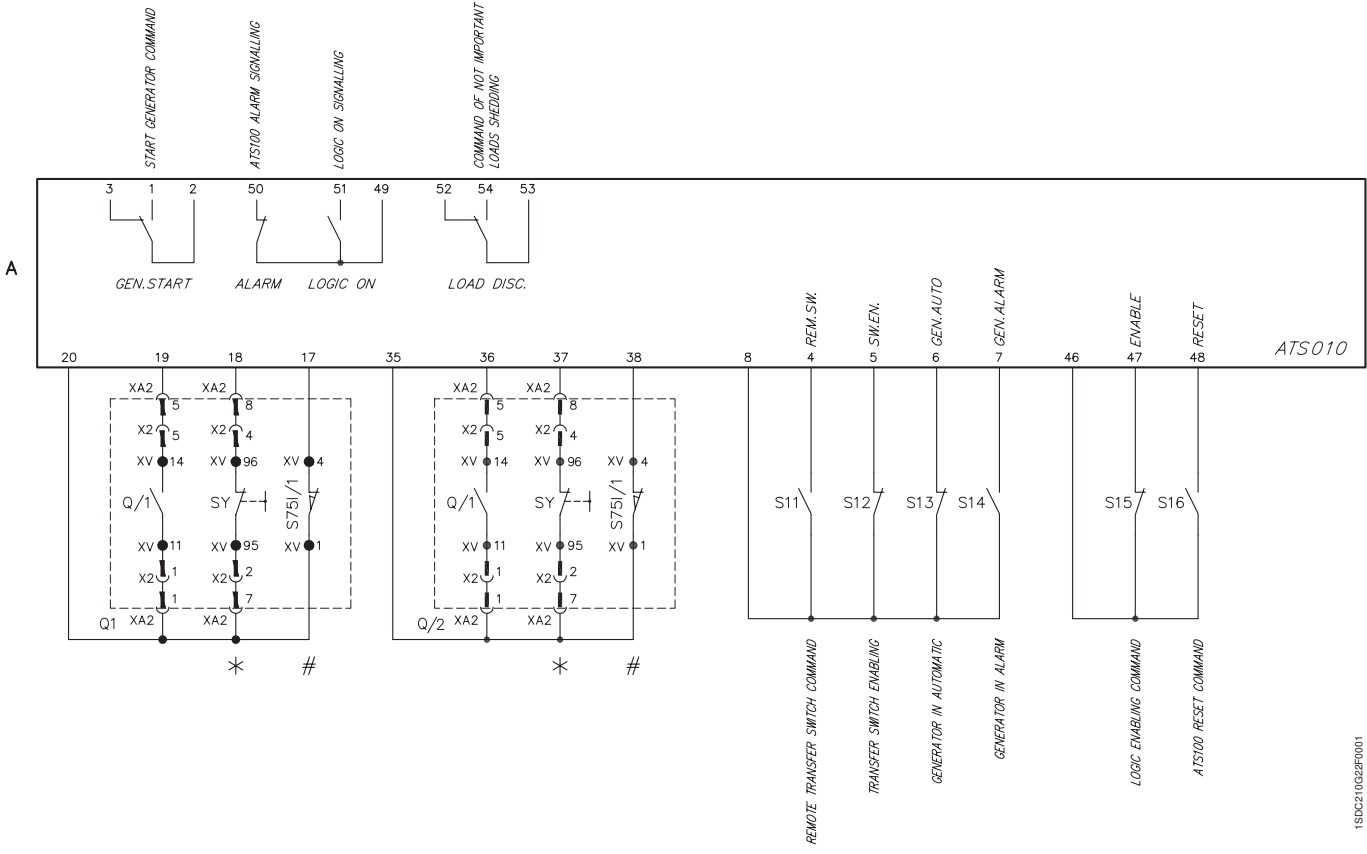


1SDC210G22F0001

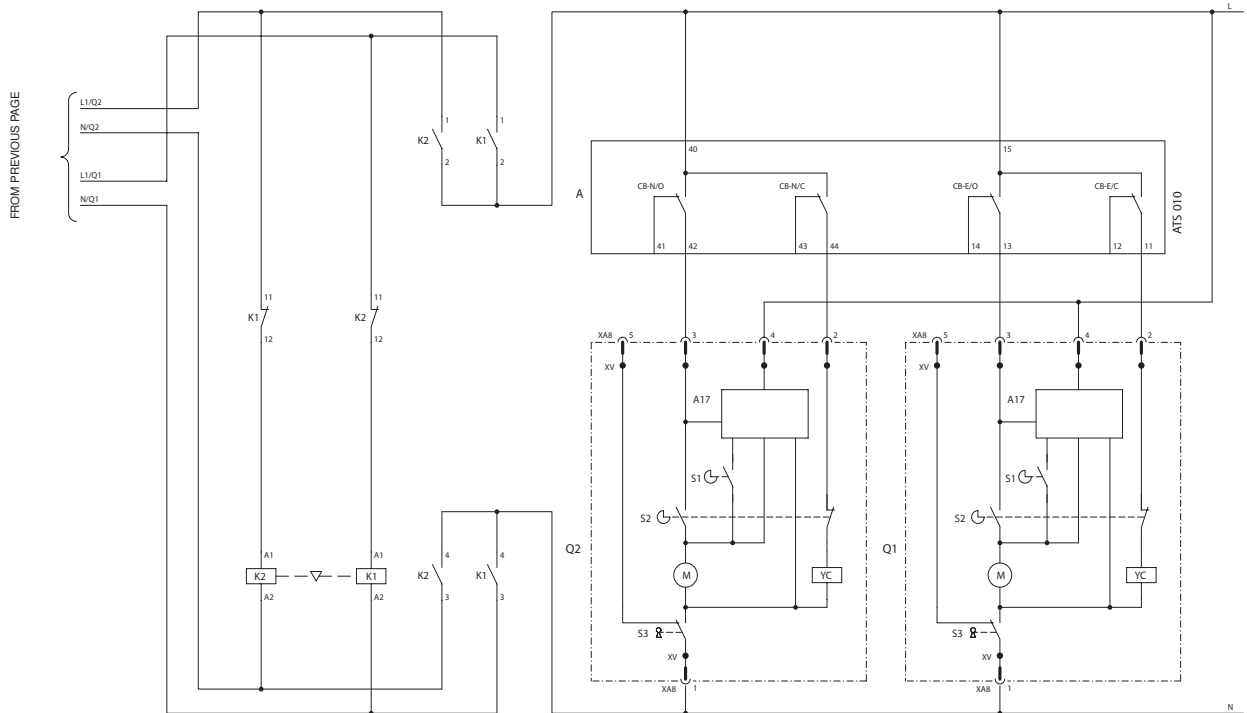

1SDX210G23F0001

ATS010 device for the automatic transfer switch of two T4-T5-T6 circuit-breakers with safety auxiliary voltage supply

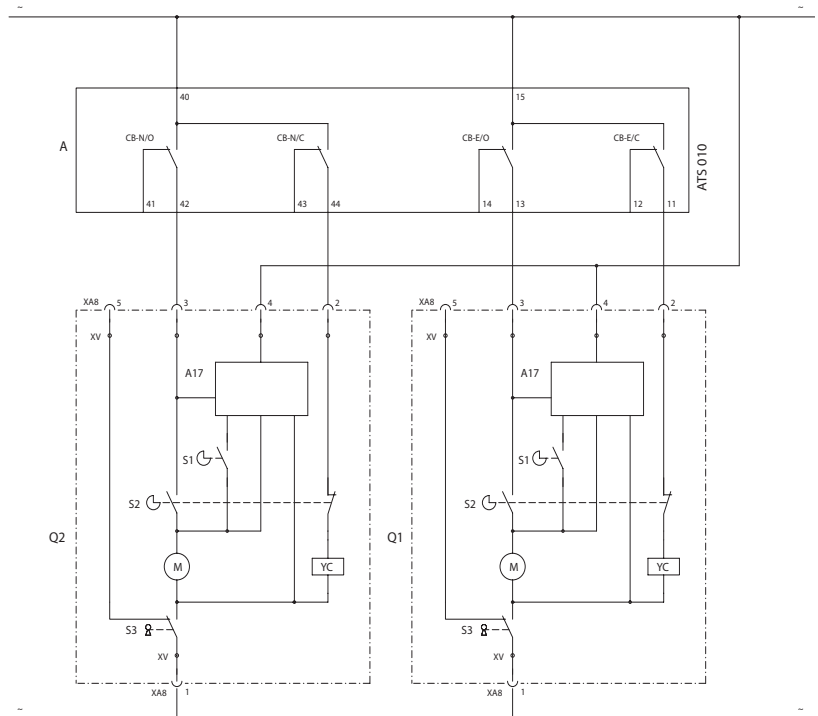

1SDX210G24F0001



Index

Fixed circuit-breaker and terminals

| | |
|---------------------------------------|------|
| Tmax T1 and single-pole Tmax T1 | 6/2 |
| Tmax T2..... | 6/5 |
| Tmax T3..... | 6/8 |
| Tmax T4..... | 6/11 |
| Tmax T5..... | 6/14 |
| Tmax T6..... | 6/17 |
| Tmax T7..... | 6/22 |

Plug-in circuit-breaker and terminals

| | |
|--------------|------|
| Tmax T2..... | 6/27 |
| Tmax T3..... | 6/30 |
| Tmax T4..... | 6/33 |
| Tmax T5..... | 6/36 |

Withdrawable circuit-breaker and terminals

| | |
|---|------|
| Tmax T4..... | 6/39 |
| Tmax T5..... | 6/41 |
| Tmax T6..... | 6/44 |
| Tmax T7..... | 6/46 |
| Circuit-breaker with RC221/222 residual current release | 6/48 |

Accessories



| | |
|---------------------------------|------|
| Tmax T1 - T2 - T3..... | 6/55 |
| Tmax T4 - T5..... | 6/61 |
| Tmax T6..... | 6/68 |
| Tmax T7..... | 6/73 |
| Distances to be respected | 6/77 |

Overall dimensions


Tmax T1 and single-pole Tmax T1

Fixed circuit-breaker



Fixing on sheet

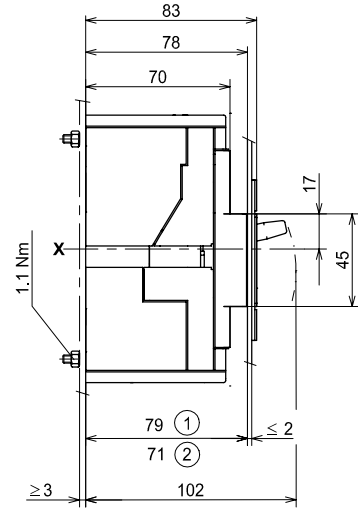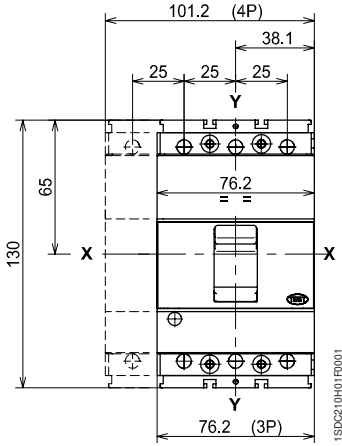



Fixing on DIN EN 50022 rail

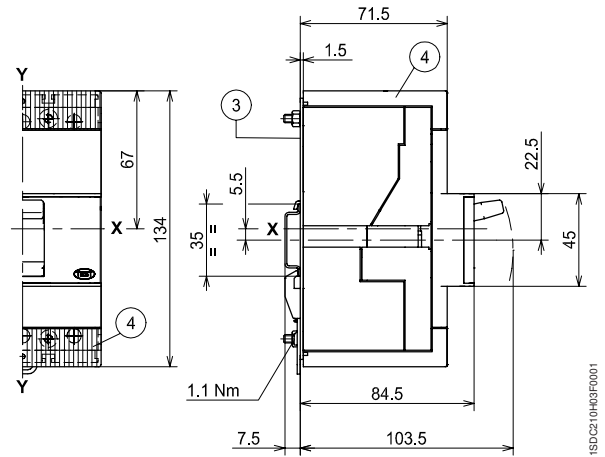

Without inserts

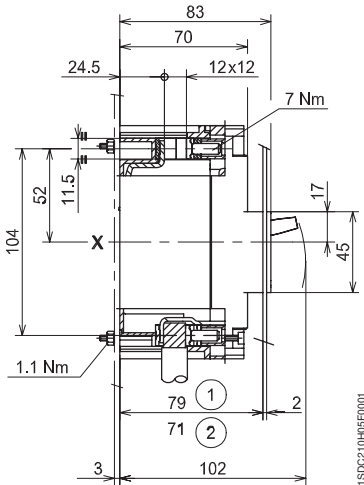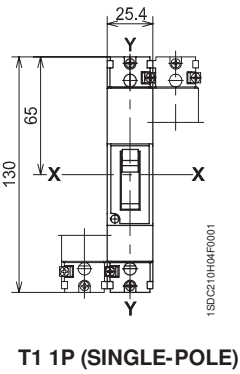

With inserts

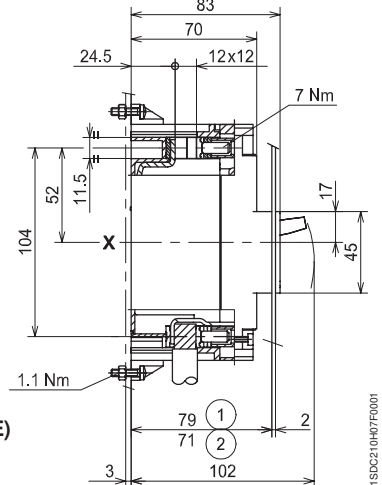
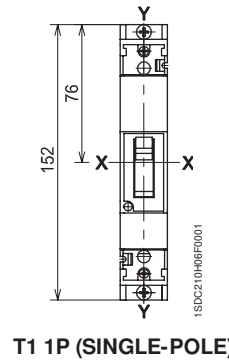


Caption


- ① Depth of the switchboard in the case of circuit-breaker with face not extending from the compartment door, with or without flange
- ② Depth of the switchboard in the case of circuit-breaker with face extending from the compartment door, without flange
- ③ Bracket for fixing onto rail
- ④ Bottom terminal covers with IP40 degree of protection

Drilling templates for support sheet


For front terminals

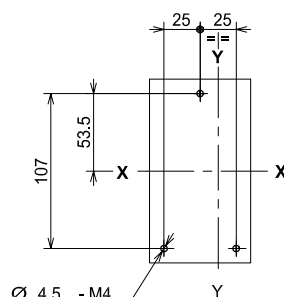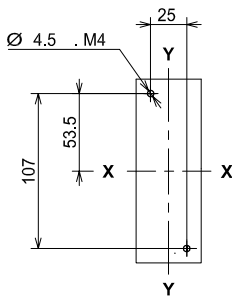

Without inserts

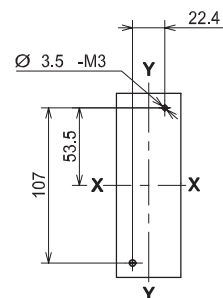


With inserts

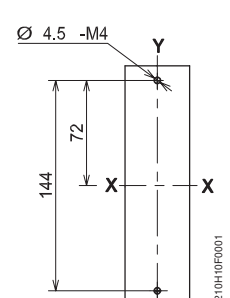


T1 1P (SINGLE-POLE)

Terminals



Front for copper/aluminium cables - FC CuAl

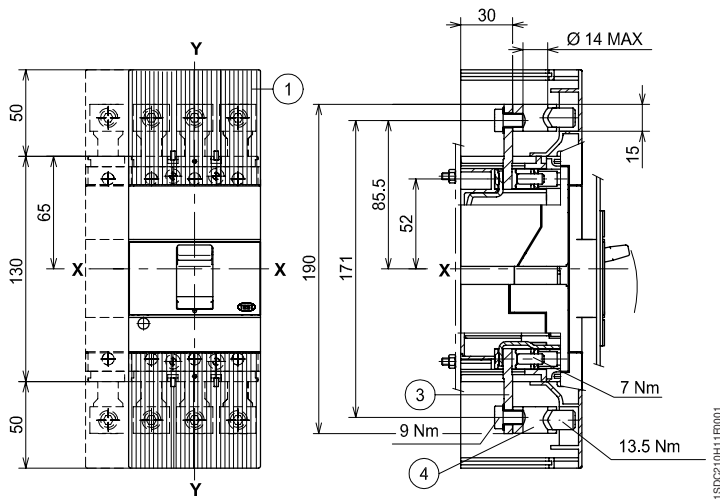


Front extended - EF

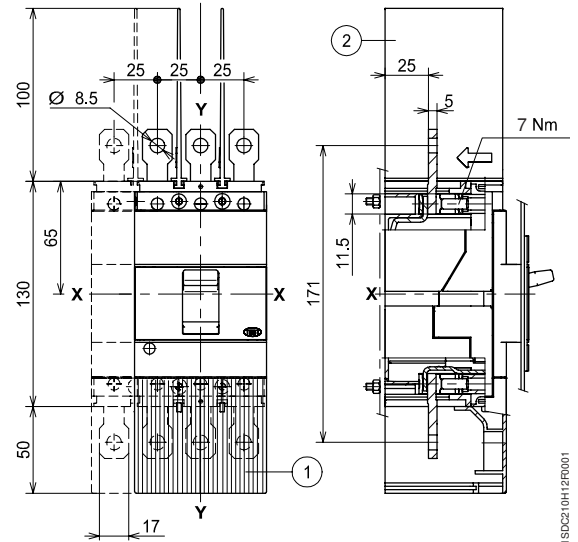

Rear flat horizontal

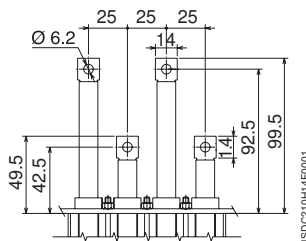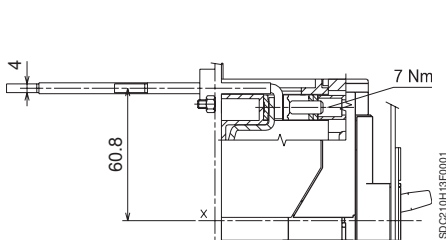

Front for copper cables - FC Cu

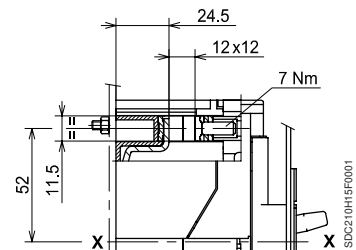

Caption


- ① High terminal covers with IP40 degree of protection (compulsory)
- ② Insulating barriers between phases (compulsory in the absence of top terminal covers)
- ③ Front extended terminals
- ④ Terminals for CuAl cables 95 mm²

Overall dimensions


Tmax T1 and single-pole Tmax T1

Terminals


Flange for the compartment door

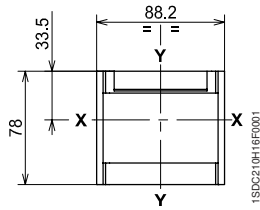


Drilling templates of the compartment door

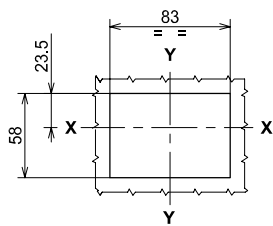


With flange and circuit-breaker face flush with door (3-4 POLES)

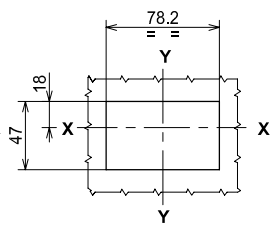

Without flange and circuit-breaker face flush with door (3-4 POLES) or extending (3 POLES)

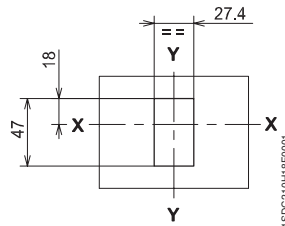


(SINGLE-POLE)

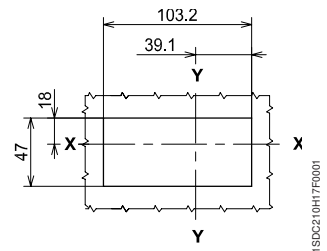


Without flange and circuit-breaker face extending (4 POLES)

Drilling templates for support sheet

For rear terminals

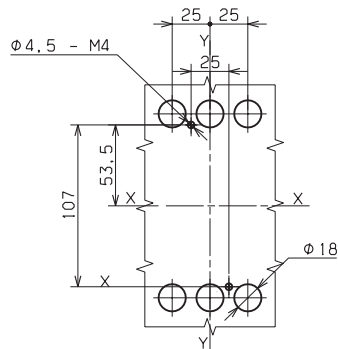

3 POLES

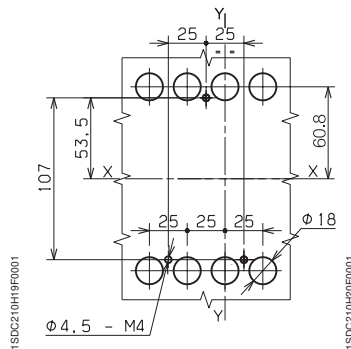

4 POLES





Overall dimensions

Tmax T2


Fixed circuit-breaker

Fixing on sheet





Fixing on DIN EN 50022 rail

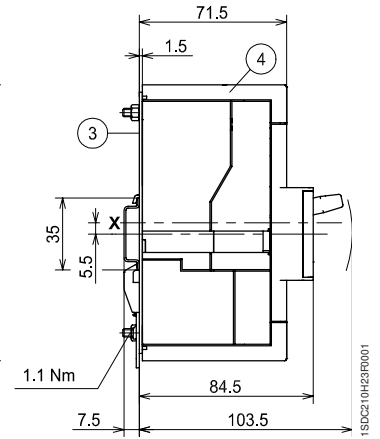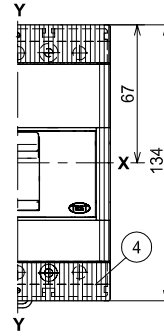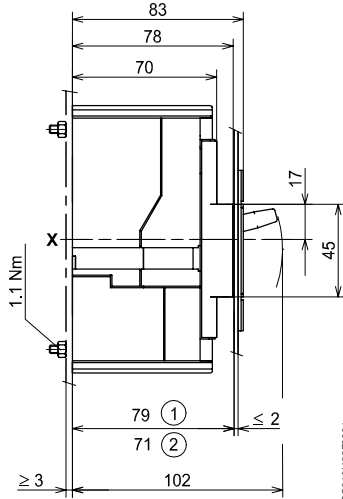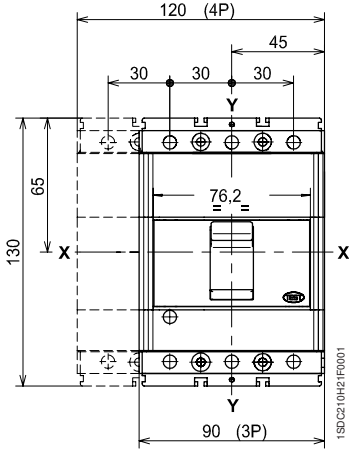

Flange for the compartment door

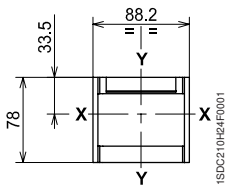

Drilling templates of the compartment door

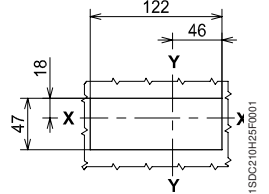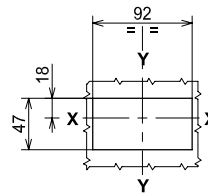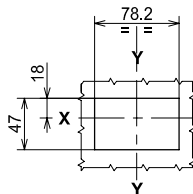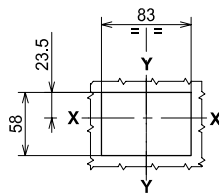

With flange and circuit-breaker face flush with door (3-4 POLES)

Without flange and circuit-breaker face flush with door (3-4 POLES)

Without flange and circuit-breaker face extending (3 POLES)



Without flange and circuit-breaker face extending (4 POLES)

Caption

- ① Depth of the switchboard in the case of circuit-breaker with face not extending from the compartment door, with or without flange
- ② Depth of the switchboard in the case of circuit-breaker with face extending from the compartment door, without flange
- ③ Bracket for fixing onto rail
- ④ Low terminal covers with degree of protection IP40

Drilling templates for support sheet



For front terminals

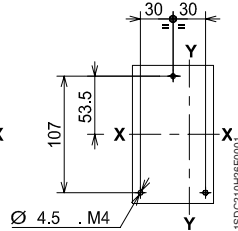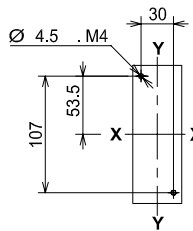

3 POLES

4 POLES

For rear terminals

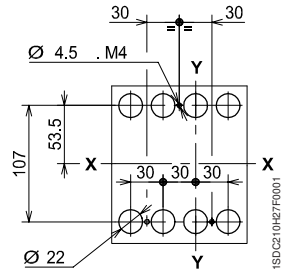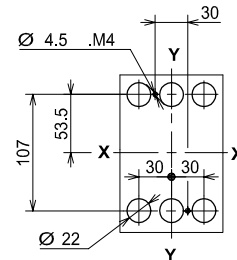

3 POLES


4 POLES

Overall dimensions


Tmax T2

Terminals


Front F

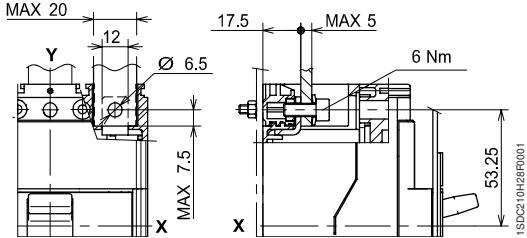

Front for copper cables - FC Cu

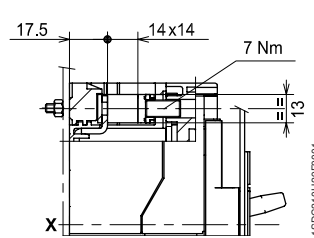



Front for copper/aluminium cables - FC CuAl 95 mm²

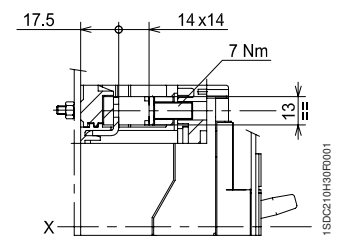


Caption

- ① Front extended terminals
- ② Front terminals for cables 185 mm² CuAl
- ③ Insulating base plate (compulsory)
- ④ High terminal covers with degree of protection IP40 (compulsory)
- ⑤ Drilling templates for support sheet

Front for copper/aluminium cables - FC CuAl 185 mm²

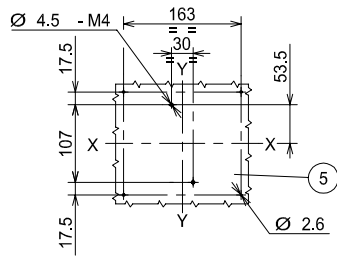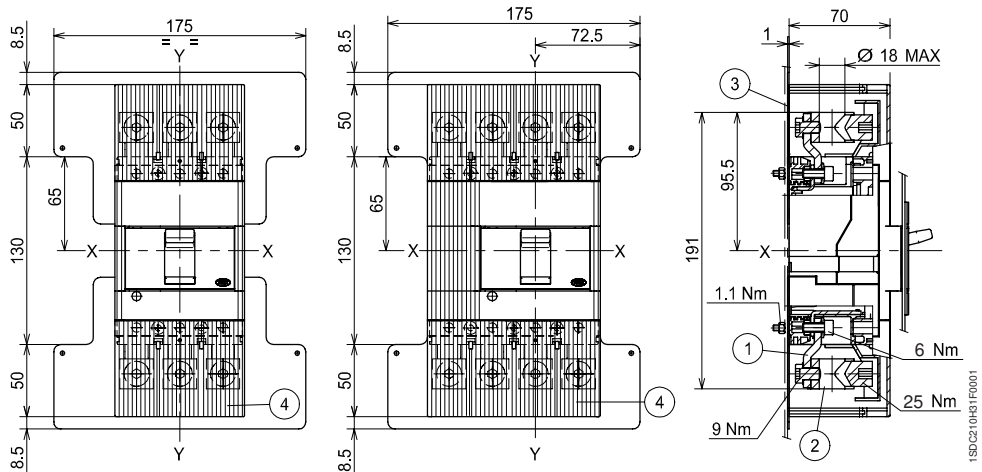

3 POLES

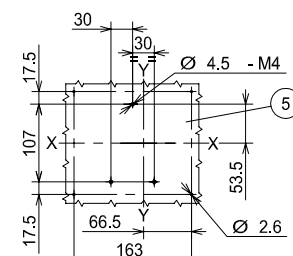


4 POLES

Caption

- ① Insulating barriers between phases (compulsory)


Front extended spread - ES

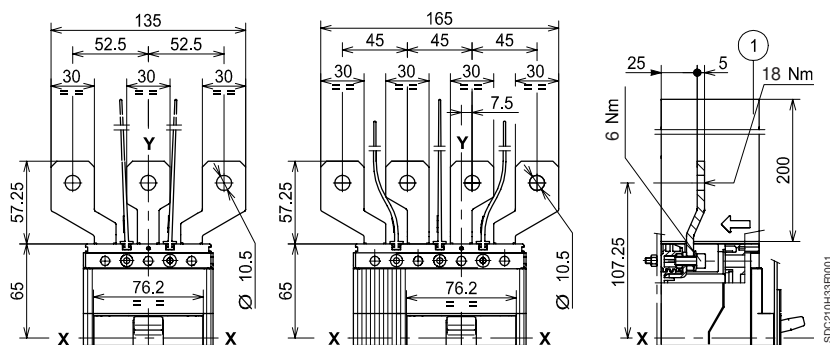

Caption

- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)


Front extended - EF

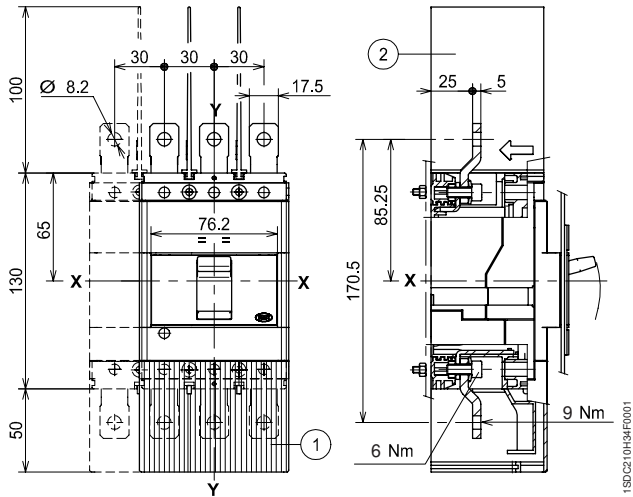

Caption

- ① Low terminal covers with degree of protection IP40

Rear - R

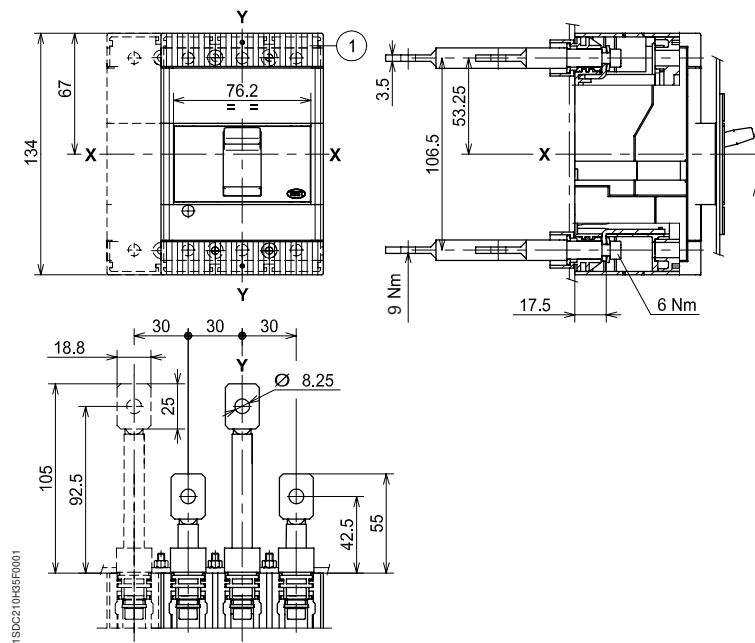


Overall dimensions

Tmax T3

Fixed circuit-breaker

Fixing on sheet

Fixing on DIN EN 50022 rail

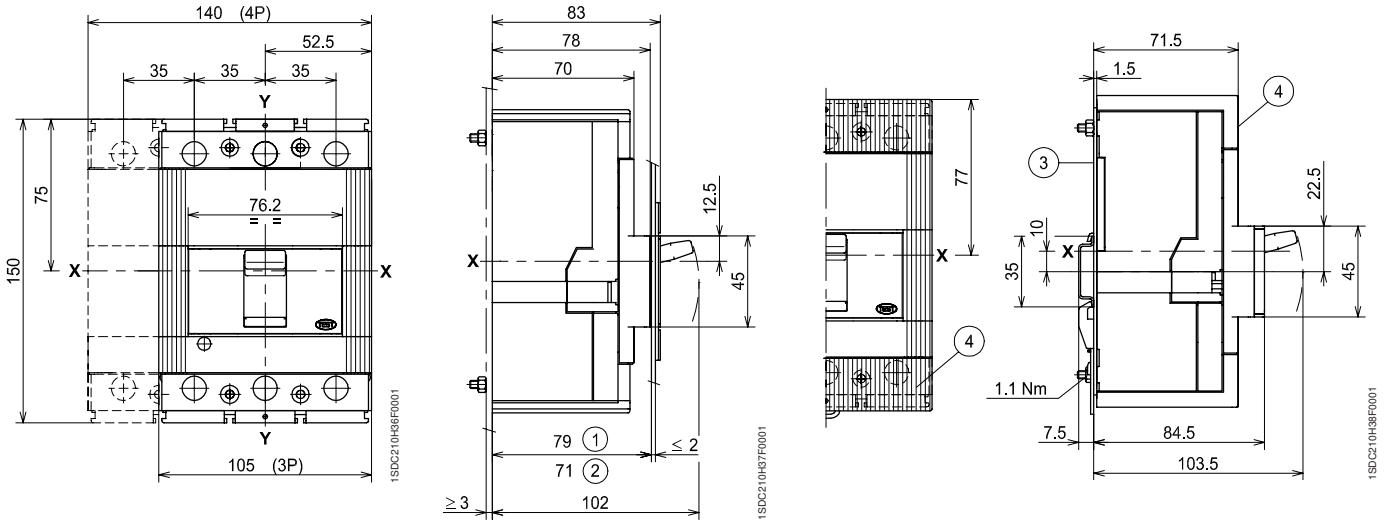


Caption

- ① Depth of the switchboard in the case of circuit-breaker with face not extending from the compartment door, with or without flange
- ② Depth of the switchboard in the case of circuit-breaker with face extending from the compartment door
- ③ Bracket for fixing on rail
- ④ Low terminal covers with degree of protection IP40

Flange for compartment door


Drilling templates of the compartment door

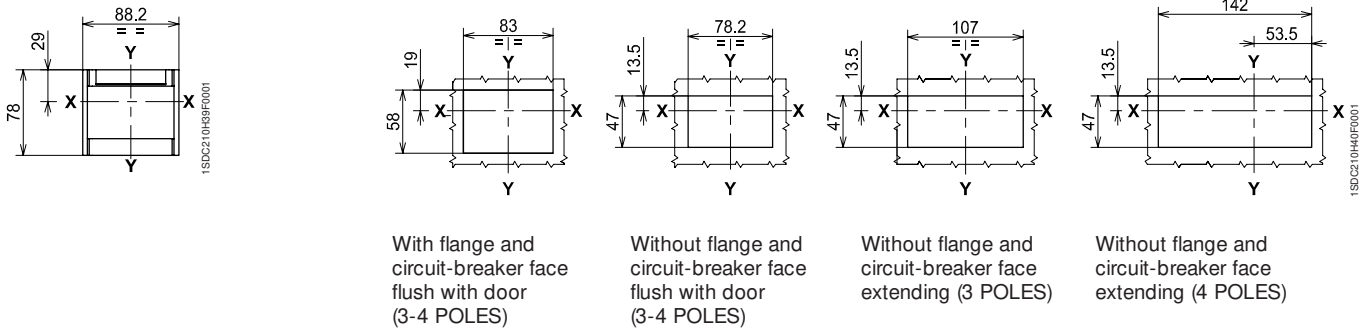

Drilling templates for support sheet



For front terminals

For rear terminals

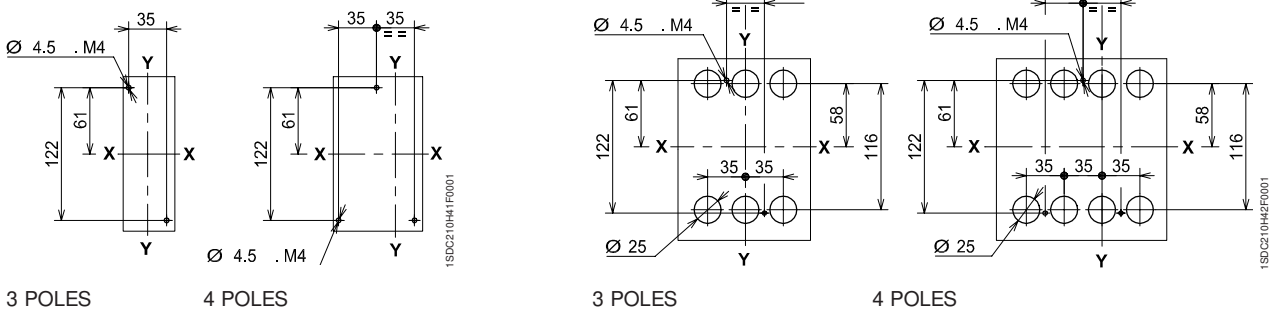


Terminals


Front - F

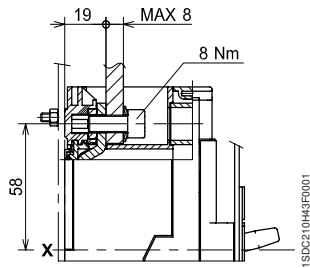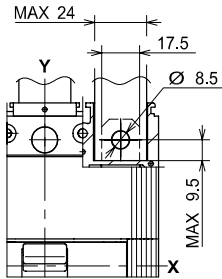

Front for copper cables - FC Cu

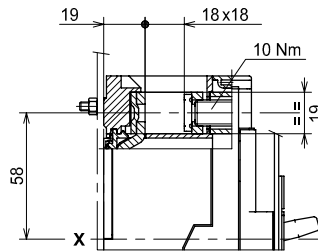





Front for copper/aluminium cables - FC CuAl 185 mm²

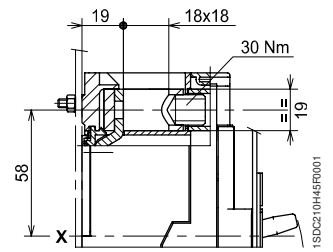


Caption

- ① Front extended terminals
- ② Front terminals for cables 240 mm² CuAl
- ③ Insulating base plate (compulsory)
- ④ High terminal covers with degree of protection IP40 (compulsory)
- ⑤ Drilling templates for support sheet

Front for copper/aluminium 240 mm² cables - FC CuAl 240 mm²

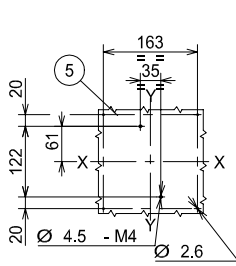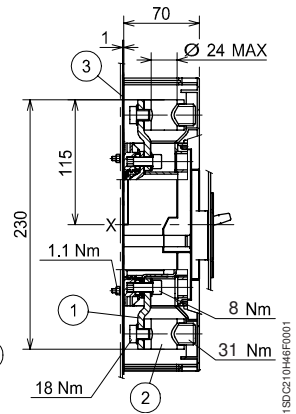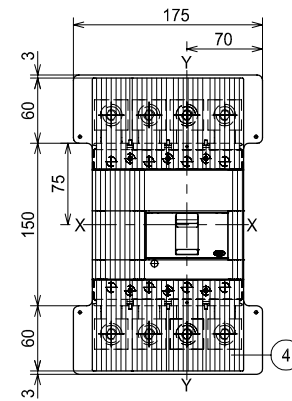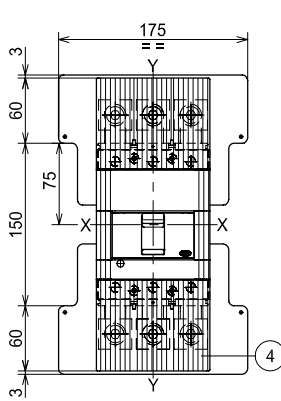

3 POLES



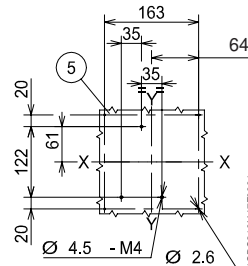


4 POLES

Caption

- ① Insulating barriers between phases (compulsory)

Front extended spread - ES

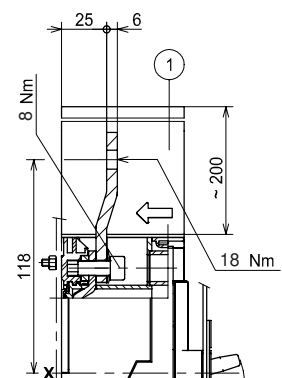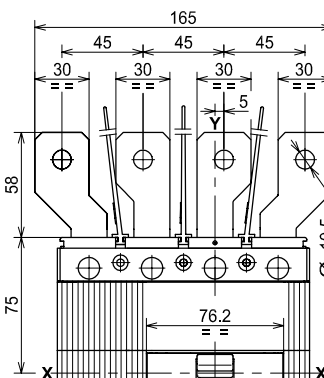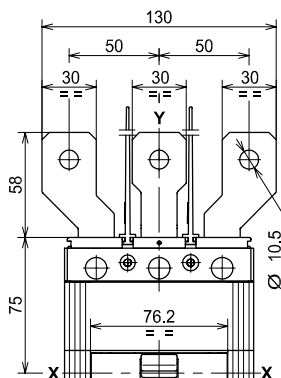

Overall dimensions


Tmax T3

Terminals

Caption

- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)


Front extended - EF

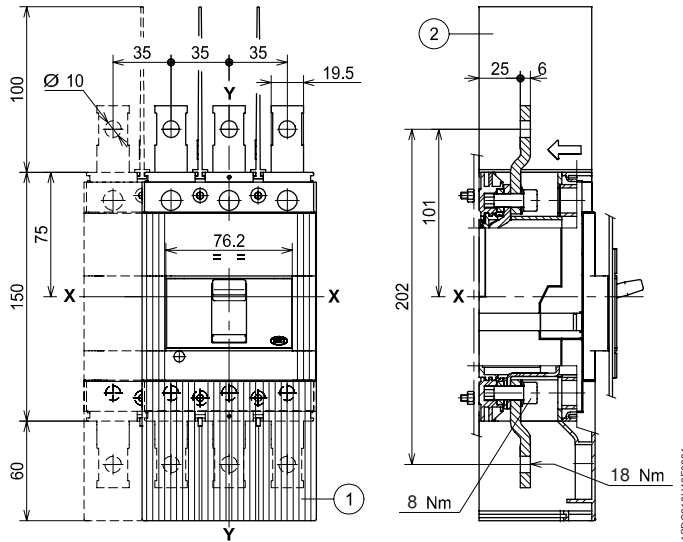

Caption

- ① Low terminal covers with degree of protection IP40

Rear - R

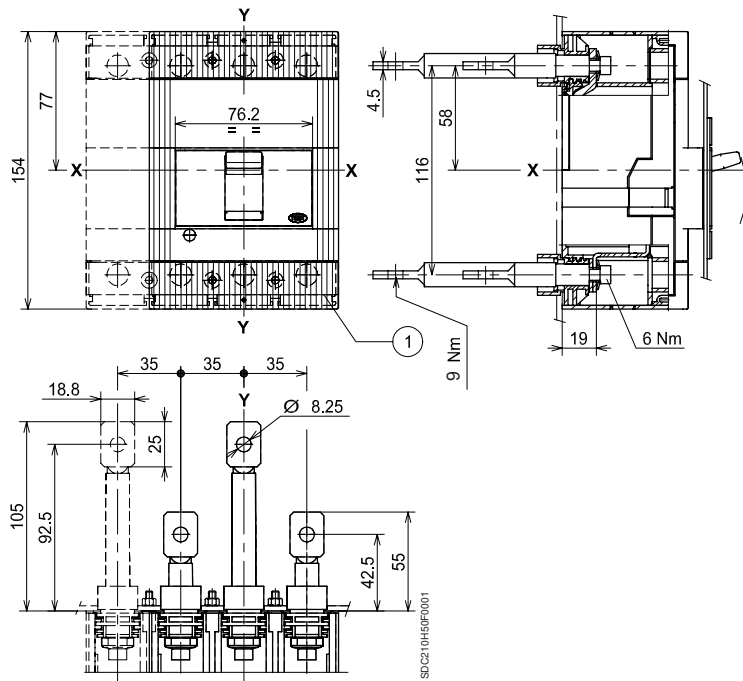

Overall dimensions


Tmax T4

Fixed circuit-breaker


Fixing on sheet

Caption



- ① Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC222-223)
- ② Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

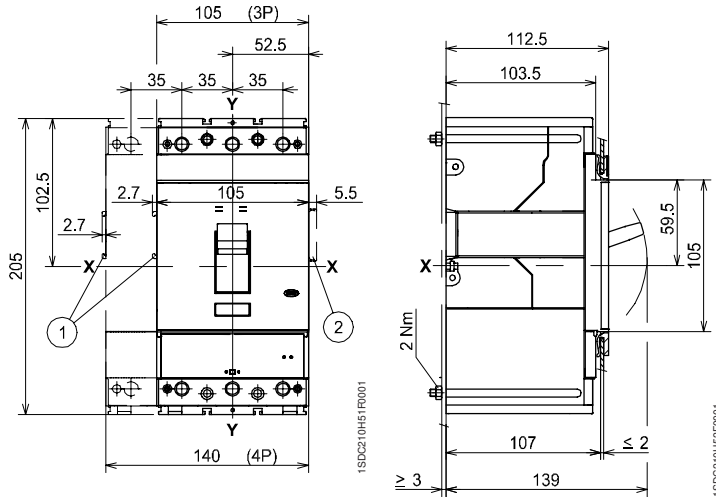

Flange for compartment door

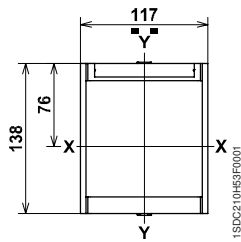

Drilling templates of the compartment door

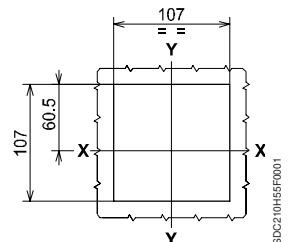
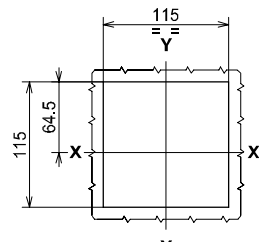


3-4 POLES
With flange

3-4 POLES
Without flange

Drilling templates for support sheet



For front terminals

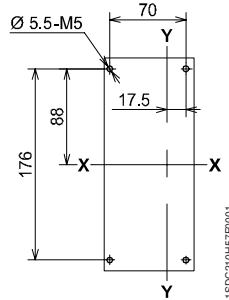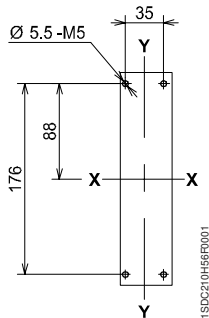

3 POLES

4 POLES

For rear terminals

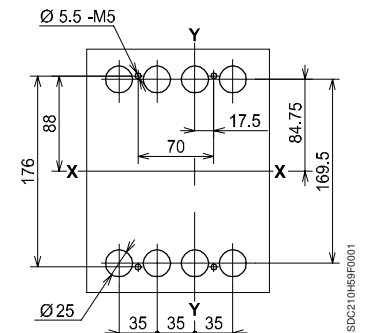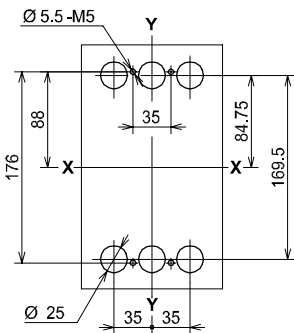

3 POLES


4 POLES

Overall dimensions


Tmax T4

Terminals


Front - F

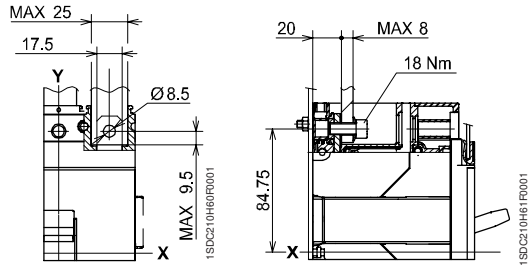

Front for copper cables - FC Cu

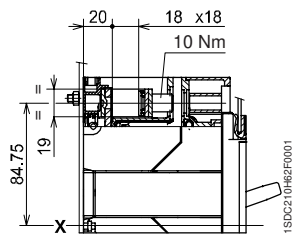


Front for copper/aluminium cables - FC CuAl

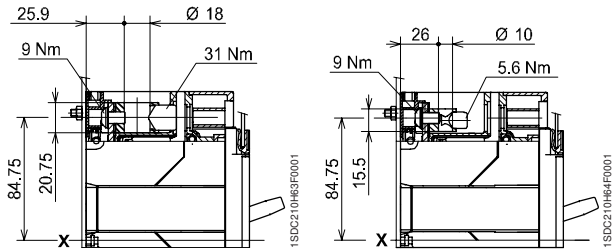

Caption

- ① Front terminals for cable connection 2x150 mm²
- ② Front terminals for multicable connection
- ③ High terminal covers with degree of protection IP40


Front multicable - MC

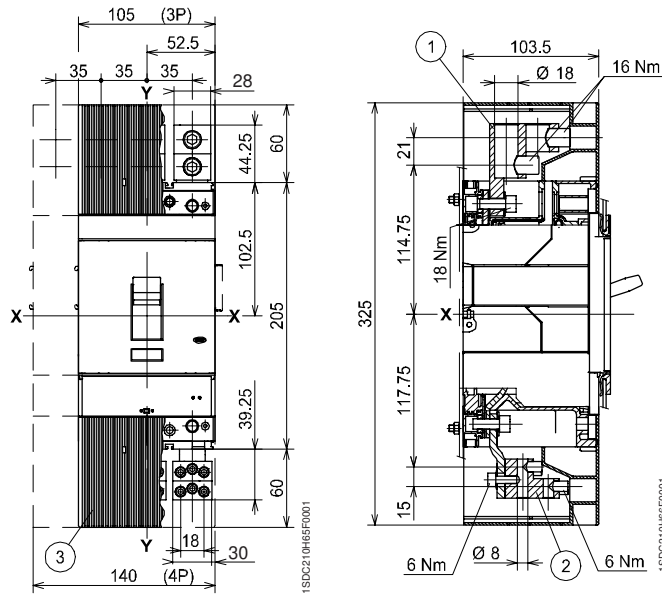

Caption

- ① Insulating barriers between phases (compulsory)


Front extended spread - ES

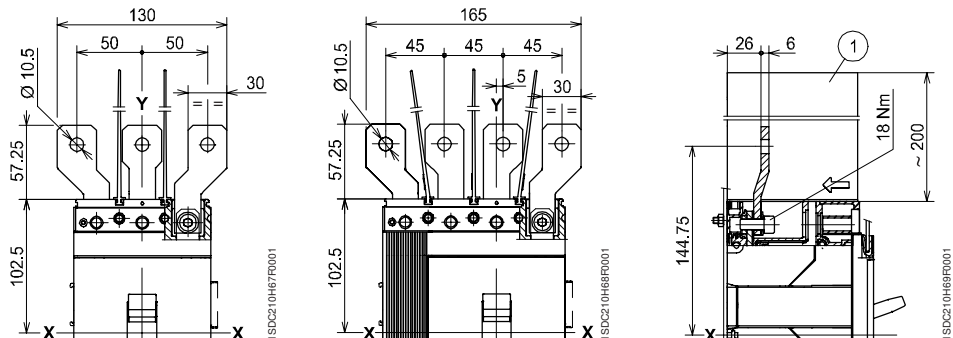

Caption

Front extended - EF


- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)

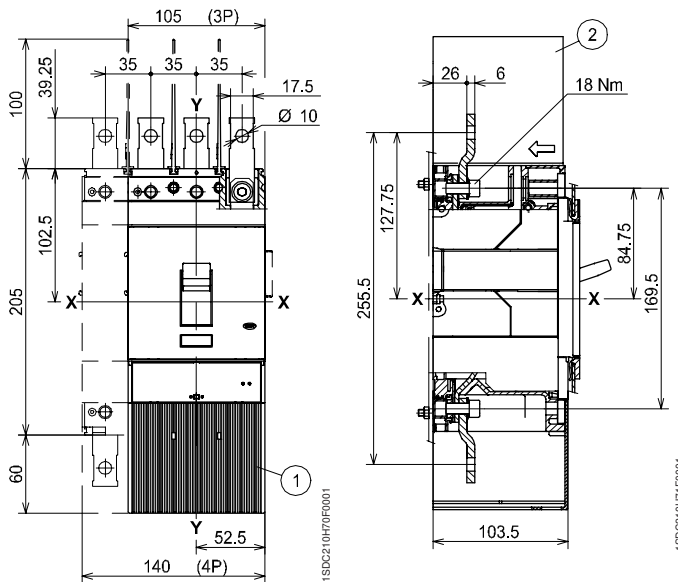

Caption

Rear - R

- ① Low terminal covers with degree of protection IP40

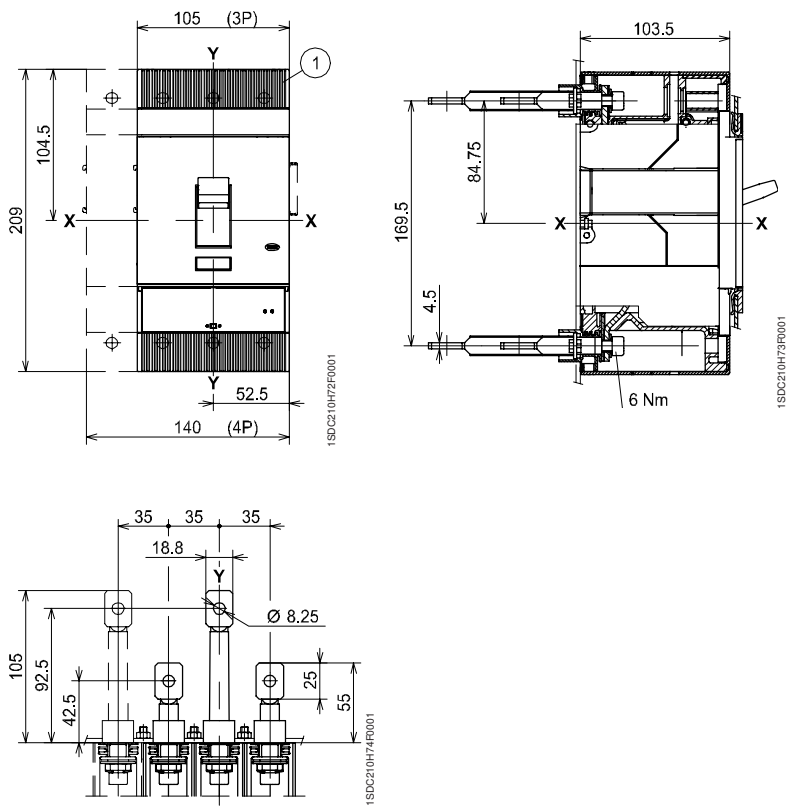


Overall dimensions

Tmax T5


Fixed circuit-breaker Fixing on sheet

Caption


- ① Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC222)
- ② Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

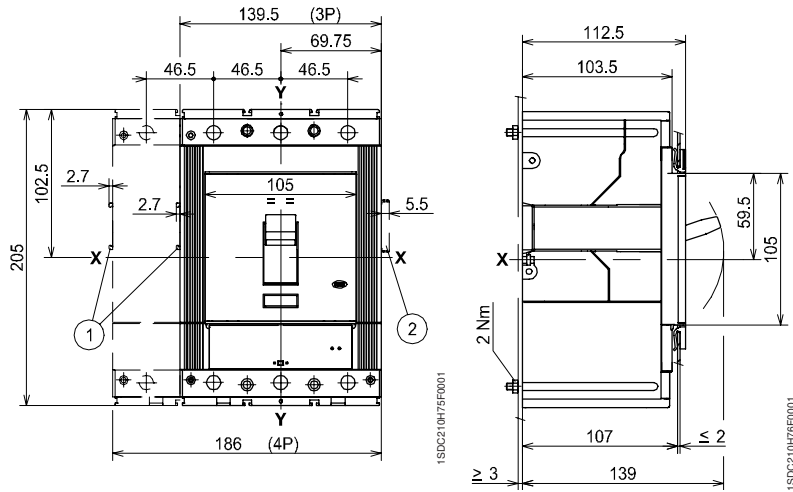


Flange for compartment door

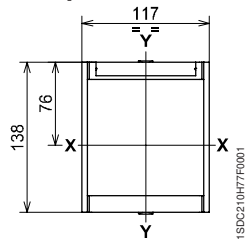

Drilling templates of the compartment door

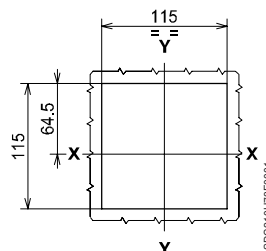


With flange (3-4 POLES)

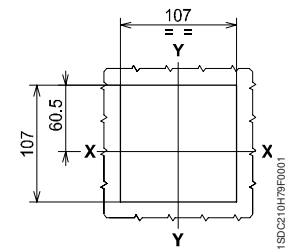


Without flange (3-4 POLES)

Drilling templates for support sheet

For front terminals

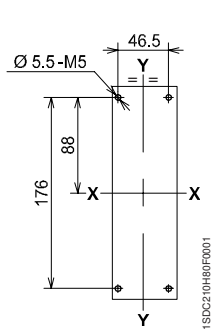


3 POLES

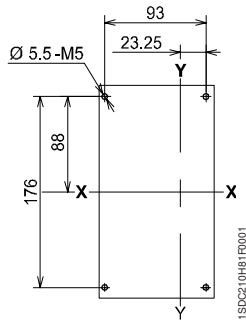


4 POLES

For rear terminals

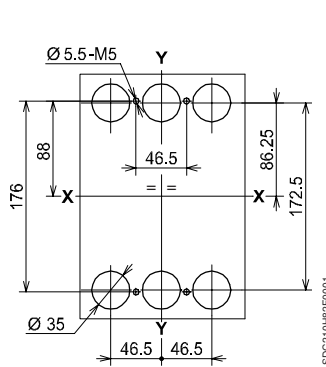



3 POLES

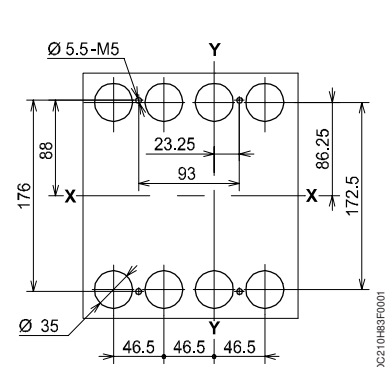


4 POLES

Terminals

Front - F

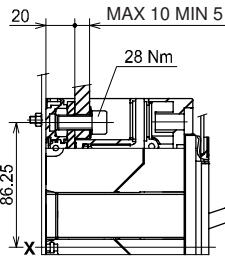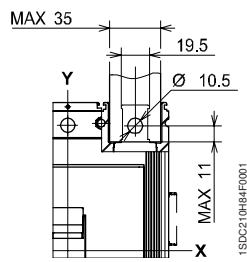

Front for copper cables - FC Cu



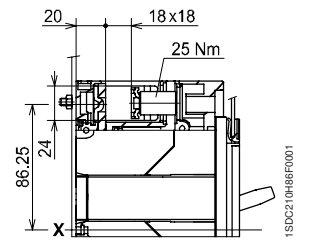


Caption

- ① High terminal covers with degree of protection IP40

Front for copper/aluminium cables Cu/Al 300 mm² FC CuAl




Front for copper/aluminium cables Cu/Al 2x240 mm² - FC CuAl

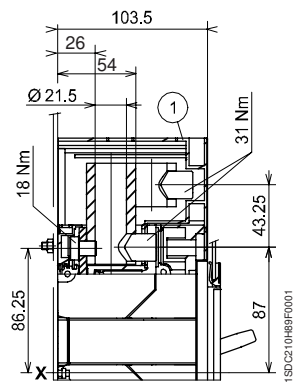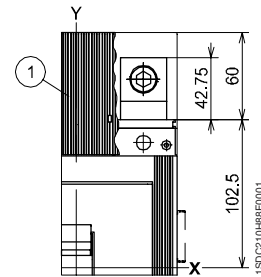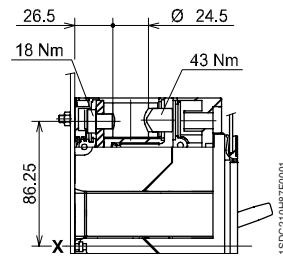

Caption

- ① Insulating barriers between phases (compulsory)

Front extended spread - ES

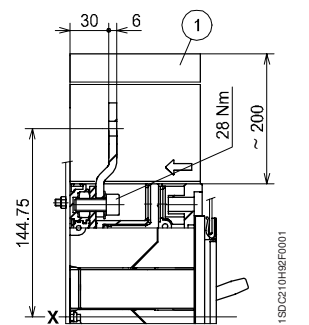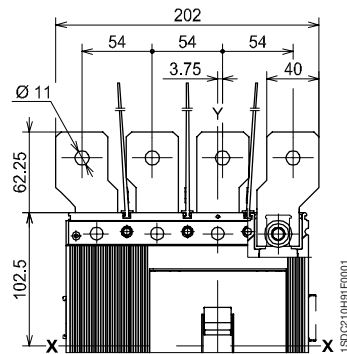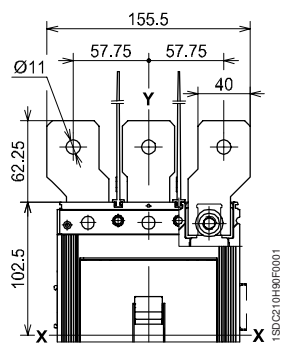

Overall dimensions


Tmax T5

Terminals

Front extended - EF

Caption


- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)

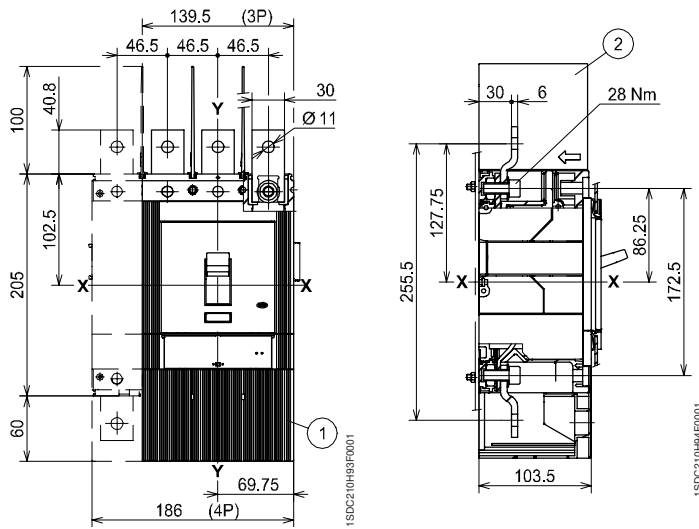

Caption

- ① Low terminal covers with degree of protection IP40

Rear - R

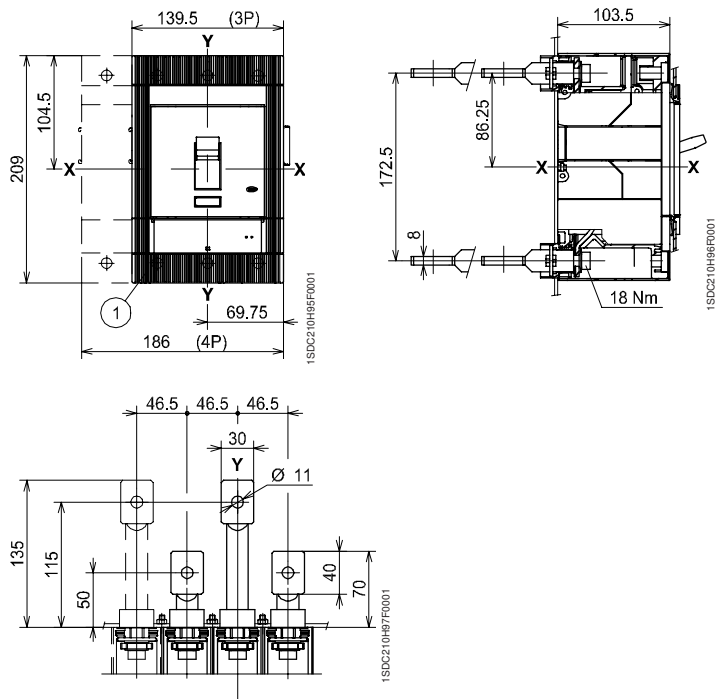


Overall dimensions

Tmax T6

Fixed circuit-breaker Fixing on sheet




Caption

- ① Overall dimensions with cabled accessories mounted (SOR-C, UVR-C)
- ② Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

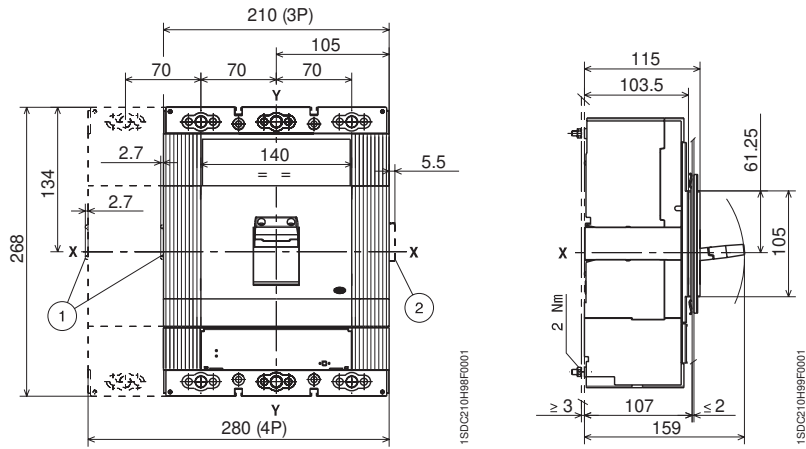

Flange for the compartment door

Drilling templates of the compartment door

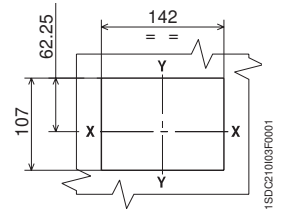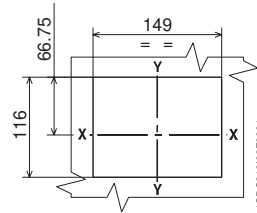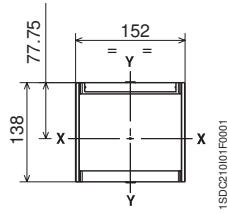


With flange 3-4 POLES


Without flange 3-4 POLES

Drilling templates for support sheet

For front terminals

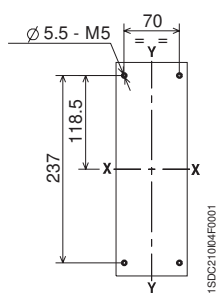

3 POLES

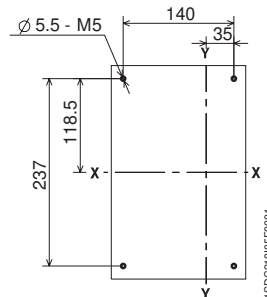


4 POLES

Overall dimensions


Tmax T6

Fixed circuit-breaker Drilling templates for support sheet


For rear terminals (R) and rear terminals for Cu/Al cables

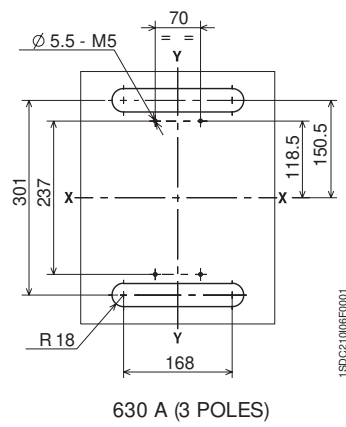


630 A (3 POLES)

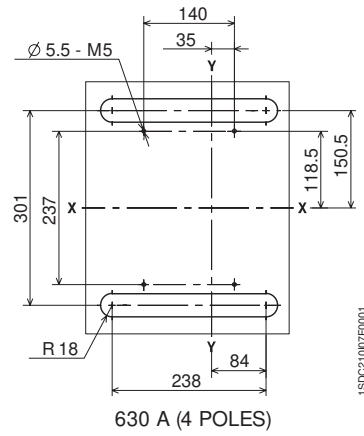

630 A (4 POLES)

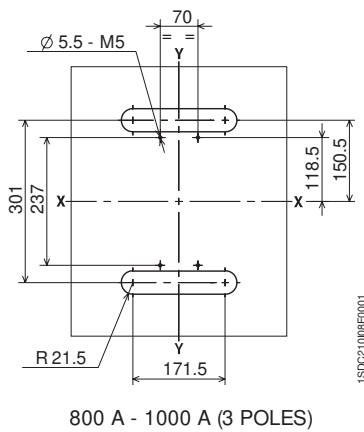


800 A - 1000 A (3 POLES)

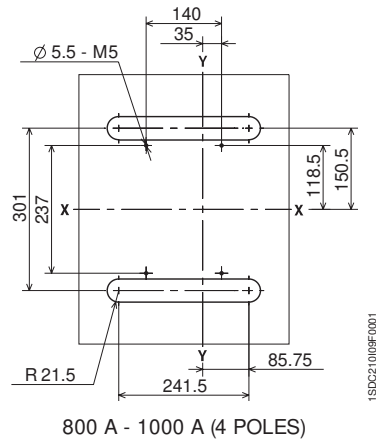


800 A - 1000 A (4 POLES)

Terminals

Front - F

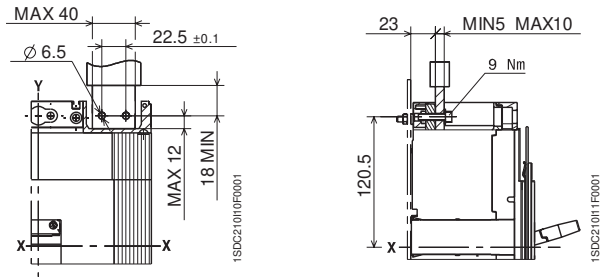


Front for copper/aluminium cables Cu/Al 2x240 mm² FC CuAl

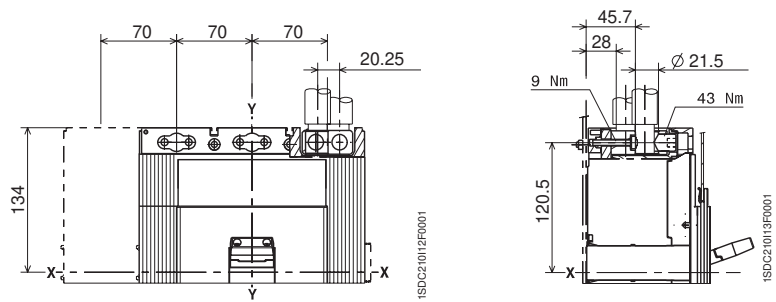


630 A

Front for copper/aluminium cables Cu/Al 3x185 mm² FC CuAl

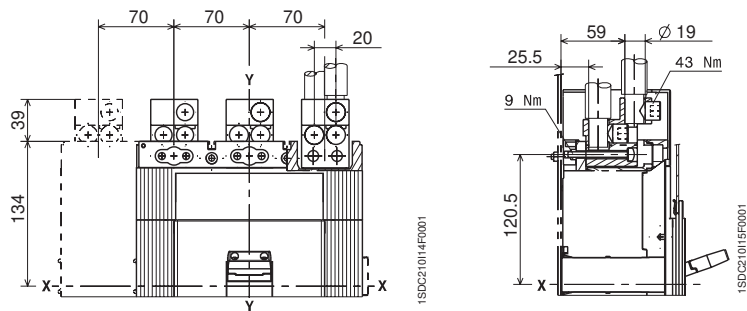

800 A

Front for copper/aluminium cables Cu/Al 4x150 mm² FC CuAl

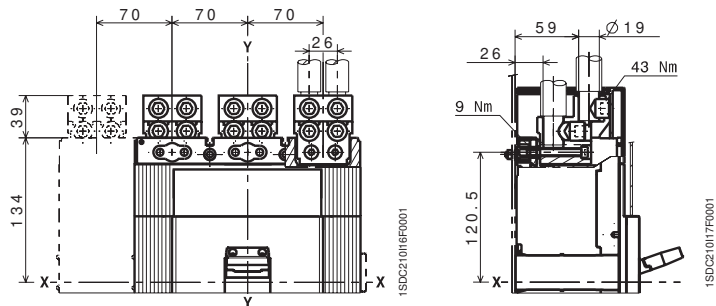



1000 A

Overall dimensions



Tmax T6

Terminals

Front extended - EF


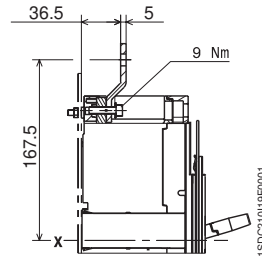
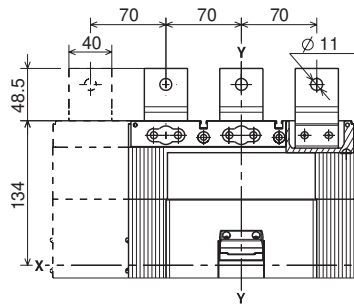


630 A

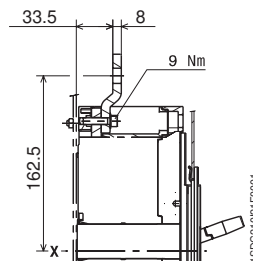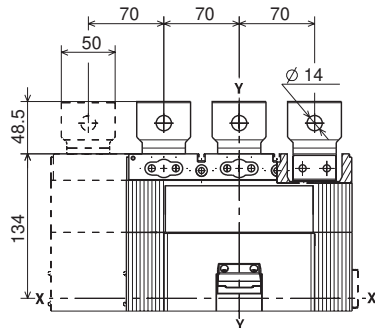

800 A

Front extended spread - ES

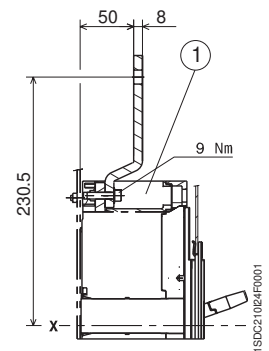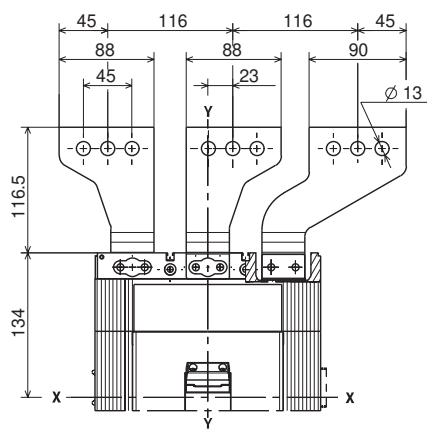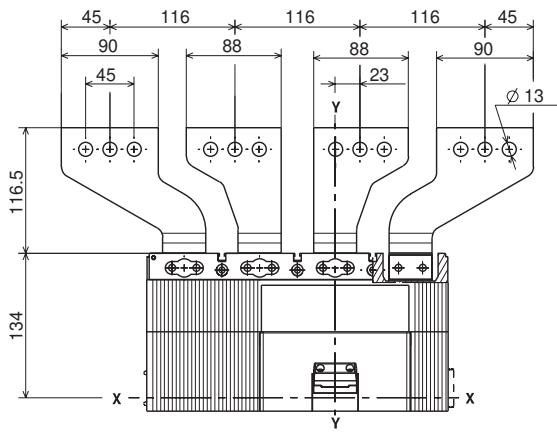



4 POLES

3 POLES



Caption

- ① Insulating barriers between phases (compulsory)

Rear for copper cables Cu/Al - RC CuAl


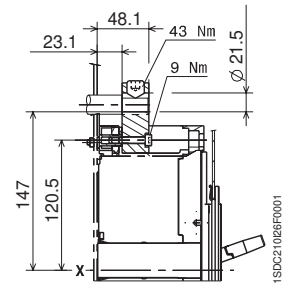
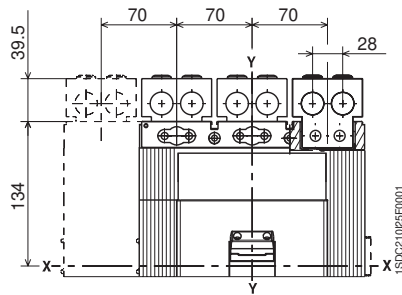


630 A

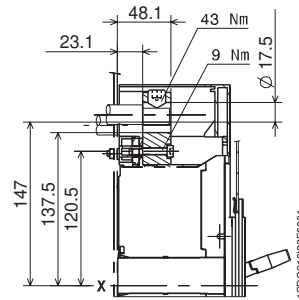
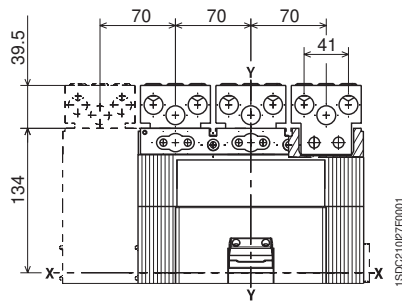


800 A

Rear - R

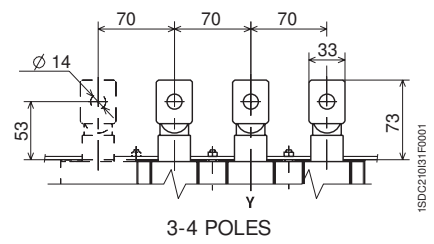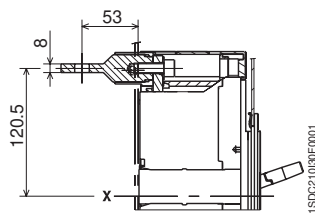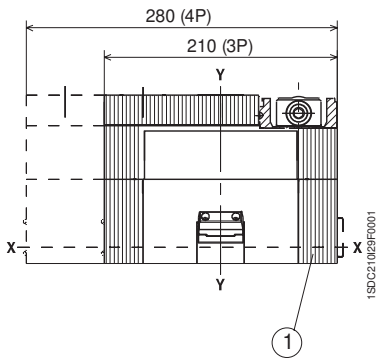

3-4 POLES

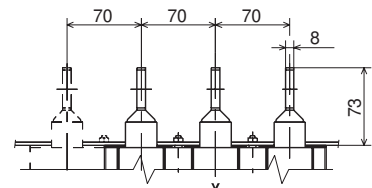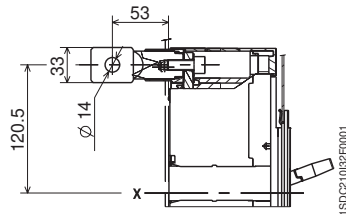

3-4 POLES

Caption

- ① Low terminal covers with degree of protection IP40



Overall dimensions

Tmax T7

Fixed circuit-breaker Front terminal – F


Caption

- ① Front terminals for flat connection
- ② Busbars
- ③ Flange for the compartment door
- ④ Flange fixing screws
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 18 Nm
- ⑧ Key lock (optional)
- ⑨ Padlock (optional)
- ⑩ Tightening torque: 2 Nm
- ⑪ Sheet drilling for compartment door with flange
- ⑫ Sheet drilling for compartment door for front 206 x 204
- ⑬ Terminal for auxiliary contacts
- ⑭ Reduce flange for the compartment door (optional)
- ⑮ Sheet drilling for compartment door with reduced flange
- ⑯ Sheet drilling for compartment door for front 190 x 105

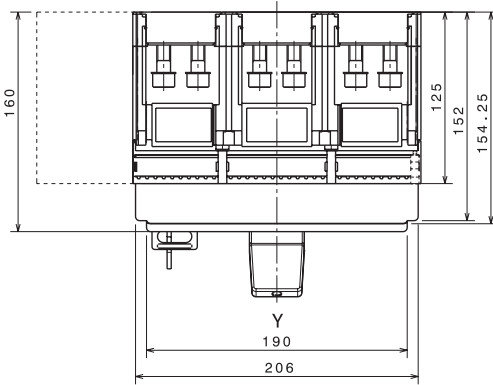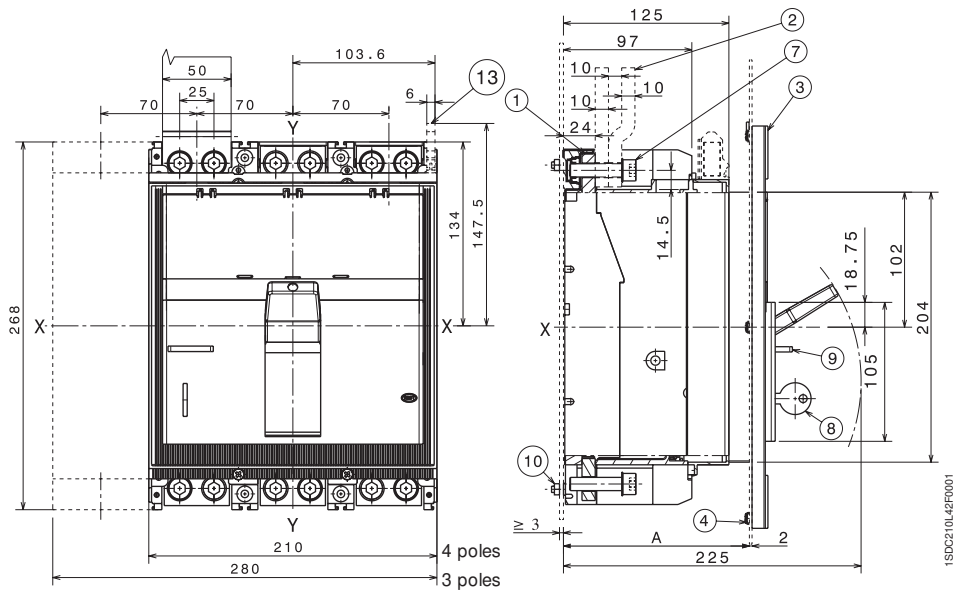


| | With flange | Without flange |
|----------|-------------|----------------|
| A | 125...141 | 147 |

Flange for the compartment door (supplied as standard)

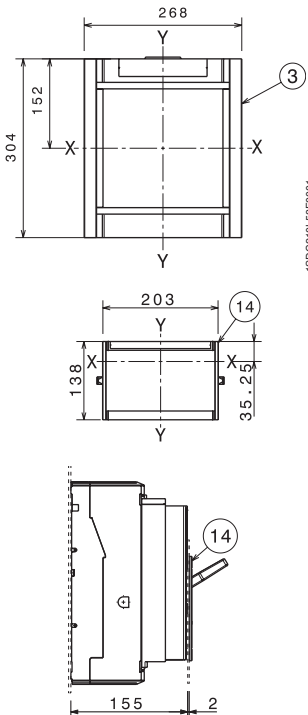


Drilling templates for support sheet

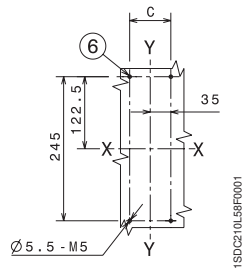

| | III | IV |
|----------|-----|-----|
| C | 70 | 140 |

Drilling templates of the compartment door

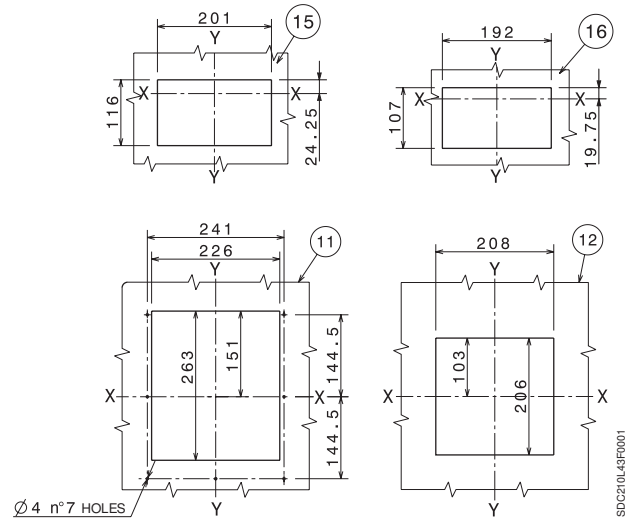


Terminals

Rear terminals

Caption

- ① Rear horizontal terminals
- ② Rear vertical terminals
- ⑥ Support sheet drilling template
- ⑦ Tightening torque: 18 Nm

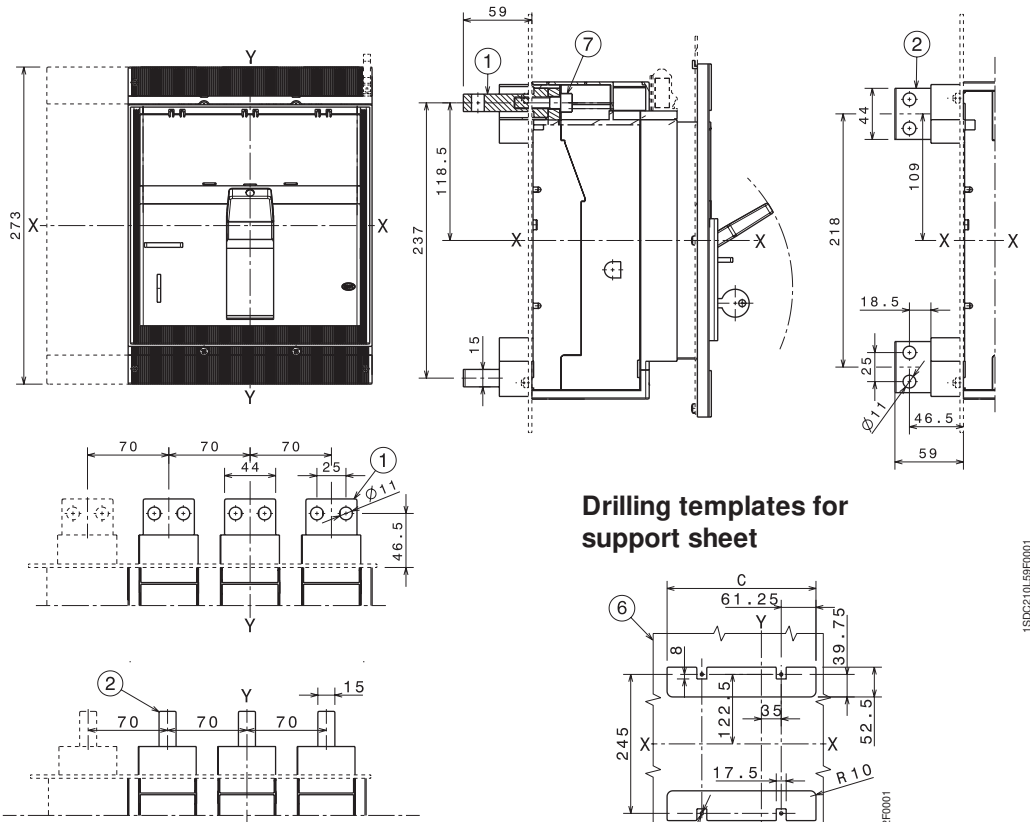

Drilling templates for support sheet

| | III | IV |
|----------|-------|-------|
| B | 70 | 140 |
| C | 192.5 | 262.5 |

1SDC210L52FR001


1SDC210L52FR001

Overall dimensions

Tmax T7


Terminals

Rear horizontal terminals

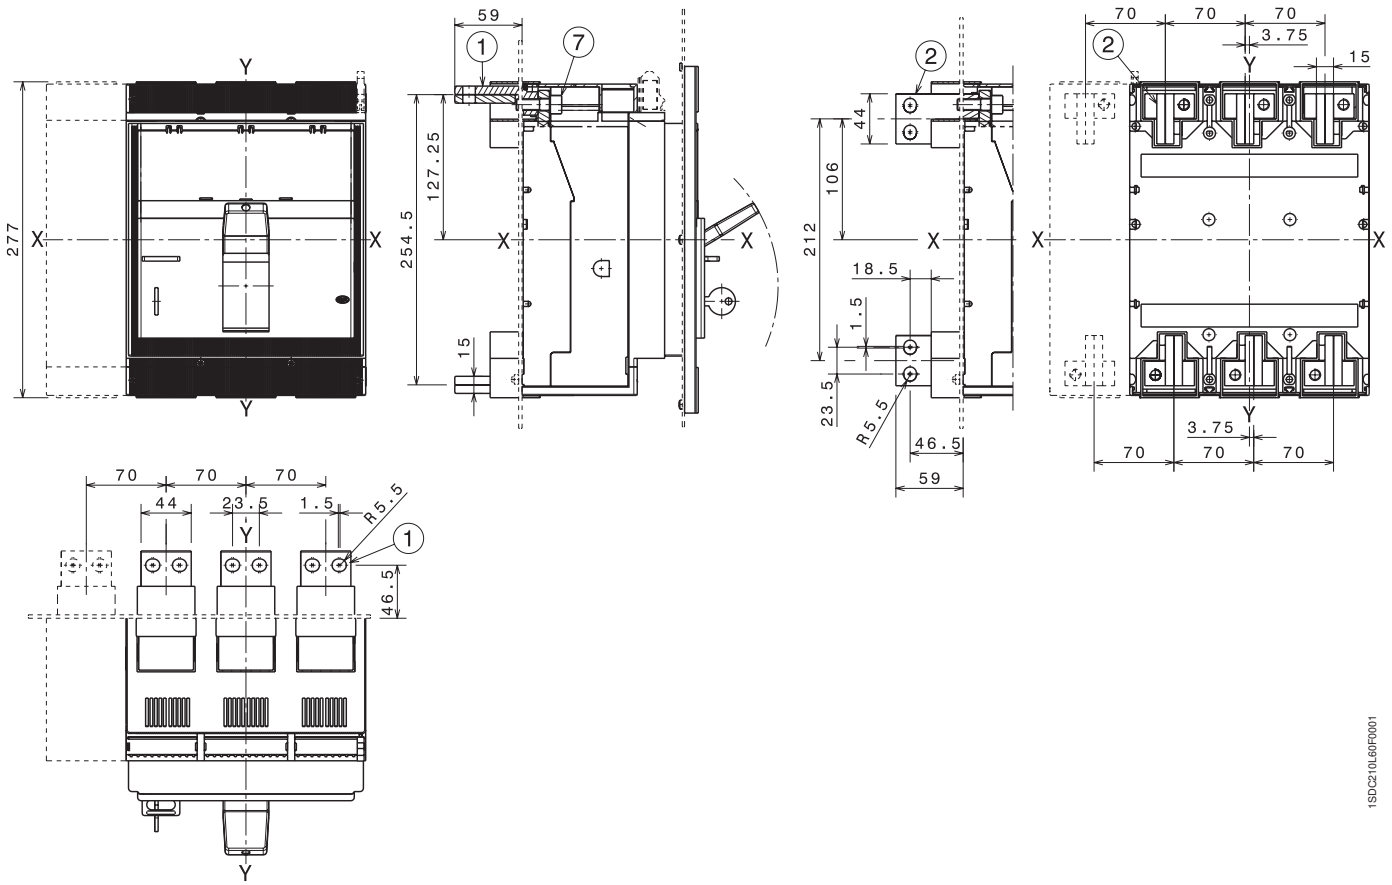

1SDC210L60F0001

Drilling templates for support sheet

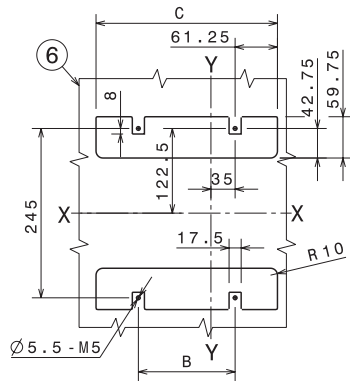

1SDC210L60F0001

Caption


- ① Rear horizontal terminals
- ② Rear vertical terminals
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 18 Nm

| | III | IV |
|---|-------|-------|
| B | 70 | 140 |
| C | 192.5 | 262.5 |


Extended front terminals EF - Spreaded extended front terminals ES

Caption

- ① Extended front terminals EF
- ② Extended front spread terminals ES
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 18 Nm

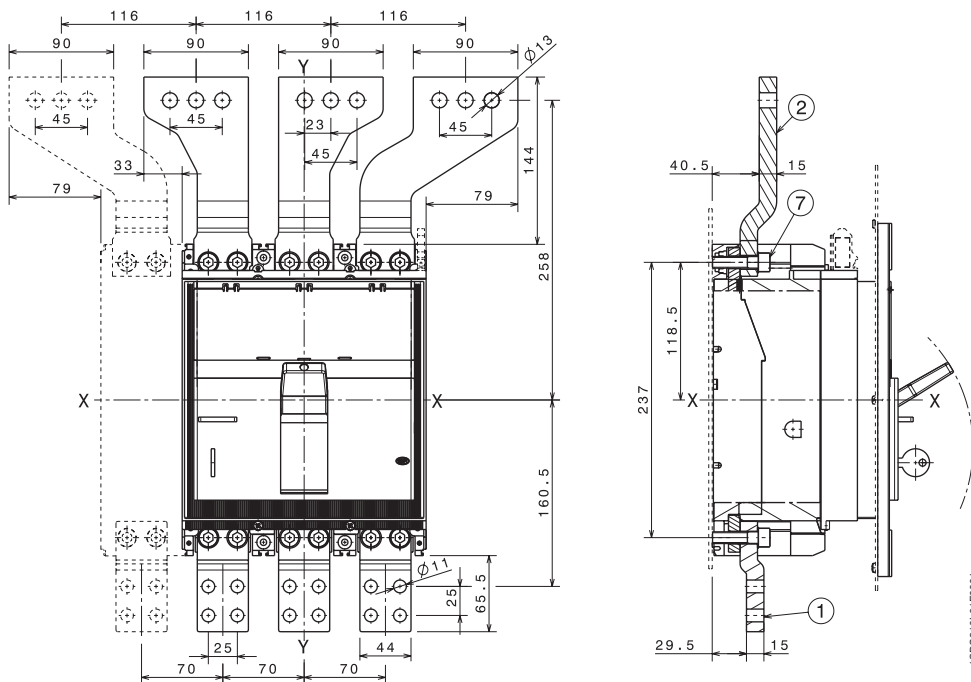

Drilling templates for support sheet

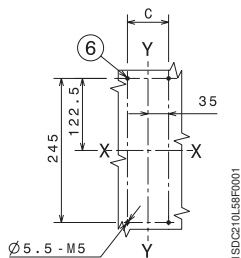


| | | |
|----------|-----|-----|
| | III | IV |
| C | 70 | 140 |

Caption

- ① Front terminals for cables FC CuAl
- ② Tightening torque: 43 Nm
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 18 Nm

Front FC CuAl cable terminal

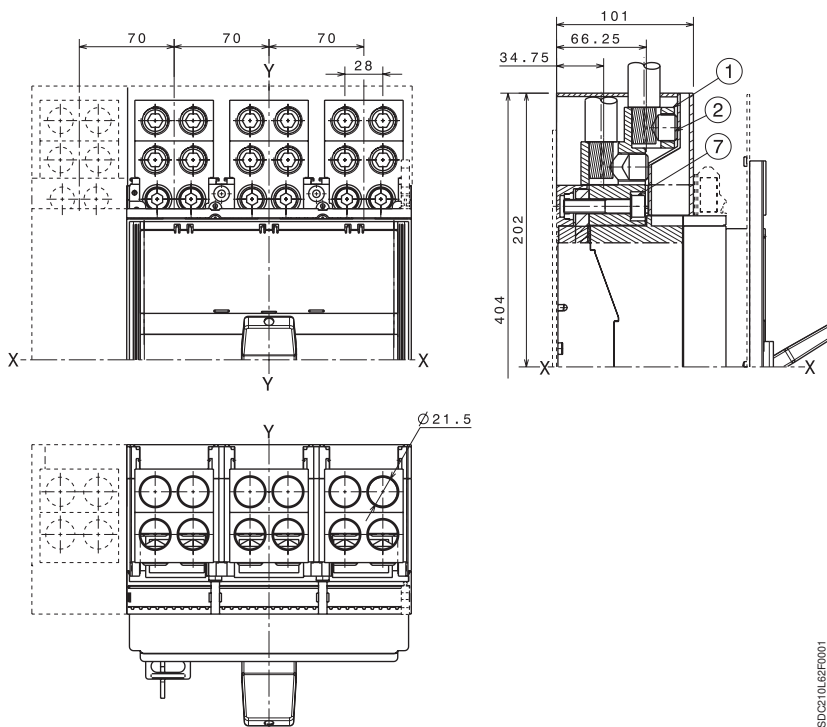

Overall dimensions



Tmax T7M

Fixed circuit-breaker

Front terminal


Caption

- ① Front terminal for flat connection
- ② Busbars
- ③ Flange for the compartment door
- ④ Flange fixing screws
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 18 Nm
- ⑧ Key lock (optional)
- ⑨ Padlock (optional)
- ⑩ Tightening torque: 2 Nm
- ⑪ Compartment door with flange sheet drilling
- ⑫ Compartment door without flange sheet drilling
- ⑬ Terminal for auxiliary contacts

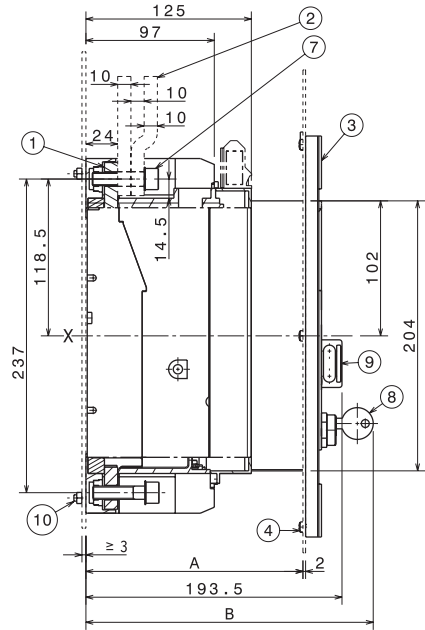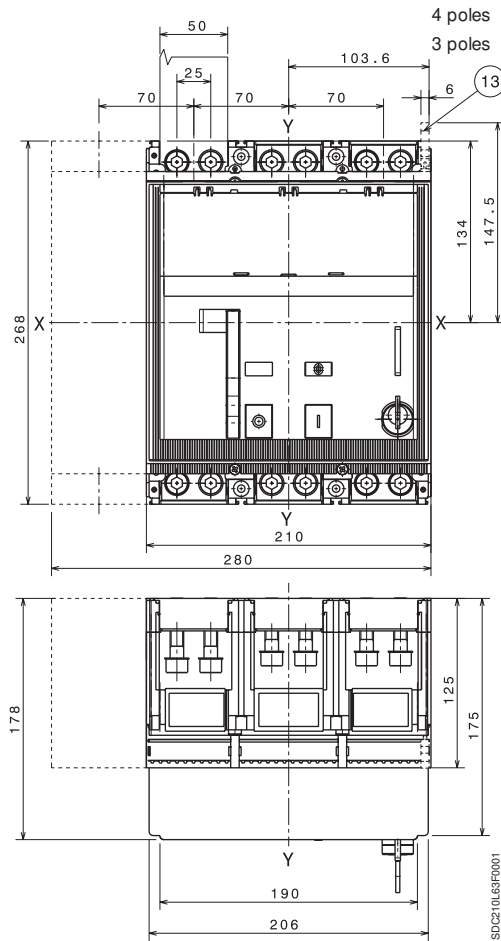


| | With flange | Without flange | | | |
|----------|-------------|----------------|-----|----|----|
| A | 125...164 | 170 | | | |
| B | 208 | 216 | 224 | no | no |
| C | 70 | 140 | | | |


Flange for the compartment door (supplied as standard)

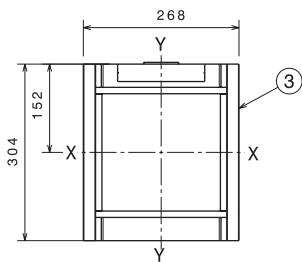

Drilling templates for support sheet

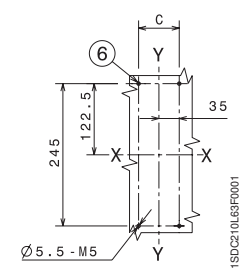

Drilling templates of the compartment door

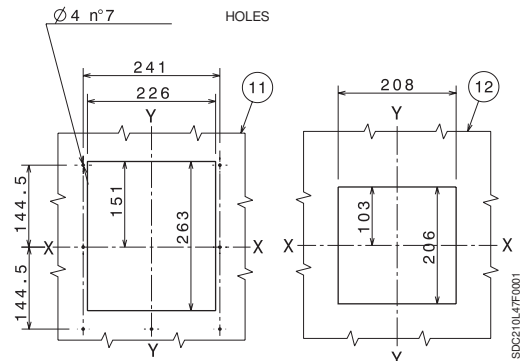

Overall dimensions


Tmax T2

Plug-in circuit-breaker

Fixing on sheet






Caption

- ① Depth of the switchboard in the case of circuit-breaker with face not extending from the compartment door, with or without flange
- ② Depth of the switchboard in the case of circuit-breaker with face extending from the compartment door, without flange
- ③ Fixed part
- ④ Moving part with terminal covers, degree of protection IP40

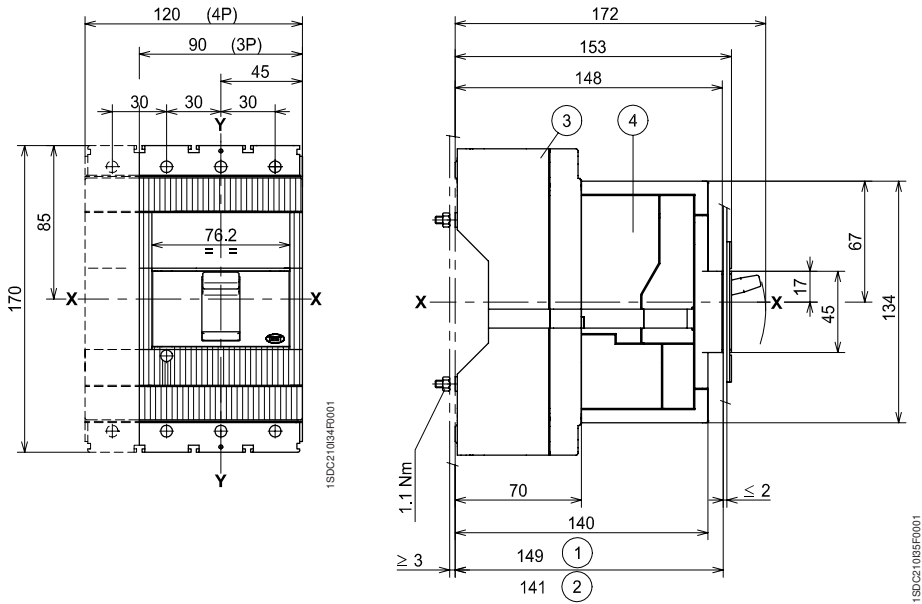

Flange for compartment door

Drilling templates of the compartment door

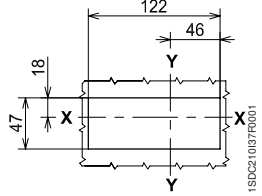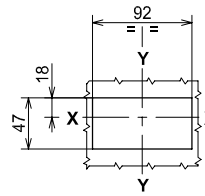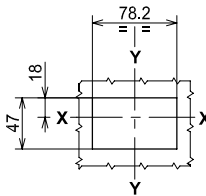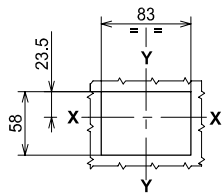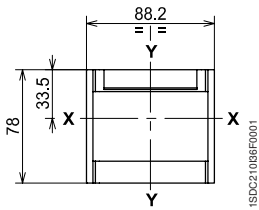

With flange and circuit-breaker face flush with door (3-4 POLES)

Without flange and circuit-breaker face flush with door (3-4 POLES)





Without flange and circuit-breaker face extending (3 POLES)

Without flange and circuit-breaker face extending (4 POLES)

Drilling templates for support sheet

For front terminals

For rear terminals

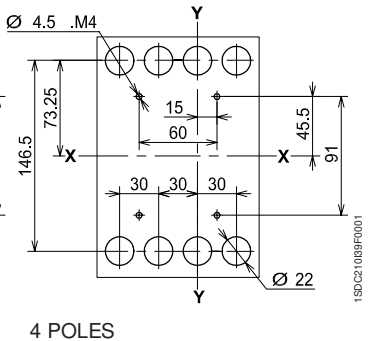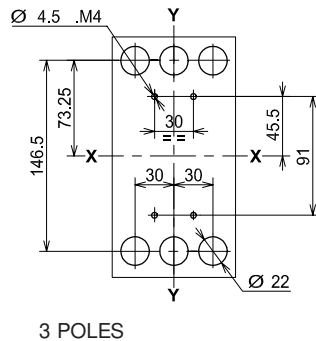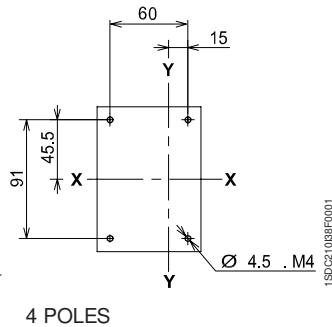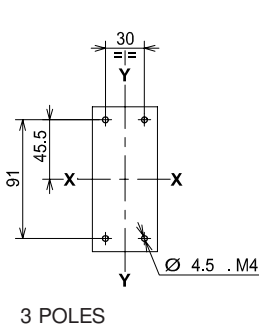

Overall dimensions




Tmax T2

Terminals

Front - F

Front for copper cables - FC Cu




Front for copper/aluminium cables - FC CuAl 95 mm²

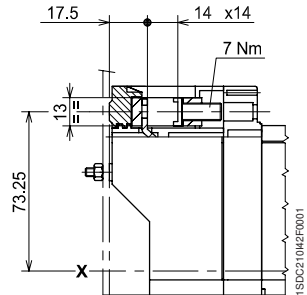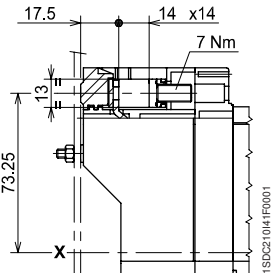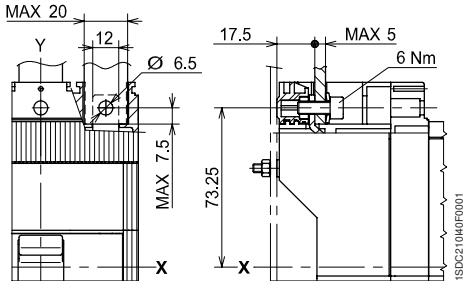

Caption

Front for copper/aluminium 185 mm² cables - FC CuAl 185 mm²

- ① Front extended terminals
- ② Front terminals for cables 185 mm² CuAl
- ③ Insulating base plate (compulsory)
- ④ High terminal covers with degree of protection IP40
- ⑤ Drilling templates for support sheet

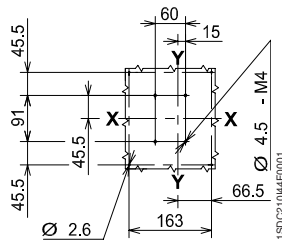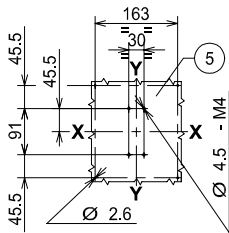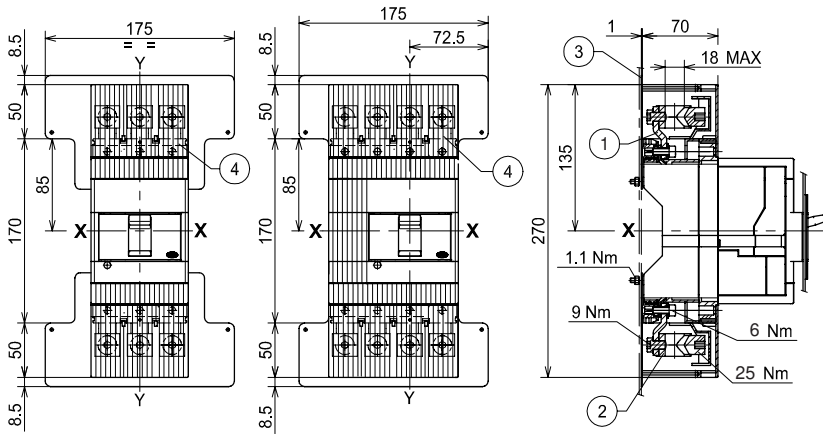


3 POLES

4 POLES

Caption

Front extended spread - ES


- ① Insulating barriers between phases (compulsory)

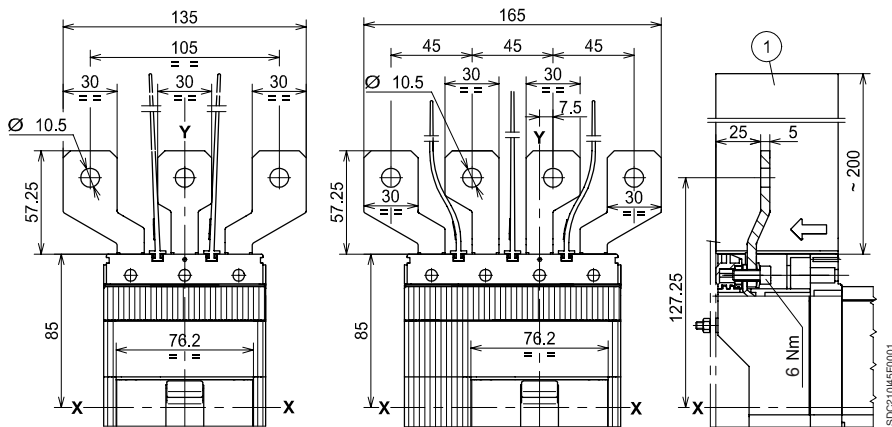

Caption

- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)


Front extended - EF

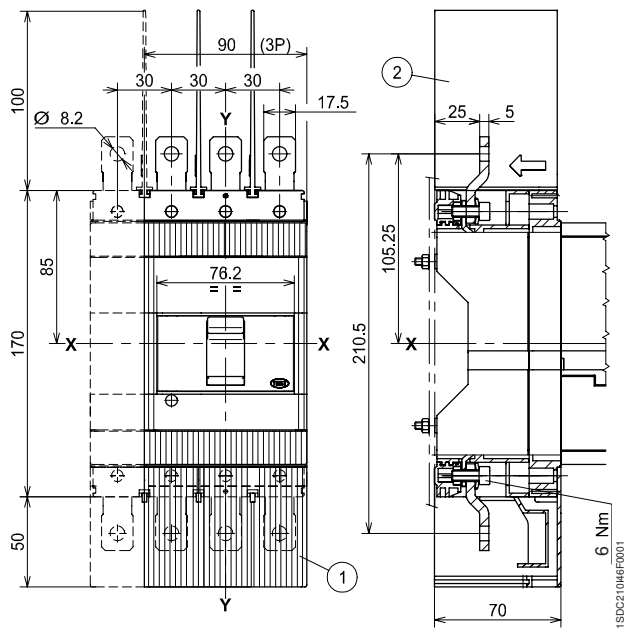

Caption

- ① Low terminal covers with degree of protection IP40

Rear - R




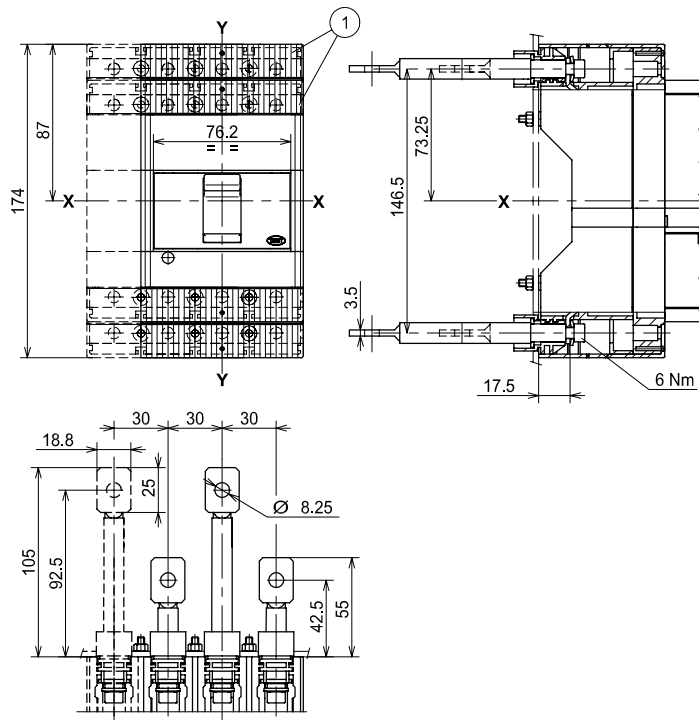


Terminals

Front - F

Front for copper cables - FC Cu





Front for copper/aluminium cables - FC CuAl 185 mm²

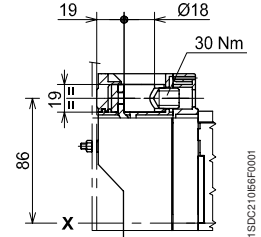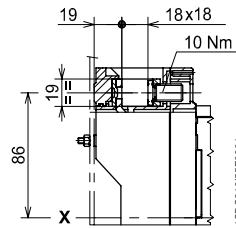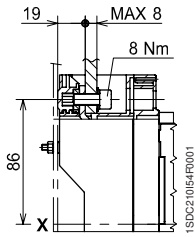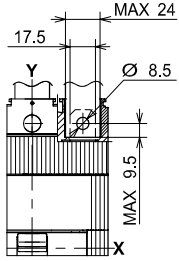


Caption

Front for copper/aluminium 240 mm² cables - FC CuAl 240 mm²

- ① Front extended terminals
- ② Front terminals for cables 240 mm² CuAl
- ③ Insulating base plate (compulsory)
- ④ High terminal covers with degree of protection IP40
- ⑤ Drilling templates for support sheet

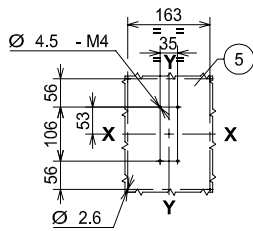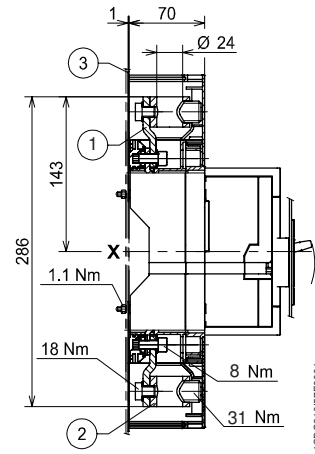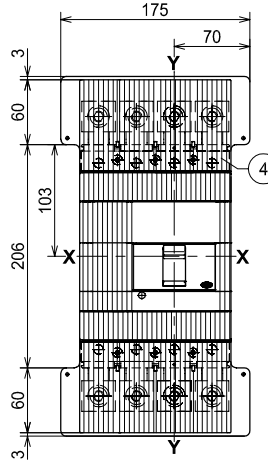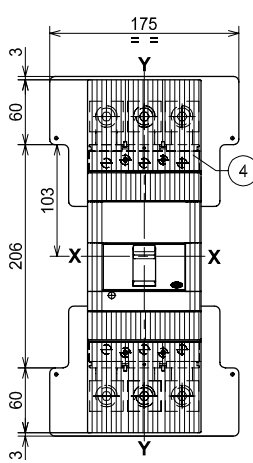

3 POLES



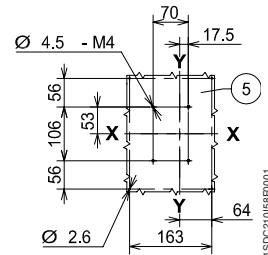


4 POLES

Caption

Front extended spread - ES

- ① Insulating barriers between phases (compulsory)

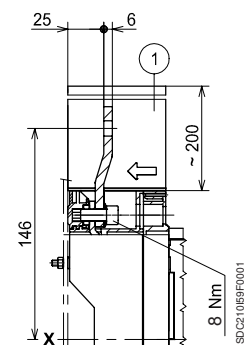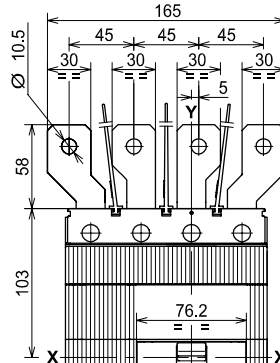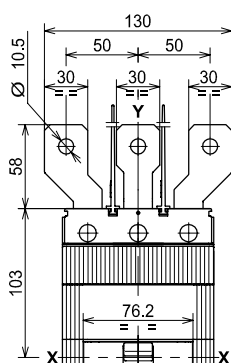

Overall dimensions


Tmax T3

Terminals

Front extended - EF

Caption


- ① High terminal covers with degree of protection IP40
- ② Insulating barriers between phases (compulsory without 1)

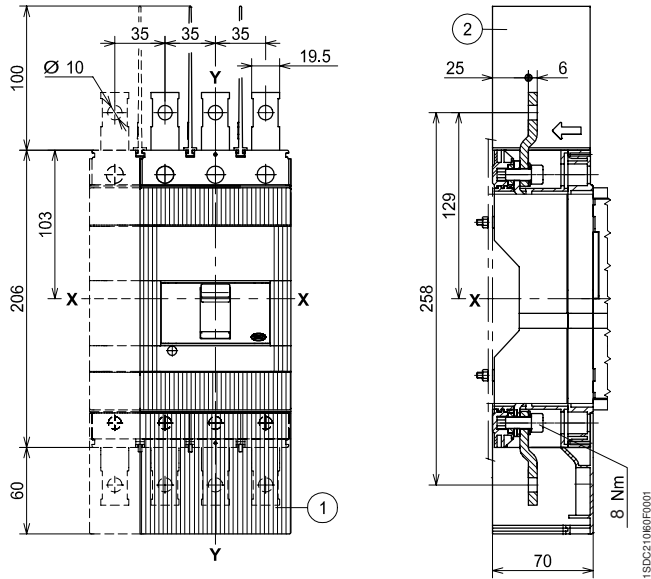

Caption

- ① Low terminal covers with degree of protection IP40

Rear - R

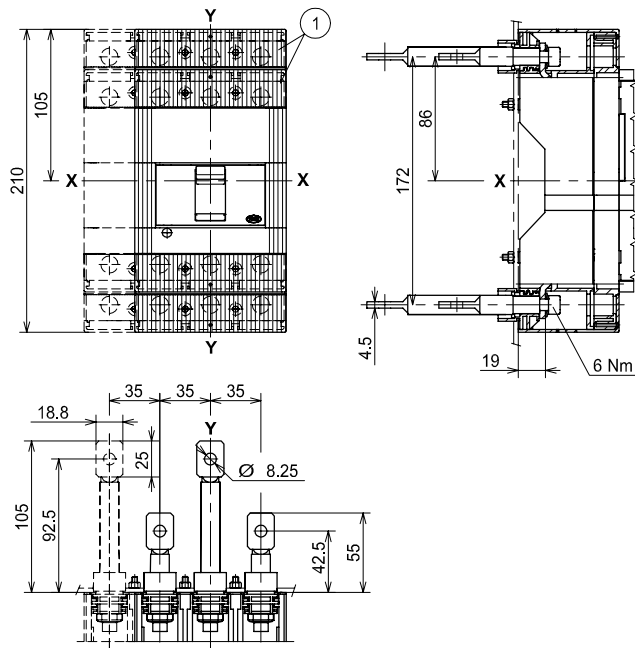

Overall dimensions


Tmax T4

Plug-in circuit-breaker


Fixing on sheet

Caption


- ① Fixed part
- ② Moving part with terminal covers, degree of protection IP40
- ③ Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC222-223)
- ④ Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

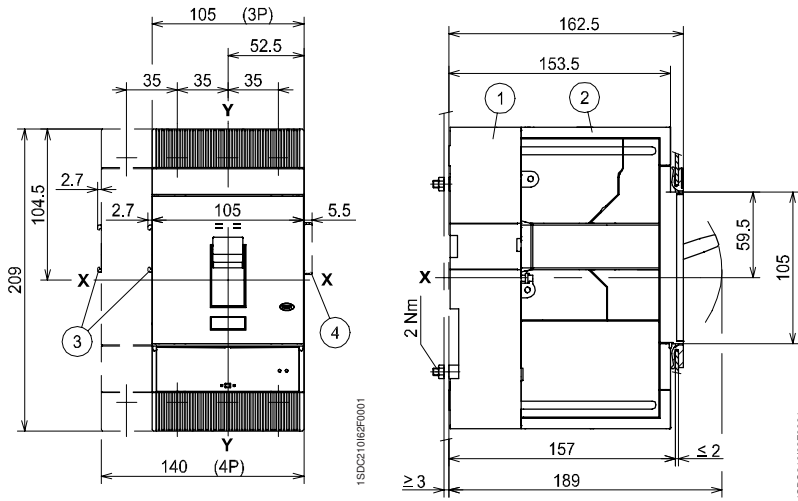

Flange for compartment door

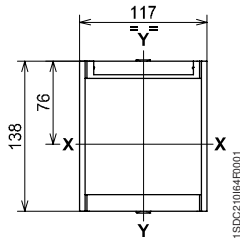


Drilling templates of the compartment door

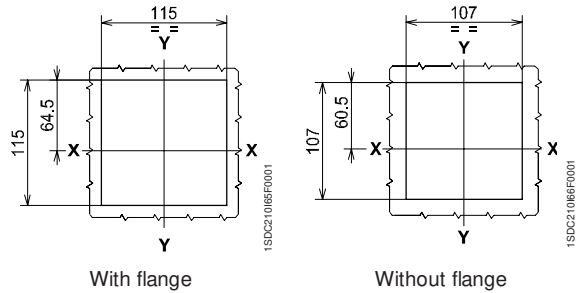


Drilling templates for support sheet

For front terminals

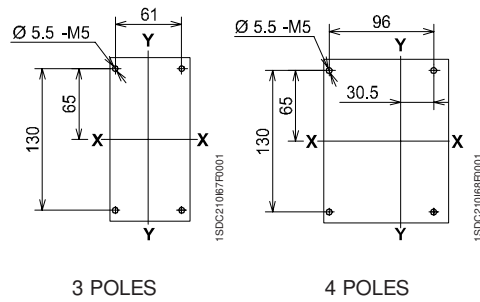

For rear terminals

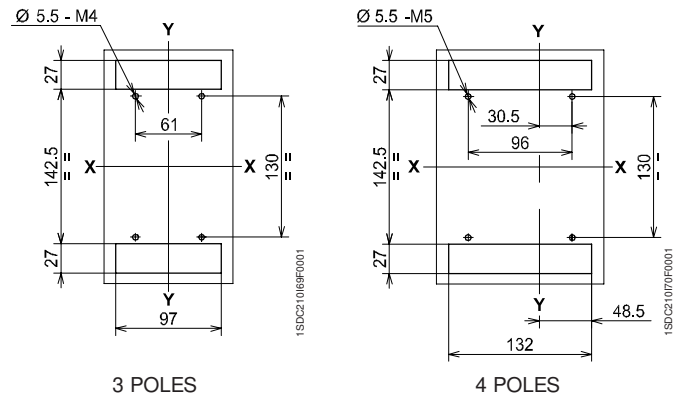


Overall dimensions

Tmax T4

Terminals


Front - EF

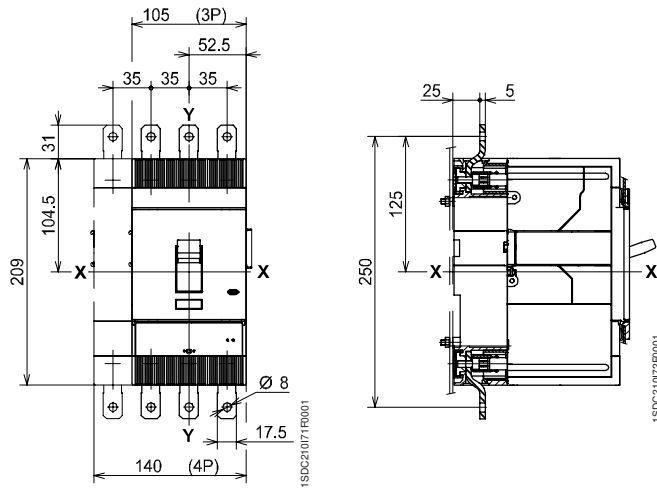


Caption

Front for copper cables - FC Cu or for copper/aluminium cables - FC CuAl


- ① For Cu cables
- ② For Cu Al cables
- ③ High terminal covers with degree of protection IP40

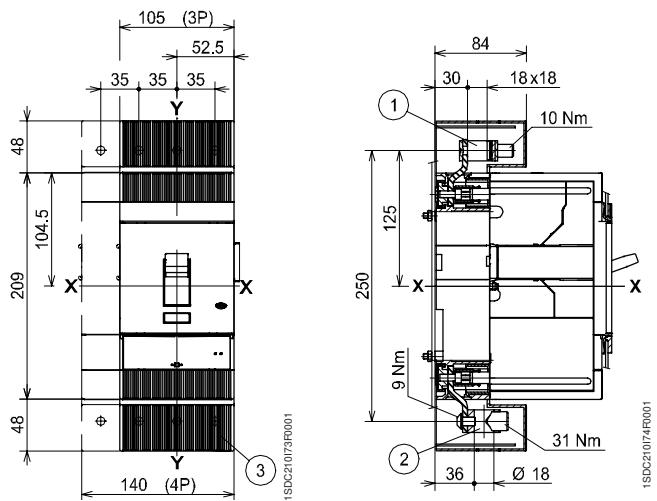


Rear flat vertical - VR

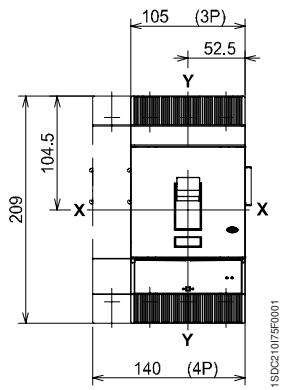

1SDC21075R001

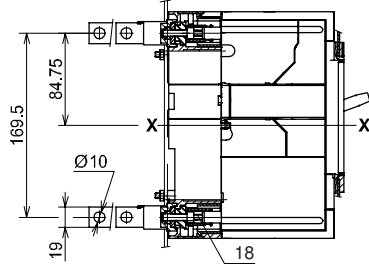


1SDC21076R001

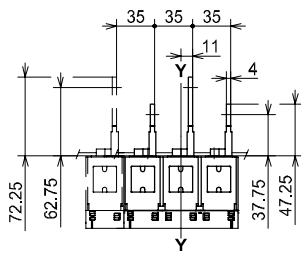


1SDC21077R001

3-4 POLES


Rear flat horizontal - HR

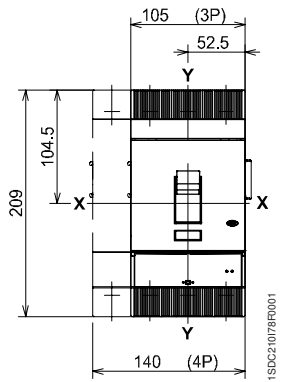

1SDC21078R001

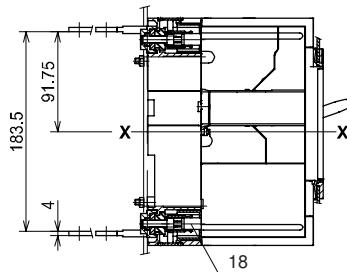

1SDC21079R001

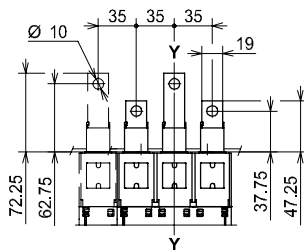

1SDC21080R001


3-4 POLES

Overall dimensions

Tmax T5

Plug-in circuit-breaker

Fixing on sheet

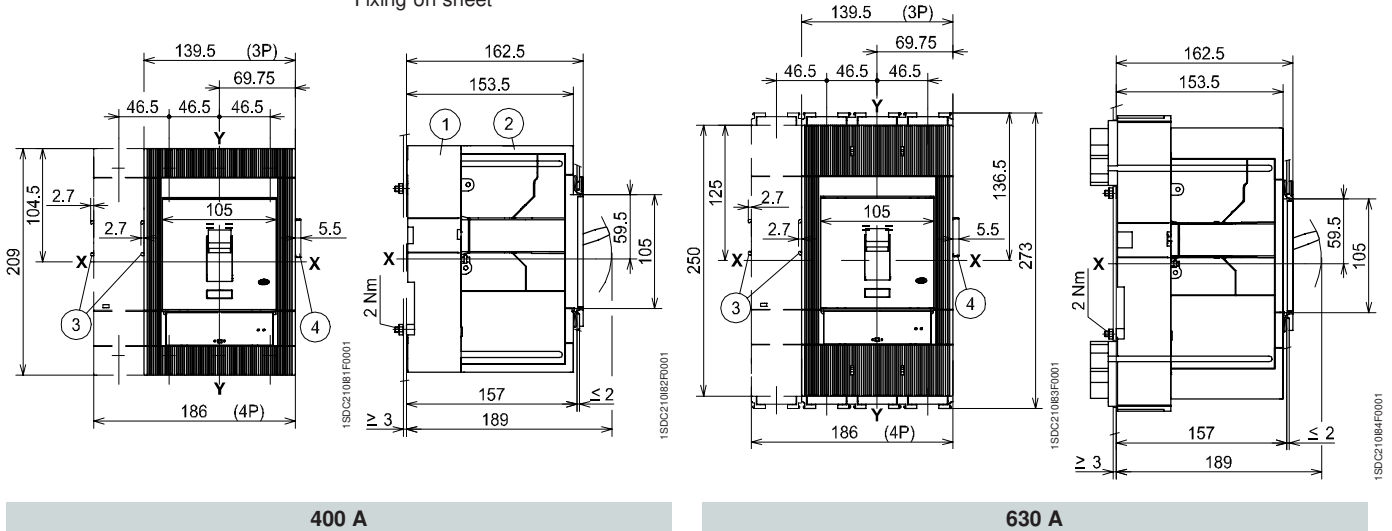


400 A

630 A


Caption

- ① Fixed part
- ② Moving part with terminal covers, degree of protection IP40
- ③ Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC221-222)
- ④ Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)


Flange for compartment door

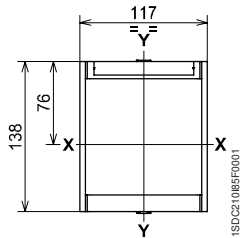

Drilling templates of the compartment door

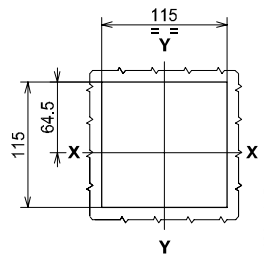


With flange

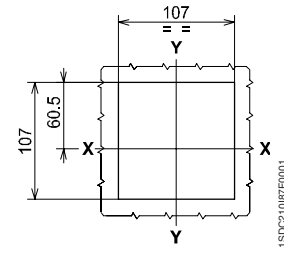


Without flange

Drilling templates for support sheet

For front terminals 400 A

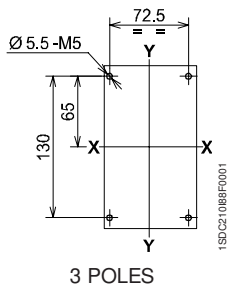


3 POLES

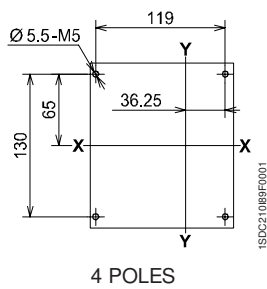


4 POLES

For front terminals 630 A
For rear terminals 400 A - 630 A

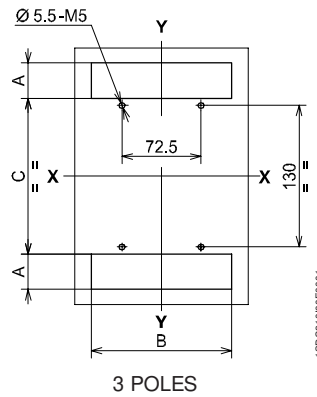

3 POLES

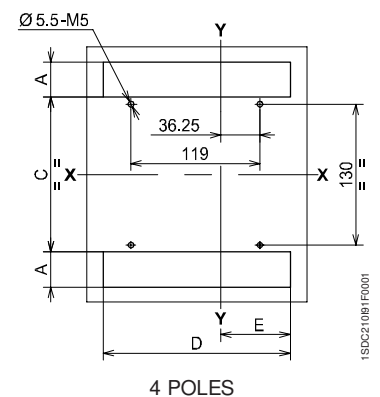


4 POLES


| A | B | C | D | E |
|-----------------------------|-------|-----|-------|------|
| Rear 400 A | | | | |
| 32.5 | 128.5 | 143 | 172.5 | 64.5 |
| Front and rear 630 A | | | | |
| 61.8 | 139 | 142 | 185.5 | 69.5 |

Terminals

Front 400 A - EF

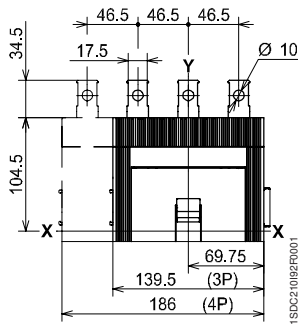


Front 630 A - F

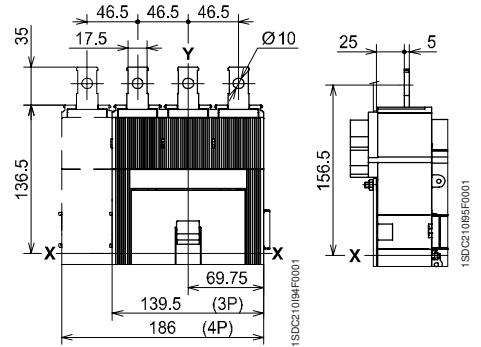

Caption

- ① Front terminals for cables Cu
- ② Front terminals for cables Cu/Al
- ③ High terminal covers with degree of protection IP40


Front for cables Cu and Cu/Al - FC Cu - FC Cu/Al

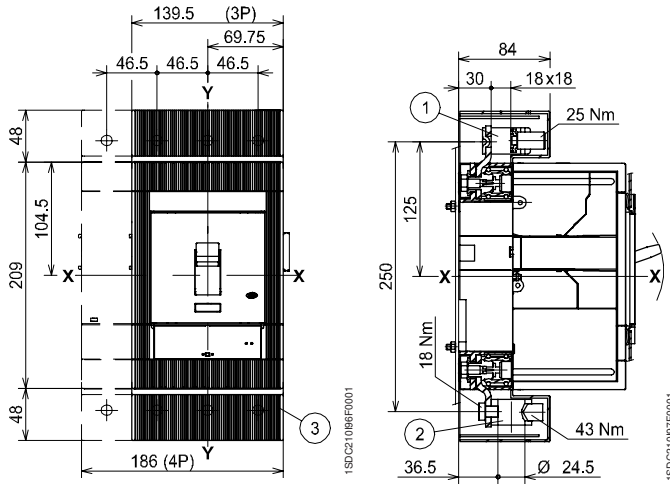

Caption

- ① Insulating barriers between phases (compulsory)

Front extended spread 630 A - ES

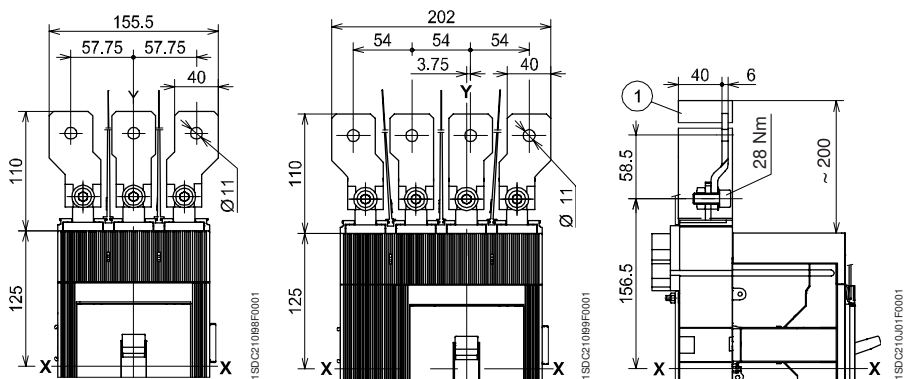


Overall dimensions


Tmax T5

Terminals


Rear flat horizontal 400 A - HR

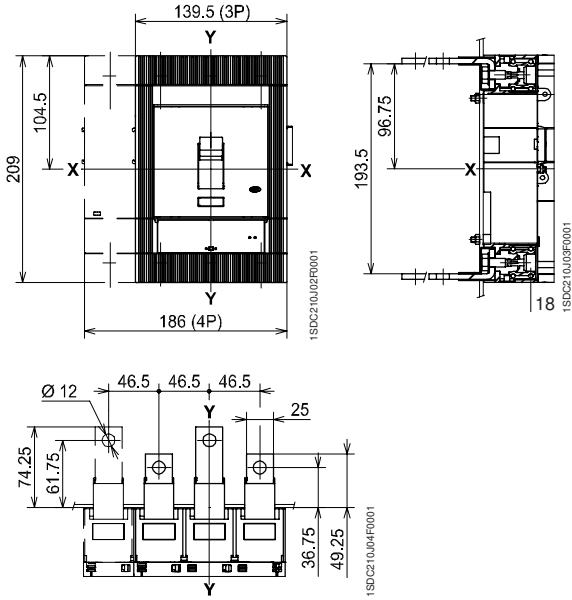


Rear vertical 400 A - VR

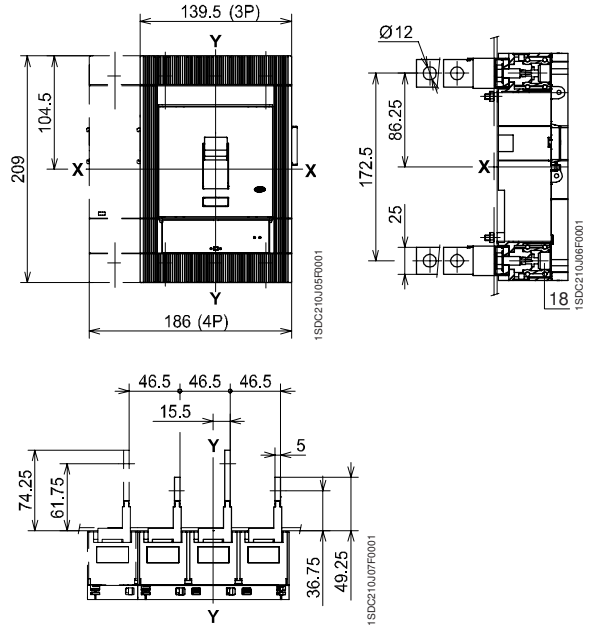

Rear flat horizontal 630 A - HR

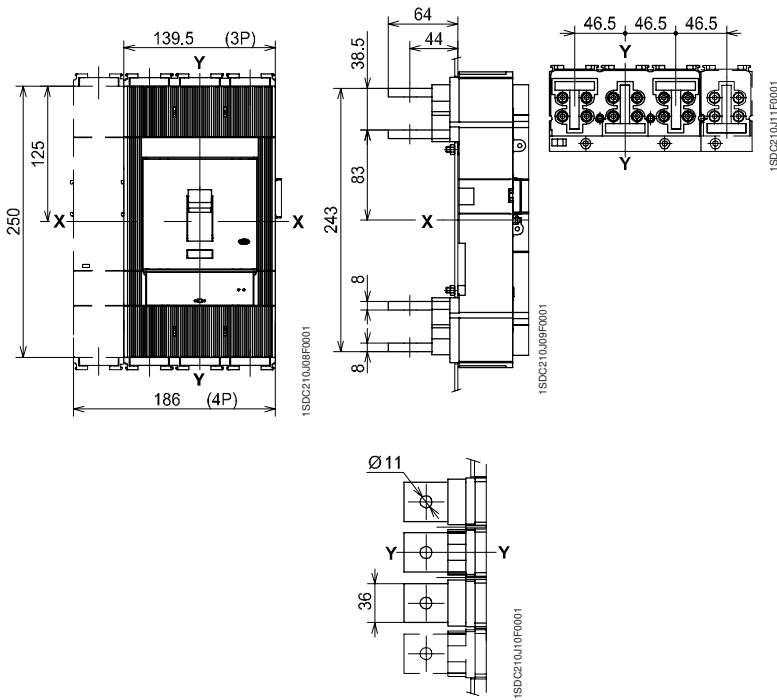

Rear vertical 630 A - VR

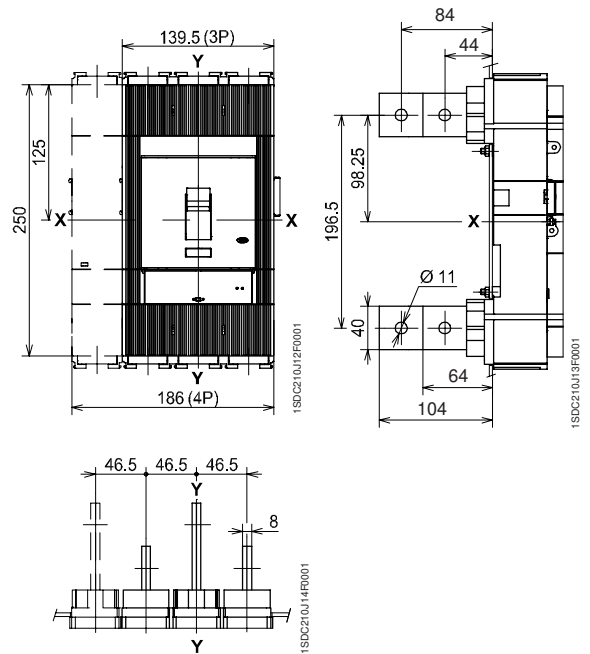

Overall dimensions


Tmax T4

Withdrawable circuit-breaker

Fixing on sheet



Caption

- ① Fixed part
- ② Moving part
- ③ Lock for compartment door (available on request)
- ④ Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC222-223)

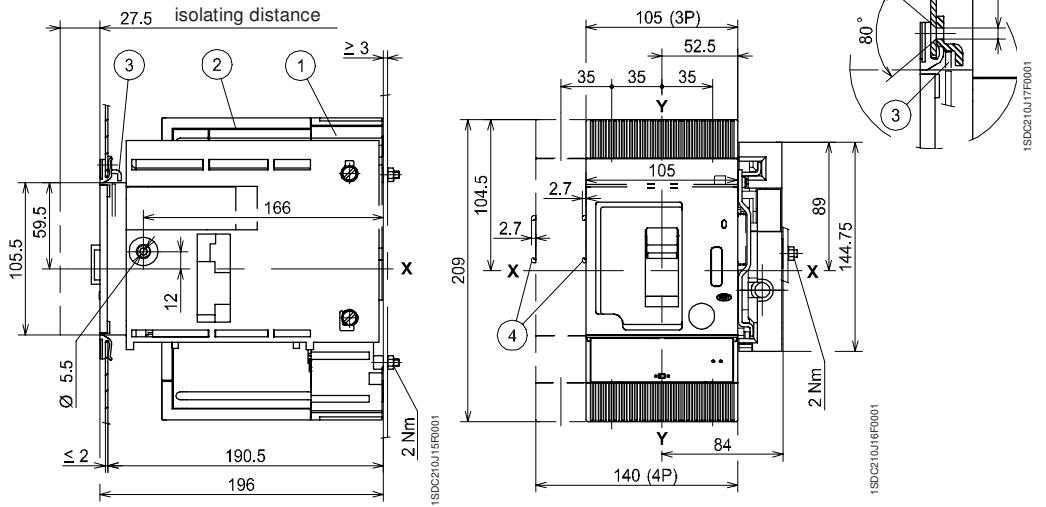

Flange for compartment door





Drilling templates of the compartment door

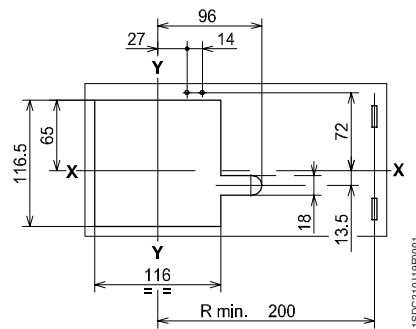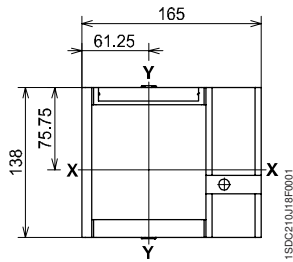

Drilling templates for support sheet

For front terminals

For rear terminals

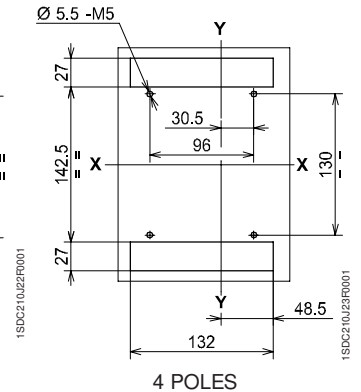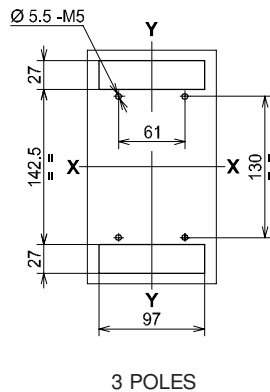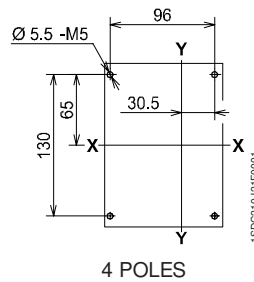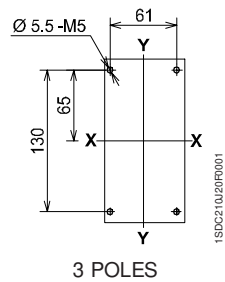


Overall dimensions


Tmax T4

Terminals


Front - EF

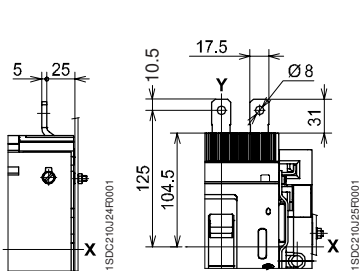

Front for copper cables - FC Cu

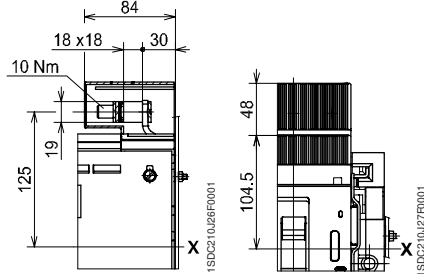


Front for copper/aluminium cables - FC CuAl

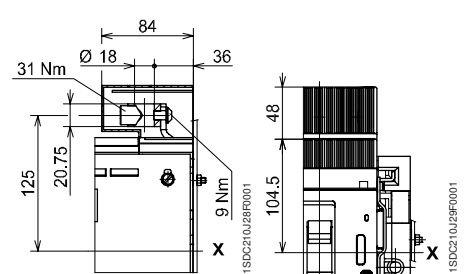


Caption

Front extended spread - ES




- ① Insulating barriers between phases (compulsory)

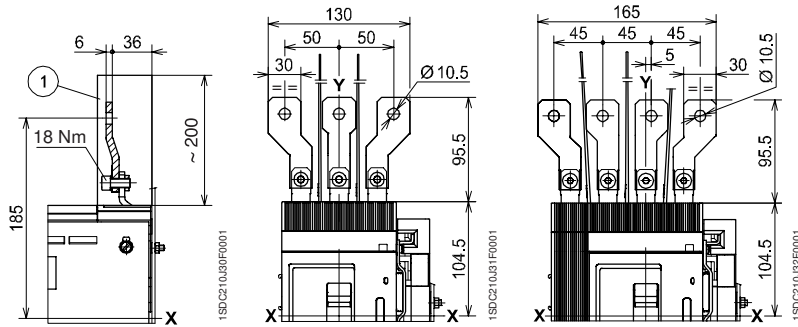

Rear flat horizontal - HR

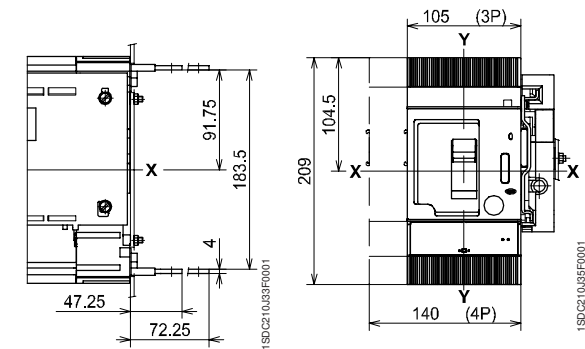

Rear flat vertical - VR

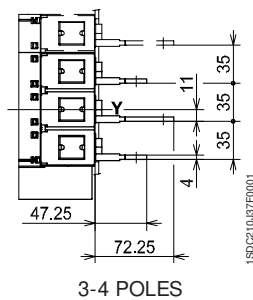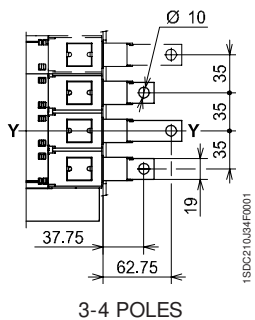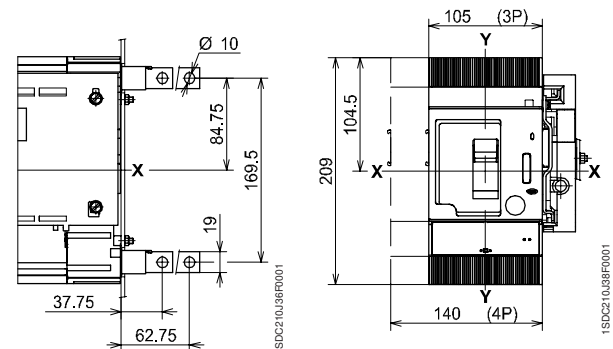


Overall dimensions

Tmax T5

Withdrawable circuit-breaker

Fixing on sheet

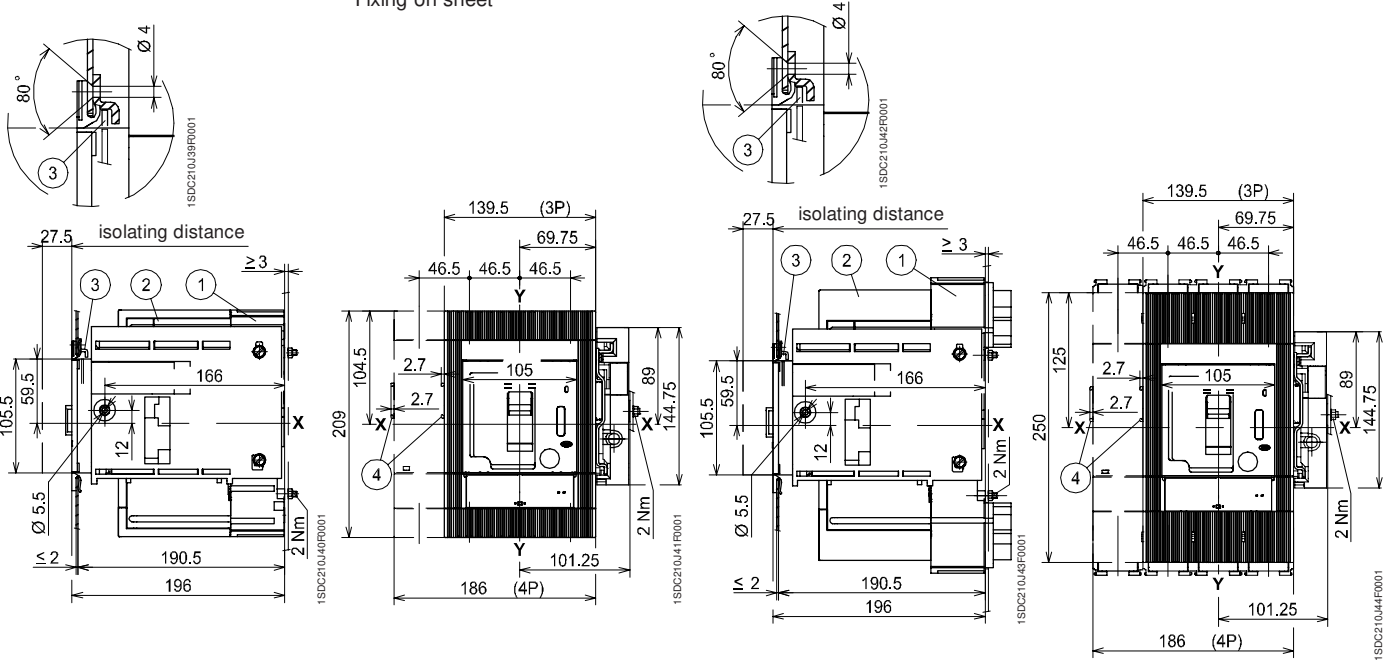


400 A

630 A


Caption

- ① Fixed part
- ② Moving part with terminal covers, degree of protection IP40
- ③ Lock for compartment door (available on request)
- ④ Overall dimensions with cabled accessories mounted (SOR-C, UVR-C, RC222)

Flange for compartment door


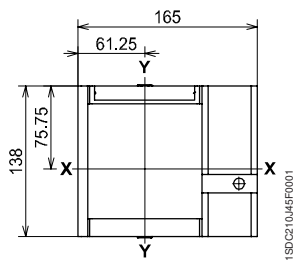


Drilling templates of the compartment door


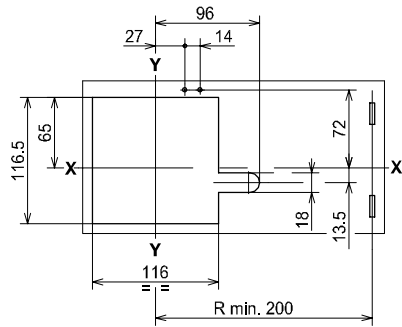


Drilling templates for support sheet

For front terminals 400 A

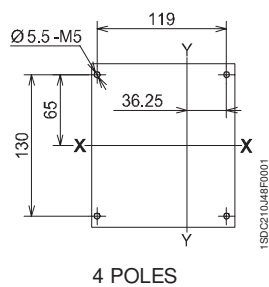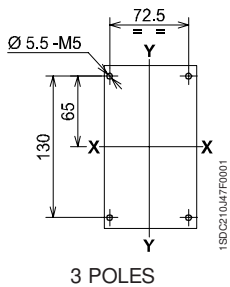

For front terminals 630 A
For rear terminals 400 A - 630 A

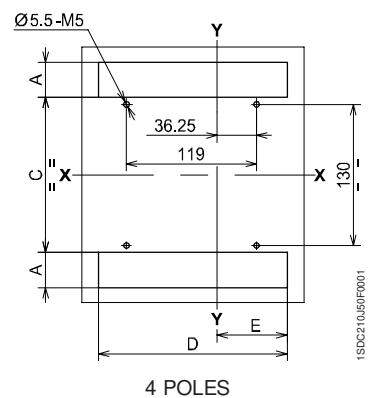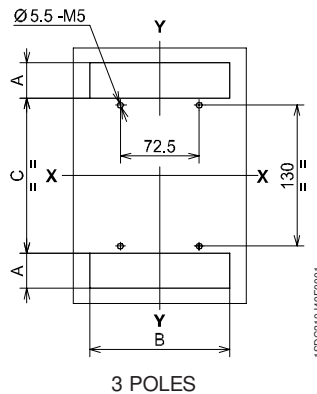


| | A | B | C | D | E |
|-----------------------------|------|-------|-----|-------|------|
| Rear 400 A | 32.5 | 128.5 | 143 | 172.5 | 64.5 |
| Front and rear 630 A | 61.8 | 139 | 142 | 185.5 | 69.5 |

Overall dimensions


Tmax T5

Terminals

Front 400 A - EF

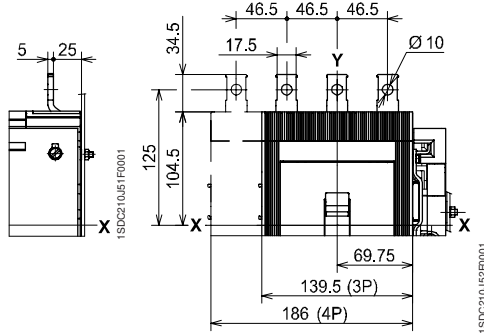


Front 630 A - EF

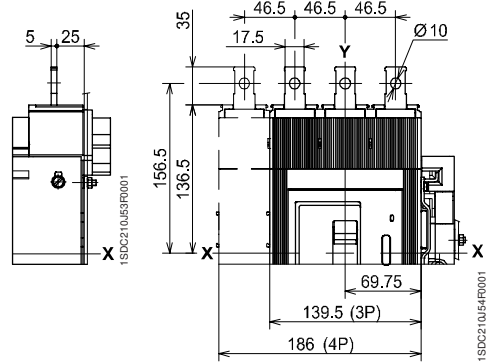

Caption

- ① Front terminals for copper cables
- ② Front terminals for copper/aluminium cables
- ③ Terminals with degree of protection IP40


Front for cables Cu and Cu/Al 400 A - FC Cu - FC Cu/Al

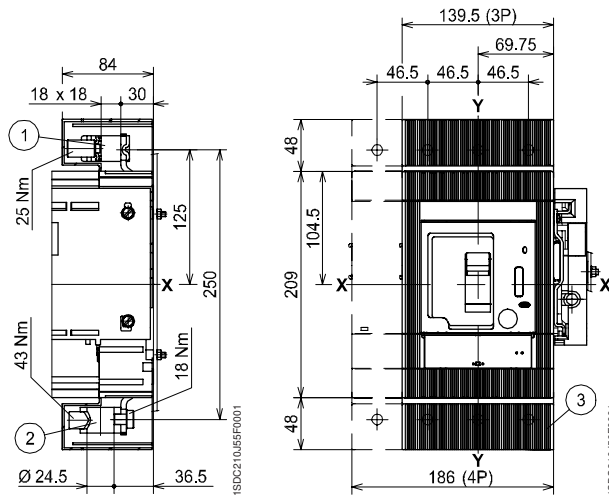

Caption

- ① Insulating barriers between phases (compulsory)


Front extended spread 400 A - ES

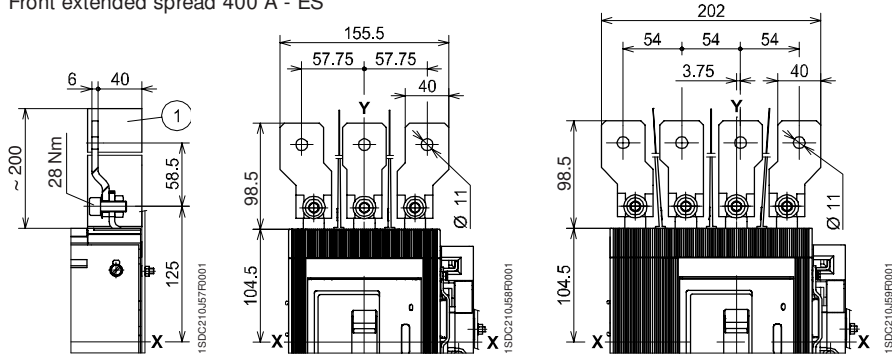


Caption

- ① Insulating barriers between phases (compulsory)


Front extended spread 630 A - ES

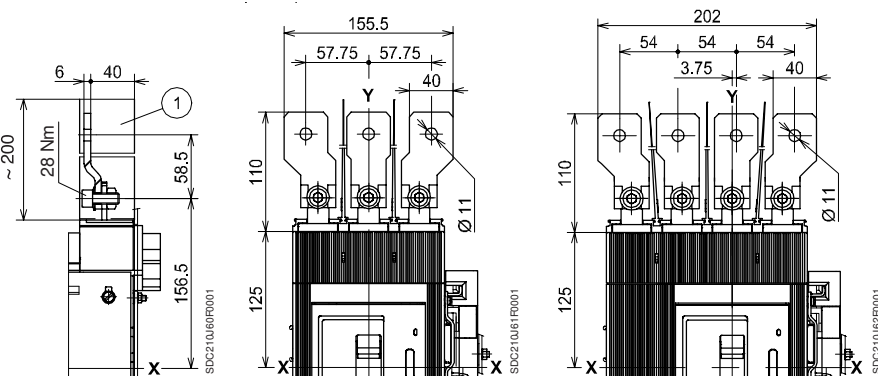


Rear flat horizontal 400 A - HR

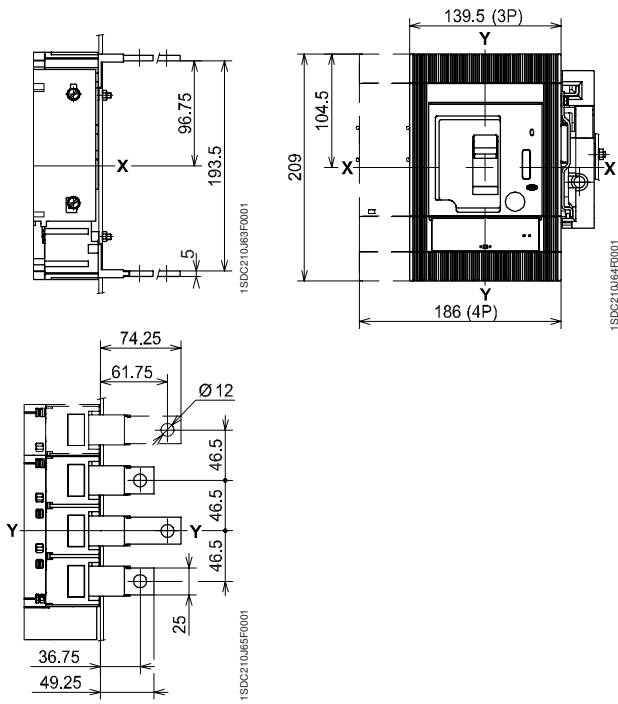


Rear flat vertical 400 A - VR

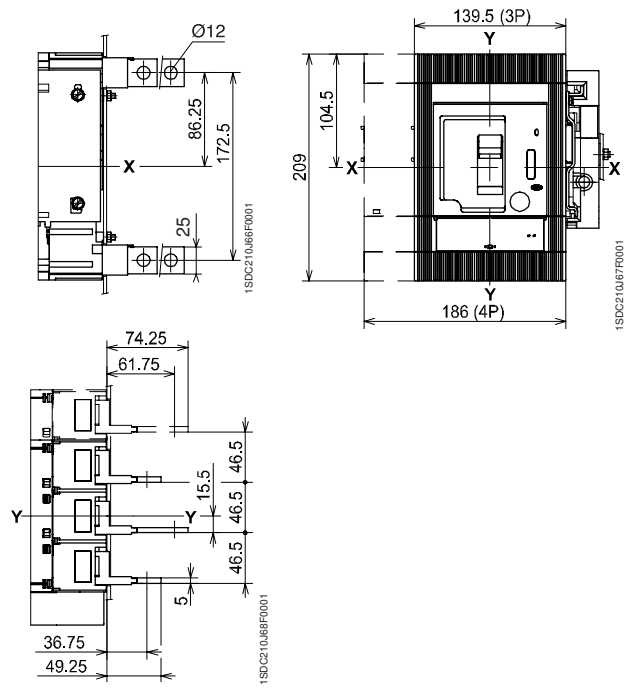

Rear flat horizontal 630 A - HR

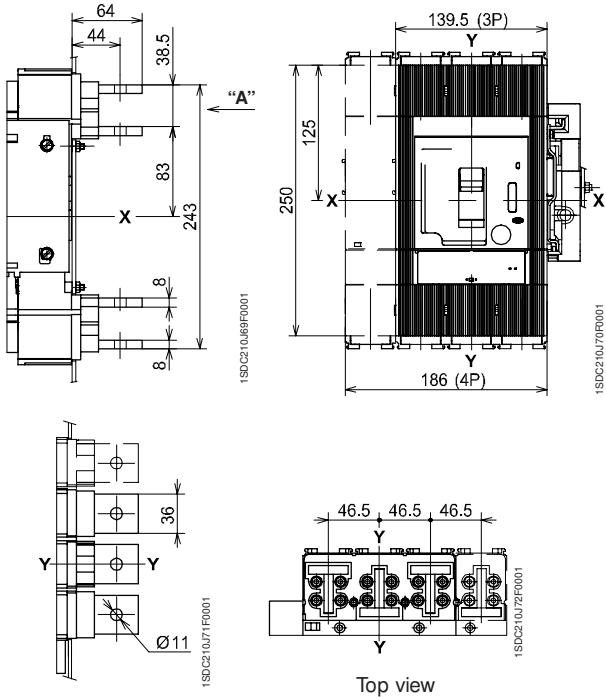

Rear flat vertical 630 A - VR

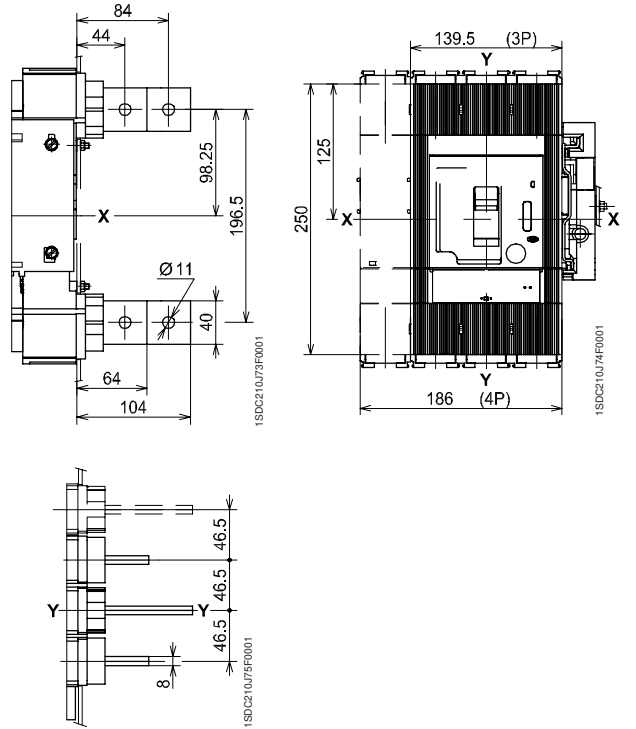

Overall dimensions


Tmax T6

Withdrawable circuit-breaker

Caption


- ① Fixed part
- ② Moving part
- ③ Lock for compartment (available on request)
- ④ Overall dimensions with cabled accessories mounted (SOR-C, UVR-C)

Fixing on sheet

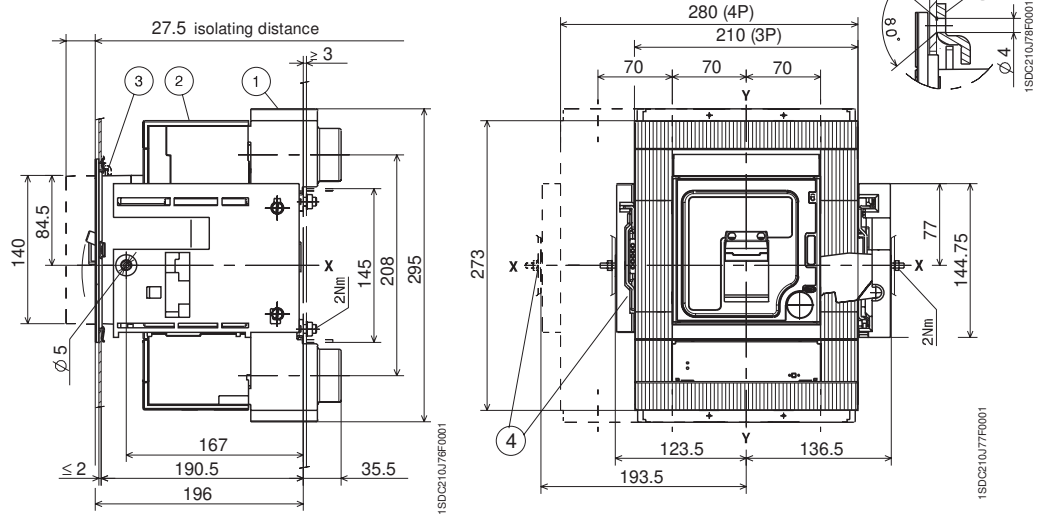


Flange for compartment door

Drilling templates of the compartment door

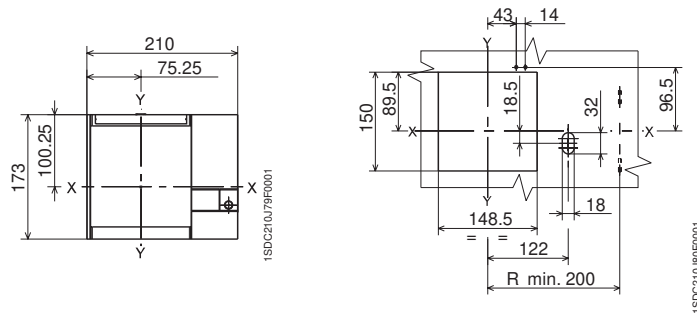


Drilling templates for support sheet

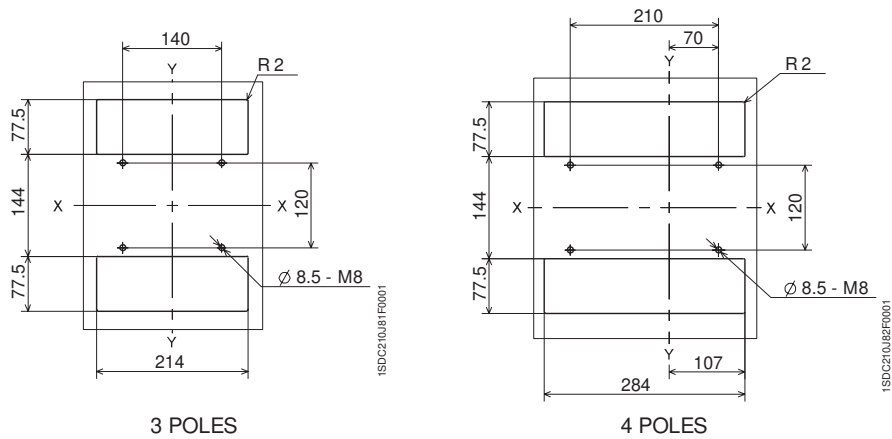


Terminals


Front extended - EF

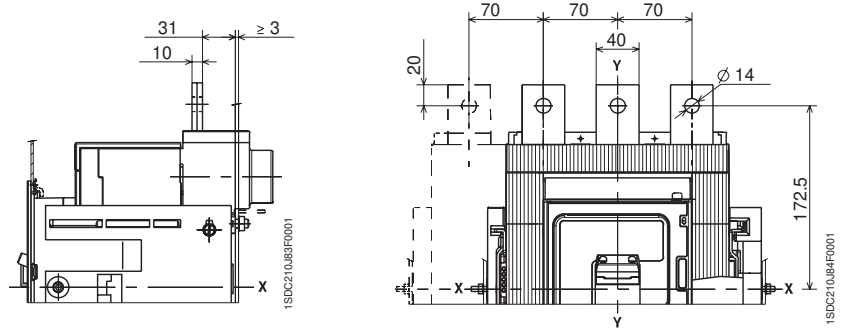

Rear flat horizontal - HR

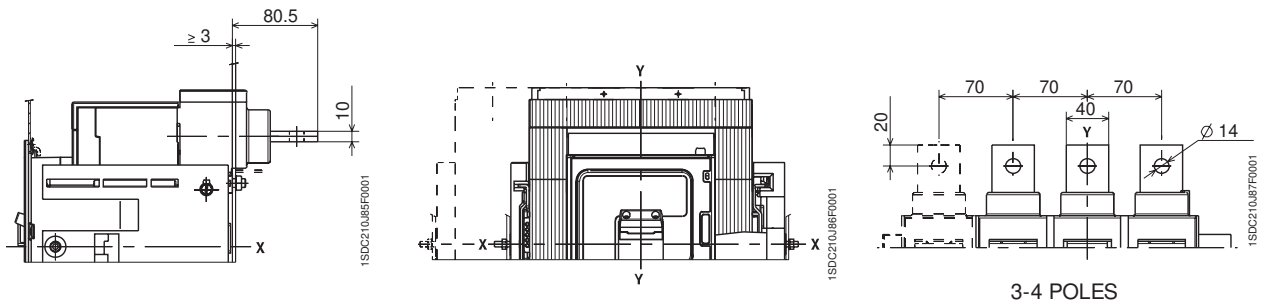

Rear flat vertical - VR



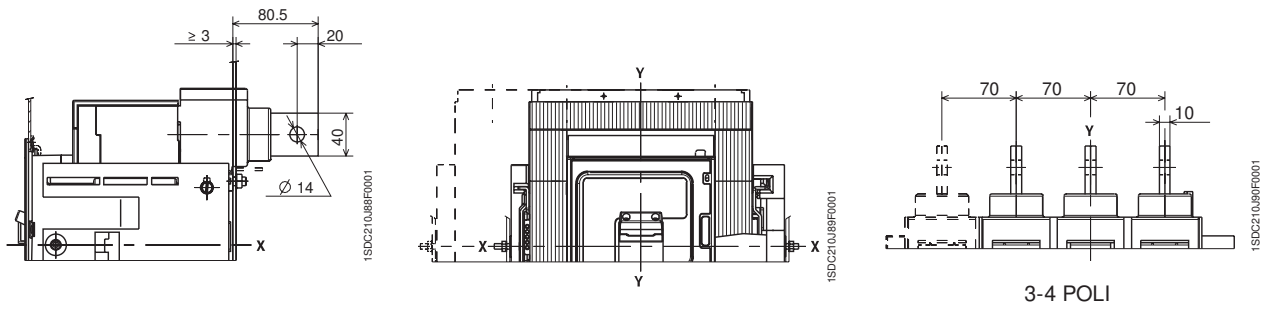


Overall dimensions


Tmax T7

Withdrawable circuit-breaker


Fixing on sheet

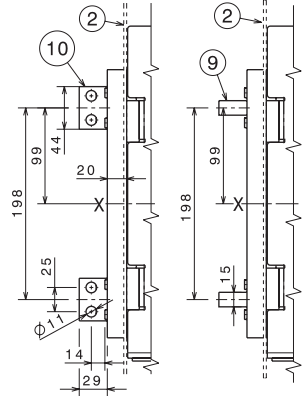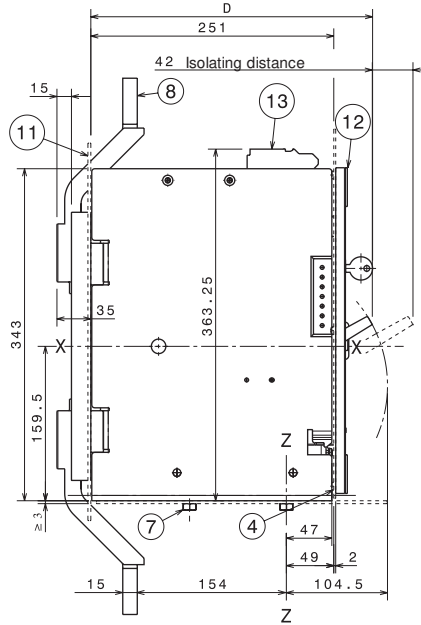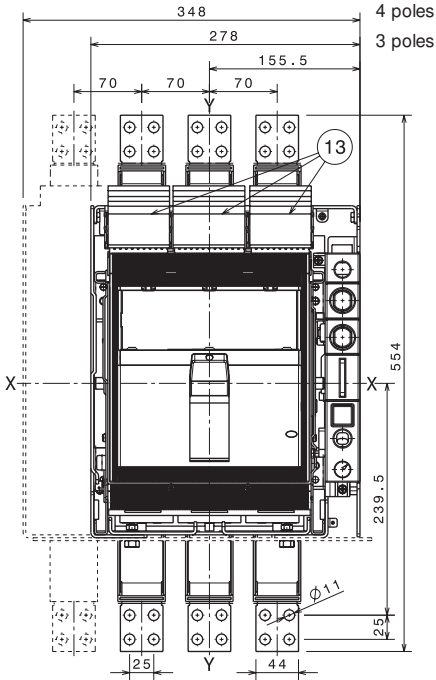



Rear flat vertical – VR

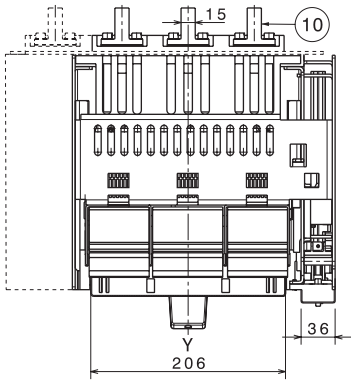



Rear flat horizontal – HR

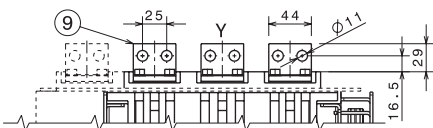

Drilling templates of the compartment door

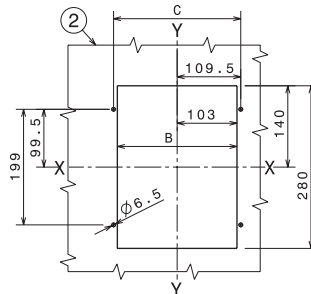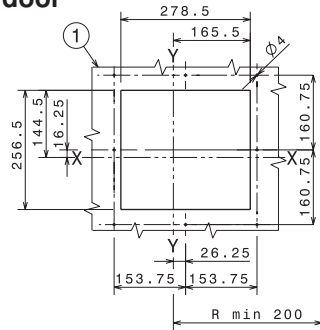

Drilling templates for support sheet

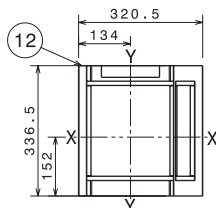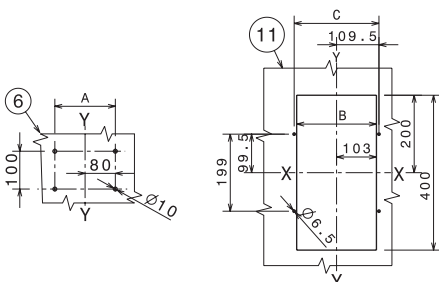

Caption

- ① Compartment door with flange sheet drilling
- ② Rear segregation for rear terminals
- ④ Flange fixing screws
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Tightening torque: 9 Nm
- ⑧ Front terminals
- ⑨ Rear horizontal terminals
- ⑩ Rear vertical terminals
- ⑪ Rear segregation for front terminals
- ⑫ Flange for compartment door
- ⑬ Auxiliary contact terminal

| | III | IV |
|----------|-----|-----|
| A | 160 | 230 |
| B | 206 | 276 |
| C | 219 | 289 |

| | Standard | Ronis | Profalux | Kirk | Castell |
|----------|----------|-------|----------|------|---------|
| D | 287 | 291 | 299 | 298 | 328 |

Overall dimensions

Circuit-breaker with RC221/222 residual current release


Tmax T1 with RC222 for 200 mm module

Fixed version


Caption

- ① Depth of the switchboard with circuit-breaker face extending
- ② Depth of the switchboard with circuit-breaker face flush with door
- ③ Terminal covers with degree of protection IP40

Front terminals - F

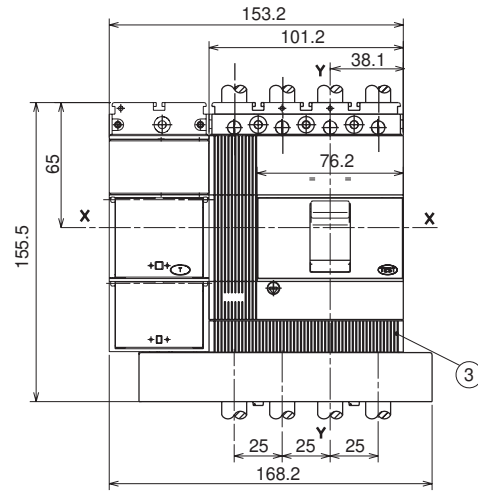


Fixing on sheet

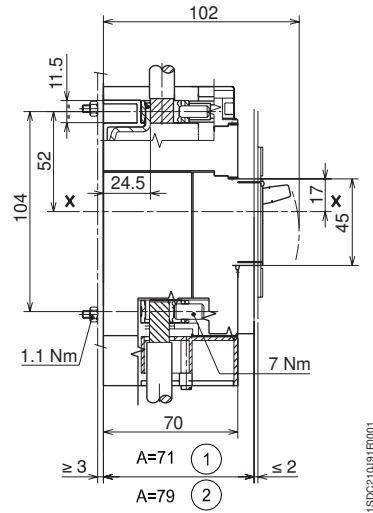


1SDC210191R0001

Drilling templates of the compartment door


For A = 71 - without flange

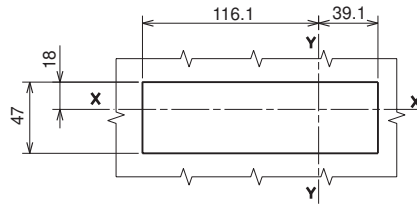

For A = 79 - without flange

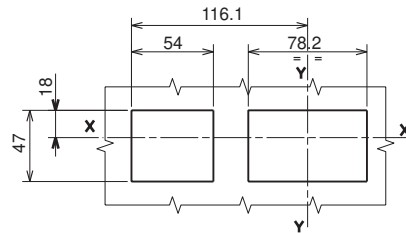

Drilling templates for support sheet

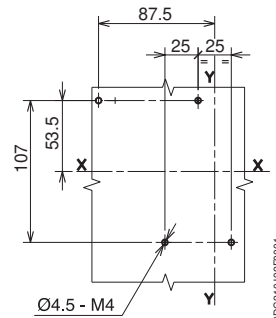


1SDC210192R0001

Overall dimensions

Circuit-breaker with RC221/222 residual current release

Tmax T1 - T2 - T3

Fixed version

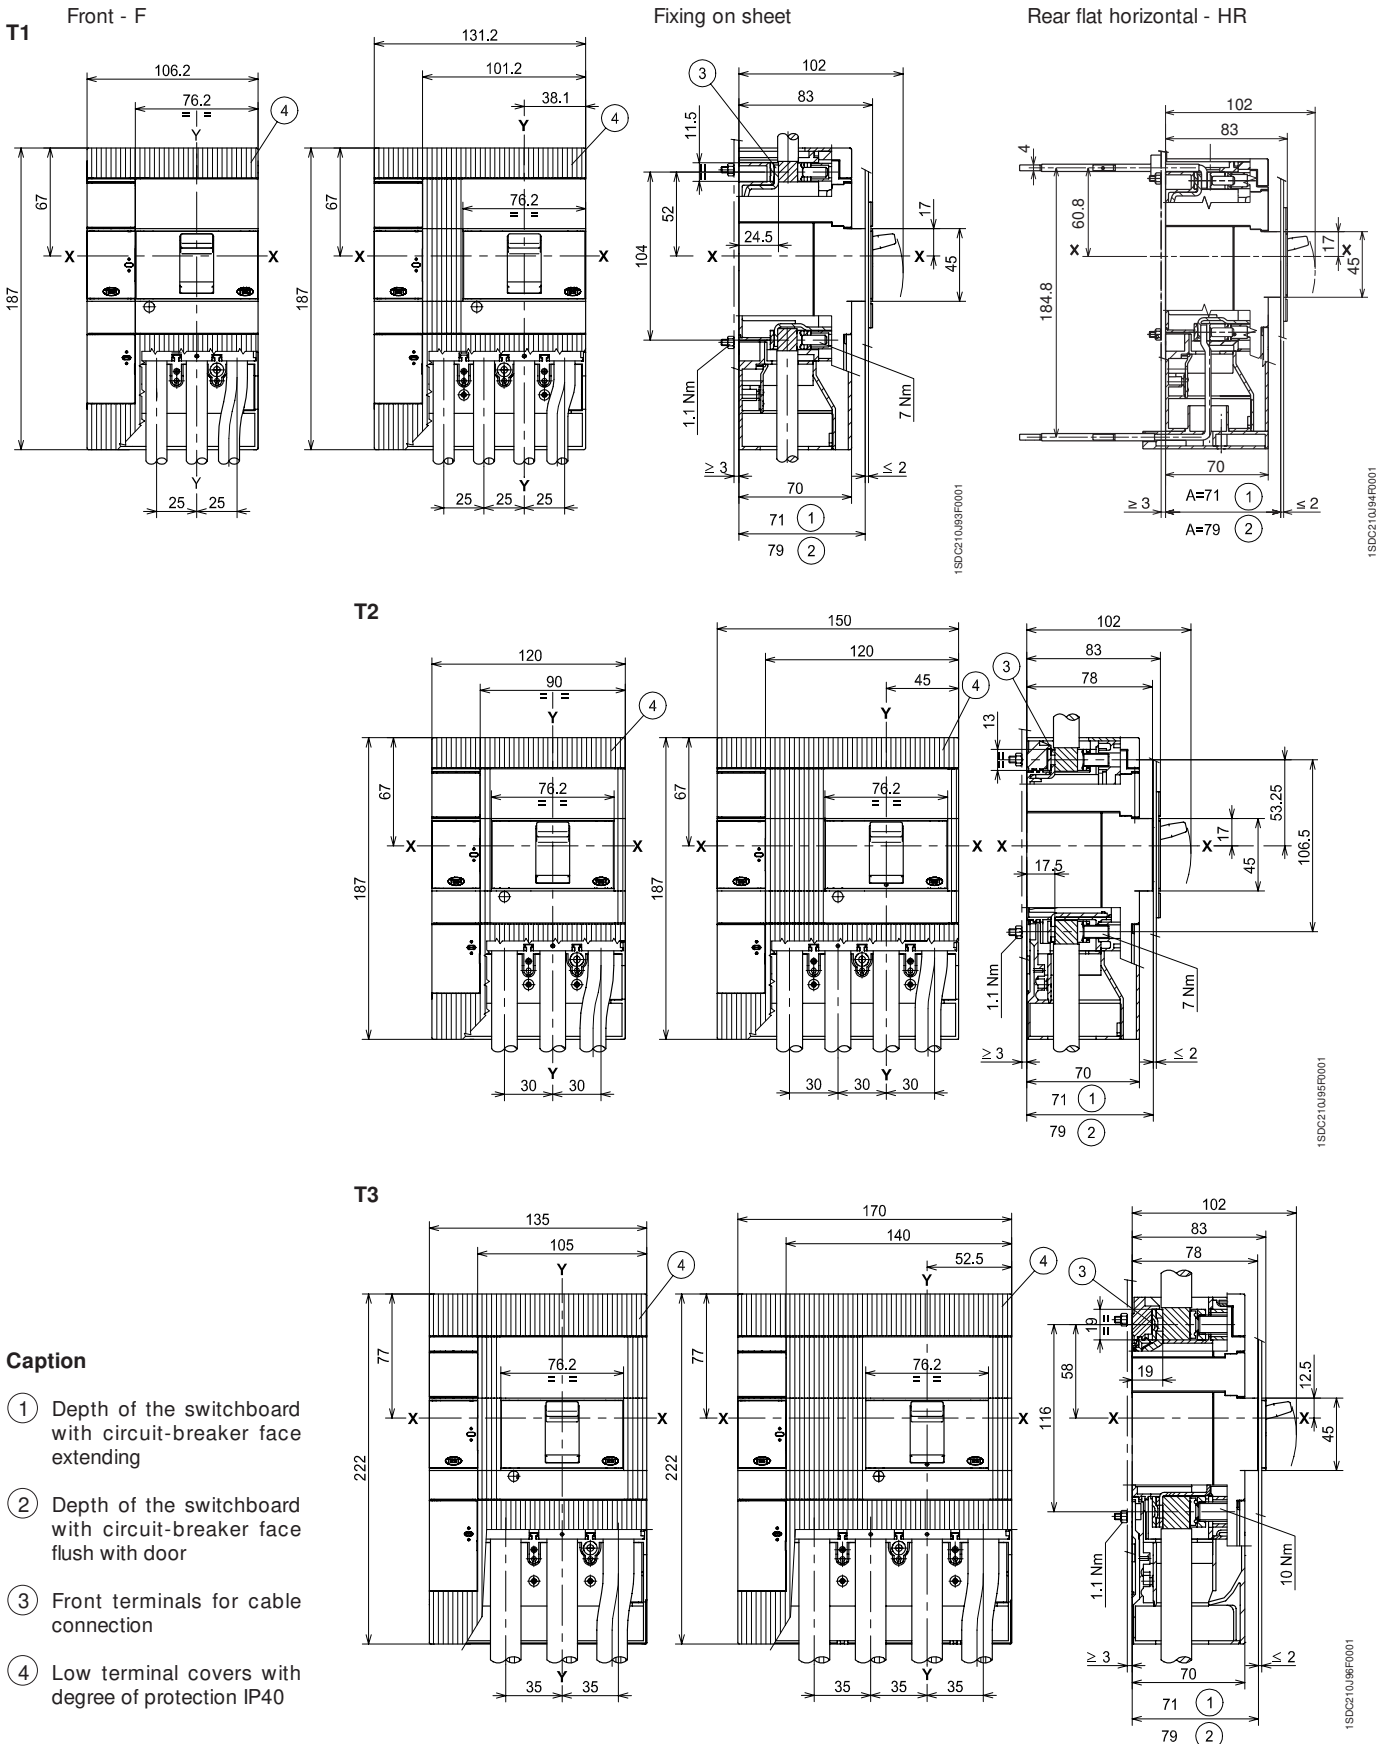

Overall dimensions

Circuit-breaker with RC221/222 residual current release

Tmax T1 - T2 - T3

Fixed version




Flange for the compartment door

T1




T2

T3

3 POLES

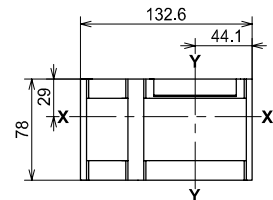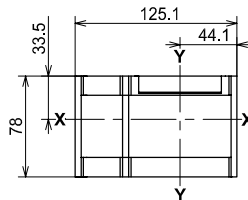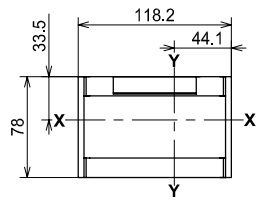

4 POLES

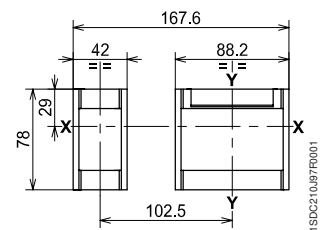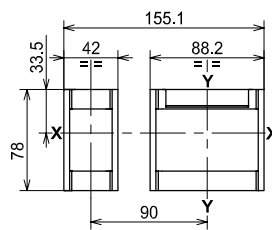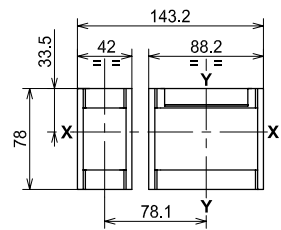


1SDC210J97F001


Drilling template for fixing sheet

T1 - T2 - T3

3 POLES

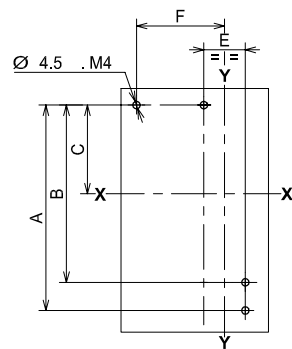


4 POLES

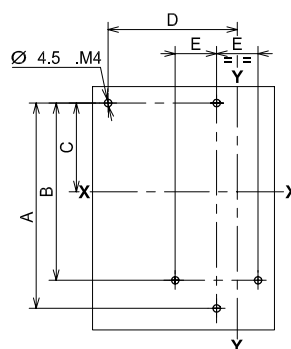

T1 rear flat horizontal - HR

4 POLES

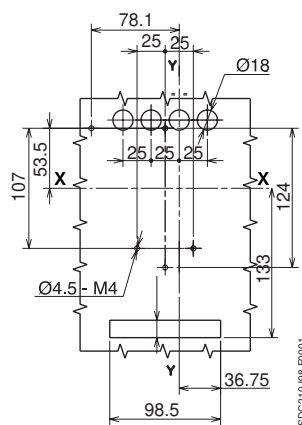

1SDC210J98F001


| | A | B | C | D | E | F |
|-----------|-------|-----|------|-------|----|------|
| T1 | 124 | 107 | 53.5 | 78.1 | 25 | 53.1 |
| T2 | 124 | 107 | 53.5 | 90 | 30 | 60 |
| T3 | 141.5 | 122 | 61 | 102.5 | 35 | 67.5 |

Drilling templates of the compartment door

Without flange
face extending


3 POLES

T1 - T2 - T3

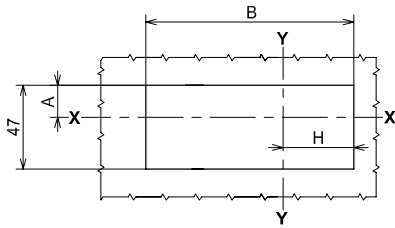


Without flange
face not extending

T1

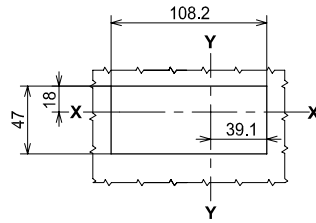


With flange
face not extending

T1 - T2 - T3

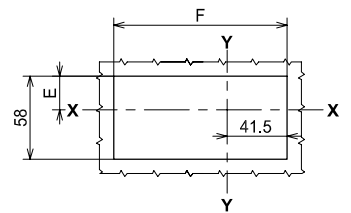


4 POLES


T1 - T2 - T3

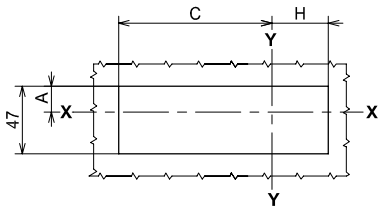


T2 - T3

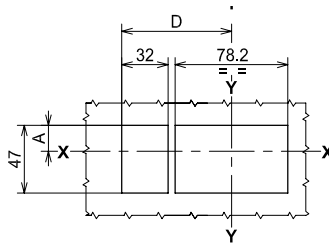

T1 - T2 - T3

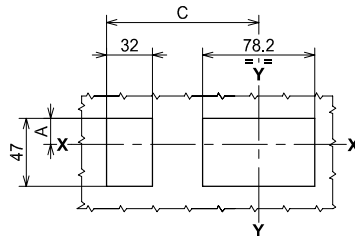

T1 - T2 - T3

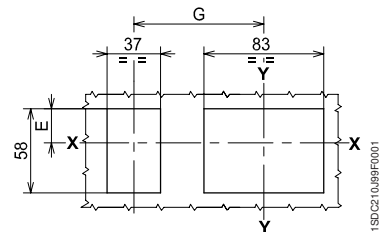

1SDC210099F0001

| | A | B | C | D | E | F | G | H |
|-----------|------|-------|-------|------|------|-------|-------|------|
| T1 | 18 | 108.2 | 94.1 | – | 23.5 | 113 | 78.1 | 39.1 |
| T2 | 18 | 122 | 106 | 76 | 23.5 | 120 | 90 | 46 |
| T3 | 13.5 | 137 | 118.5 | 83.5 | 19 | 127.4 | 102.5 | 53.5 |

Overall dimensions



Circuit-breaker with RC222 residual current release

Tmax T4 - T5



Fixed version

Front - F, fixing on sheet

T4

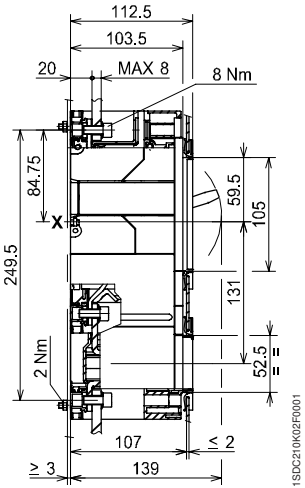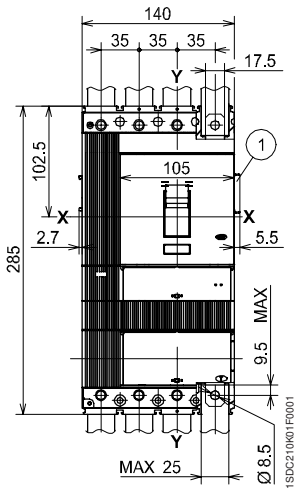

T5 (400 A)⁽¹⁾

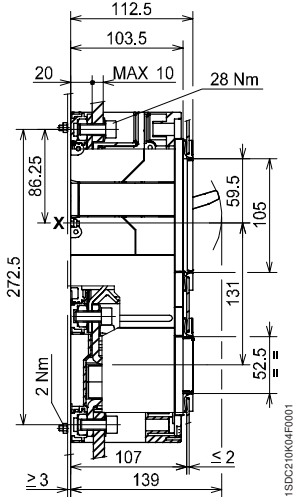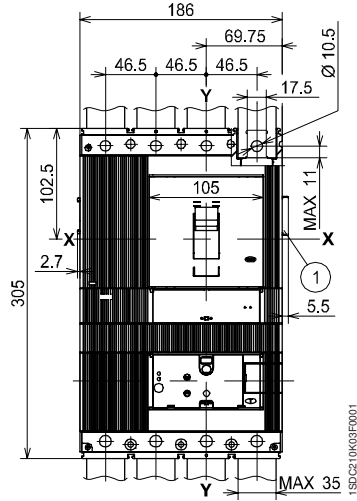


Caption


- ① Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

⁽¹⁾ For T5 (630 A) ask ABB SACE

Flange for the compartment door

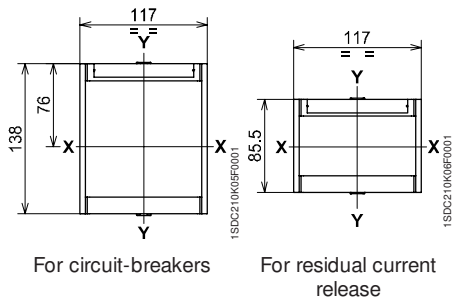


Drilling templates of compartment door and fitting flange



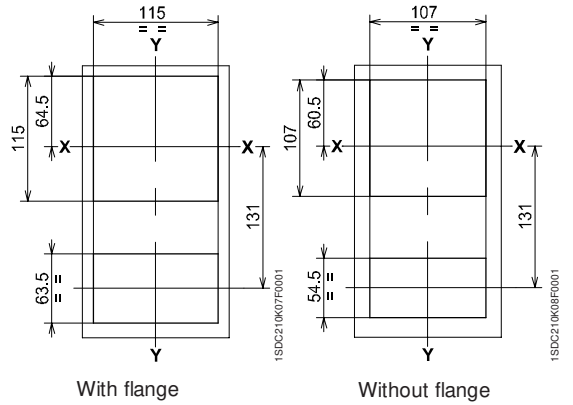


Drilling templates for support sheet

T4

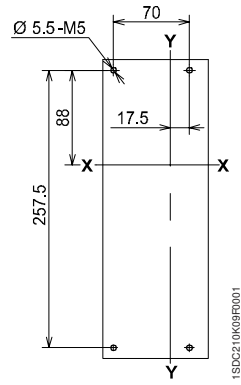

T5

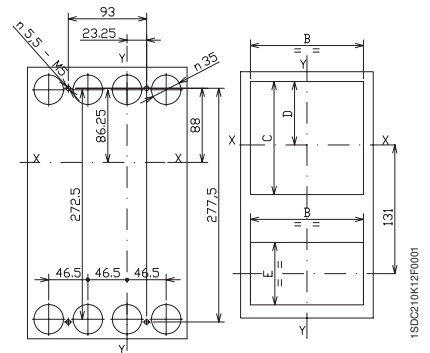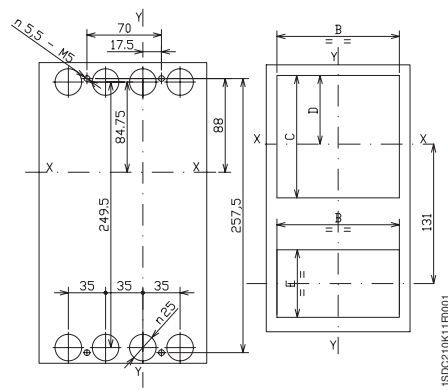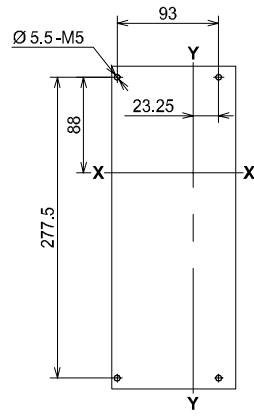

Overall dimensions

Circuit-breaker with RC222 residual current release





Tmax T4 - T5

Plug-in version

Front - F, fixing on sheet

T4

T5 (400 A)⁽¹⁾

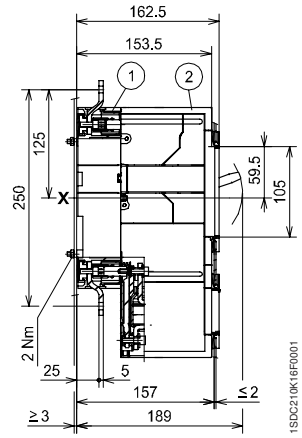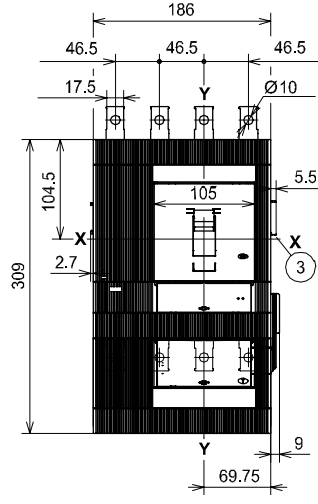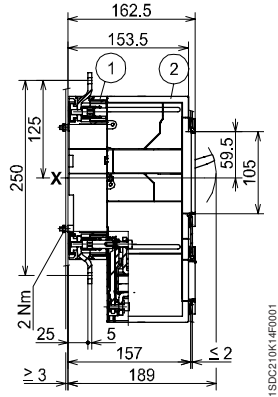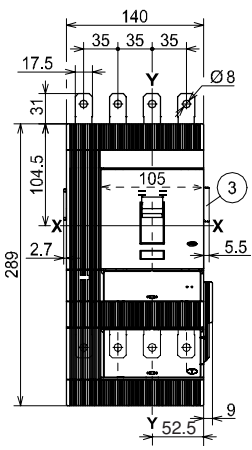





Caption

- ① Fixed part
- ② Mobile part
- ③ Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)



⁽¹⁾ For T5 (630 A) ask ABB SACE

Flange for the compartment door

Drilling templates of compartment door and fitting flange

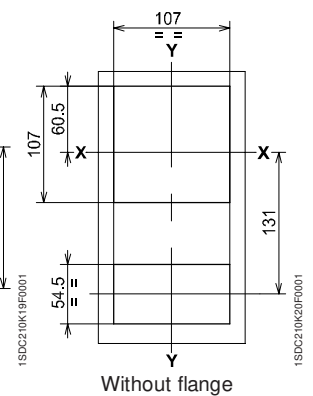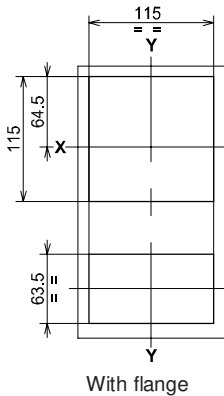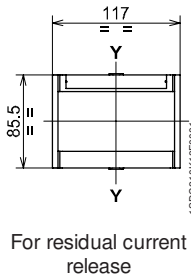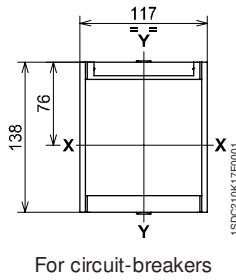

Drilling templates for support sheet

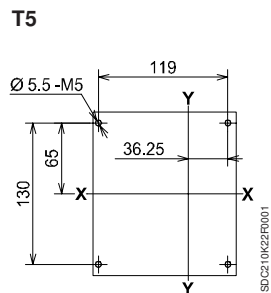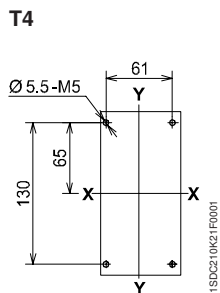


Overall dimensions

Accessories for Tmax T1 - T2 - T3



Fixed version

Solenoid operator superimposed

T1

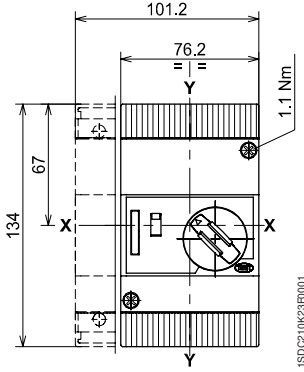



T2

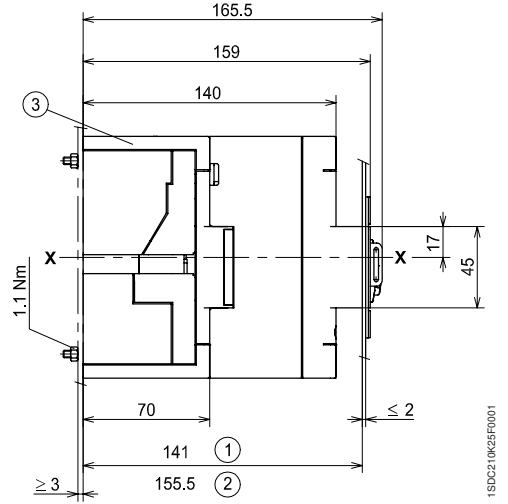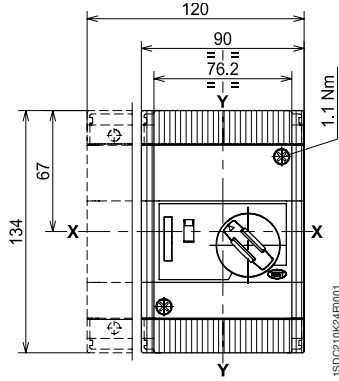


Caption

- ① Depth of the switchboard with operating mechanism face extending
- ② Depth of the switchboard with operating mechanism face flush with door
- ③ Low terminal covers with degree of protection IP40

T3

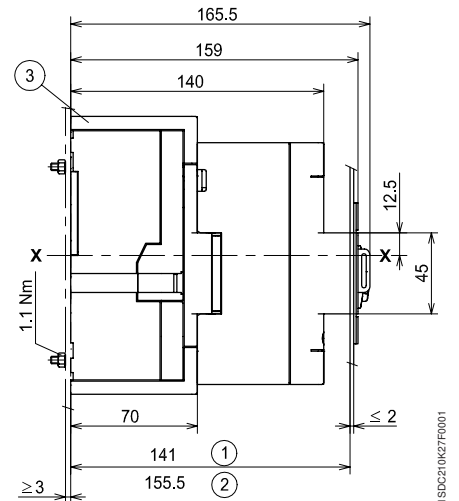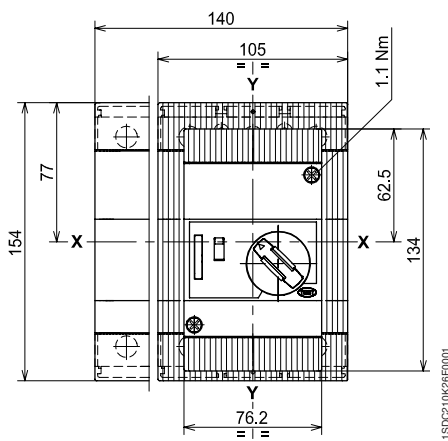


Flange for compartment door

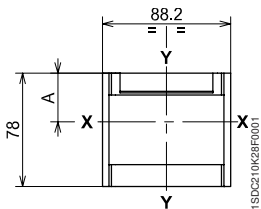


| | A | B | C |
|-----------|------|------|------|
| T1 | 33.5 | 18 | 23.5 |
| T2 | 33.5 | 18 | 23.5 |
| T3 | 29 | 13.5 | 19 |


Drilling templates of the compartment door

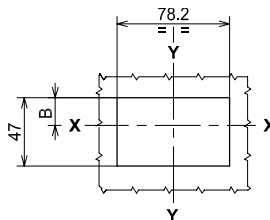

Without flange
Operating mechanism face
extending

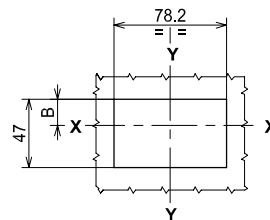

Without flange
Operating mechanism face
flush with door

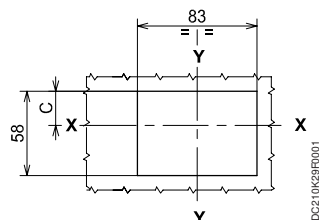

With flange
Operating mechanism face
flush with door

Overall dimensions

Accessories for Tmax T1 - T2 - T3



Fixed version

Solenoid operator side by side

Caption


- ① Circuit-breaker face extending
- ② Circuit-breaker face flush with door
- ③ Low terminal covers with degree of protection IP40

T1

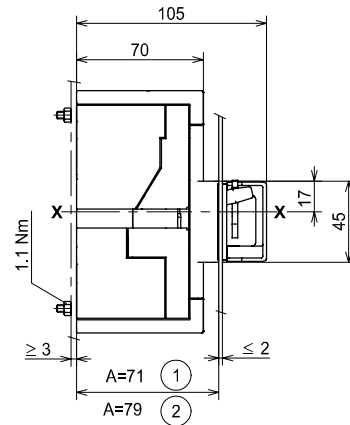
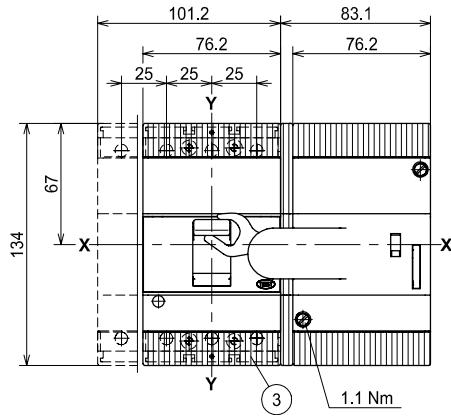


Drilling templates for fixing sheet

Drilling templates of the compartment door

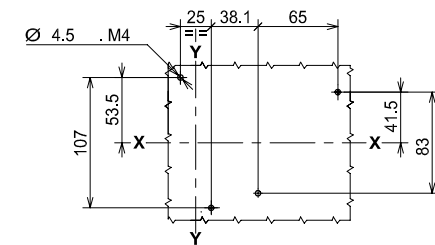

3 POLES

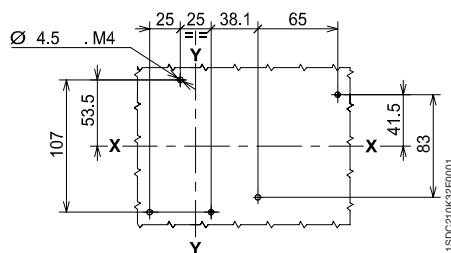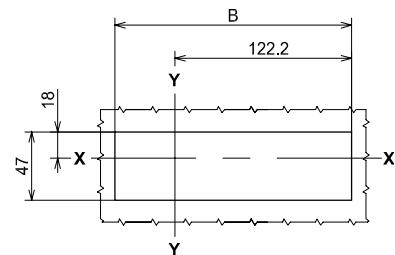

4 POLES


| | A | B |
|-----------|----|-------|
| 3P | 79 | 161.3 |
| | 71 | 161.3 |
| 4P | 79 | 161.3 |
| | 71 | 186.3 |

Caption


- ① Circuit-breaker face extending
- ② Circuit-breaker face flush with door
- ③ Low terminal covers with degree of protection IP40

Solenoid operator side by side


T2

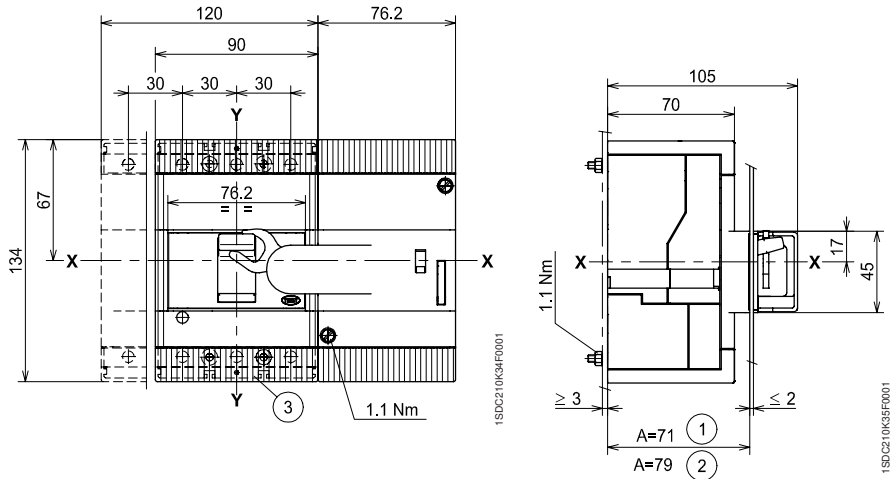

Drilling templates for fixing sheet

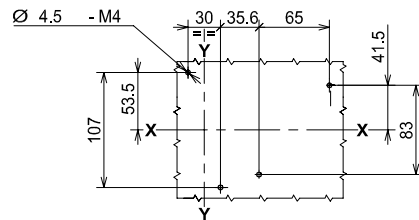


3 POLES

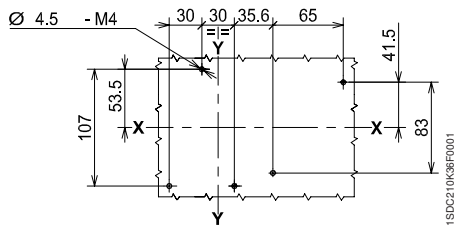

4 POLES

Drilling templates of the compartment door

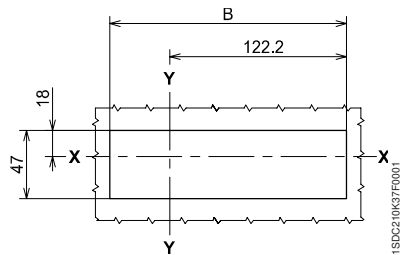


| | A | B |
|-----------|----|-------|
| 3P | 79 | 161.3 |
| | 71 | 161.3 |
| 4P | 79 | 161.3 |
| | 71 | 198.2 |


Overall dimensions

Accessories for Tmax T1 - T2 - T3

Fixed version

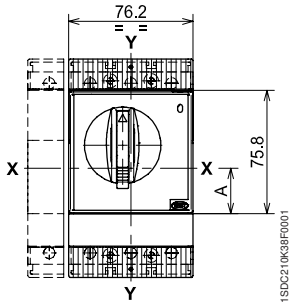


Rotary handle operating mechanism on the compartment door

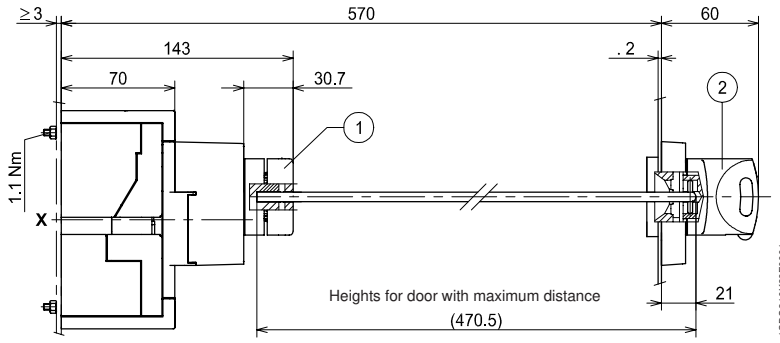


Caption

- ① Transmission unit
- ② Rotary handle operating mechanism on the compartment door

| | A | B |
|--------------|------|-----|
| T1-T2 | 28 | 14 |
| T3 | 32.5 | 9.5 |

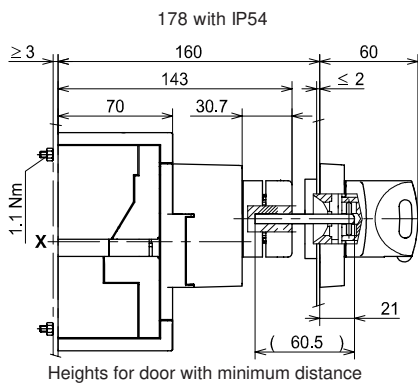

Drilling template of the compartment door

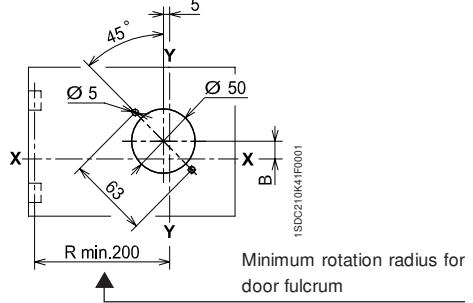


Rotary handle operating mechanism on circuit-breaker


Caption

- ① Rotary handle operating mechanism on circuit-breaker


| | A | B | C | D |
|--------------|------|------|------|------|
| T1-T2 | 67.7 | 28 | 53.2 | 60.5 |
| T3 | 63.2 | 32.5 | 48.7 | 56 |

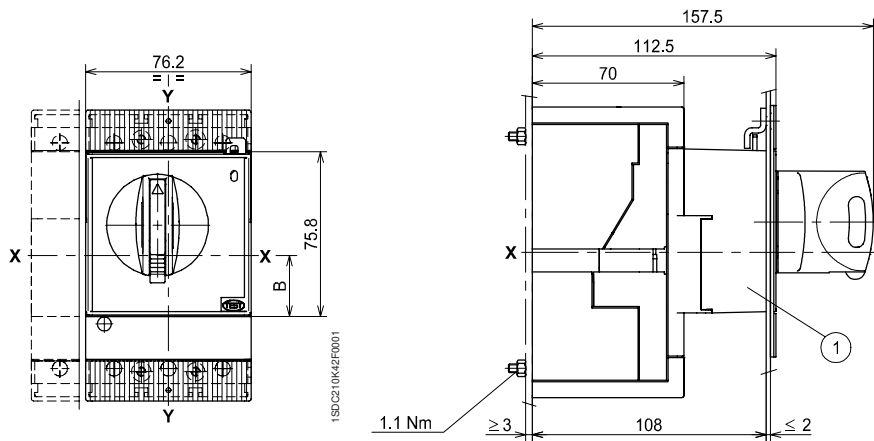

Drilling template of the compartment door

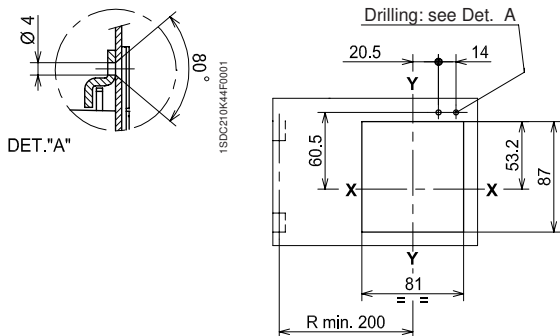


Flange for the compartment door

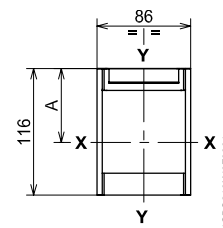


Mechanical interlock between circuit-breakers

Front interlocking plate between two circuit-breakers


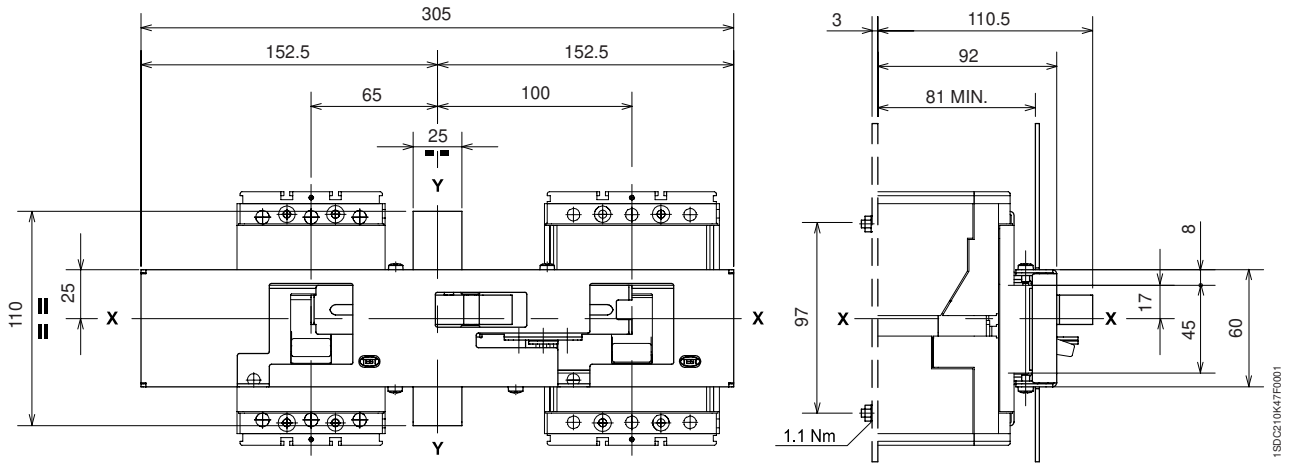


Caption

- ① Drilling templates of the compartment door
- ② Drilling templates for support sheet

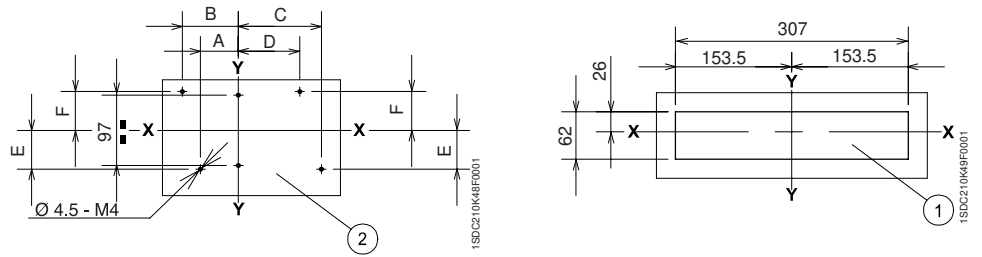

Front interlocking plate between three circuit-breakers

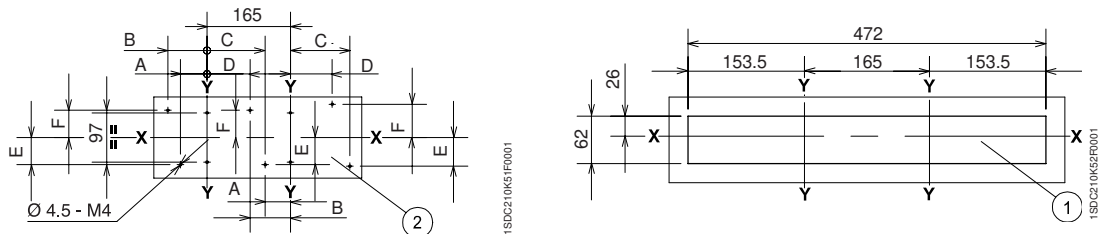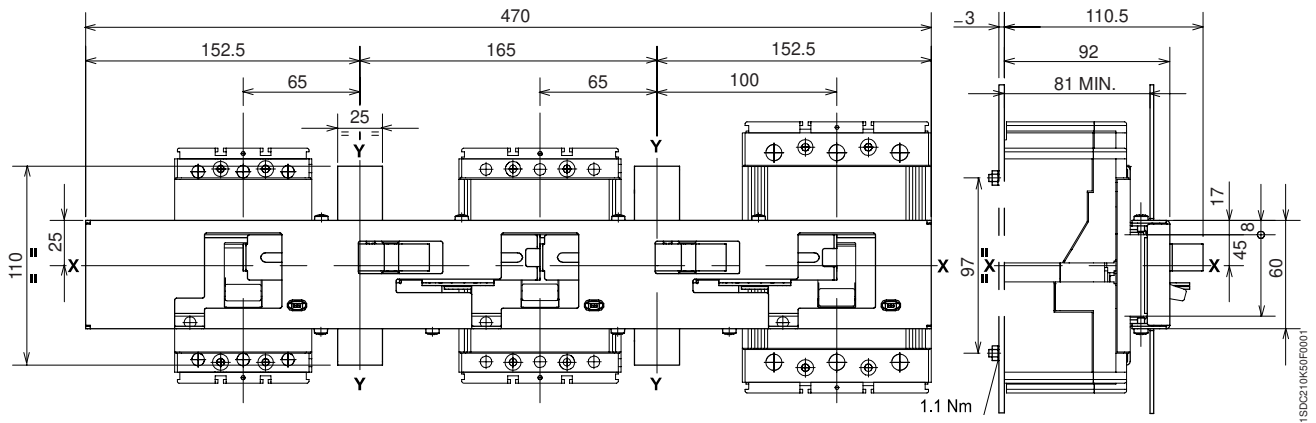

| | A | B | C | D | E | F |
|-----------|------|------|-------|------|------|------|
| T1 | 52.5 | 77.5 | 112.5 | 87.5 | 53.5 | 53.5 |
| T2 | 50 | 80 | 115 | 85 | 53.5 | 53.5 |
| T3 | 47.5 | 82.5 | 117.5 | 82.5 | 56.5 | 65.5 |


Overall dimensions

Accessories for Tmax T1 - T2 - T3

Caption

- ① Interlocking mechanism
- ② Circuit-breakers coupling plate
- ③ Drilling template for all terminal versions


Mechanical rear horizontal interlock between two T3 circuit-breakers

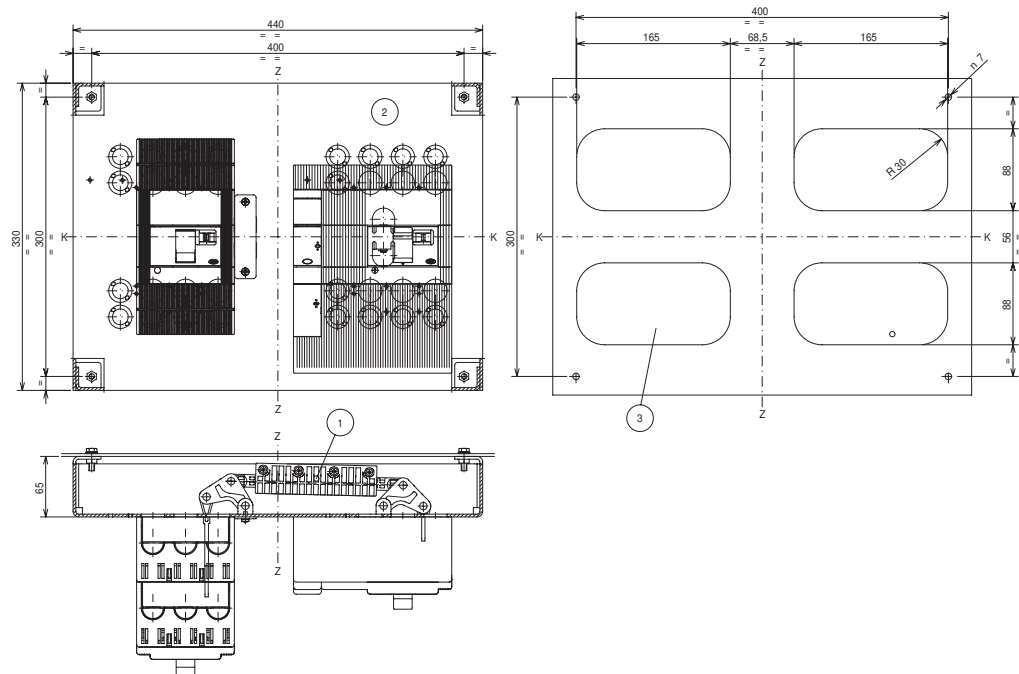

Caption

- ① Interlocking mechanism
- ② Circuit-breakers coupling plate
- ③ Drilling template for all terminal versions

Mechanical rear vertical interlock between two T3 circuit-breakers

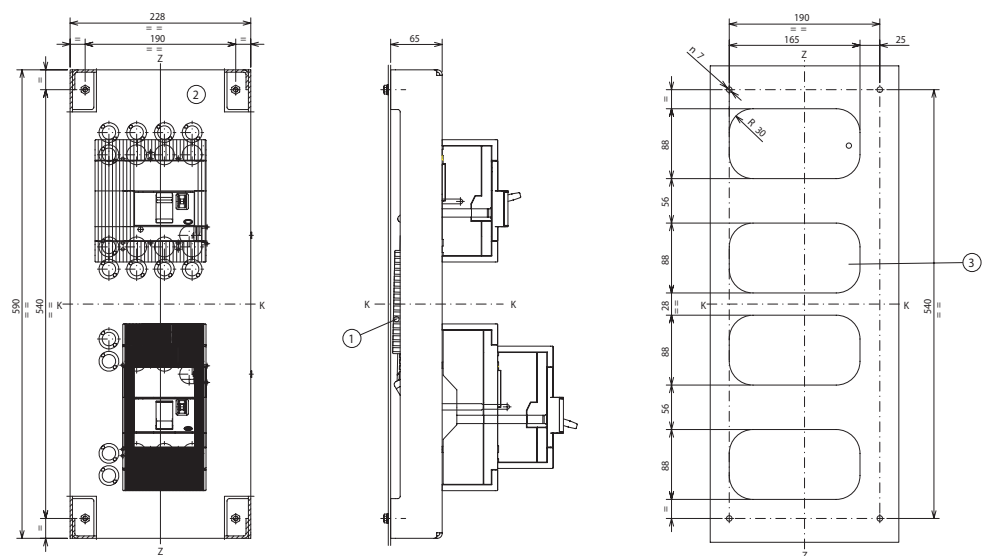

The mechanical rear vertical interlock for Tmax T3 is not compatible with the RC221 and RC222 residual current releases.

Overall dimensions


Accessories for Tmax T4 - T5

Fixed version



Rotary handle operating mechanism on the compartment door

Caption

- ① Transmission unit
- ② Rotary handle assembly with door lock device
- ③ Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ④ IP54 protection (supplied on request)
- ⑤ Min...max distance from the front of the door without accessory ④
- ⑥ Min...max distance from the front of the door with accessory ④
- ⑦ Dimension with AUE connector (early making contact)

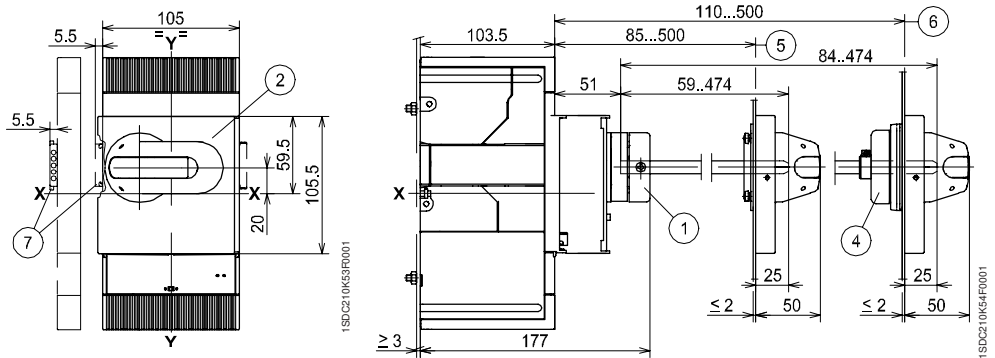


Drilling of compartment door

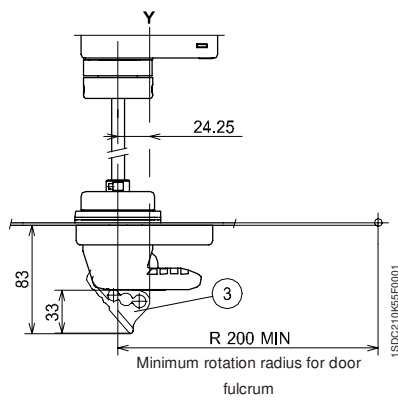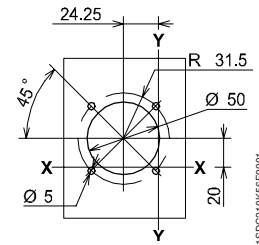


Caption

Rotary handle operating mechanism on circuit-breaker


- ① Rotary handle operating mechanism on circuit-breaker
- ② Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ③ Dimension with AUE connector (early making contact)
- ④ Compartment door lock

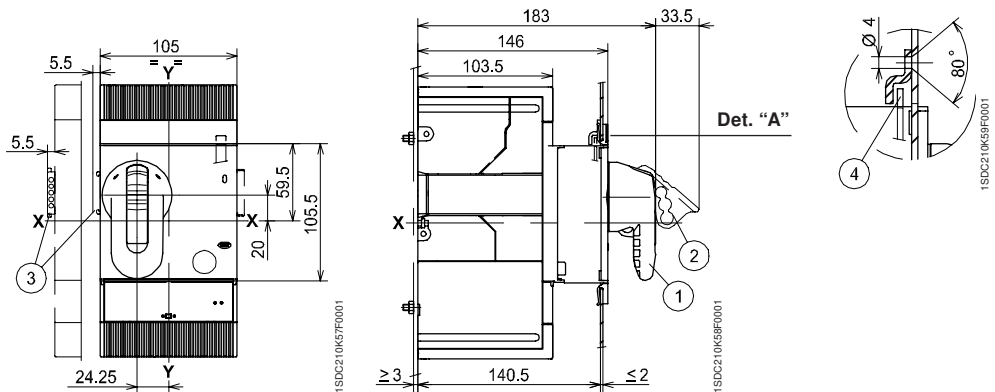

Drilling template of the compartment door

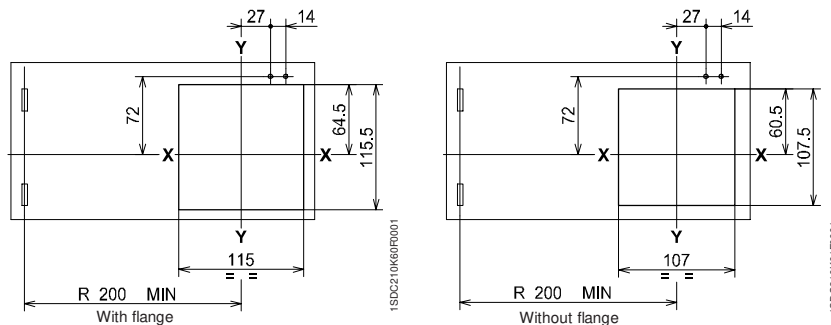

Flange for the compartment door

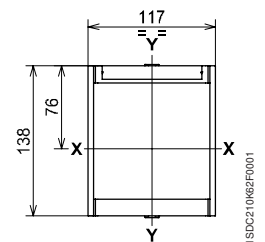

Overall dimensions


Accessories for Tmax T4 - T5

Caption



- ① Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

Motor operator


T4

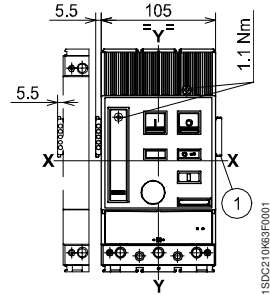


T5

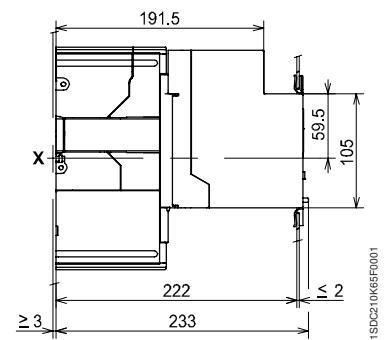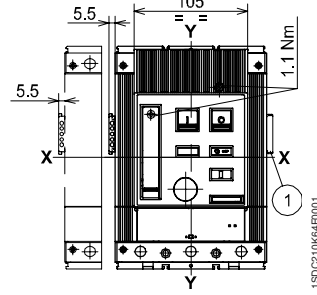


Flange for the compartment door (supplied as standard)

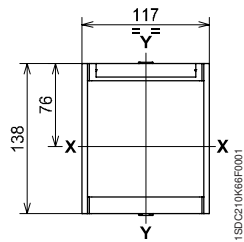

Drilling template of the compartment door

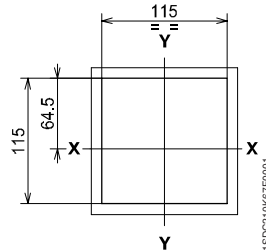


With flange

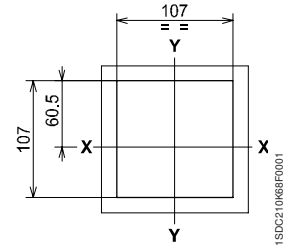


Without flange

Drilling template for support sheet

T4

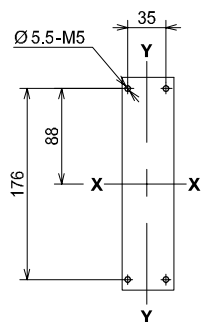


3 POLES

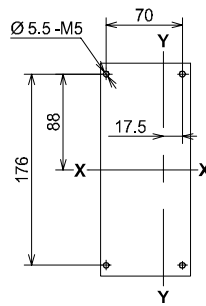


4 POLES

T5

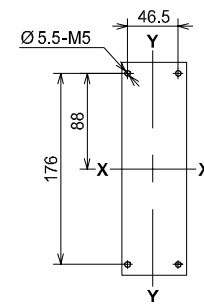

3 POLES

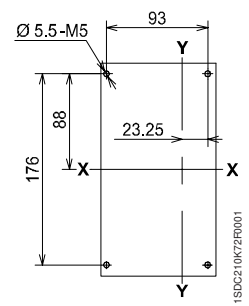

4 POLES


Fixed version

Front for lever operating mechanism



Caption

- ① Front for lever operating mechanism
- ② Lock for the compartment door (supplied on request)


T4

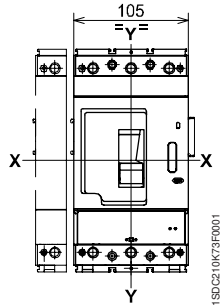



T5

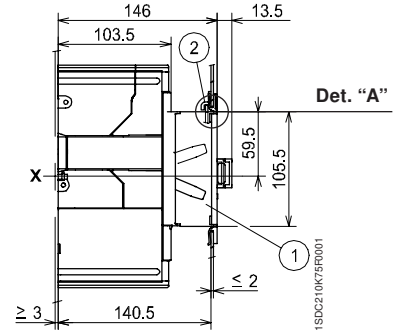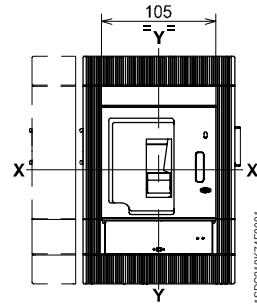


Flange for the compartment door (supplied as standard)

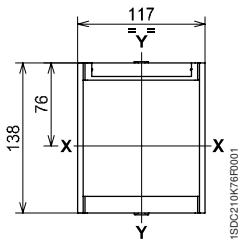

Drilling template for the compartment door

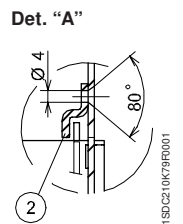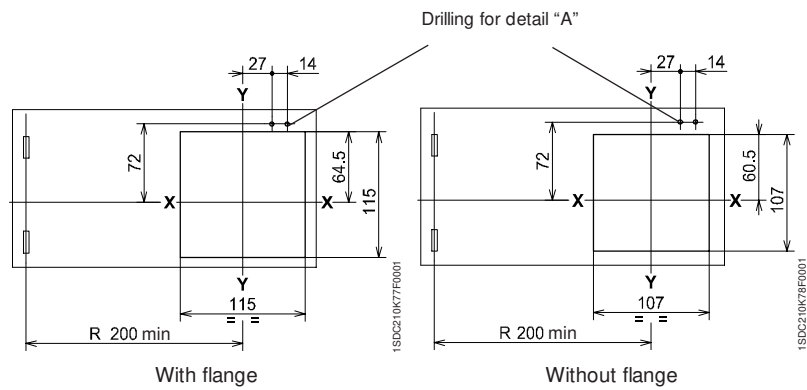

Drilling template for support sheet

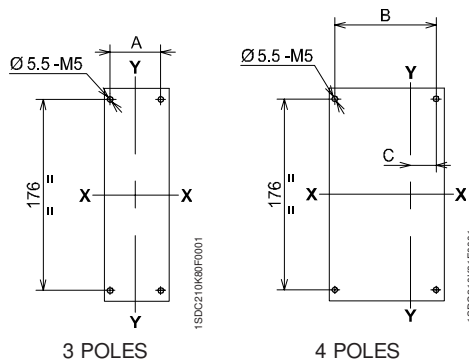

| | A | B | C |
|-----------|------|----|-------|
| T4 | 35 | 70 | 17.5 |
| T5 | 46.5 | 93 | 23.25 |


Overall dimensions

Accessories for Tmax T4 - T5

Caption

Interlock between two circuit-breakers placed side by side


- ① Interlocking mechanism
- ② Circuit-breaker coupling plate

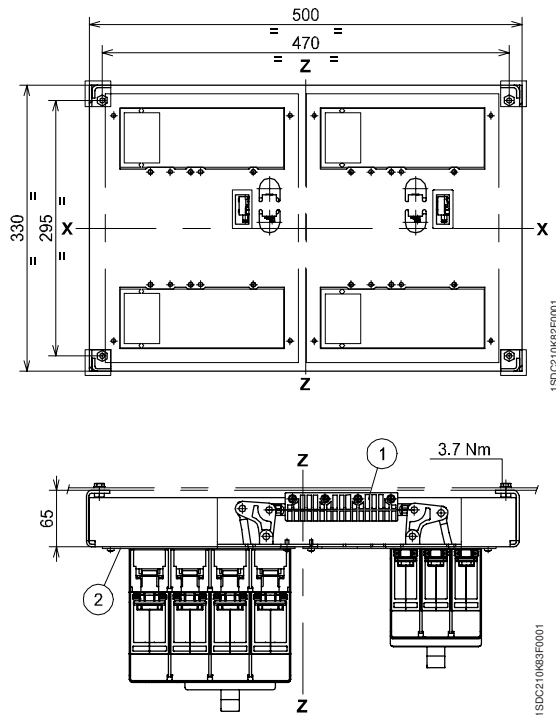

Caption


Drilling templates for fixing the circuit-breaker on the support sheet

- ① Drilling template for all versions with rear terminals

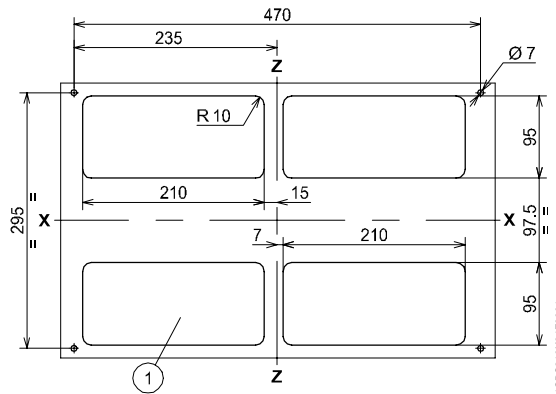

Fixed version

Interlock between two circuit-breakers placed side by side

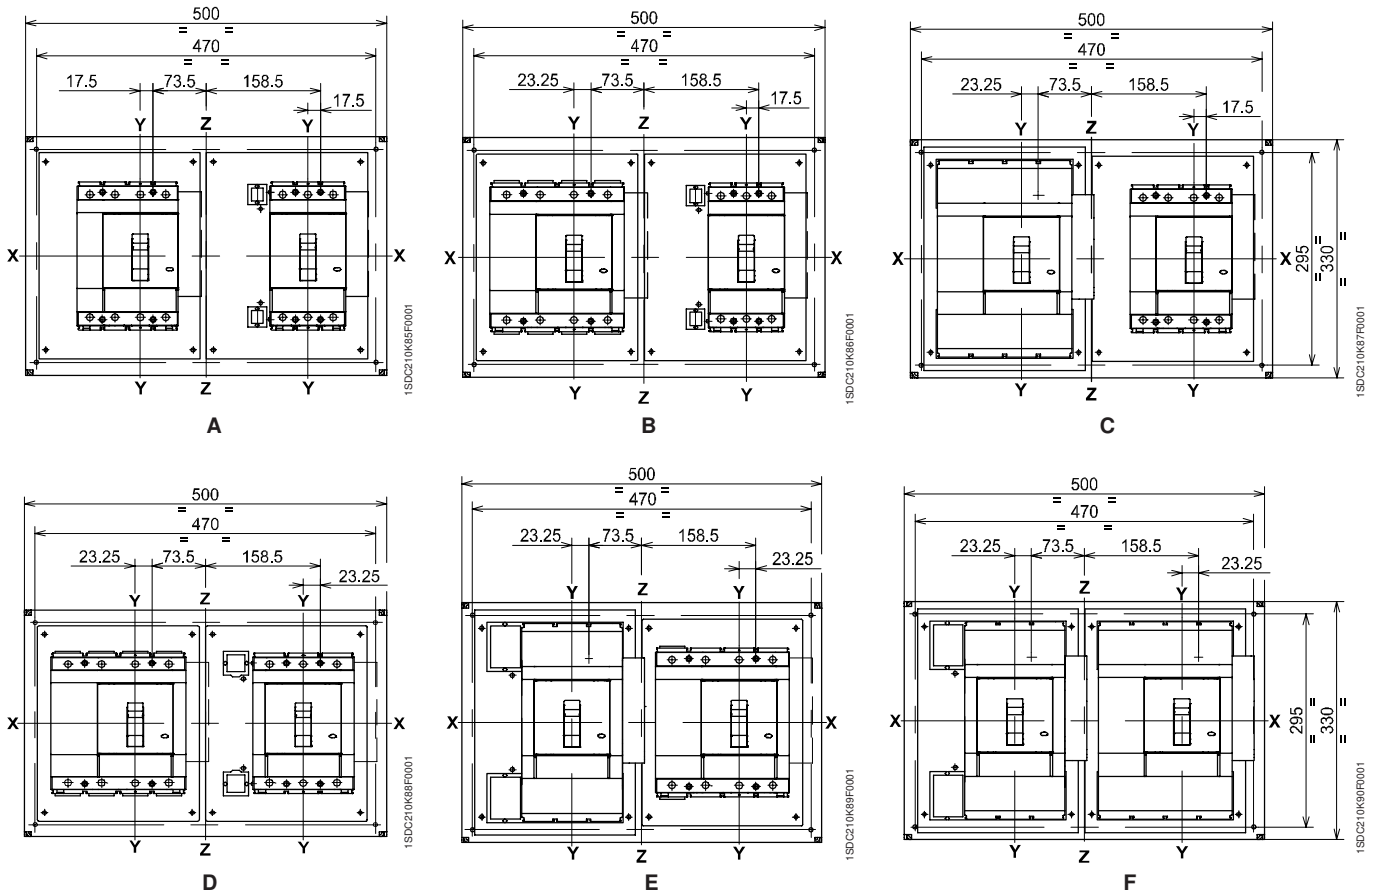

| Type | Circuit-breakers |
|----------|--|
| A | N° 1 T4 (F-P-W) N° 1 T4 (F-P-W) |
| B | N° 1 T4 (F-P-W) N° 1 T5 400 (F-P-W) or T5 630 (F) |
| C | N° 1 T4 (F-P-W) N° 1 T5 630 (P-W) |
| D | N° 1 T5 400 (F-P-W) or T5 630 (F) N° 1 T5 400 (F-P-W) or T5 630 (F) |
| E | N° 1 T5 400 (F-P-W) or T5 630 (F) N° 1 T5 630 (P-W) |
| F | N° 1 T5 630 (P-W) N° 1 T5 630 (P-W) |


Note:
 (F) Fixed circuit-breaker
 (P) Plug-in circuit-breaker
 (W) Withdrawable circuit-breaker

Overall dimensions


Accessories for Tmax T4 - T5

Withdrawable version


Motor operator

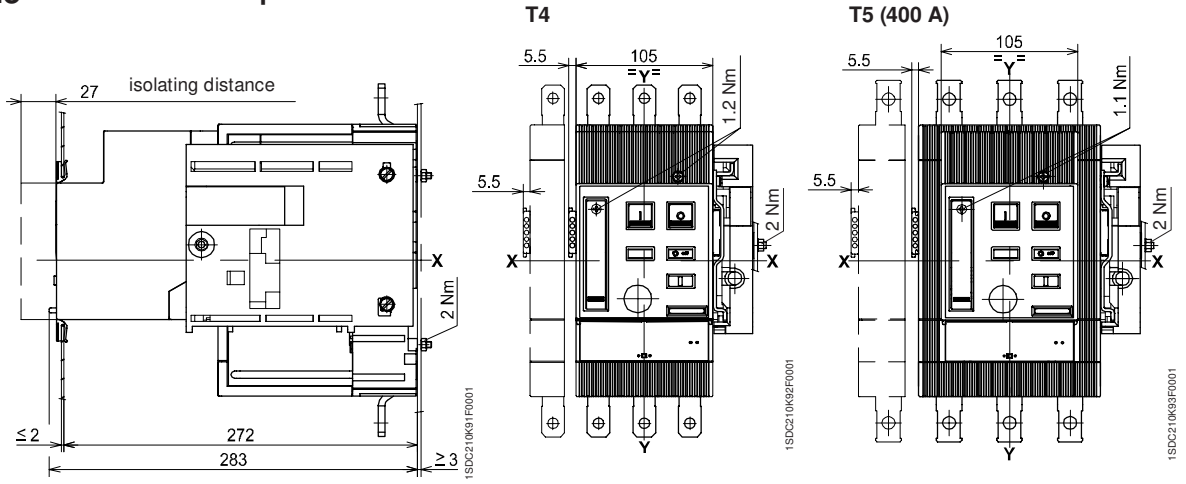


T5 (630 A)

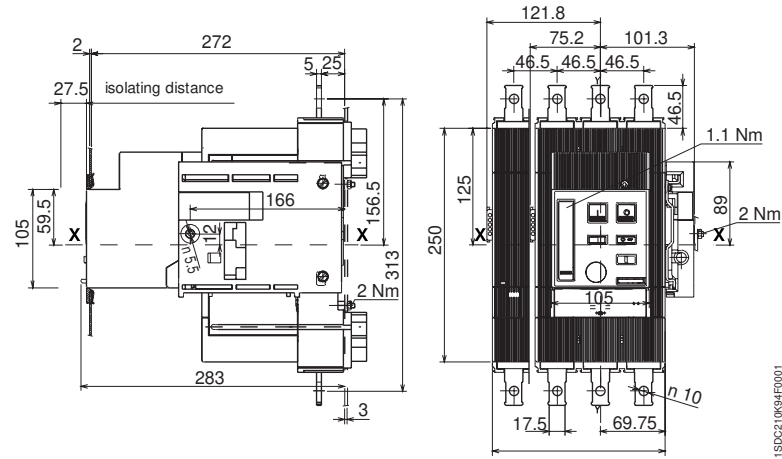

Flange for the compartment door (supplied as standard)

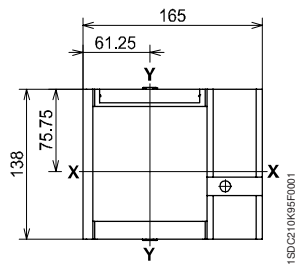

Drilling templates for the compartment door and fitting flange

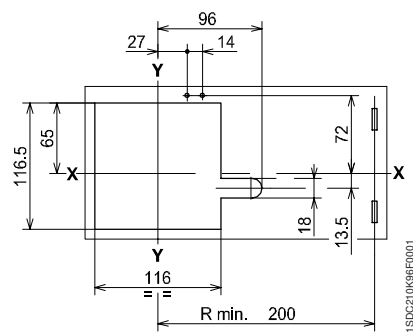


Withdrawable version


Caption

- ① Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ② Lock for compartment door
- ③ Dimension with AUE connector (early making contact)


Rotary handle operating mechanism on the circuit-breakers

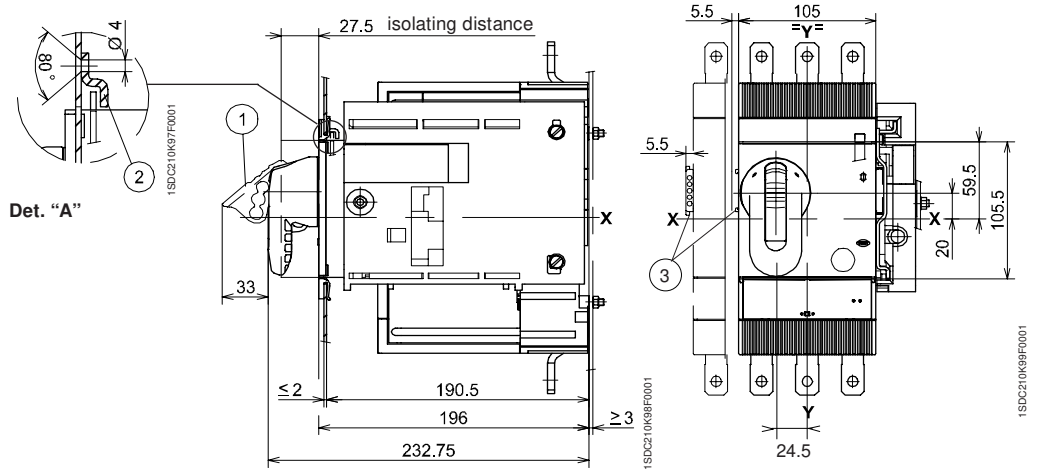

Flange for the compartment door

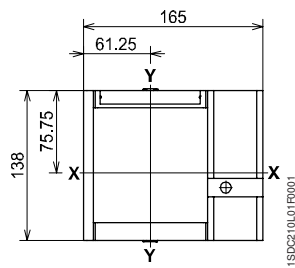

Drilling template for compartment door and fitting flange

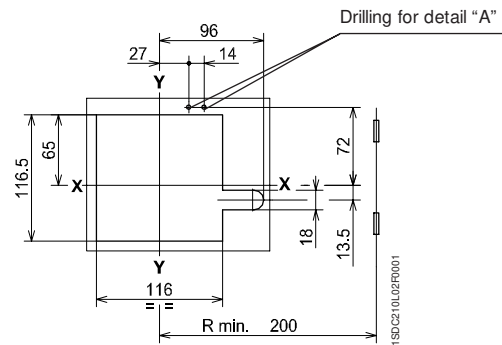

Overall dimensions



Accessories for Tmax T6

Fixed version


Caption

- ① Transmission unit
- ② Rotary handle assembly with door lock device
- ③ Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ④ IP54 protection (supplied on request)
- ⑤ Min...max distance from the front of the door without accessory ④
- ⑥ Min...max distance from the front of the door with accessory ④
- ⑦ Dimension with AUE connector (early making contact)

Rotary handle operating mechanism on the compartment door

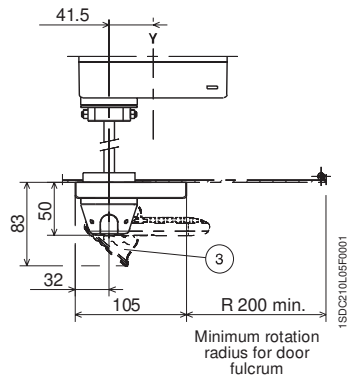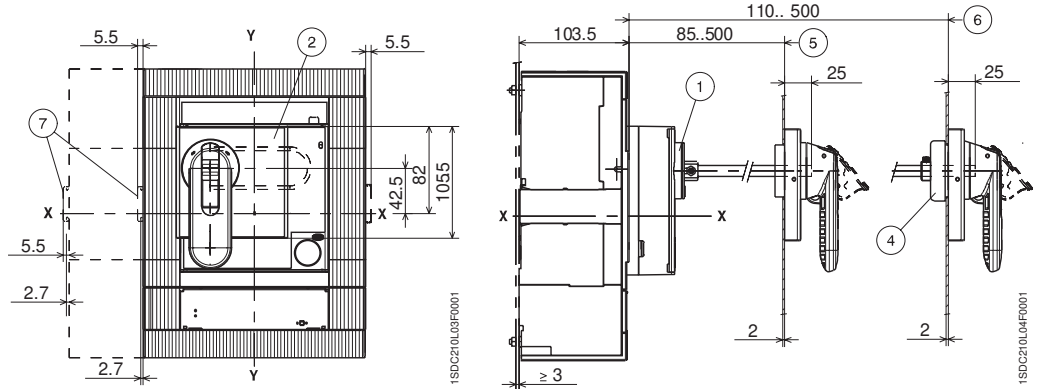


Drilling of compartment door

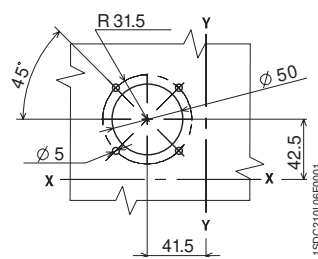


Caption

- ① Rotary handle operating mechanism on circuit-breaker
- ② Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ③ Dimension with AUE connector (early making contact)
- ④ Compartment door lock


Rotary handle operating mechanism on circuit-breaker

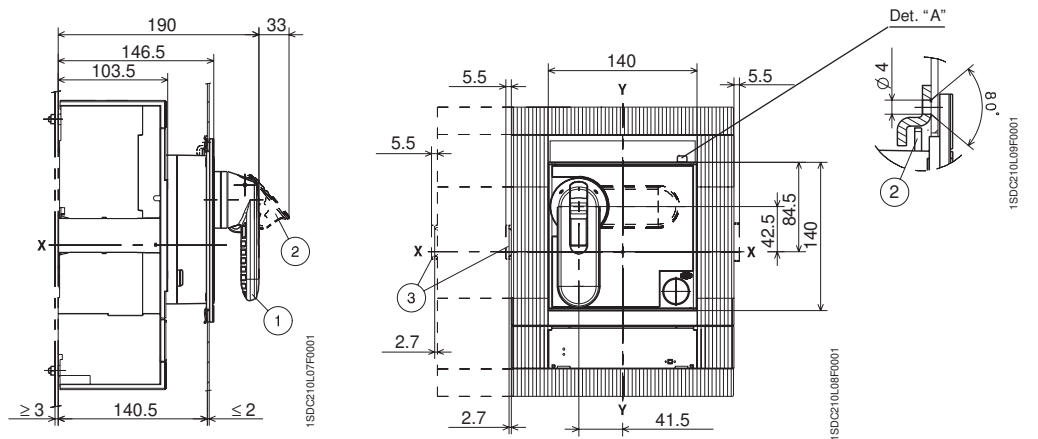

Drilling template of the compartment door

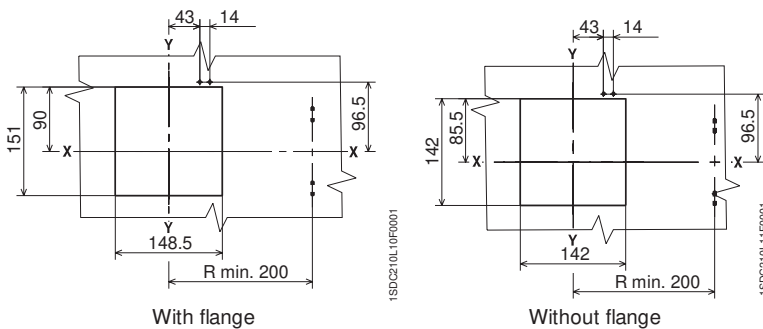

Flange for the compartment door

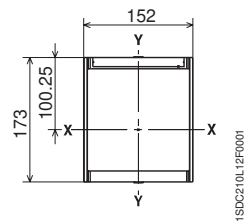


Fixed version


Motor operator

Caption



- ① Overall dimensions with cabled auxiliary contacts mounted (only 3Q 1SY)

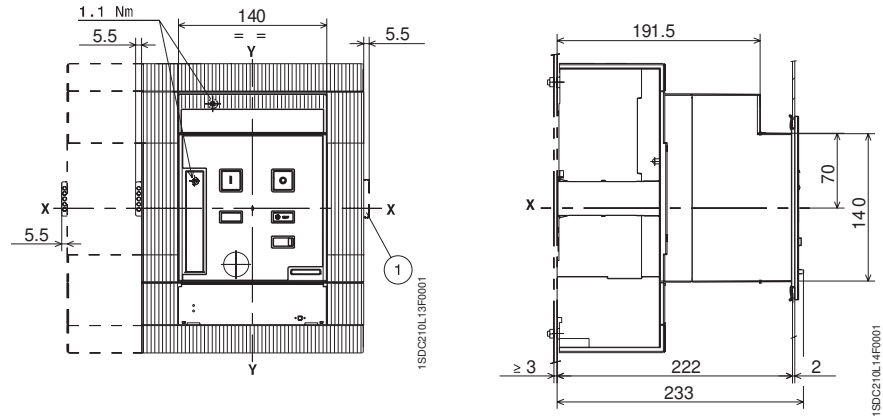



Flange for the compartment door (supplied as standard)

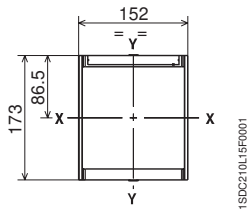

Drilling template of the compartment door

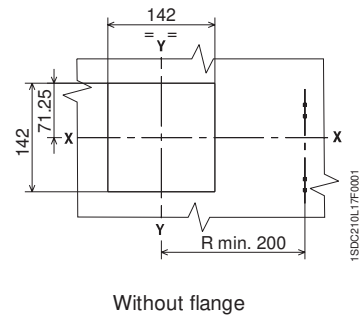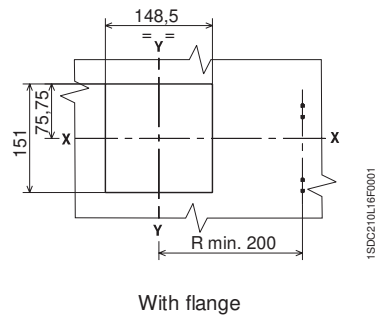

Drilling template for support sheet

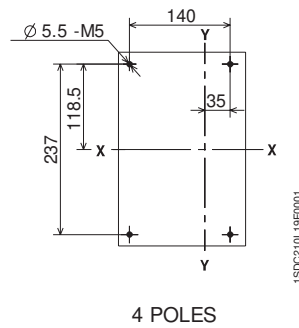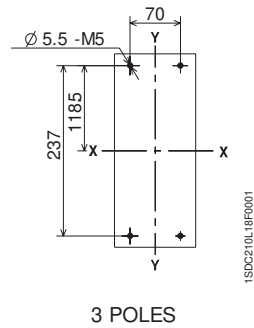


Overall dimensions

Accessories for Tmax T6


Caption

- ① Front for lever operating mechanism
- ② Lock for the compartment door


Front for lever operating mechanism

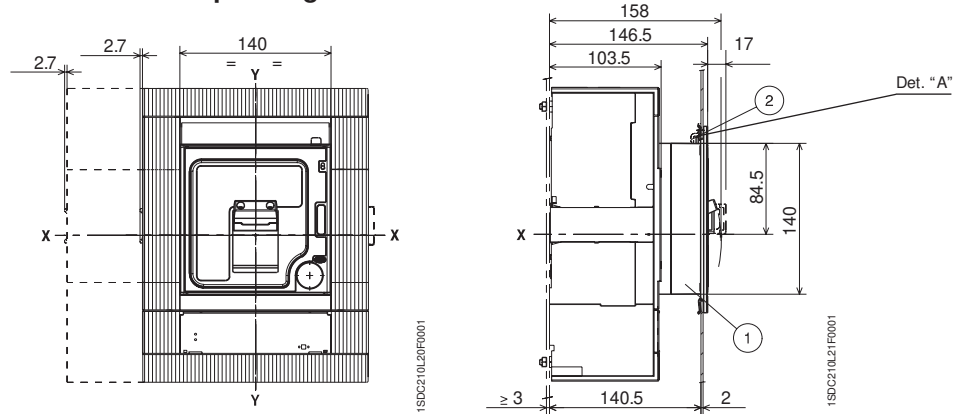


Flange for the compartment door (supplied as standard)

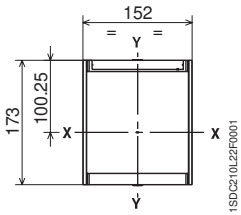

Drilling template for the compartment door


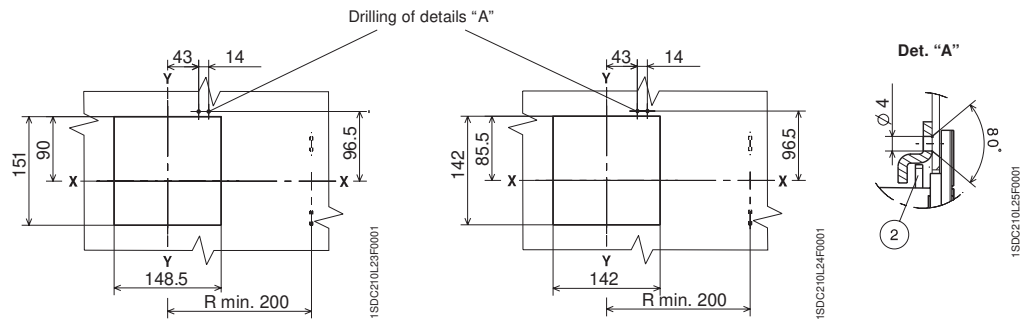


Drilling template for support sheet

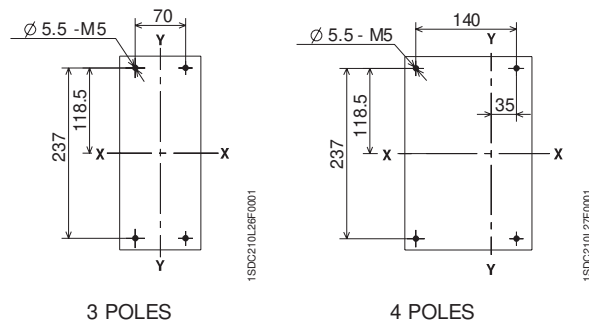


Withdrawable version


Motor operator

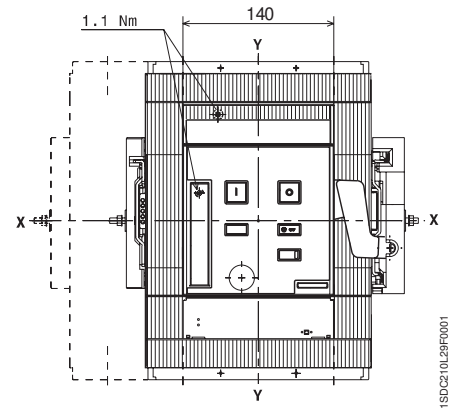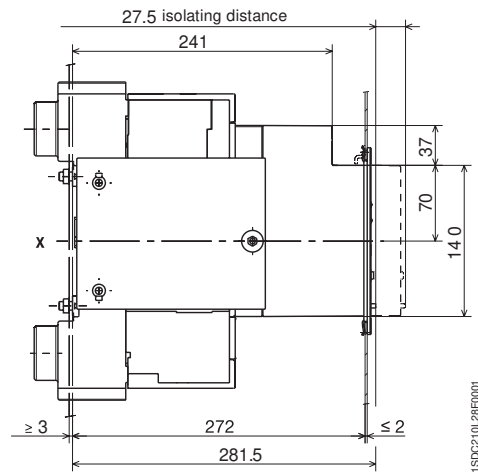

Flange for the compartment door (supplied as standard)

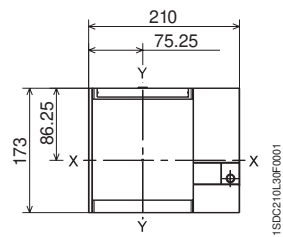

Drilling templates for the compartment door and fitting flange

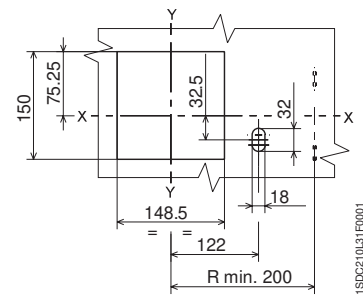


Overall dimensions

Accessories for Tmax T6


Caption

- ① Padlock device for open position (maximum 3 padlocks to be provided by the user)
- ② Lock for compartment door
- ③ Dimension with AUE connector (early making contact)


Rotary handle operating mechanism on the circuit-breakers

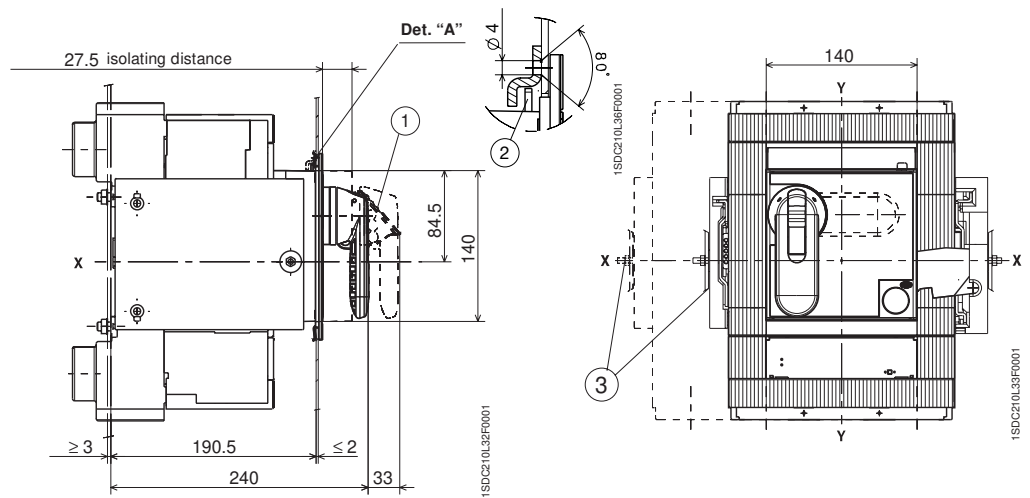

Flange for the compartment door

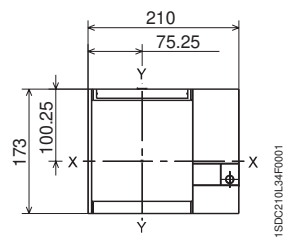

Drilling template for compartment door and fitting flange

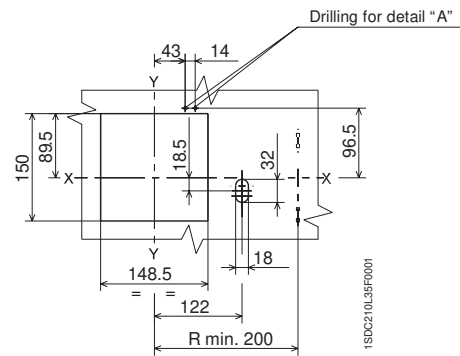


Overall dimensions

Accessories for Tmax T7

Fixed circuit-breaker Rotary handle operating mechanism on the circuit-breaker



Caption

- ① Rotary handle operating mechanism for circuit-breaker
- ② Compartment door interlock
- ③ Flange for the compartment door
- ④ Flange fixing screws
- ⑥ Support sheet drilling template
- ⑦ Key lock (optional)
- ⑧ Tightening torque: 2 Nm
- ⑨ Compartment door with flange sheet drilling
- ⑩ Compartment door sheet drilling for front 206 x 204
- ⑪ Terminal for auxiliary contacts
- ⑫ Reduced flange of the rotary handle for the compartment door (optional)
- ⑬ Compartment door sheet drilling for rotary handle
- ⑭ Compartment door sheet drilling without the rotary handle flange

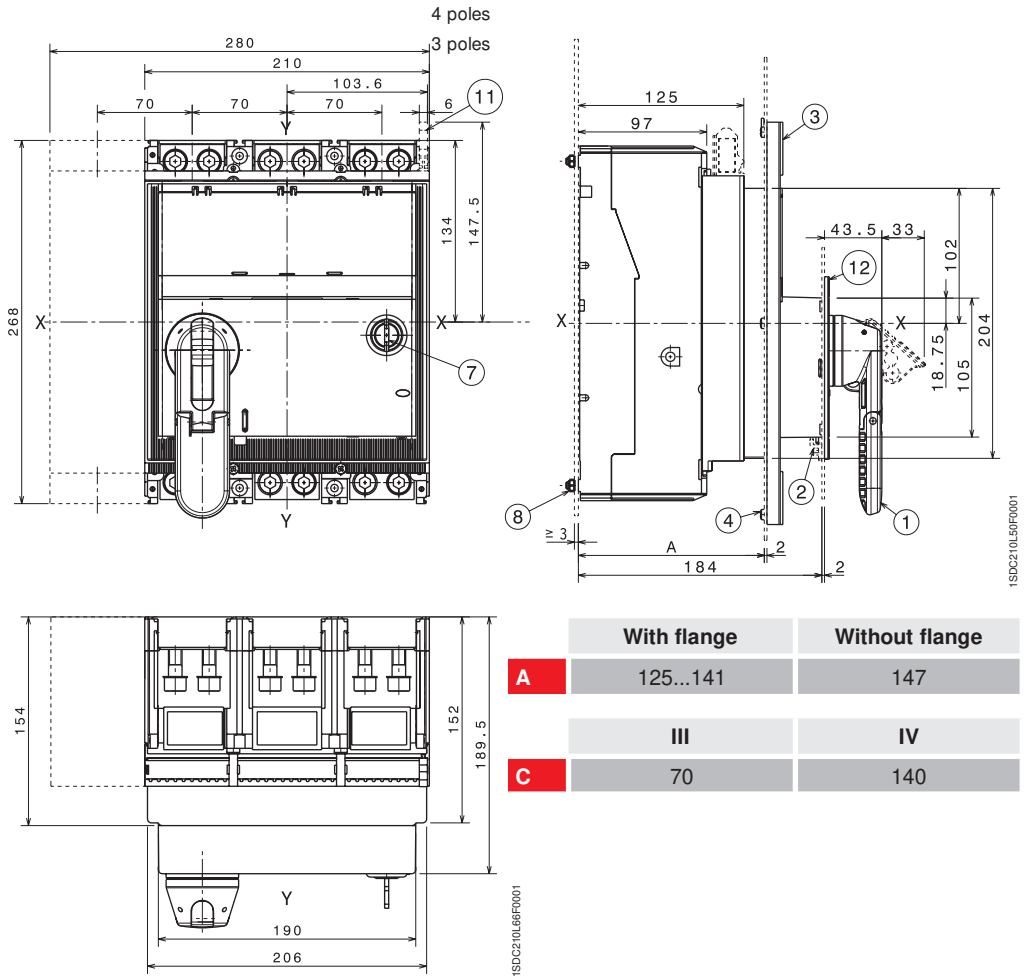


Flange for the compartment door (supplied as standard)

Drilling templates for support sheet

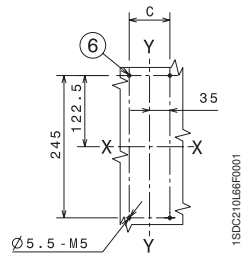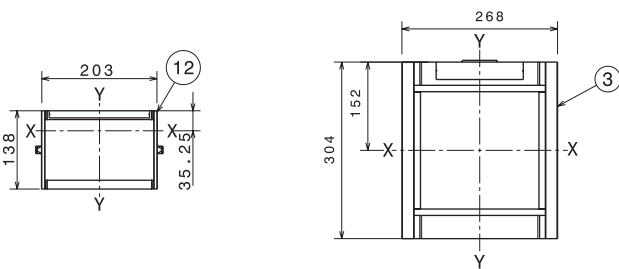

Drilling templates of the compartment door


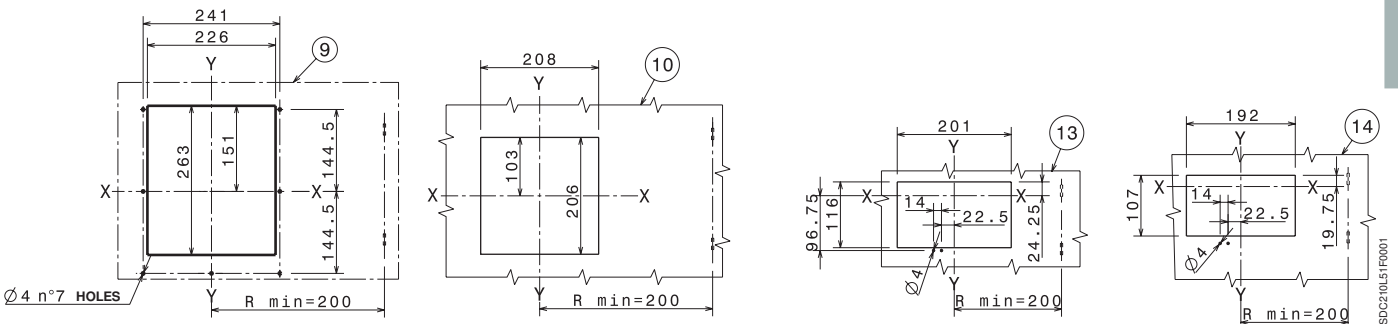


Overall dimensions


Accessories for Tmax T7

Withdrawable circuit-breaker



Rotary handle operating mechanism on the compartment door

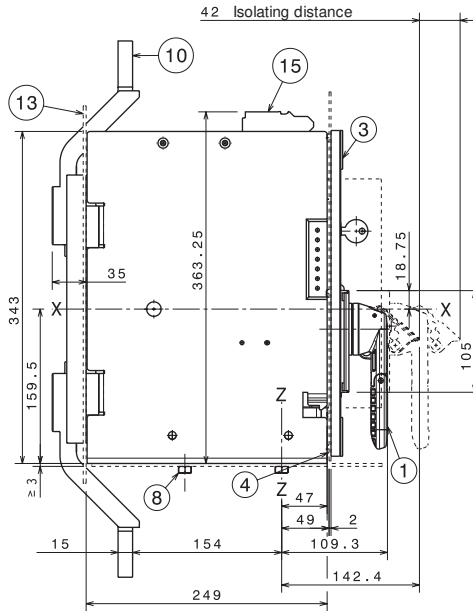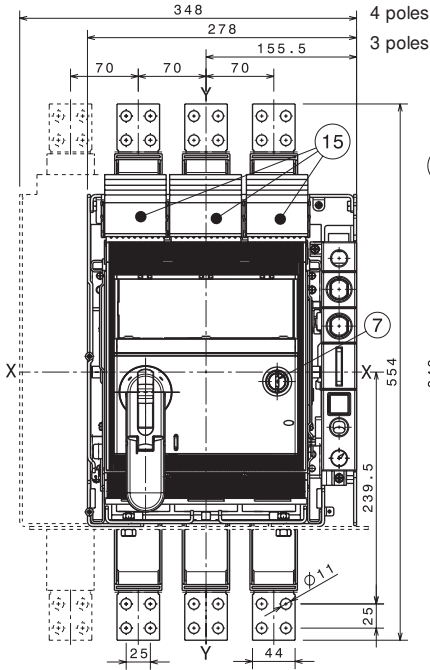


Horizontal rear terminal

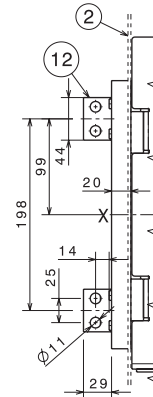

Vertical rear terminal

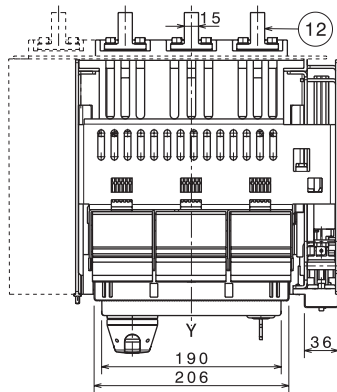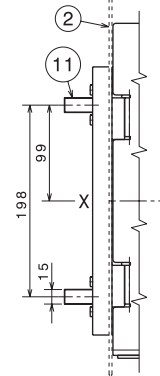


Drilling templates of the compartment door

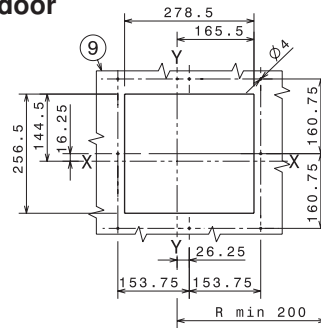




Legenda

- ① Rotary handle operating mechanism on circuit-breakers
- ② Rear segregation for rear terminals
- ④ Flange fixing screws
- ⑥ Drilling template for fixing onto support sheet
- ⑦ Key lock (optional)
- ⑧ Tightening torque: 8 Nm
- ⑨ Compartment door with flange sheet drilling
- ⑩ Front terminals
- ⑪ Rear horizontal terminals
- ⑫ Rear vertical terminals
- ⑬ Rear segregation for front terminals
- ⑭ Flange for the compartment door
- ⑮ Auxiliary contact terminal

| | III | IV |
|---|-----|-----|
| A | 160 | 230 |
| B | 206 | 276 |
| C | 219 | 289 |

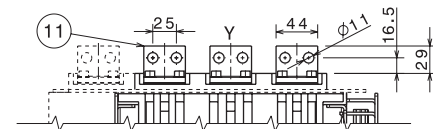


Drilling templates for support sheet

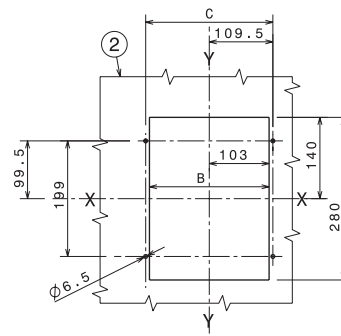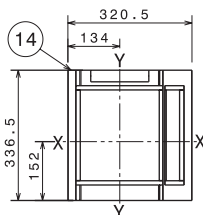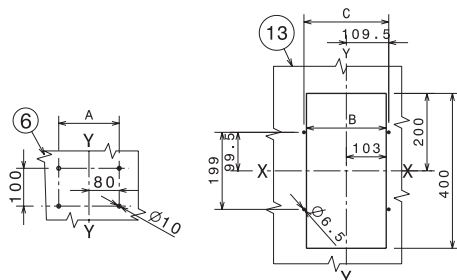

Caption

Mechanical interlock for fixed circuit-breakers

- ③ Mechanical vertical interlock for fixed circuit-breakers
- ④ Mechanical horizontal interlock for fixed circuit-breakers
- ⑤ Sheet drilling for wire passage of the mechanical interlock

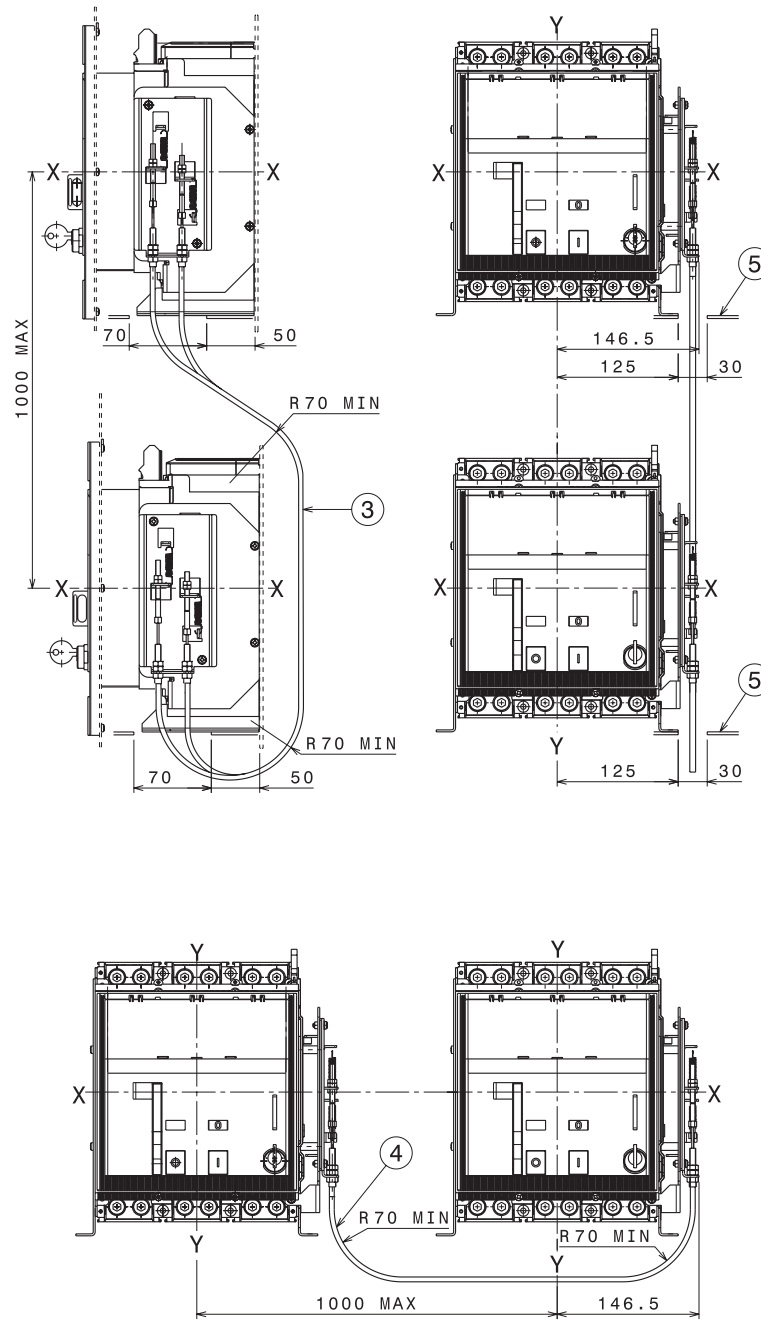


Overall dimensions

Accessories for Tmax T7

Legenda

- ① Mechanical vertical interlock for withdrawable circuit-breakers
- ② Mechanical horizontal interlock for withdrawable circuit-breakers
- ⑤ Sheet drilling for wire passage of the mechanical interlock

Mechanical interlock for withdrawable circuit-breakers

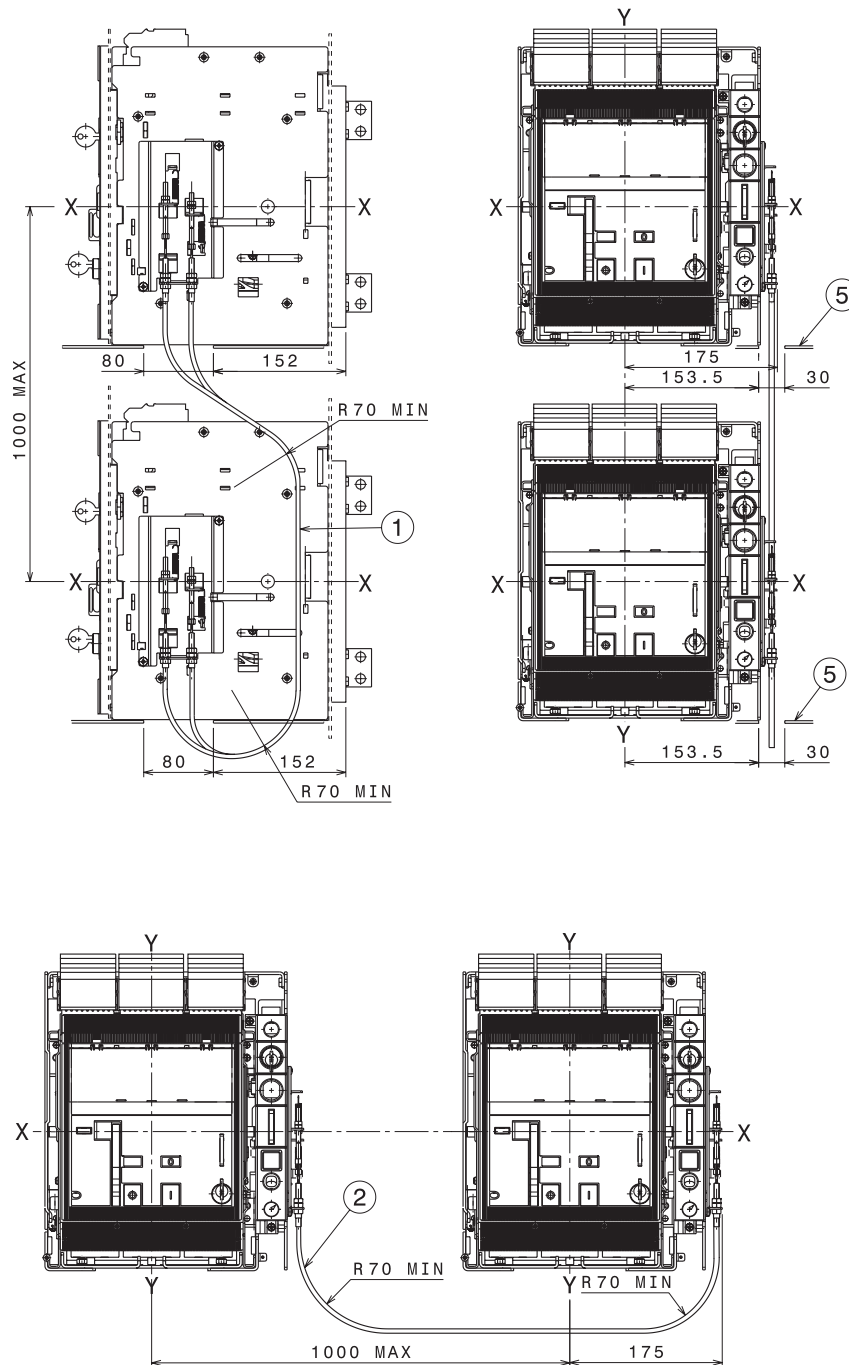

Overall dimensions


Distances to be respected

Insulation distances for installation in metallic cubicle

| | A (mm) | B (mm) | C (mm) |
|----|-------------------|-----------|-------------------|
| T1 | 25 | 20 | 20 |
| T2 | 25 | 20 | 20 |
| T3 | 50 | 25 | 20 |
| T4 | 30 ⁽¹⁾ | 25 | 25 ⁽¹⁾ |
| T5 | 30 ⁽¹⁾ | 25 | 25 ⁽¹⁾ |
| T6 | 35 ⁽¹⁾ | 25 | 20 |
| T7 | 50 ⁽¹⁾ | 20 | 10 |

⁽¹⁾ For $U_b \geq 440$ V and T6L all versions: distances A \Rightarrow 100 mm

Note: For the insulation distances of the 1000 V circuit-breakers, please ask ABB SACE.

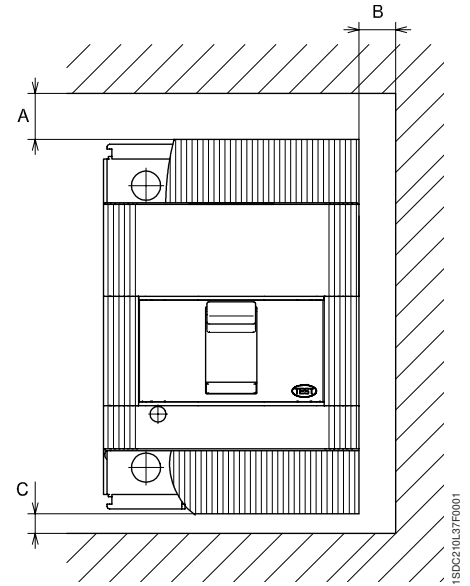


Minimum centre distance between two circuit-breakers side by side or superimposed

For assembly side by side or superimposed, check that the connection busbars or cables do not reduce the air insulation distance

Minimum centre distance for two circuit-breakers side by side

| | Circuit-breaker width (mm) | | Centre distance I (mm) | |
|----|----------------------------|---------|------------------------|---------|
| | 3 poles | 4 poles | 3 poles | 4 poles |
| T1 | 76 | 102 | 76 | 102 |
| T2 | 90 | 120 | 90 | 120 |
| T3 | 105 | 140 | 105 | 140 |
| T4 | 105 | 140 | 105 | 140 |
| T5 | 140 | 184 | 140 | 184 |
| T6 | 210 | 280 | 210 | 280 |
| T7 | 210 | 280 | 210 | 280 |

⁽¹⁾ For $U_b \geq 500$ V minimum centre I (mm) 3 poles 180, minimum centre I (mm) 4 poles 224

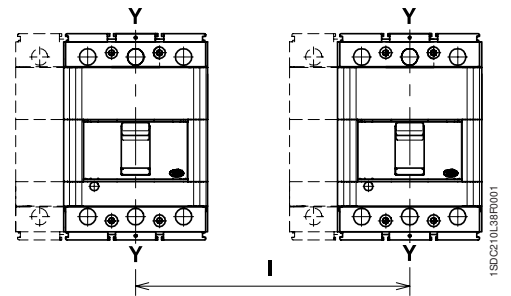


Minimum centre distance for superimposed circuit-breakers

| | H (mm) |
|----|--------|
| T1 | 60 |
| T2 | 90 |
| T3 | 140 |
| T4 | 160 |
| T5 | 160 |
| T6 | 180 |
| T7 | 180 |

Caption

- ① Connection - not insulated
- ② Insulated cable
- ③ Cable terminal

Note: The dimensions shown apply for operating voltage U_b up to 690 V. The dimensions to be respected must be added to the maximum dimensions of the various different versions of the circuit-breakers, including the terminals. For 1000 V versions, please ask ABB SACE.

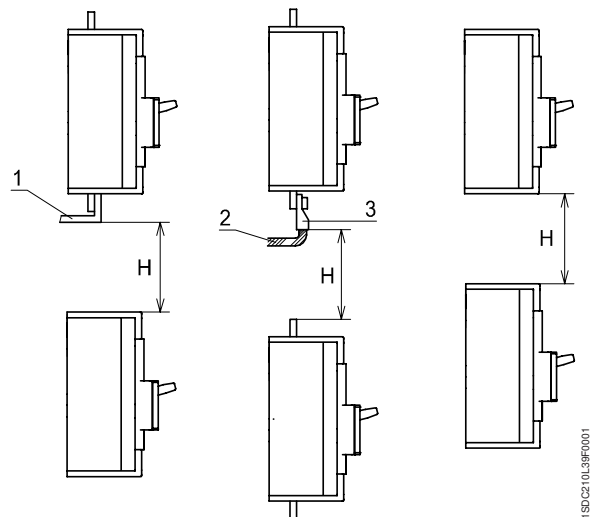















Index


| | |
|--|------|
| General information | 7/2 |
| Instructions for ordering | 7/3 |
| Power distribution circuit-breakers..... | 7/7 |
| Circuit-breakers for zone selectivity..... | 7/22 |
| Motor protection circuit-breakers..... | 7/23 |
| Circuit-breakers for use up to 1150 V AC and 1000 V DC | 7/25 |
| Switch-disconnectors..... | 7/30 |
| Breaking units..... | 7/33 |
| Trip units..... | 7/35 |
| Fixed parts, conversion kit and accessories for fixed parts..... | 7/38 |
| Accessories..... | 7/42 |


Ordering codes

General information

Abbreviations used to describe the apparatus

| | | | | | |
|---|--|---|---|---|---|
|  | F = Front terminals |  | EF = Front extended terminals |  | ES = Front extended spread terminals |
|  | FC Cu = Front terminals for copper cables |  | FC CuAl = Front terminals for Cu/Al cables |  | FC CuAl = Front terminals for Cu/Al cables (housed externally) |
|  | RC CuAl = Rear terminals for Cu/Al cables |  | R = Rear terminals |  | MC = Multi-cable terminals |
|  | HR for RC221/222 = Rear flat horizontal terminals |  | HR = Rear flat horizontal terminals |  | VR = Rear flat vertical terminals |
| HR/VR = Rear flat terminals | | | | | |

 **I₃** = Magnetic trip current [A]

 **I_n** = Rated current of the thermomagnetic trip unit [A]

I_u = Rated uninterrupted current of the circuit-breaker [A]

I_{cu} = Rated ultimate short-circuit breaking capacity [A]

I_{cw} = Rated short-time withstand current for 1s

N = 50%
N = 100% = Protection of the neutral at 50% or at 100% of that of the phases [A]

TMF = Thermomagnetic trip unit with fixed thermal and magnetic threshold

TMD = Thermomagnetic trip unit with adjustable thermal and fixed magnetic threshold

TMA = Thermomagnetic trip unit with adjustable thermal and magnetic threshold

TMG = Thermomagnetic trip unit for generator protection

MF = Fixed magnetic only trip units

MA = Adjustable magnetic only trip units

PR22_ = Electronic trip units

PR23_ = Electronic trip units

PR33_ = Electronic trip units

Ordering codes

Instructions for ordering

Ordering Tmax circuit-breakers fitted with the accessories indicated in the catalogue means that these must be indicated by means of the relative sales codes expressly associated with the circuit-breaker code. The following examples are of particular importance for correctly loading orders for Tmax circuit-breakers fitted with accessories.

1) Terminal Kit for fixed circuit-breaker

To fit the circuit-breaker with different terminal accessories than those supplied on the basic circuit-breaker, it is possible to ask for complete kits (6 or 8 pieces) or half kits (3 or 4 pieces). For conversion of a complete circuit-breaker, it is necessary to specify the complete terminal kit. In the case of a mixed solution, the first code specified indicates the terminals to be mounted at the top, the second indicates the terminals to be mounted at the bottom. On the other hand, when only 3 or 4 pieces are requested, it is important to specify expressly whether the half kit is to be mounted at the top ^(*) rather than at the bottom ^(**).

a) Tmax T3N 250 with top FC Cu and bottom F terminals

| | 1SDA...R1 |
|------------------------------------|-----------|
| T3N 250 TMD 63 3p F F | 051241 |
| 1/2 KIT FC Cu T3 3p ^(*) | 051482 |

c) Tmax T3N 250 with top F and bottom FC Cu terminals

| | 1SDA...R1 |
|-------------------------------------|-----------|
| T3N 250 TMD 63 3p F F | 051241 |
| 1/2 KIT FC Cu T3 3p ^(**) | 051482 |

d) Tmax T3N 250 with FC Cu top and bottom terminals

| | 1SDA...R1 |
|-----------------------|-----------|
| T3N 250 TMD 63 3p F F | 051241 |
| 1 KIT FC Cu T3 3p | 051480 |

e) Tmax T3N 250 with top ES and FC Cu bottom terminals

| | 1SDA...R1 |
|-------------------------------------|-----------|
| T3N 250 TMD 63 3p F F | 051241 |
| 1/2 KIT ES T3 3p ^(*) | 051494 |
| 1/2 KIT FC Cu T3 3p ^(**) | 051482 |

2) T2-T3 electrical accessories on moving part of plug-in circuit-breaker

Fitting the moving parts of plug-in T2-T3 circuit-breakers with SOR, UVR and AUX and with SOR-C, UVR-C and AUX-C accessories always requires the appropriate plug-socket indicated in the catalogue.

a) Tmax T2N 160 moving part of plug-in circuit-breakers with auxiliary contacts

| | 1SDA...R1 |
|-------------------------------|-----------|
| T2N 160 F F PR221DS-LS 10 4p | 051128 |
| Kit P MP T2 4p | 051412 |
| AUX 1Q 1SY 250 V AC/DC | 051368 |
| socket-plug connectors 6 pole | 051363 |

b) Tmax T2N 160 moving part of plug-in circuit-breakers with auxiliary contacts and opening coil

| | 1SDA...R1 |
|-------------------------------------|-----------|
| T2N 160 F F PR221DS-LS 10 4p | 051128 |
| Kit P MP T2 4p | 051412 |
| AUX 3Q 1SY 250 V AC/DC | 051369 |
| SOR 220...240 V AC / 220...250 V DC | 051336 |
| socket-plug connectors 6 pole | 051363 |
| socket-plug connectors 3 pole | 051364 |

Ordering codes

Instructions for ordering

3) T4-T5 electrical accessories on moving part of plug-in circuit-breaker

Fitting the moving parts of plug-in T4-T5 circuit-breakers with SOR, UVR and AUX accessories always requires the appropriate plug-sockets, i.e. in the case of cabled electrical accessories SOR-C, UVR-C, AUX-C, MOE, MOE-E and AUE, the ADP adapters indicated in the catalogue.

a) Tmax T4H 250 moving part of plug-in circuit-breakers with auxiliary contacts

| | 1SDA...R1 |
|--------------------------------|-----------|
| T4L 250 F F P221DS-LS/I 100 4p | 054081 |
| Kit P MP T4 4p | 054840 |
| AUX 3Q 1SY 250 V AC/DC | 051369 |
| socket-plug connectors 12 pole | 051362 |

b) Tmax T4H 250 moving part of plug-in circuit-breakers with cabled auxiliary contacts

| | 1SDA...R1 |
|--------------------------------|-----------|
| T4L 250 F F P221DS-LS/I 100 4p | 054081 |
| Kit P MP T4 4p | 054840 |
| AUX-C 3Q 1SY 250 V AC/DC | 054911 |
| ADP – 12 pin adapter | 054923 |

c) Tmax T5H 630 moving part of plug-in circuit-breaker with SOR-C, MOE and AUX-C

| | 1SDA...R1 |
|--------------------------------------|-----------|
| T4L 250 F F P221DS-LS/I 100 4p | 054081 |
| Kit P MP T4 4p | 054840 |
| SOR-C 220...240 V AC – 220...250V DC | 054873 |
| MOE T4-T5 220...250 V AC/DC | 054897 |
| ADP – 10 pin adapter | 054924 |
| AU-C 1Q 1SY 250 V AC/DC | 054910 |
| ADP – 6 pin adapter | 054922 |

4) T4-T5 electrical accessories on moving part of withdrawable circuit-breaker

Fitting the moving parts of T4-T5 withdrawable circuit-breakers can only take place using electrical accessories in the cabled version, i.e. SOR-C, UVR-C, AUX-C, MOE, MOE-E and AUE with ADP adapter.

a) Tmax T5V 630 moving part of withdrawable circuit-breaker with UVR-C and MOE

| | 1SDA...R1 |
|-------------------------------|-----------|
| T5V 630 F F TMA 500 4p N=100% | 054495 |
| Kit W MP T5 630 4p | 054850 |
| UVR-C 24...30 V AC/DC | 054887 |
| MOE T4-T5 24 V DC | 054894 |
| ADP – 10 pin adapter | 054924 |

b) Tmax T4S 250 moving part of withdrawable circuit-breaker SOR-C, RHE and AUE

| | 1SDA...R1 |
|---|-----------|
| T4S 250 PR221DS-LS/I 100 4p F F | 054033 |
| KIT W MP T4 4p | 054842 |
| RHE normal for withdrawable circuit-breaker | 054933 |
| AUE – 2 early contacts | 054925 |
| SOR-C 220...240 V AC / 220...250 V DC | 054873 |
| ADP – 10 pin adapter | 054924 |

5) Rear mechanical interlock T3

The rear MIR interlock for T3 allows all the accessories to be used. To be able to take the circuit-breakers and/or the fixed parts mounted directly on the interlocking plate, it is necessary to use code 1SDA050093R1 to be specified regarding the second circuit-breaker (or fixed part) to be interlocked.

Horizontal mechanical interlock made between two T3S 250

| | | 1SDA...R1 |
|------|--|-----------|
| POS1 | T3S 250 TMD 200 4p FF | 051305 |
| | MIR-H rear mechanical interlock for T3 | 063324 |
| POS2 | T3S 250 TMD 160 4p FF | 051304 |
| | Extra code for circuit-breaker/fixed part mounted on the interlock | 050093 |

6) T4-T5 mechanical interlock

The rear interlock for T4 and T5, consisting of the MIR-HB or MIR-VB frame unit and the MIR-P plates, allows use of all the front accessories compatible with the circuit-breakers used. To be able to receive the circuit-breakers mounted directly on the interlock plate, code 1SDA050093R1 must be specified regarding the second circuit-breaker (or fixed part) which is to be interlocked.

Horizontal mechanical interlock made between T4H 320 and T5L 630

| | | 1SDA...R1 |
|------|--|-----------|
| POS1 | T4H 320 PR221DS-LS/I 320 4p F F | 054137 |
| | MIR-HB horizontal interlock frame unit | 054946 |
| | MIR-P plates for type C interlock | 054950 |
| POS2 | T5L 630 PR221DS-LS/I 630 4p F F | 054424 |
| | Code for circuit-breakers mounted on the plate | 050093 |

7) PR222DS/PD T4-T5

The T4 and T5 circuit-breakers can be fitted with the PR222DS/PD electronic trip unit, with communication and integrated control functions, using the special extracodes indicated in the catalogue. The circuit-breakers fitted with the PR222DS/PD trip unit can only have the AUX-E electronic version of auxiliary contacts mounted, to communicate the state of the circuit-breaker to the PR222DS/PD, and the MOE-E dedicated stored energy operating mechanism, to remotely control circuit-breaker opening and closing.

a) T4V 250 with dialogue, auxiliary contacts and motor operator

| | 1SDA...R1 |
|------------------------------------|-----------|
| T4V 250 PR222DS/PD-LSIG 250 3p F F | 054104 |
| Extracode - Dialogue unit for LSIG | 055067 |
| AUX-E-C 1Q 1SY | 054916 |
| MOE-E T4-T5 380 V AC | 054903 |
| X3 for PR222DS/P/PD T4-T5 F | 055059 |

b) T4V 250 moving part of withdrawable circuit-breaker with dialogue, auxiliary contacts and motor operator

| | 1SDA...R1 |
|------------------------------------|-----------|
| T4V 250 PR222DS/PD-LSIG 250 3p F F | 054104 |
| Extracode - Dialogue unit for LSIG | 055067 |
| Kit W MP T4 | 054841 |
| AUX-E-C 1Q 1SY | 054916 |
| ADP - 6 pin adapter | 054922 |
| MOE-E T4-T5 380 V AC | 054903 |
| ADP - 10 pin adapter | 054924 |
| X3 for PR222DS/P/PD T4-T5 P/W | 055061 |

Ordering codes

Instructions for ordering

8) Rating plug for Tmax T7

Thanks to the extra codes for the Tmax T7 rating plug (see page 3/43), it is possible to ask for a Tmax T7 circuit-breaker with lower rated current than the standard versions.

T7S 400 with PR332/P LSI – lever operating mechanism

| | 1SDA...R1 |
|------------------------------------|-----------|
| T7S 800 PR332/P-LSIG In=800 3p F F | 061968 |
| Extra code for 400 A rating plug | 063153 |

9) Sliding contacts for Tmax T7 in version withdrawable

The electrical accessories of Tmax T7 in the withdrawable version must be fitted with suitable sliding contacts for the moving part and for the fixed part, as per table on page 3/4.

(a) T7S 1000 PR231/P with lever operating mechanism in withdrawable version, opening coil and auxiliary contacts

| | | 1SDA...R1 |
|------|--------------------------------------|-----------|
| POS1 | T7S 1000 PR231/P LSI In=1000A 3p F F | 062738 |
| | Kit MP T7-T7M W 3p | 062162 |
| | SOR 220...250 V AC/DC Opening coil | 062070 |
| | AUX 1Q + 1SY Auxiliary contacts | 062104 |
| | Right PM sliding block | 062166 |
| POS2 | Fixed part for withdrawable T7 | 062045 |
| | Right PF sliding block | 062169 |

(b) T7S 1250 PR332/P with lever operating mechanism in withdrawable version and undervoltage release

| | | 1SDA...R1 |
|------|--|-----------|
| POS1 | T7S 1250 PR332/P LSI In=1250A 3p F F | 062871 |
| | Kit MP T7-T7M W 3p | 062162 |
| | UVR 220...250 V AC/DC Undervoltage release | 062092 |
| | Right PM sliding block | 062166 |
| | Central PM sliding block | 062165 |
| POS2 | Fixed part for withdrawable T7 | 062045 |
| | Right PF sliding block | 062169 |
| | Central PF sliding block | 062168 |

10) Interchangeability of the PR231/P trip unit for Tmax T7

Interchangeable T7S 800 PR231/P, with lever operating mechanism

| T7S 800 PR231/P LSI In=800 A 4p F F | | 061973 |
|---|--|--------|
| Extra code for PR231/P interchangeability | | 063155 |

11) Motorisation for Tmax T7


For Tmax T7 motorisation, the circuit-breaker in T7M version which can be motorised, must be fitted with spring charging geared motor, opening coil and closing coil.

Motorised T7S 1000 PR232/P


| T7S 1000 M PR232/P LSI In=1000 A 4p F F | | 062763 |
|--|--|--------|
| 220...250 V AC/DC Spring charging geared motor | | 062116 |
| SOR 220...250 V AC/DC Opening coil | | 062070 |
| 220...250 V AC/DC Closing coil | | 062081 |

Ordering codes

Power distribution circuit-breakers

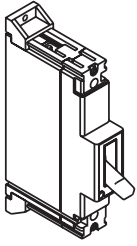

1SDC210N13F0001

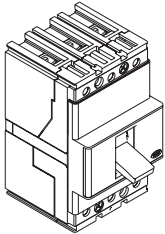

1SDC210N14F0001

T1 1p 160 – Fixed (F) – 1 Pole

I_u (40 °C) = 160 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_3 | 1SDA.....R1 | | |
|---|--|-------|-------|------------------|--|--|
| | | | | B | | |
| | | | | 25 kA | | |
| | | | | I_{cu} (230 V) | | |
| Thermomagnetic trip unit with fixed thresholds - TMF | | | | | | |
| | | 16 | 500 | 052616 | | |
| | | 20 | 500 | 052617 | | |
| | | 25 | 500 | 052618 | | |
| | | 32 | 500 | 052619 | | |
| | | 40 | 500 | 052620 | | |
| | | 50 | 500 | 052621 | | |
| | | 63 | 630 | 052622 | | |
| | | 80 | 800 | 052623 | | |
| | | 100 | 1000 | 052624 | | |
| | | 125 | 1250 | 052625 | | |
| | | 160 | 1600 | 052626 | | |

T1 160 – Fixed (F) – 3 Poles

I_u (40 °C) = 160 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_3 | 1SDA.....R1 | | |
|---------------------------------------|--|-------|-------|------------------|--------|--------|
| | | | | B | C | N |
| | | | | 16 kA | 25 kA | 36 kA |
| | | | | I_{cu} (415 V) | | |
| Thermomagnetic trip unit - TMD | | | | | | |
| | | 16 | 500 | 063514 | | |
| | | | 630 | 050870 | | |
| | | 20 | 500 | 063515 | | |
| | | | 630 | 050871 | | |
| | | 25 | 500 | 063516 | 063526 | |
| | | | 630 | 050872 | 050894 | |
| | | 32 | 500 | 063517 | 063527 | 050917 |
| | | | 630 | 050873 | 050895 | |
| | | 40 | 500 | 063518 | 063528 | 050918 |
| | | | 630 | 050874 | 050896 | |
| | | 50 | 500 | 063519 | 063529 | 050919 |
| | | | 630 | 050875 | 050897 | |
| | | 63 | 630 | 050876 | 050898 | 050920 |
| | | 80 | 800 | 050877 | 050899 | 050921 |
| | | 100 | 1000 | 050878 | 050900 | 050922 |
| | | 125 | 1250 | 050879 | 050901 | 050923 |
| | | 160 | 1600 | 050880 | 050902 | 050924 |


T1 160 – Fixed (F) – 4 Poles

I_u (40 °C) = 160 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_3 | 1SDA.....R1 | | |
|---------------------------------------|--|-------|-------|------------------|--------|--------|
| | | | | B | C | N |
| | | | | 16 kA | 25 kA | 36 kA |
| | | | | I_{cu} (415 V) | | |
| Thermomagnetic trip unit - TMD | | | | | | |
| | | 16 | 500 | 063520 | | |
| | | | 630 | 050881 | | |
| | | 20 | 500 | 063521 | | |
| | | | 630 | 050882 | | |
| | | 25 | 500 | 063522 | 063530 | |
| | | | 630 | 050883 | 050905 | |
| | | 32 | 500 | 063523 | 063531 | 050928 |
| | | | 630 | 050884 | 050906 | |
| | | 40 | 500 | 063524 | 062532 | 050929 |
| | | | 630 | 050885 | 050907 | |
| | | 50 | 500 | 063525 | 063533 | 050930 |
| | | | 630 | 050886 | 050908 | |
| | | 63 | 630 | 050887 | 050909 | 050931 |
| | | 80 | 800 | 050888 | 050910 | 050932 |
| | | 100 | 1000 | 050889 | 050911 | 050933 |
| | | 125 | 1250 | 050890 | 050912 | 050934 |
| N=50% | | 160 | 1600 | 050891 | 050913 | 050935 |
| N=100% | | 160 | 1600 | 050936 | 050937 | 050938 |

Ordering codes

Power distribution circuit-breakers

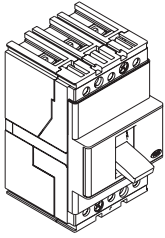

1SDC210N14FD001

T2 160 – Fixed (F) – 3 Poles

I_u (40 °C) = 160 A - Front terminals (F)

| | I_n | I_3 | I_{cu} (415 V) | 1SDA..... R1 | | | |
|---------------------------------------|-------|-------|------------------|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Thermomagnetic trip unit - TMD | | | | 36 kA | 50 kA | 70 kA | 85 kA |
| | 1.6 | 16 | | 050940 | 050984 | 051028 | 051072 |
| | 2 | 20 | | 050941 | 050985 | 051029 | 051073 |
| | 2.5 | 25 | | 050942 | 050986 | 051030 | 051074 |
| | 3.2 | 32 | | 050943 | 050987 | 051031 | 051075 |
| | 4 | 40 | | 050944 | 050988 | 051032 | 051076 |
| | 5 | 50 | | 050945 | 050989 | 051033 | 051077 |
| | 6.3 | 63 | | 050946 | 050990 | 051034 | 051078 |
| | 8 | 80 | | 050947 | 050991 | 051035 | 051079 |
| | 10 | 100 | | 050948 | 050992 | 051036 | 051080 |
| | 12.5 | 125 | | 050949 | 050993 | 051037 | 051081 |
| | 16 | 500 | | 050950 | 050994 | 051038 | 051082 |
| | 20 | 500 | | 050951 | 050995 | 051039 | 051083 |
| | 25 | 500 | | 050952 | 050996 | 051040 | 051084 |
| | 32 | 500 | | 050953 | 050997 | 051041 | 051085 |
| | 40 | 500 | | 050954 | 050998 | 051042 | 051086 |
| | 50 | 500 | | 050955 | 050999 | 051043 | 051087 |
| | 63 | 630 | | 050956 | 051000 | 051044 | 051088 |
| | 80 | 800 | | 050957 | 051001 | 051045 | 051089 |
| | 100 | 1000 | | 050958 | 051002 | 051046 | 051090 |
| | 125 | 1250 | | 050959 | 051003 | 051047 | 051091 |
| | 160 | 1600 | | 050960 | 051004 | 051048 | 051092 |

| | I_n | I_3 | I_{cu} (415 V) | 1SDA..... R1 | |
|--|-------|-------|------------------|--------------|--------|
| | | | | N | S |
| Thermomagnetic trip unit for generator protection - TMG⁽¹⁾ | | | | 36 kA | 50 kA |
| | 16 | 160 | | 061866 | 061882 |
| | 25 | 160 | | 061867 | 061883 |
| | 40 | 200 | | 061868 | 061884 |
| | 63 | 200 | | 061869 | 061885 |
| | 80 | 240 | | 061870 | 061886 |
| | 100 | 300 | | 061871 | 061887 |
| | 125 | 375 | | 061872 | 061888 |
| | 160 | 480 | | 061873 | 061889 |

| | I_n | I_{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-------|------------------|--------------|--------|--------|--------|
| | | | N | S | H | L |
| Electronic trip unit | | | 36 kA | 50 kA | 70 kA | 85 kA |
| PR221DS-LS/I | 10 | | 051123 | 051133 | 051143 | 051153 |
| PR221DS-LS/I | 25 | | 051124 | 051134 | 051144 | 051154 |
| PR221DS-LS/I | 63 | | 051125 | 051135 | 051145 | 051155 |
| PR221DS-LS/I | 100 | | 051126 | 051136 | 051146 | 051156 |
| PR221DS-LS/I | 160 | | 051127 | 051137 | 051147 | 051157 |
| PR221DS-I | 10 | | 051163 | 051174 | 051184 | 051194 |
| PR221DS-I | 25 | | 051164 | 051175 | 051185 | 051195 |
| PR221DS-I | 63 | | 051165 | 051176 | 051186 | 051196 |
| PR221DS-I | 100 | | 051166 | 051177 | 051187 | 051197 |
| PR221DS-I | 160 | | 051168 | 051178 | 051188 | 051198 |

Note:

The trip coil of the T2 circuit-breaker with PR221DS electronic trip unit is housed in the right slot.

For T2 with PR221DS the following groups of auxiliary contacts are available:

- 1SDA053704R1 Aux-C 1S51-1Q-1SY
- 1SDA055504R1 Aux-C 2Q-1SY

⁽¹⁾ For availability, please ask ABB SACE

T2 160 – Fixed (F) – 4 Poles

I_n (40 °C) = 160 A - Front terminals (F)

| | | I_n | I_3 | 1SDA.....R1 | | | |
|---------------------------------------|------|--------------------|-------|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| | | | | 36 kA | 50 kA | 70 kA | 85 kA |
| Thermomagnetic trip unit - TMD | | Icu (415 V) | | | | | |
| | 1.6 | 16 | | 050962 | 051006 | 051050 | 051094 |
| | 2 | 20 | | 050963 | 051007 | 051051 | 051095 |
| | 2.5 | 25 | | 050964 | 051008 | 051052 | 051096 |
| | 3.2 | 32 | | 050965 | 051009 | 051053 | 051097 |
| | 4 | 40 | | 050966 | 051010 | 051054 | 051098 |
| | 5 | 50 | | 050967 | 051011 | 051055 | 051099 |
| | 6.3 | 63 | | 050968 | 051012 | 051056 | 051100 |
| | 8 | 80 | | 050969 | 051013 | 051057 | 051101 |
| | 10 | 100 | | 050970 | 051014 | 051058 | 051102 |
| | 12.5 | 125 | | 050971 | 051015 | 051059 | 051103 |
| | 16 | 500 | | 050972 | 051016 | 051060 | 051104 |
| | 20 | 500 | | 050973 | 051017 | 051061 | 051105 |
| | 25 | 500 | | 050974 | 051018 | 051062 | 051106 |
| | 32 | 500 | | 050975 | 051019 | 051063 | 051107 |
| | 40 | 500 | | 050976 | 051020 | 051064 | 051108 |
| | 50 | 500 | | 050977 | 051021 | 051065 | 051109 |
| | 63 | 630 | | 050978 | 051022 | 051066 | 051110 |
| | 80 | 800 | | 050979 | 051023 | 051067 | 051111 |
| | 100 | 1000 | | 050980 | 051024 | 051068 | 051112 |
| N=50% | 125 | 1250 | | 050981 | 051025 | 051069 | 051113 |
| N=50% | 160 | 1600 | | 050982 | 051026 | 051070 | 051114 |
| N=100% | 125 | 1250 | | 051115 | 051117 | 051119 | 051121 |
| N=100% | 160 | 1600 | | 051116 | 051118 | 051120 | 051122 |

| | | I_n | I_3 | 1SDA.....R1 | | | |
|--|-----|--------------------|-------|-------------|--------|--|--|
| | | | | N | S | | |
| | | | | 36 kA | 50 kA | | |
| Thermomagnetic trip unit for generator protection - TMG⁽¹⁾ | | Icu (415 V) | | | | | |
| | 16 | 160 | | 061874 | 061890 | | |
| | 25 | 160 | | 061875 | 061891 | | |
| | 40 | 200 | | 061876 | 061892 | | |
| | 63 | 200 | | 061877 | 061893 | | |
| | 80 | 240 | | 061878 | 061894 | | |
| | 100 | 300 | | 061879 | 061895 | | |
| | 125 | 375 | | 061880 | 061896 | | |
| | 160 | 480 | | 061881 | 061897 | | |

| | | I_n | 1SDA.....R1 | | | | |
|-----------------------------|-----|--------------------|-------------|--------|--------|--------|--|
| | | | N | S | H | L | |
| | | | 36 kA | 50 kA | 70 kA | 85 kA | |
| Electronic trip unit | | Icu (415 V) | | | | | |
| PR221DS-LS/I | 10 | | 051128 | 051138 | 051148 | 051158 | |
| PR221DS-LS/I | 25 | | 051129 | 051139 | 051149 | 051159 | |
| PR221DS-LS/I | 63 | | 051130 | 051140 | 051150 | 051160 | |
| PR221DS-LS/I | 100 | | 051131 | 051141 | 051151 | 051161 | |
| PR221DS-LS/I | 160 | N=50% | 051132 | 051142 | 051152 | 051162 | |
| PR221DS-LS/I | 160 | N=100% | 051613 | 051614 | 051615 | 051616 | |
| PR221DS-I | 10 | | 051169 | 051179 | 051189 | 051199 | |
| PR221DS-I | 25 | | 051170 | 051180 | 051190 | 051200 | |
| PR221DS-I | 63 | | 051171 | 051181 | 051191 | 051201 | |
| PR221DS-I | 100 | | 051172 | 051182 | 051192 | 051202 | |
| PR221DS-I | 160 | N=50% | 051173 | 051183 | 051193 | 051203 | |
| PR221DS-I | 160 | N=100% | 051617 | 051618 | 051619 | 051620 | |

Note:

The trip coil of the T2 circuit-breaker with PR221DS electronic trip unit is housed in the right slot.

For T2 with PR221DS the following groups of auxiliary contacts are available:


– 1SDA053704R1 Aux-C 1S51-1Q-1SY

– 1SDA055504R1 Aux-C 2Q-1SY

⁽¹⁾ For availability, please ask ABB SACE

Ordering codes

Power distribution circuit-breakers

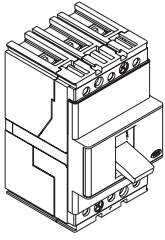

1SDC210N14FD001

T3 250 – Fixed (F) – 3 Poles

I_u (40 °C) = 250 A - Front terminals (F)

| | | I_n | I_3 | 1SDA..... R1 | |
|---------------------------------------|-----|-------|-------|-------------------------|--------|
| | | | | N | S |
| | | | | 36 kA | 50 kA |
| | | | | l _{cu} (415 V) | |
| Thermomagnetic trip unit - TMD | | | | | |
| | 63 | 630 | | 051241 | 051263 |
| | 80 | 800 | | 051242 | 051264 |
| | 100 | 1000 | | 051243 | 051265 |
| | 125 | 1250 | | 051244 | 051266 |
| | 160 | 1600 | | 051245 | 051267 |
| | 200 | 2000 | | 051246 | 051268 |
| | 250 | 2500 | | 051247 | 051269 |

| | | I_n | I_3 | 1SDA..... R1 | |
|--|-----|-------|-------|-------------------------|--------|
| | | | | N | S |
| | | | | 36 kA | 50 kA |
| | | | | l _{cu} (415 V) | |
| Thermomagnetic trip unit for generator protection - TMG | | | | | |
| | 63 | 400 | | 055105 | 055119 |
| | 80 | 400 | | 055106 | 055120 |
| | 100 | 400 | | 055107 | 055121 |
| | 125 | 400 | | 055108 | 055122 |
| | 160 | 480 | | 055109 | 055123 |
| | 200 | 600 | | 055110 | 055124 |
| | 250 | 750 | | 055111 | 055125 |

T3 250 – Fixed (F) – 4 Poles

I_u (40 °C) = 250 A - Front terminals (F)

| | | I_n | I_3 | 1SDA..... R1 | |
|---------------------------------------|-----|-------|-------|-------------------------|--------|
| | | | | N | S |
| | | | | 36 kA | 50 kA |
| | | | | l _{cu} (415 V) | |
| Thermomagnetic trip unit - TMD | | | | | |
| | 63 | 630 | | 051252 | 051274 |
| | 80 | 800 | | 051253 | 051275 |
| | 100 | 1000 | | 051254 | 051276 |
| N=50% | 125 | 1250 | | 051255 | 051277 |
| N=50% | 160 | 1600 | | 051256 | 051278 |
| N=50% | 200 | 2000 | | 051257 | 051279 |
| N=50% | 250 | 2500 | | 051258 | 051280 |
| N=100% | 125 | 1250 | | 051303 | 051307 |
| N=100% | 160 | 1600 | | 051304 | 051308 |
| N=100% | 200 | 2000 | | 051305 | 051309 |
| N=100% | 250 | 2500 | | 051306 | 051310 |

| | | I_n | I_3 | 1SDA..... R1 | |
|--|-----|-------|-------|-------------------------|--------|
| | | | | N | S |
| | | | | 36 kA | 50 kA |
| | | | | l _{cu} (415 V) | |
| Thermomagnetic trip unit for generator protection - TMG | | | | | |
| | 63 | 400 | | 055112 | 055126 |
| | 80 | 400 | | 055113 | 055127 |
| | 100 | 400 | | 055114 | 055128 |
| | 125 | 400 | | 055115 | 055129 |
| | 160 | 480 | | 055116 | 055130 |
| | 200 | 600 | | 055117 | 055131 |
| | 250 | 750 | | 055118 | 055132 |

T4 250 – Fixed (F) – 3 Poles


I_u (40 °C) = 250 A - Front terminals (F)

| | | | 1SDA.....R1 | | | | |
|---|-----|-------------|-------------------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Thermomagnetic trip unit - TMD and TMA | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| | | | I_n | | | | |
| | | | I_s | | | | |
| | | | I_{cu} (415 V) | | | | |
| | 20 | 320 | 054171 | 054189 | 054207 | 054225 | 054243 |
| | 32 | 320 | 054172 | 054190 | 054208 | 054226 | 054244 |
| | 50 | 500 | 054173 | 054191 | 054209 | 054227 | 054245 |
| | 80 | 400...800 | 054174 | 054192 | 054210 | 054228 | 054246 |
| | 100 | 500...1000 | 054175 | 054193 | 054211 | 054229 | 054247 |
| | 125 | 625...1250 | 054176 | 054194 | 054212 | 054230 | 054248 |
| | 160 | 800...1600 | 054177 | 054195 | 054213 | 054231 | 054249 |
| | 200 | 1000...2000 | 054178 | 054196 | 054214 | 054232 | 054250 |
| | 250 | 1250...2500 | 054179 | 054197 | 054215 | 054233 | 054251 |

| | | | 1SDA.....R1 | | | | |
|-----------------------------|-----|--|-------------------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Electronic trip unit | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| | | | I_n | | | | |
| | | | I_{cu} (415 V) | | | | |
| PR221DS-LS/I | 100 | | 053997 | 054021 | 054045 | 054069 | 054093 |
| PR221DS-LS/I | 160 | | 053998 | 054022 | 054046 | 054070 | 054094 |
| PR221DS-LS/I | 250 | | 053999 | 054023 | 054047 | 054071 | 054095 |
| PR221DS-I | 100 | | 054000 | 054024 | 054048 | 054072 | 054096 |
| PR221DS-I | 160 | | 054001 | 054025 | 054049 | 054073 | 054097 |
| PR221DS-I | 250 | | 054002 | 054026 | 054050 | 054074 | 054098 |
| PR222DS/P-LSI | 100 | | 054003 | 054027 | 054051 | 054075 | 054099 |
| PR222DS/P-LSI | 160 | | 054004 | 054028 | 054052 | 054076 | 054100 |
| PR222DS/P-LSI | 250 | | 054005 | 054029 | 054053 | 054077 | 054101 |
| PR222DS/P-LSIG | 100 | | 054006 | 054030 | 054054 | 054078 | 054102 |
| PR222DS/P-LSIG | 160 | | 054007 | 054031 | 054055 | 054079 | 054103 |
| PR222DS/P-LSIG | 250 | | 054008 | 054032 | 054056 | 054080 | 054104 |
| PR223DS | 100 | | 059489 | 059497 | 059505 | 059513 | 059521 |
| PR223DS | 160 | | 059491 | 059499 | 059507 | 059515 | 059523 |
| PR223DS | 250 | | 059493 | 059501 | 059509 | 059517 | 059525 |

Ordering codes

Power distribution circuit-breakers

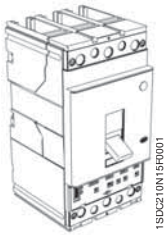


T4 250 – Fixed (F) – 4 Poles

I_n (40 °C) = 250 A - Front terminals (F)

| Thermomagnetic trip unit - TMD and TMA | I _n | I ₃ | Icu (415 V) | 1SDA..... R1 | | | | |
|--|----------------|----------------|-------------|--------------|--------|--------|--------|--------|
| | | | | N | S | H | L | V |
| | | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| | 20 | 320 | | 054180 | 054198 | 054216 | 054234 | 054252 |
| | 32 | 320 | | 054181 | 054199 | 054217 | 054235 | 054253 |
| | 50 | 500 | | 054182 | 054200 | 054218 | 054236 | 054254 |
| | 80 | 400...800 | | 054183 | 054201 | 054219 | 054237 | 054255 |
| | 100 | 500...1000 | | 054184 | 054202 | 054220 | 054238 | 054256 |
| N=50% | 125 | 625...1250 | | 054185 | 054203 | 054221 | 054239 | 054257 |
| N=50% | 160 | 800...1600 | | 054186 | 054204 | 054222 | 054240 | 054258 |
| N=50% | 200 | 1000...2000 | | 054187 | 054205 | 054223 | 054241 | 054259 |
| N=50% | 250 | 1250...2500 | | 054188 | 054206 | 054224 | 054242 | 054260 |
| N=100% | 125 | 625...1250 | | 054271 | 054275 | 054279 | 054283 | 054287 |
| N=100% | 160 | 800...1600 | | 054272 | 054276 | 054280 | 054284 | 054288 |
| N=100% | 200 | 1000...2000 | | 054273 | 054277 | 054281 | 054285 | 054289 |
| N=100% | 250 | 1250...2500 | | 054274 | 054278 | 054282 | 054286 | 054290 |

| Electronic trip unit | I _n | Icu (415 V) | 1SDA..... R1 | | | | |
|----------------------|----------------|-------------|--------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-LS/I | 100 | | 054009 | 054033 | 054057 | 054081 | 054105 |
| PR221DS-LS/I | 160 | | 054010 | 054034 | 054058 | 054082 | 054106 |
| PR221DS-LS/I | 250 | | 054011 | 054035 | 054059 | 054083 | 054107 |
| PR221DS-I | 100 | | 054012 | 054036 | 054060 | 054084 | 054108 |
| PR221DS-I | 160 | | 054013 | 054037 | 054061 | 054085 | 054109 |
| PR221DS-I | 250 | | 054014 | 054038 | 054062 | 054086 | 054110 |
| PR222DS/P-LSI | 100 | | 054015 | 054039 | 054063 | 054087 | 054111 |
| PR222DS/P-LSI | 160 | | 054016 | 054040 | 054064 | 054088 | 054112 |
| PR222DS/P-LSI | 250 | | 054017 | 054041 | 054065 | 054089 | 054113 |
| PR222DS/P-LSIG | 100 | | 054018 | 054042 | 054066 | 054090 | 054114 |
| PR222DS/P-LSIG | 160 | | 054019 | 054043 | 054067 | 054091 | 054115 |
| PR222DS/P-LSIG | 250 | | 054020 | 054044 | 054068 | 054092 | 054116 |
| PR223DS | 100 | | 059490 | 059498 | 059506 | 059514 | 059522 |
| PR223DS | 160 | | 059492 | 059500 | 059508 | 059516 | 059524 |
| PR223DS | 250 | | 059494 | 059502 | 059510 | 059518 | 059526 |

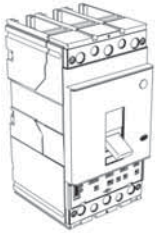

T4 320 – Fixed (F) – 3 Poles

I_u (40 °C) = 320 A - Front terminals (F)

| <i>Electronic trip unit</i> | | I_{cu} (415 V) | 1SDA.....R1 | | | | |
|-----------------------------|-----|------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| PR221DS-LS/I | 320 | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-I | 320 | | 054117 | 054125 | 054133 | 054141 | 054149 |
| PR222DS/P-LSI | 320 | | 054118 | 054126 | 054134 | 054142 | 054150 |
| PR222DS/P-LSIG | 320 | | 054119 | 054127 | 054135 | 054143 | 054151 |
| PR223DS | 320 | | 054120 | 054128 | 054136 | 054144 | 054152 |
| | | | 059495 | 059503 | 059511 | 059519 | 059527 |


T4 320 – Fixed (F) – 4 Poles

I_u (40 °C) = 320 A - Front terminals (F)

| <i>Electronic trip unit</i> | | I_{cu} (415 V) | 1SDA.....R1 | | | | |
|-----------------------------|-----|------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| PR221DS-LS/I | 320 | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-I | 320 | | 054121 | 054129 | 054137 | 054145 | 054153 |
| PR222DS/P-LSI | 320 | | 054122 | 054130 | 054138 | 054146 | 054154 |
| PR222DS/P-LSIG | 320 | | 054123 | 054131 | 054139 | 054147 | 054155 |
| PR223DS | 320 | | 054124 | 054132 | 054140 | 054148 | 054156 |
| | | | 059496 | 059504 | 059512 | 059520 | 059528 |

Ordering codes

Power distribution circuit-breakers

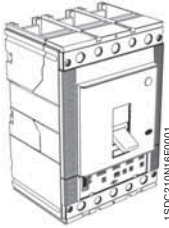

T5 400 – Fixed (F) – 3 Poles

I_n (40 °C) = 400 A - Front terminals (F)

| | | | 1SDA..... R1 | | | | |
|---------------------------------------|-----|-------------|--------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Thermomagnetic trip unit - TMA | | | Icu (415 V) | | | | |
| | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| | 320 | 1600...3200 | 054436 | 054440 | 054444 | 054448 | 054452 |
| | 400 | 2000...4000 | 054437 | 054441 | 054445 | 054449 | 054453 |


| | | | 1SDA..... R1 | | | | |
|-----------------------------|-----|--|--------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Electronic trip unit | | | Icu (415 V) | | | | |
| | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-LS/I | 320 | | 054316 | 054332 | 054348 | 054364 | 054380 |
| PR221DS-LS/I | 400 | | 054317 | 054333 | 054349 | 054365 | 054381 |
| PR221DS-I | 320 | | 054318 | 054334 | 054350 | 054366 | 054382 |
| PR221DS-I | 400 | | 054319 | 054335 | 054351 | 054367 | 054383 |
| PR222DS/P-LSI | 320 | | 054320 | 054336 | 054352 | 054368 | 054384 |
| PR222DS/P-LSI | 400 | | 054321 | 054337 | 054353 | 054369 | 054385 |
| PR222DS/P-LSIG | 320 | | 054322 | 054338 | 054354 | 054370 | 054386 |
| PR222DS/P-LSIG | 400 | | 054323 | 054339 | 054355 | 054371 | 054387 |
| PR223DS | 320 | | 059529 | 059535 | 059541 | 059547 | 059553 |
| PR223DS | 400 | | 059531 | 059537 | 059543 | 059549 | 059555 |

T5 400 – Fixed (F) – 4 Poles

I_n (40 °C) = 400 A - Front terminals (F)

| | | | 1SDA..... R1 | | | | |
|---------------------------------------|-----|-------------|--------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Thermomagnetic trip unit - TMA | | | Icu (415 V) | | | | |
| | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| N=50% | 320 | 1600...3200 | 054438 | 054442 | 054446 | 054450 | 054454 |
| N=50% | 400 | 2000...4000 | 054439 | 054443 | 054447 | 054451 | 054455 |
| N=100% | 320 | 1600...3200 | 054477 | 054479 | 054481 | 054483 | 054485 |
| N=100% | 400 | 2000...4000 | 054478 | 054480 | 054482 | 054484 | 054486 |

| | | | 1SDA..... R1 | | | | |
|-----------------------------|-----|--|--------------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Electronic trip unit | | | Icu (415 V) | | | | |
| | | | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-LS/I | 320 | | 054324 | 054340 | 054356 | 054372 | 054388 |
| PR221DS-LS/I | 400 | | 054325 | 054341 | 054357 | 054373 | 054389 |
| PR221DS-I | 320 | | 054326 | 054342 | 054358 | 054374 | 054390 |
| PR221DS-I | 400 | | 054327 | 054343 | 054359 | 054375 | 054391 |
| PR222DS/P-LSI | 320 | | 054328 | 054344 | 054360 | 054376 | 054392 |
| PR222DS/P-LSI | 400 | | 054329 | 054345 | 054361 | 054377 | 054393 |
| PR222DS/P-LSIG | 320 | | 054330 | 054346 | 054362 | 054378 | 054394 |
| PR222DS/P-LSIG | 400 | | 054331 | 054347 | 054363 | 054379 | 054395 |
| PR223DS | 320 | | 059530 | 059536 | 059542 | 059548 | 059554 |
| PR223DS | 400 | | 059532 | 059538 | 059544 | 059550 | 059556 |

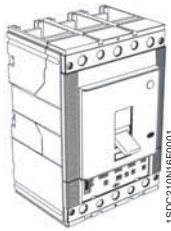

1SDC210015D0201

T5 630 – Fixed (F) – 3 Poles

I_u (40 °C) = 630 A - Front terminals (F)

| | | | 1SDA.....R1 | | | | |
|---------------------------------------|-----|--------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| | 500 | 2500...5000 | 054456 | 054461 | 054465 | 054469 | 054473 |

| | | | 1SDA.....R1 | | | | |
|-----------------------------|-----|--------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Electronic trip unit | | Icu (415 V) | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-LS/I | 630 | | 054396 | 054404 | 054412 | 054420 | 054428 |
| PR221DS-I | 630 | | 054397 | 054405 | 054413 | 054421 | 054429 |
| PR222DS/P-LSI | 630 | | 054398 | 054406 | 054414 | 054422 | 054430 |
| PR222DS/P-LSIG | 630 | | 054399 | 054407 | 054415 | 054423 | 054431 |
| PR223DS | 630 | | 059533 | 059539 | 059545 | 059551 | 059557 |

T5 630 – Fixed (F) – 4 Poles

I_u (40 °C) = 630 A - Front terminals (F)

| | | | 1SDA.....R1 | | | | |
|---------------------------------------|-----|--------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| N=50% | 500 | 2500...5000 | 054459 | 054463 | 054467 | 054471 | 054475 |
| N=100% | 500 | 2500...5000 | 054487 | 054489 | 054491 | 054493 | 054495 |

| | | | 1SDA.....R1 | | | | |
|-----------------------------|-----|--------------------|-------------|--------|--------|--------|--------|
| | | | N | S | H | L | V |
| Electronic trip unit | | Icu (415 V) | 36 kA | 50 kA | 70 kA | 120 kA | 200 kA |
| PR221DS-LS/I | 630 | | 054400 | 054408 | 054416 | 054424 | 054432 |
| PR221DS-I | 630 | | 054401 | 054409 | 054417 | 054425 | 054433 |
| PR222DS/P-LSI | 630 | | 054402 | 054410 | 054418 | 054426 | 054434 |
| PR222DS/P-LSIG | 630 | | 054403 | 054411 | 054419 | 054427 | 054435 |
| PR223DS | 630 | | 059534 | 059540 | 059546 | 059552 | 059558 |

Ordering codes

Power distribution circuit-breakers

T6 630 – Fixed (F) – 3 Poles

I_n (40 °C) = 630 A - Front terminals (F)

| | | | | 1SDA..... R1 | | | |
|---------------------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| | 630 | 3150...6300 | | 060202 | 060204 | 060206 | 060208 |

| | | | | 1SDA..... R1 | | | |
|-----------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 630 | | | 060226 | 060236 | 060246 | 060256 |
| PR221DS-I | 630 | | | 060227 | 060237 | 060247 | 060257 |
| PR222DS/P-LSI | 630 | | | 060228 | 060238 | 060248 | 060258 |
| PR222DS/P-LSIG | 630 | | | 060229 | 060239 | 060249 | 060259 |
| PR223DS | 630 | | | 060230 | 060240 | 060250 | 060260 |

T6 630 – Fixed (F) – 4 Poles

I_n (40 °C) = 630 A - Front terminals (F)

| | | | | 1SDA..... R1 | | | |
|---------------------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| N=50% | 630 | 3150...6300 | | 060203 | 060205 | 060207 | 060209 |
| N=100% | 630 | 3150...6300 | | 060210 | 060211 | 060212 | 060213 |

| | | | | 1SDA..... R1 | | | |
|-----------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 630 | | | 060231 | 060241 | 060251 | 060262 |
| PR221DS-I | 630 | | | 060232 | 060242 | 060252 | 060263 |
| PR222DS/P-LSI | 630 | | | 060233 | 060243 | 060253 | 060264 |
| PR222DS/P-LSIG | 630 | | | 060234 | 060244 | 060254 | 060265 |
| PR223DS | 630 | | | 060235 | 060245 | 060255 | 060266 |

T6 800 – Fixed (F) – 3 Poles

I_n (40 °C) = 800 A - Front terminals (F)

| | | | | 1SDA..... R1 | | | |
|---------------------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| | 800 | 4000...8000 | | 060214 | 060216 | 060218 | 060220 |

| | | | | 1SDA..... R1 | | | |
|-----------------------------|-----|--------------------|--|--------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 800 | | | 060268 | 060278 | 060289 | 060299 |
| PR221DS-I | 800 | | | 060269 | 060279 | 060290 | 060300 |
| PR222DS/P-LSI | 800 | | | 060270 | 060280 | 060291 | 060301 |
| PR222DS/P-LSIG | 800 | | | 060271 | 060281 | 060292 | 060302 |
| PR223DS | 800 | | | 060272 | 060282 | 060293 | 060303 |

T6 800 – Fixed (F) – 4 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| | | | | 1SDA.....R1 | | | |
|---------------------------------------|-----|--------------------|--|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| Thermomagnetic trip unit - TMA | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| N=50% | 800 | 4000...8000 | | 060215 | 060217 | 060219 | 060221 |
| N=100% | 800 | 4000...8000 | | 060222 | 060223 | 060224 | 060225 |

| | | | | 1SDA.....R1 | | | |
|-----------------------------|-----|--------------------|--|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 800 | | | 060273 | 060283 | 060294 | 060305 |
| PR221DS-I | 800 | | | 060274 | 060284 | 060295 | 060306 |
| PR222DS/P-LSI | 800 | | | 060275 | 060285 | 060296 | 060307 |
| PR222DS/P-LSIG | 800 | | | 060276 | 060286 | 060297 | 060308 |
| PR223DS | 800 | | | 060277 | 060287 | 060298 | 060309 |

T6 1000 – Fixed (F) – 3 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| | | | | 1SDA.....R1 | | | |
|-----------------------------|------|--------------------|--|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 1000 | | | 060537 | 060547 | 060561 | 060574 |
| PR221DS-I | 1000 | | | 060538 | 060548 | 060562 | 060575 |
| PR222DS/P-LSI | 1000 | | | 060539 | 060549 | 060563 | 060576 |
| PR222DS/P-LSIG | 1000 | | | 060540 | 060550 | 060564 | 060577 |
| PR223DS | 1000 | | | 060541 | 060551 | 060565 | 060578 |

Note: The T6 1000 A circuit-breakers must necessarily have one of the admissible types of terminals mounted (see page 3/9)

T6 1000 – Fixed (F) – 4 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| | | | | 1SDA.....R1 | | | |
|-----------------------------|------|--------------------|--|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| Electronic trip unit | | Icu (415 V) | | 36 kA | 50 kA | 70 kA | 100 kA |
| PR221DS-LS/I | 1000 | | | 060542 | 060556 | 060566 | 060580 |
| PR221DS-I | 1000 | | | 060543 | 060557 | 060567 | 060581 |
| PR222DS/P-LSI | 1000 | | | 060544 | 060558 | 060568 | 060582 |
| PR222DS/P-LSIG | 1000 | | | 060545 | 060559 | 060569 | 060583 |
| PR223DS | 1000 | | | 060546 | 060560 | 060570 | 060584 |

Note: The T6 1000 A circuit-breakers must necessarily have one of the admissible types of terminals mounted (see page 3/9)

Ordering codes

Power distribution circuit-breakers

T7 800 – Fixed (F) – 3 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| <i>Electronic trip unit</i> | I_n | I_{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-------|------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 800 | | 061963 | 062642 | 062674 | 062706 |
| PR231/P I | 800 | | 061962 | 062641 | 062673 | 062705 |
| PR232/P LSI | 800 | | 061964 | 062643 | 062675 | 062707 |
| PR331/P LSIG | 800 | | 061965 | 062644 | 062676 | 062708 |
| PR332/P LI | 800 | | 061966 | 062645 | 062677 | 062709 |
| PR332/P LSI | 800 | | 061967 | 062646 | 062678 | 062710 |
| PR332/P LSIG | 800 | | 061968 | 062647 | 062679 | 062711 |
| PR332/P LSIRc | 800 | | 061969 | 062648 | 062680 | 062712 |

T7 800 – Fixed (F) – 4 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| <i>Electronic trip unit</i> | I_n | I_{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-------|------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 800 | | 061973 | 062650 | 062682 | 062714 |
| PR231/P I | 800 | | 061972 | 062649 | 062681 | 062713 |
| PR232/P LSI | 800 | | 061974 | 062651 | 062683 | 062715 |
| PR331/P LSIG | 800 | | 061975 | 062652 | 062684 | 062716 |
| PR332/P LI | 800 | | 061976 | 062653 | 062685 | 062717 |
| PR332/P LSI | 800 | | 061977 | 062654 | 062686 | 062718 |
| PR332/P LSIG | 800 | | 061978 | 062655 | 062687 | 062719 |
| PR332/P LSIRc | 800 | | 061979 | 062656 | 062688 | 062720 |

T7 1000 – Fixed (F) – 3 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| <i>Electronic trip unit</i> | I_n | I_{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-------|------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 1000 | | 062738 | 062770 | 062802 | 062834 |
| PR231/P I | 1000 | | 062737 | 062769 | 062801 | 062833 |
| PR232/P LSI | 1000 | | 062739 | 062771 | 062803 | 062835 |
| PR331/P LSIG | 1000 | | 062740 | 062772 | 062804 | 062836 |
| PR332/P LI | 1000 | | 062741 | 062773 | 062805 | 062837 |
| PR332/P LSI | 1000 | | 062742 | 062774 | 062806 | 062838 |
| PR332/P LSIG | 1000 | | 062743 | 062775 | 062807 | 062839 |
| PR332/P LSIRc | 1000 | | 062744 | 062776 | 062808 | 062840 |

T7 1000 – Fixed (F) – 4 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| <i>Electronic trip unit</i> | I_n | I_{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-------|------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 1000 | | 062746 | 062778 | 062810 | 062842 |
| PR231/P I | 1000 | | 062745 | 062777 | 062809 | 062841 |
| PR232/P LSI | 1000 | | 062747 | 062779 | 062811 | 062843 |
| PR331/P LSIG | 1000 | | 062748 | 062780 | 062812 | 062844 |
| PR332/P LI | 1000 | | 062749 | 062781 | 062813 | 062845 |
| PR332/P LSI | 1000 | | 062750 | 062782 | 062814 | 062846 |
| PR332/P LSIG | 1000 | | 062751 | 062783 | 062815 | 062847 |
| PR332/P LSIRc | 1000 | | 062752 | 062784 | 062816 | 062848 |

T7 1250 – Fixed (F) – 3 Poles

I_u (40 °C) = 1250 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I_{cu} (415 V) | 1SDA.....R1 | | | |
|-----------------------------|------|------------------|-------------|--------|--------|--------|
| | | | S | H | L | V |
| PR231/P LS/I | 1250 | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P I | 1250 | | 062866 | 062898 | 062930 | 062962 |
| PR232/P LSI | 1250 | | 062865 | 062897 | 062929 | 062961 |
| PR331/P LSIg | 1250 | | 062867 | 062899 | 062931 | 062963 |
| PR332/P LI | 1250 | | 062868 | 062900 | 062932 | 062964 |
| PR332/P LSI | 1250 | | 062869 | 062901 | 062933 | 062965 |
| PR332/P LSIg | 1250 | | 062870 | 062902 | 062934 | 062966 |
| PR332/P LSIrc | 1250 | | 062871 | 062903 | 062935 | 062967 |
| PR332/P LSIrc | 1250 | | 062872 | 062904 | 062936 | 062968 |

T7 1250 – Fixed (F) – 4 Poles

I_u (40 °C) = 1250 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I_{cu} (415 V) | 1SDA.....R1 | | | |
|-----------------------------|------|------------------|-------------|--------|--------|--------|
| | | | S | H | L | V |
| PR231/P LS/I | 1250 | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P I | 1250 | | 062874 | 062906 | 062938 | 062970 |
| PR232/P LSI | 1250 | | 062873 | 062905 | 062937 | 062969 |
| PR331/P LSIg | 1250 | | 062875 | 062907 | 062939 | 062971 |
| PR332/P LI | 1250 | | 062876 | 062908 | 062940 | 062972 |
| PR332/P LSI | 1250 | | 062877 | 062909 | 062941 | 062973 |
| PR332/P LSIg | 1250 | | 062878 | 062910 | 062942 | 062974 |
| PR332/P LSIrc | 1250 | | 062879 | 062911 | 062943 | 062975 |
| PR332/P LSIrc | 1250 | | 062880 | 062912 | 062944 | 062976 |

T7 1600 – Fixed (F) – 3 Poles

I_u (40 °C) = 1600 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I_{cu} (415 V) | 1SDA.....R1 | | |
|-----------------------------|------|------------------|-------------|--------|--------|
| | | | S | H | L |
| PR231/P LS/I | 1600 | | 50 kA | 70 kA | 120 kA |
| PR231/P I | 1600 | | 062994 | 063026 | 063058 |
| PR232/P LSI | 1600 | | 062993 | 063025 | 063057 |
| PR331/P LSIg | 1600 | | 062995 | 063027 | 063059 |
| PR332/P LI | 1600 | | 062996 | 063028 | 063060 |
| PR332/P LSI | 1600 | | 062997 | 063029 | 063061 |
| PR332/P LSIg | 1600 | | 062998 | 063030 | 063062 |
| PR332/P LSIrc | 1600 | | 062999 | 063031 | 063063 |
| PR332/P LSIrc | 1600 | | 063000 | 063032 | 063064 |

T7 1600 – Fixed (F) – 4 Poles

I_u (40 °C) = 1600 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I_{cu} (415 V) | 1SDA.....R1 | | |
|-----------------------------|------|------------------|-------------|--------|--------|
| | | | S | H | L |
| PR231/P LS/I | 1600 | | 50 kA | 70 kA | 120 kA |
| PR231/P I | 1600 | | 063002 | 063034 | 063066 |
| PR232/P LSI | 1600 | | 063001 | 063033 | 063065 |
| PR331/P LSIg | 1600 | | 063003 | 063035 | 063067 |
| PR332/P LI | 1600 | | 063004 | 063036 | 063068 |
| PR332/P LSI | 1600 | | 063005 | 063037 | 063069 |
| PR332/P LSIg | 1600 | | 063006 | 063038 | 063070 |
| PR332/P LSIrc | 1600 | | 063007 | 063039 | 063071 |
| PR332/P LSIrc | 1600 | | 063008 | 063040 | 063072 |

Ordering codes

Power distribution circuit-breakers

T7 800 M – Fixed (F) – 3 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I _{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-----|-------------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 800 | | 061981 | 062658 | 062690 | 062722 |
| PR231/P I | 800 | | 061980 | 062657 | 062689 | 062721 |
| PR232/P LSI | 800 | | 061982 | 062659 | 062691 | 062723 |
| PR331/P LSIG | 800 | | 061983 | 062660 | 062692 | 062724 |
| PR332/P LI | 800 | | 061984 | 062661 | 062693 | 062725 |
| PR332/P LSI | 800 | | 061985 | 062662 | 062694 | 062726 |
| PR332/P LSIG | 800 | | 061986 | 062663 | 062695 | 062727 |
| PR332/P LSIRc | 800 | | 061987 | 062664 | 062696 | 062728 |

T7 800 M – Fixed (F) – 4 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I _{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|-----|-------------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 800 | | 061989 | 062666 | 062698 | 062730 |
| PR231/P I | 800 | | 061988 | 062665 | 062697 | 062729 |
| PR232/P LSI | 800 | | 061990 | 062667 | 062699 | 062731 |
| PR331/P LSIG | 800 | | 061991 | 062668 | 062700 | 062732 |
| PR332/P LI | 800 | | 061992 | 062669 | 062701 | 062733 |
| PR332/P LSI | 800 | | 061993 | 062670 | 062702 | 062734 |
| PR332/P LSIG | 800 | | 061994 | 062671 | 062703 | 062735 |
| PR332/P LSIRc | 800 | | 061995 | 062672 | 062704 | 062736 |

T7 1000 M – Fixed (F) – 3 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I _{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|------|-------------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 1000 | | 062754 | 062786 | 062818 | 062850 |
| PR231/P I | 1000 | | 062753 | 062785 | 062817 | 062849 |
| PR232/P LSI | 1000 | | 062755 | 062787 | 062819 | 062851 |
| PR331/P LSIG | 1000 | | 062756 | 062788 | 062820 | 062852 |
| PR332/P LI | 1000 | | 062757 | 062789 | 062821 | 062853 |
| PR332/P LSI | 1000 | | 062758 | 062790 | 062822 | 062854 |
| PR332/P LSIG | 1000 | | 062759 | 062791 | 062823 | 062855 |
| PR332/P LSIRc | 1000 | | 062760 | 062792 | 062824 | 062856 |

T7 1000 M – Fixed (F) – 4 Poles

I_u (40 °C) = 1000 A - Front terminals (F)

| <i>Electronic trip unit</i> | In | I _{cu} (415 V) | 1SDA..... R1 | | | |
|-----------------------------|------|-------------------------|--------------|--------|--------|--------|
| | | | S | H | L | V |
| | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P LS/I | 1000 | | 062762 | 062794 | 062826 | 062858 |
| PR231/P I | 1000 | | 062761 | 062793 | 062825 | 062857 |
| PR232/P LSI | 1000 | | 062763 | 062795 | 062827 | 062859 |
| PR331/P LSIG | 1000 | | 062764 | 062796 | 062828 | 062860 |
| PR332/P LI | 1000 | | 062765 | 062797 | 062829 | 062861 |
| PR332/P LSI | 1000 | | 062766 | 062798 | 062830 | 062862 |
| PR332/P LSIG | 1000 | | 062767 | 062799 | 062831 | 062863 |
| PR332/P LSIRc | 1000 | | 062768 | 062800 | 062832 | 062864 |

T7 1250 M – Fixed (F) – 3 Poles

I_u (40 °C) = 1250 A - Front terminals (F)

| | | In | Icu (415 V) | 1SDA.....R1 | | | |
|-----------------------------|------|----|-------------|-------------|--------|--------|--------|
| <i>Electronic trip unit</i> | | | | S | H | L | V |
| PR231/P LS/I | 1250 | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P I | 1250 | | | 062882 | 062914 | 062946 | 062978 |
| PR232/P LSI | 1250 | | | 062881 | 062913 | 062945 | 062977 |
| PR331/P LSIG | 1250 | | | 062883 | 062915 | 062947 | 062979 |
| PR332/P LI | 1250 | | | 062884 | 062916 | 062948 | 062980 |
| PR332/P LSI | 1250 | | | 062885 | 062917 | 062949 | 062981 |
| PR332/P LSI | 1250 | | | 062886 | 062918 | 062950 | 062982 |
| PR332/P LSIG | 1250 | | | 062887 | 062919 | 062951 | 062983 |
| PR332/P LSIRc | 1250 | | | 062888 | 062920 | 062952 | 062984 |

T7 1250 M – Fixed (F) – 4 Poles

I_u (40 °C) = 1250 A - Front terminals (F)

| | | In | Icu (415 V) | 1SDA.....R1 | | | |
|-----------------------------|------|----|-------------|-------------|--------|--------|--------|
| <i>Electronic trip unit</i> | | | | S | H | L | V |
| PR231/P LS/I | 1250 | | | 50 kA | 70 kA | 120 kA | 150 kA |
| PR231/P I | 1250 | | | 062890 | 062922 | 062954 | 062986 |
| PR232/P LSI | 1250 | | | 062889 | 062921 | 062953 | 062985 |
| PR331/P LSIG | 1250 | | | 062891 | 062923 | 062955 | 062987 |
| PR332/P LI | 1250 | | | 062892 | 062924 | 062956 | 062988 |
| PR332/P LSI | 1250 | | | 062893 | 062925 | 062957 | 062989 |
| PR332/P LSI | 1250 | | | 062894 | 062926 | 062958 | 062990 |
| PR332/P LSIG | 1250 | | | 062895 | 062927 | 062959 | 062991 |
| PR332/P LSIRc | 1250 | | | 062896 | 062928 | 062960 | 062992 |

T7 1600 M – Fixed (F) – 3 Poles

I_u (40 °C) = 1600 A - Front terminals (F)

| | | In | Icu (415 V) | 1SDA.....R1 | | |
|-----------------------------|------|----|-------------|-------------|--------|--------|
| <i>Electronic trip unit</i> | | | | S | H | L |
| PR231/P LS/I | 1600 | | | 50 kA | 70 kA | 120 kA |
| PR231/P I | 1600 | | | 063010 | 063042 | 063074 |
| PR232/P LSI | 1600 | | | 063009 | 063041 | 063073 |
| PR331/P LSIG | 1600 | | | 063011 | 063043 | 063075 |
| PR332/P LI | 1600 | | | 063012 | 063044 | 063076 |
| PR332/P LSI | 1600 | | | 063013 | 063045 | 063077 |
| PR332/P LSI | 1600 | | | 063014 | 063046 | 063078 |
| PR332/P LSIG | 1600 | | | 063015 | 063047 | 063079 |
| PR332/P LSIRc | 1600 | | | 063016 | 063048 | 063080 |

T7 1600 M – Fixed (F) – 4 Poles

I_u (40 °C) = 1600 A - Front terminals (F)

| | | In | Icu (415 V) | 1SDA.....R1 | | |
|-----------------------------|------|----|-------------|-------------|--------|--------|
| <i>Electronic trip unit</i> | | | | S | H | L |
| PR231/P LS/I | 1600 | | | 50 kA | 70 kA | 120 kA |
| PR231/P I | 1600 | | | 063018 | 063050 | 063082 |
| PR232/P LSI | 1600 | | | 063017 | 063049 | 063081 |
| PR331/P LSIG | 1600 | | | 063019 | 063051 | 063083 |
| PR332/P LI | 1600 | | | 063020 | 063052 | 063084 |
| PR332/P LSI | 1600 | | | 063021 | 063053 | 063085 |
| PR332/P LSI | 1600 | | | 063022 | 063054 | 063086 |
| PR332/P LSIG | 1600 | | | 063023 | 063055 | 063087 |
| PR332/P LSIRc | 1600 | | | 063024 | 063056 | 063088 |

Ordering codes

Circuit-breakers for zone selectivity

T4L 250 – Fixed (F)

I_u (40°C) = 250 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 100 | 059475 | 059476 |
| PR223EF | 160 | 059477 | 059478 |
| PR223EF | 250 | 059479 | 059480 |

T4L 320 – Fixed (F)

I_u (40°C) = 320 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 320 | 059481 | 059482 |

T5L 400 – Fixed (F)

I_u (40°C) = 400 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 320 | 059483 | 059484 |
| PR223EF | 400 | 059485 | 059486 |

T5L 630 – Fixed (F)

I_u (40°C) = 630 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 630 | 059487 | 059488 |

T6L 630 – Fixed (F)

I_u (40°C) = 630 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 630 | 060261 | 060267 |

T6L 800 – Fixed (F)

I_u (40°C) = 800 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 800 | 060304 | 060310 |

T6L 1000 – Fixed (F)

I_u (40°C) = 1000 A - Front terminals (F)

| <i>Electronic trip unit</i> | I _{cu} (415 V) | 1SDA..... R1 | |
|-----------------------------|-------------------------|--------------|---------|
| | | 3 poles | 4 poles |
| PR223EF | 1000 | 060579 | 060585 |





Ordering codes

Motor protection circuit-breakers



T2 160 – Fixed (F) – 3 Poles

I_u (40 °C) = 160 A - Front terminals (F)

| | |  |  | 1SDA.....R1 | | | |
|--|------|---|---|-------------|--------|--------|--------|
| | | | | N | S | H | L |
| <i>Magnetic only trip unit - MF and MA</i> | | <i>Icu (415 V)</i> | | 36 kA | 50 kA | 70 kA | 85 kA |
| | 1 | 13 | | 053110 | 053121 | 053132 | 053143 |
| | 1.6 | 21 | | 053111 | 053122 | 053133 | 053144 |
| | 2 | 26 | | 053112 | 053123 | 053134 | 053145 |
| | 2.5 | 33 | | 053113 | 053124 | 053135 | 053146 |
| | 3.2 | 42 | | 053114 | 053125 | 053136 | 053147 |
| | 4 | 52 | | 053115 | 053126 | 053137 | 053148 |
| | 5 | 65 | | 053116 | 053127 | 053138 | 053149 |
| | 6.5 | 84 | | 053117 | 053128 | 053139 | 053150 |
| | 8.5 | 110 | | 053118 | 053129 | 053140 | 053151 |
| | 11 | 145 | | 053119 | 053130 | 053141 | 053152 |
| | 12.5 | 163 | | 053120 | 053131 | 053142 | 053153 |
| | 20 | 120...240 | | 051207 | 051216 | 051224 | 051232 |
| | 32 | 192...384 | | 051208 | 051217 | 051225 | 051233 |
| | 52 | 312...624 | | 051209 | 051218 | 051226 | 051234 |
| | 80 | 480...960 | | 051210 | 051219 | 051227 | 051235 |
| | 100 | 600...1200 | | 051211 | 051220 | 051228 | 051236 |

T3 250 – Fixed (F) – 3 Poles

I_u (40 °C) = 250 A - Front terminals (F)

| | |  |  | 1SDA.....R1 | | | |
|-------------------------------------|-----|---|---|-------------|--------|--|--|
| | | | | N | S | | |
| <i>Magnetic only trip unit - MA</i> | | <i>Icu (415 V)</i> | | 36 kA | 50 kA | | |
| | 100 | 600...1200 | | 051315 | 051320 | | |
| | 125 | 750...1500 | | 051316 | 051321 | | |
| | 160 | 960...1920 | | 051317 | 051322 | | |
| | 200 | 1200...2400 | | 051318 | 051323 | | |

Ordering codes

Motor protection circuit-breakers

T4 250 – Fixed (F) – 3 Poles

I_n (40 °C) = 250 A - Front terminals (F)

| | | I_n | I_3 | 1SDA..... R1 | | | |
|-------------------------------------|-----|------------|-------|--------------------|--------|--------|--------|
| | | | | N | S | L | |
| Magnetic only trip unit - MA | | | | Icu (415 V) | 36 kA | 50 kA | 120 kA |
| | 10 | 60...140 | | 055068 | 055071 | 055074 | |
| | 25 | 150...350 | | 055069 | 055072 | 055075 | |
| | 52 | 312...728 | | 058070 | 055073 | 058076 | |
| | 80 | 480...1120 | | 054296 | 054302 | 054308 | |
| | 100 | 600...1400 | | 054297 | 054303 | 054309 | |
| | 125 | 750...1750 | | 054298 | 054304 | 054310 | |
| | 160 | 960...2240 | | 054299 | 054305 | 054311 | |
| | 200 | 1200..2800 | | 054300 | 054306 | 054312 | |

| | | I_n | 1SDA..... R1 | | | |
|--|-----|-------|--------------------|--------|--------|--------|
| | | | N | S | L | |
| Electronic trip unit for motor protection | | | Icu (415 V) | 36 kA | 50 kA | 120 kA |
| PR222MP | 100 | | 054522 | 054525 | 054528 | |
| PR222MP | 160 | | 054523 | 054526 | 054529 | |
| PR222MP | 200 | | 054524 | 054527 | 054530 | |

T5 400 – Fixed (F) – 3 Poles

I_n (40 °C) = 400 A - Front terminals (F)

| | | I_n | 1SDA..... R1 | | | |
|--|-----|-------|--------------------|--------|--------|--------|
| | | | N | S | L | |
| Electronic trip unit for motor protection | | | Icu (415 V) | 36 kA | 50 kA | 120 kA |
| PR222MP | 320 | | 054551 | 054553 | 054555 | |
| PR222MP | 400 | | 054552 | 054554 | 054556 | |

T6 800 – Fixed (F) – 3 Poles

I_n (40 °C) = 800 A - Front terminals (F)

| | | I_n | 1SDA..... R1 | | | | |
|--|-----|-------|--------------------|--------|--------|--------|--------|
| | | | N | S | H | L | |
| Electronic trip unit for motor protection | | | Icu (415 V) | 36 kA | 50 kA | 70 kA | 100 kA |
| PR222MP | 630 | | 060311 | 060312 | 060313 | 060314 | |

Ordering codes

Circuit-breakers for use up to 1150 V AC and 1000 V DC

T4 250 – Fixed (F) – 3 Poles

I_u (40 °C) = 250 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_{cu} (1000 V AC) I_{cu} (1150 V AC) | 1SDA.....R1 | | | |
|-----------------------------|-----|-------|--|-------------|--------|--|--|
| | | | | L | V | | |
| Electronic trip unit | | | | 12 kA | 20 kA | | |
| | | | | 12 kA | 12 kA | | |
| PR221DS-LS/I | 100 | | | 054505 | 054513 | | |
| PR221DS-I | 100 | | | 054506 | 054514 | | |
| PR222DS/P-LSI | 100 | | | 054507 | 054515 | | |
| PR222DS/P-LSIG | 100 | | | 054508 | 054516 | | |
| PR221DS-LS/I | 250 | | | 054509 | 054517 | | |
| PR221DS-I | 250 | | | 054510 | 054518 | | |
| PR222DS/P-LSI | 250 | | | 054511 | 054519 | | |
| PR222DS/P-LSIG | 250 | | | 054512 | 054520 | | |
| PR222MP | 100 | | | 063434 | | | |
| PR222MP | 160 | | | 063435 | | | |
| PR222MP | 200 | | | 063436 | | | |

T4 250 – Fixed (F) – 4 Poles

I_u (40 °C) = 250 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_{cu} (1000 V AC) I_{cu} (1150 V AC) | 1SDA.....R1 | | | |
|-----------------------------|-----|-------|--|-------------|--------|--|--|
| | | | | L | V | | |
| Electronic trip unit | | | | 12 kA | 20 kA | | |
| | | | | 12 kA | 12 kA | | |
| PR221DS-LS/I | 100 | | | 063418 | 063426 | | |
| PR221DS-I | 100 | | | 063419 | 063427 | | |
| PR222DS/P-LSI | 100 | | | 063420 | 063428 | | |
| PR222DS/P-LSIG | 100 | | | 063421 | 063429 | | |
| PR221DS-LS/I | 250 | | | 063422 | 063430 | | |
| PR221DS-I | 250 | | | 063423 | 063431 | | |
| PR222DS/P-LSI | 250 | | | 063424 | 063432 | | |
| PR222DS/P-LSIG | 250 | | | 063425 | 063433 | | |

T4 250 – Fixed (F) – 3 Poles

I_u (40 °C) = 250 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_s | I_{cu} (1000 V AC) I_{cu} (1150 V AC) | 1SDA.....R1 | | |
|---|-----|-------------|-------|--|-------------|--|--|
| | | | | | V | | |
| Thermomagnetic trip unit - TMD and TMA | | | | | 20 kA | | |
| | | | | | 12 kA | | |
| | 32 | 320 | | | 063410 | | |
| | 50 | 500 | | | 063411 | | |
| | 80 | 800 | | | 063412 | | |
| | 100 | 500...1000 | | | 063413 | | |
| | 125 | 625...1250 | | | 063414 | | |
| | 160 | 800...1600 | | | 063415 | | |
| | 200 | 1000...2000 | | | 063416 | | |
| | 250 | 1250...2500 | | | 063417 | | |

Ordering codes

Circuit-breakers for use up to 1150 V AC and 1000 V DC

T4 250 – Fixed (F) – 4 Poles

I_u (40 °C) = 250 A - Front terminals for copper cables (FC Cu)

| | | In | I _s | 1SDA..... R1 | | | |
|---|-----|-------------|----------------|-----------------|--------|--|--|
| | | | | V | | | |
| | | | | Icu (1000 V AC) | 20 kA | | |
| | | | | Icu (1150 V AC) | 12 kA | | |
| | | | | Icu (1000 V DC) | 40 kA | | |
| Thermomagnetic trip unit - TMD and TMA | | | | | | | |
| | 32 | 320 | | | 054497 | | |
| | 50 | 500 | | | 054498 | | |
| | 80 | 800 | | | 054499 | | |
| | 100 | 500...1000 | | | 054500 | | |
| | 125 | 625...1250 | | | 054501 | | |
| | 160 | 800...1600 | | | 054502 | | |
| | 200 | 1000...2000 | | | 054503 | | |
| | 250 | 1250...2500 | | | 054504 | | |

T5 400 – Fixed (F) – 3 Poles

I_u (40 °C) = 400 A - Front terminals for copper cables (FC Cu)

| | | In | 1SDA..... R1 | | | | |
|-----------------------------|-----|----|--------------|-----------------|--------|-------|--|
| | | | | L | V | | |
| | | | | Icu (1000 V AC) | 12 kA | 20 kA | |
| | | | | Icu (1150 V AC) | 12 kA | 12 kA | |
| Electronic trip unit | | | | | | | |
| PR221DS-LS/I | 320 | | | 063477 | 063485 | | |
| PR221DS-I | 320 | | | 063478 | 063486 | | |
| PR222DS/P-LSI | 320 | | | 063479 | 063487 | | |
| PR222DS/P-LSIG | 320 | | | 063480 | 063488 | | |
| PR221DS-LS/I | 400 | | | 054535 | 054539 | | |
| PR221DS-I | 400 | | | 054536 | 054540 | | |
| PR222DS/P-LSI | 400 | | | 054537 | 054541 | | |
| PR222DS/P-LSIG | 400 | | | 054538 | 054542 | | |
| PR222MP | 320 | | | 063456 | | | |
| PR222MP | 400 | | | 063457 | | | |

T5 400 – Fixed (F) – 4 Poles

I_u (40 °C) = 400 A - Front terminals for copper cables (FC Cu)

| | | In | 1SDA..... R1 | | | | |
|-----------------------------|-----|----|--------------|-----------------|--------|-------|--|
| | | | | L | V | | |
| | | | | Icu (1000 V AC) | 12 kA | 20 kA | |
| | | | | Icu (1150 V AC) | 12 kA | 12 kA | |
| Electronic trip unit | | | | | | | |
| PR221DS-LS/I | 320 | | | 063481 | 063489 | | |
| PR221DS-I | 320 | | | 063482 | 063490 | | |
| PR222DS/P-LSI | 320 | | | 063483 | 063491 | | |
| PR222DS/P-LSIG | 320 | | | 063484 | 063492 | | |
| PR221DS-LS/I | 400 | | | 063440 | 063444 | | |
| PR221DS-I | 400 | | | 063441 | 063445 | | |
| PR222DS/P-LSI | 400 | | | 063442 | 063446 | | |
| PR222DS/P-LSIG | 400 | | | 063443 | 063447 | | |

T5 400 – Fixed (F) – 3 Poles

I_u (40 °C) = 400 A - Front terminals for copper cables (FC Cu)

| | | In | I_s | 1SDA.....R1 | | | |
|---------------------------------------|-----|-------------|----------------------|-----------------|--------|--|--|
| | | | | V | | | |
| | | | | Icu (1000 V AC) | 20 kA | | |
| | | | | Icu (1150 V AC) | 12 kA | | |
| Thermomagnetic trip unit - TMA | | | | | | | |
| | 320 | 1600...3200 | | | 063437 | | |
| | 400 | 2000...4000 | | | 063438 | | |

T5 400 – Fixed (F) – 4 Poles

I_u (40 °C) = 400 A - Front terminals for copper cables (FC Cu)

| | | In | I_s | 1SDA.....R1 | | | |
|---------------------------------------|-----|-------------|----------------------|-----------------|--------|--|--|
| | | | | V | | | |
| | | | | Icu (1000 V AC) | 20 kA | | |
| | | | | Icu (1150 V AC) | 12 kA | | |
| | | | | Icu (1000 V DC) | 40 kA | | |
| Thermomagnetic trip unit - TMA | | | | | | | |
| | 320 | 1600...3200 | | | 054531 | | |
| | 400 | 2000...4000 | | | 054532 | | |

Ordering codes

Circuit-breakers for use up to 1150 V AC and 1000 V DC

T5 630 – Fixed (F) – 3 Poles

I_n (40 °C) = 630 A - Front terminals for copper cables (FC Cu)

| | | I_n | 1SDA..... R1 | | | |
|-----------------------------|-----|-------|-----------------|-----------------|--|--|
| | | | L | V | | |
| | | | 12 kA | 20 kA | | |
| | | | Icu (1000 V AC) | Icu (1150 V AC) | | |
| Electronic trip unit | | | | | | |
| PR221DS-LS/I | 630 | | 054543 | 054547 | | |
| PR221DS-I | 630 | | 054544 | 054548 | | |
| PR222DS/P-LSI | 630 | | 054545 | 054549 | | |
| PR222DS/P-LSIG | 630 | | 054546 | 054550 | | |

T5 630 – Fixed (F) – 4 Poles

I_n (40 °C) = 630 A - Front terminals for copper cables (FC Cu)

| | | I_n | 1SDA..... R1 | | | |
|-----------------------------|-----|-------|-----------------|-----------------|--|--|
| | | | L | V | | |
| | | | 12 kA | 20 kA | | |
| | | | Icu (1000 V AC) | Icu (1150 V AC) | | |
| Electronic trip unit | | | | | | |
| PR221DS-LS/I | 630 | | 063448 | 063452 | | |
| PR221DS-I | 630 | | 063449 | 063453 | | |
| PR222DS/P-LSI | 630 | | 063450 | 063454 | | |
| PR222DS/P-LSIG | 630 | | 063451 | 063455 | | |

T5 630 – Fixed (F) – 3 Poles

I_n (40 °C) = 630 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_3 | 1SDA..... R1 | | | |
|---------------------------------------|-----|-------------|-------|--------------|--|--|--|
| | | | | V | | | |
| | | | | 20 kA | | | |
| | | | | 12 kA | | | |
| Thermomagnetic trip unit - TMA | | | | | | | |
| | 500 | 2500...5000 | | 063439 | | | |

T5 630 – Fixed (F) – 4 Poles

I_n (40 °C) = 630 A - Front terminals for copper cables (FC Cu)

| | | I_n | I_3 | 1SDA..... R1 | | | |
|---------------------------------------|-----|-------------|-------|--------------|--|--|--|
| | | | | V | | | |
| | | | | 20 kA | | | |
| | | | | 12 kA | | | |
| | | | | 40 kA | | | |
| Thermomagnetic trip unit - TMA | | | | | | | |
| | 500 | 2500...5000 | | 054533 | | | |

T6 630 – Fixed (F) – 3 Poles

I_u (40 °C) = 630 A - Front terminals (F)

| | | In | | 1SDA.....R1 | | | |
|-----------------------------|-----|-----------|--|------------------------|--------|--|--|
| | | | | L | | | |
| | | | | 12 kA | | | |
| Electronic trip unit | | | | Icu (1000 V AC) | | | |
| PR221DS-LS/I | 630 | | | | 060319 | | |
| PR221DS-I | 630 | | | | 060320 | | |
| PR222DS/P-LSI | 630 | | | | 060321 | | |
| PR222DS/P-LSIG | 630 | | | | 060322 | | |

T6 630 – Fixed (F) – 4 Poles

I_u (40 °C) = 630 A - Front terminals (F)

| | | In | | I_s | | 1SDA.....R1 | | | |
|---------------------------------------|-----|-------------|--|------------------------|------------------------|-------------|--|--|--|
| | | | | | | V | | | |
| | | | | | | 12 kA | | | |
| | | | | | | 40 kA | | | |
| Thermomagnetic trip unit - TMA | | | | Icu (1000 V AC) | Icu (1000 V DC) | | | | |
| | 630 | 3150...6300 | | | | 060315 | | | |

T6 800 – Fixed (F) – 3 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| | | In | | 1SDA.....R1 | | | |
|-----------------------------|-----|-----------|--|------------------------|--------|--|--|
| | | | | L | | | |
| | | | | 12 kA | | | |
| Electronic trip unit | | | | Icu (1000 V AC) | | | |
| PR221DS-LS/I | 800 | | | | 060323 | | |
| PR221DS-I | 800 | | | | 060324 | | |
| PR222DS/P-LSI | 800 | | | | 060325 | | |
| PR222DS/P-LSIG | 800 | | | | 060326 | | |


T6 800 – Fixed (F) – 4 Poles

I_u (40 °C) = 800 A - Front terminals (F)

| | | In | | I_s | | 1SDA.....R1 | | | |
|---------------------------------------|-----|-------------|--|------------------------|------------------------|-------------|--|--|--|
| | | | | | | V | | | |
| | | | | | | 12 kA | | | |
| | | | | | | 40 kA | | | |
| Thermomagnetic trip unit - TMA | | | | Icu (1000 V AC) | Icu (1000 V DC) | | | | |
| | 800 | 4000...8000 | | | | 060317 | | | |

Ordering codes

Switch-disconnectors

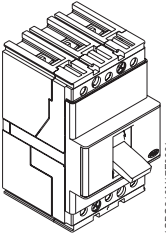


1SDC210N17R0001

T1D 160 – Fixed (F)

$I_{th} (40\text{ }^{\circ}\text{C}) = 160\text{ A}$ - Front terminals for copper cables (FC Cu)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 2 kA | |
| | | 051325 | 051326 |

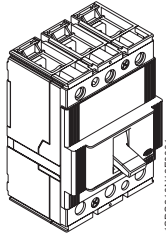


1SDC210N18R0001

T3D 250 – Fixed (F)

$I_{th} (40\text{ }^{\circ}\text{C}) = 250\text{ A}$ - Front terminals (F)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 3.6 kA | |
| | | 051327 | 051328 |

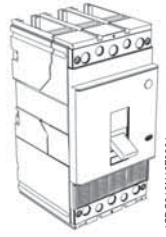


1SDC210N19R0001

T4D 250 – Fixed (F)

$I_{th} (40\text{ }^{\circ}\text{C}) = 250\text{ A}$ - Front terminals (F)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 3.6 kA | |
| | | 057172 | 057173 |

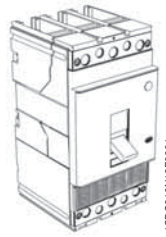

1SDC210N19R0001

T4D 320 – Fixed (F)

$I_{th} (40\text{ }^{\circ}\text{C}) = 320\text{ A}$ - Front terminals (F)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 3.6 kA | |
| | | 054597 | 054598 |

T5D 400 – Fixed (F)


$I_{th} (40\text{ }^{\circ}\text{C}) = 400\text{ A}$ - Front terminals (F)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 6 kA | |
| | | 054599 | 054600 |

T5D 630 – Fixed (F)

$I_{th} (40\text{ }^{\circ}\text{C}) = 630\text{ A}$ - Front terminals (F)

| | I_{cw} | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | | 6 kA | |
| | | 054601 | 054602 |

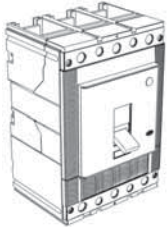

T6D 630 – Fixed (F)

I_{th} (40 °C) = 630 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 15 kA | |
| | | 060343 | 060344 |

T6D 800 – Fixed (F)

I_{th} (40 °C) = 800 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 15 kA | |
| | | 060345 | 06034 |

T6D 1000 – Fixed (F)

I_{th} (40 °C) = 1000 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 15 kA | |
| | | 060594 | 060595 |

Note: The T6 1000 A circuit-breakers must necessarily have one of the admissible types of terminals mounted (see page 3/9)

T7D 1000 – Fixed (F)

I_{th} (40 °C) = 1000 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 20 kA | |
| | | 062032 | 062033 |

T7D 1250 – Fixed (F)

I_{th} (40 °C) = 1250 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 20 kA | |
| | | 062036 | 062037 |

T7D 1600 – Fixed (F)

I_{th} (40 °C) = 1600 A - Front terminals (F)

| | | 1SDA..... R1 | |
|--|----------|--------------|---------|
| | | 3 poles | 4 poles |
| | I_{cw} | 20 kA | |
| | | 062040 | 062041 |

Ordering codes

Switch-disconnectors

T7D 1000 M – Fixed (F)

Ith (40 °C) = 1000 A - Front terminals (F)

| | Icw | 1SDA..... R1 | |
|--|-----|--------------|---------|
| | | 3 poles | 4 poles |
| | | 20 kA | |
| | | 062034 | 062035 |

T7D 1250 M – Fixed (F)

Ith (40 °C) = 1250 A - Front terminals (F)

| | Icw | 1SDA..... R1 | |
|--|-----|--------------|---------|
| | | 3 poles | 4 poles |
| | | 20 kA | |
| | | 062038 | 062039 |

T7D 1600 M - Fixed (F)

Ith (40 °C) = 1600 A - Front terminals (F)

| | Icw | 1SDA..... R1 | |
|--|-----|--------------|---------|
| | | 3 poles | 4 poles |
| | | 20 kA | |
| | | 062042 | 062043 |

Ordering codes

Breaking units

T4 250

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T4N 250 Breaking unit | 054557 | 054562 |
| T4S 250 Breaking unit | 054558 | 054563 |
| T4H 250 Breaking unit | 054559 | 054564 |
| T4L 250 Breaking unit | 054560 | 054565 |
| T4V 250 Breaking unit | 054561 | 054566 |

T4 320

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T4N 320 Breaking unit | 054567 | 054572 |
| T4S 320 Breaking unit | 054568 | 054573 |
| T4H 320 Breaking unit | 054569 | 054574 |
| T4L 320 Breaking unit | 054570 | 054575 |
| T4V 320 Breaking unit | 054571 | 054576 |

T5 400

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T5N 400 Breaking unit | 054577 | 054582 |
| T5S 400 Breaking unit | 054578 | 054583 |
| T5H 400 Breaking unit | 054579 | 054584 |
| T5L 400 Breaking unit | 054580 | 054585 |
| T5V 400 Breaking unit | 054581 | 054586 |

T5 630

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T5N 630 Breaking unit | 054587 | 054592 |
| T5S 630 Breaking unit | 054588 | 054593 |
| T5H 630 Breaking unit | 054589 | 054594 |
| T5L 630 Breaking unit | 054590 | 054595 |
| T5V 630 Breaking unit | 054591 | 054596 |

Ordering codes

Breaking units

T6 630

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T6N 630 Breaking unit | 060327 | 060331 |
| T6S 630 Breaking unit | 060328 | 060332 |
| T6H 630 Breaking unit | 060329 | 060333 |
| T6L 630 Breaking unit | 060330 | 060334 |

T6 800

F = Front terminals

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T6N 800 Breaking unit | 060335 | 060339 |
| T6S 800 Breaking unit | 060336 | 060340 |
| T6H 800 Breaking unit | 060337 | 060341 |
| T6L 800 Breaking unit | 060338 | 060342 |

T6 1000


F = Front terminals

| | 1SDA..... R1 | |
|------------------------|--------------|---------|
| | 3 poles | 4 poles |
| T6N 1000 Breaking unit | 060586 | 060590 |
| T6S 1000 Breaking unit | 060587 | 060591 |
| T6H 1000 Breaking unit | 060588 | 060592 |
| T6L 1000 Breaking unit | 060589 | 060593 |


Note: The T6 1000 A breaking units must necessarily have one of the admissible types of terminals mounted (see page 3/9)

Ordering codes

Trip units

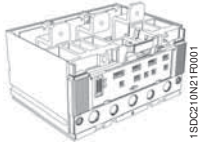

1SDC210N21R001

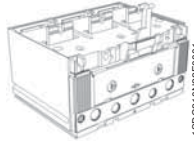

1SDC210N21R001

Trip units for T4

| | In | I ₃ | 1SDA.....R1 | | |
|---|-----|----------------|-------------|---------|---------|
| | | | 3 poles | 4 poles | |
| | | | | N= 50% | N= 100% |
| Thermomagnetic trip unit - TMD and TMA | | | | | |
| TMD 20-200 | 20 | 320 | 054651 | | 054660 |
| TMD 32-320 | 32 | 320 | 054652 | | 054661 |
| TMD 50-500 | 50 | 500 | 054653 | | 054662 |
| TMA 80-800 | 80 | 400...800 | 054654 | | 054663 |
| TMA 100-1000 | 100 | 500...1000 | 054655 | | 054664 |
| TMA 125-1250 | 125 | 625...1250 | 054656 | 054665 | 054671 |
| TMA 160-1600 | 160 | 800...1600 | 054657 | 054666 | 054672 |
| TMA 200-2000 | 200 | 1000...2000 | 054658 | 054667 | 054673 |
| TMA 250-2500 | 250 | 1250...2500 | 054659 | 054668 | 054674 |


| | In | | 1SDA.....R1 | | |
|-----------------------------|-----|--|-------------|---------|--------|
| | | | 3 poles | 4 poles | |
| Electronic trip unit | | | | | |
| PR221DS-LS/I | 100 | | 054603 | | 054615 |
| PR221DS-LS/I | 160 | | 054604 | | 054616 |
| PR221DS-LS/I | 250 | | 054605 | | 054617 |
| PR221DS-LS/I | 320 | | 054627 | | 054631 |
| PR221DS-I | 100 | | 054606 | | 054618 |
| PR221DS-I | 160 | | 054607 | | 054619 |
| PR221DS-I | 250 | | 054608 | | 054620 |
| PR221DS-I | 320 | | 054628 | | 054632 |
| PR222DS/P-LSI | 100 | | 054609 | | 054621 |
| PR222DS/P-LSI | 160 | | 054610 | | 054622 |
| PR222DS/P-LSI | 250 | | 054611 | | 054623 |
| PR222DS/P-LSI | 320 | | 054629 | | 054633 |
| PR222DS/P-LSIG | 100 | | 054612 | | 054624 |
| PR222DS/P-LSIG | 160 | | 054613 | | 054625 |
| PR222DS/P-LSIG | 250 | | 054614 | | 054626 |
| PR222DS/P-LSIG | 320 | | 054630 | | 054634 |
| PR222DS/PD-LSI | 100 | | 054635 | | 054641 |
| PR222DS/PD-LSI | 160 | | 054636 | | 054642 |
| PR222DS/PD-LSI | 250 | | 054637 | | 054643 |
| PR222DS/PD-LSI | 320 | | 054647 | | 054649 |
| PR222DS/PD-LSIG | 100 | | 054638 | | 054644 |
| PR222DS/PD-LSIG | 160 | | 054639 | | 054645 |
| PR222DS/PD-LSIG | 250 | | 054640 | | 054646 |
| PR222DS/PD-LSIG | 320 | | 054648 | | 054650 |
| PR223DS | 100 | | 059559 | | 059560 |
| PR223DS | 160 | | 059561 | | 059562 |
| PR223DS | 250 | | 059563 | | 059564 |
| PR223DS | 320 | | 059565 | | 059566 |

| | In | | 1SDA.....R1 | | |
|--|-----|--|-------------|--|--|
| | | | 3 poles | | |
| Electronic trip unit for motor protection | | | | | |
| PR222MP | 100 | | 054688 | | |
| PR222MP | 160 | | 054689 | | |
| PR222MP | 200 | | 054690 | | |

| | In | I ₃ | 1SDA.....R1 | | |
|-------------------------------------|-----|----------------|-------------|---------|---------|
| | | | 3 poles | 4 poles | |
| | | | | N= 50% | N= 100% |
| Magnetic only trip unit - MA | | | | | |
| MA 10-140 | 10 | 60...140 | 055077 | | 055080 |
| MA 25-350 | 25 | 150...350 | 055078 | | 055081 |
| MA 52-728 | 52 | 312...728 | 055079 | | 055082 |
| MA 80-1120 | 80 | 480...1120 | 054676 | | 054682 |
| MA 100-1400 | 100 | 600...1400 | 054677 | | 054683 |
| MA 125-1750 | 125 | 750...1750 | 054678 | 054684 | |
| MA 160-2240 | 160 | 960...2240 | 054679 | 054685 | |
| MA 200-2800 | 200 | 1200...2800 | 054680 | 054686 | |

Ordering codes

Trip units

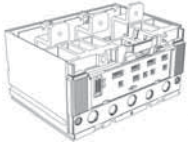

1SDC210N21FR001

Trip units for T5

| | In | I ₃ | 1SDA R1 | | |
|---------------------------------------|-----|----------------|---------------|---------|---------|
| | | | 3 poles | 4 poles | |
| | | | | N= 50% | N= 100% |
| Thermomagnetic trip unit - TMA | | | | | |
| TMA 320-3200 | 320 | 1600...3200 | 054723 | 054725 | 054731 |
| TMA 400-4000 | 400 | 2000...4000 | 054724 | 054726 | 054732 |
| TMA 500-5000 | 500 | 2500...5000 | 054727 | 054729 | 054733 |

| | In | I ₃ | 1SDA R1 | | |
|--|-----|----------------|---------------|---------|---------|
| | | | 3 poles | 4 poles | |
| | | | | N= 50% | N= 100% |
| Thermomagnetic trip unit for generator protection - TMG | | | | | |
| TMG 320-1600 | 320 | 800...1600 | 055093 | | 055101 |
| TMG 400-2000 | 400 | 1000...2000 | 055098 | | 055102 |
| TMG 500-2500 | 500 | 1250...2500 | 055099 | | 055103 |

| | In | 1SDA R1 | | |
|-----------------------------|-----|---------------|---------|--------|
| | | 3 poles | 4 poles | |
| | | | | |
| Electronic trip unit | | | | |
| PR221DS-LS/I | 320 | 054691 | | 054699 |
| PR221DS-LS/I | 400 | 054692 | | 054700 |
| PR221DS-LS/I | 630 | 054707 | | 055159 |
| PR221DS-I | 320 | 054693 | | 054701 |
| PR221DS-I | 400 | 054694 | | 054702 |
| PR221DS-I | 630 | 054708 | | 055160 |
| PR222DS/P-LSI | 320 | 054695 | | 054703 |
| PR222DS/P-LSI | 400 | 054696 | | 054704 |
| PR222DS/P-LSI | 630 | 054709 | | 055161 |
| PR222DS/P-LSIG | 320 | 054697 | | 054705 |
| PR222DS/P-LSIG | 400 | 054698 | | 054706 |
| PR222DS/P-LSIG | 630 | 054710 | | 055162 |
| PR222DS/PD-LSI | 320 | 054711 | | 054715 |
| PR222DS/PD-LSI | 400 | 054712 | | 054716 |
| PR222DS/PD-LSI | 630 | 054719 | | 054721 |
| PR222DS/PD-LSIG | 320 | 054713 | | 054717 |
| PR222DS/PD-LSIG | 400 | 054714 | | 054718 |
| PR222DS/PD-LSIG | 630 | 054720 | | 054722 |
| PR223DS | 320 | 059567 | | 059568 |
| PR223DS | 400 | 059569 | | 059570 |
| PR223DS | 630 | 059571 | | 059572 |

| | In | 1SDA R1 | | |
|--|-----|---------------|--|--|
| | | 3 poles | | |
| Electronic trip unit for motor protection | | | | |
| PR222MP | 320 | 054735 | | |
| PR222MP | 400 | 054736 | | |

Trip units for T6

| | In | I _n | 1SDA.....R1 | | |
|---------------------------------------|-----|----------------|-------------|---------|---------|
| | | | 3 poles | 4 poles | |
| | | | | N= 50% | N= 100% |
| Thermomagnetic trip unit - TMA | | | | | |
| TMA 630-6300 | 630 | 3150...6300 | 060347 | 060348 | 060472 |
| TMA 800-8000 | 800 | 4000...8000 | 060349 | 060350 | 060473 |

| | In | 1SDA.....R1 | | |
|-----------------------------|------|-------------|---------|--|
| | | 3 poles | 4 poles | |
| Electronic trip unit | | | | |
| PR221DS-LS/I | 630 | 060351 | 060357 | |
| PR221DS-LS/I | 800 | 060363 | 060369 | |
| PR221DS-LS/I | 1000 | 060596 | 060602 | |
| PR221DS-I | 630 | 060352 | 060358 | |
| PR221DS-I | 800 | 060364 | 060370 | |
| PR221DS-I | 1000 | 060597 | 060603 | |
| PR222DS/P-LSI | 630 | 060353 | 060359 | |
| PR222DS/P-LSI | 800 | 060365 | 060371 | |
| PR222DS/P-LSI | 1000 | 060598 | 060604 | |
| PR222DS/P-LSIG | 630 | 060354 | 060360 | |
| PR222DS/P-LSIG | 800 | 060366 | 060372 | |
| PR222DS/P-LSIG | 1000 | 060599 | 060605 | |
| PR222DS/PD-LSI | 630 | 060355 | 060361 | |
| PR222DS/PD-LSI | 800 | 060367 | 060373 | |
| PR222DS/PD-LSI | 1000 | 060600 | 060606 | |
| PR222DS/PD-LSIG | 630 | 060356 | 060362 | |
| PR222DS/PD-LSIG | 800 | 060368 | 060374 | |
| PR222DS/PD-LSIG | 1000 | 060601 | 060607 | |
| PR223DS | 630 | 060376 | 060377 | |
| PR223DS | 800 | 060378 | 060379 | |
| PR223DS | 1000 | 060608 | 060609 | |

| | In | 1SDA.....R1 | | |
|--|-----|-------------|--|--|
| | | 3 poles | | |
| Electronic trip unit for motor protection | | | | |
| PR222MP | 630 | 060375 | | |


Note: The T6 1000 A breaking units must necessarily have one of the admissible types of terminals mounted (see page 3/9)

Trip units for T7-T7M

| Electronic trip unit | 1SDA.....R1 | | |
|----------------------|-------------|--------|--|
| | | | |
| PR231/P-LS/I | | 063128 | |
| PR231/P-I | | 063129 | |
| PR232/P-LSI | | 063130 | |
| PR331/P-LSIG | | 063133 | |
| PR332/P-LI | | 063134 | |
| PR332/P-LSI | | 063135 | |
| PR332/P-LSIG | | 063136 | |
| PR332/P-LSIRc | | 063137 | |

Ordering codes

Fixed parts, conversion kit and accessories for fixed parts

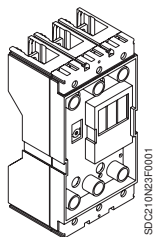

Plug-in (P) – Fixed part

F = Front terminals

| | 1SDA..... R1 | |
|-----------|--------------|---------|
| | 3 poles | 4 poles |
| T2 P FP F | 051329 | 051330 |
| T3 P FP F | 051331 | 051332 |

EF = Front extended terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 P FP EF | 054737 | 054740 |
| T5 400 P FP EF | 054749 | 054752 |
| T5 630 P FP EF | 054762 | 054765 |

VR = Rear flat vertical terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 P FP VR | 054738 | 054741 |
| T5 400 P FP VR | 054750 | 054753 |
| T5 630 P FP VR | 054763 | 054766 |

HR = Rear flat horizontal terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 P FP HR | 054739 | 054742 |
| T5 400 P FP HR | 054751 | 054754 |
| T5 630 P FP HR | 054764 | 054767 |

FC Cu = Front terminals for copper cables

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 250 P FP 1000 V AC | 063458 | 063459 |
| T5 400 P FP 1000 V AC | 063462 | 063463 |

Withdrawable (W) – Fixed part

EF = Front extended terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 W FP EF | 054743 | 054746 |
| T5 W 400 FP EF | 054755 | 054758 |
| T5 W 630 FP EF | 054768 | 054771 |
| T6 W FP EF | 060384 | 060387 |
| T7-T7M W FP EF | 062045 | 062049 |

VR = Rear flat vertical terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 W FP VR | 054744 | 054747 |
| T5 W 400 FP VR | 054756 | 054759 |
| T5 W 630 FP VR | 054769 | 054772 |
| T6 W FP VR | 060386 | 060389 |

HR = Rear flat horizontal terminals

| | 1SDA..... R1 | |
|----------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 W FP HR | 054745 | 054748 |
| T5 W 400 FP HR | 054757 | 054761 |
| T5 W 630 FP HR | 054770 | 054774 |
| T6 W FP HR | 060385 | 060388 |

HR/VR = Rear flat terminals

| | 1SDA..... R1 | |
|-------------------|--------------|---------|
| | 3 poles | 4 poles |
| T7-T7M W FP HR/VR | 062044 | 062048 |

Nota: To order the HR/VR terminals mounted vertically, the extra code 1SDA063571R1 must be specified.

FC Cu = Front terminals for copper cables

| | 1SDA..... R1 | |
|-----------------------|--------------|---------|
| | 3 poles | 4 poles |
| T4 250 W FP 1000 V AC | 063460 | 063461 |
| T5 400 W FP 1000 V AC | 063464 | 063465 |

Ordering codes

Fixed parts, conversion kit and accessories for fixed parts



Conversion of the version

Conversion kit from fixed into moving part of plug-in T2...T5

| Type | 1SDA.....R1 | |
|-----------------|-------------|---------|
| | 3 poles | 4 poles |
| Kit P MP T2 | 051411 | 051412 |
| Kit P MP T3 | 051413 | 051414 |
| Kit P MP T4 | 054839 | 054840 |
| Kit P MP T5 400 | 054843 | 054844 |
| Kit P MP T5 630 | 054847 | 054848 |

Note: The plug-in version must be composed as follows
 1) Fixed circuit-breaker
 2) Conversion kit from fixed into moving part of plug-in
 3) Fixed part of plug-in

Conversion kit from fixed into moving part of withdrawable T4...T7

| Type | 1SDA.....R1 | |
|-----------------|-------------|---------|
| | 3 poles | 4 poles |
| Kit W MP T4 | 054841 | 054842 |
| Kit W MP T5 400 | 054845 | 054846 |
| Kit W MP T5 630 | 054849 | 054850 |
| Kit W MP T6 | 060390 | 060391 |
| Kit W MP T7-T7M | 062162 | 062163 |

Note: The withdrawable version must be composed as follows
 1) Fixed circuit-breaker
 2) Conversion kit from fixed into moving part of withdrawable
 3) Fixed part of withdrawable
 4) Front for lever operating mechanism or rotary handle or motor operator
 5) Sliding contacts blocks if the circuit-breaker is automatic or fitted with electrical accessories (only for T7)

Sliding contacts blocks for T7

| Type | 1SDA.....R1 |
|-----------------------------|-------------|
| Lef block - MP T7 - T7M | 062164 |
| Central block - MP T7 - T7M | 062165 |
| Right block - MP T7 - T7M | 062166 |
| Left block - FP T7 | 063572 |
| Left block - FP T7M | 062167 |
| Central block - FP T7 - T7M | 062168 |
| Right block - FP T7 - T7M | 062169 |


Note: Always to be ordered in pairs (block for PM + block for PF) if the circuit-breaker is automatic or fitted with electrical accessories for withdrawable version. For more information, please see page 3/4.

Conversion kit from fixed into moving part of plug-in for RC222 and RC223

| Type | 1SDA.....R1 |
|--------------------|-------------|
| | 4 poles |
| Kit P MP RC T4 | 054851 |
| Kit P MP RC T5 400 | 054852 |
| Kit P MP RC T5 630 | 054853 |

Conversion kit from plug-in into withdrawable for RC222 and RC223

| Type | 1SDA.....R1 |
|-------------------|-------------|
| | 4 poles |
| Kit W MP RC T4-T5 | 055366 |

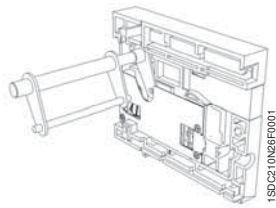

Conversion kit from fixed part of plug-in into fixed part of withdrawable

| Type | 1SDA.....R1 |
|---------------------|-------------|
| Kit FP P in FP W T4 | 054854 |
| Kit FP P in FP W T5 | 054855 |

Terminals for fixed parts T4...T7

| Type | 1SDA.....R1 | |
|---|-------------|----------|
| | 3 pieces | 4 pieces |
| Front extended terminals - EF | | |
| EF T6 | 013984 | 013985 |
| EF T7-T7M | 062171 | 062172 |
| Front extended spread terminals - ES | | |
| ES T5 (630 A) | 055271 | 055272 |
| Front terminals for copper cables - FC Cu | | |
| FC Cu T4 1x185mm ² | 054831 | 054832 |
| FC Cu T5 1x240mm ² | 054833 | 054834 |
| Front terminals for copper-aluminium cables - FC CuAl | | |
| FC CuAl T4 1x185mm ² | 054835 | 054836 |
| FC CuAl T5 1x240mm ² | 054837 | 054838 |
| Rear flat vertical terminals - VR | | |
| VR T6 | 013988 | 013989 |
| Rear flat horizontal terminals - HR | | |
| HR T6 | 013986 | 013987 |
| Rear flat terminals - HR/VR | | |
| HR/VR T7-T7M | 063089 | 063090 |

Note: The FC Cu and FC CuAl terminals are supplied with insulating terminal covers for TC-FP fixed parts.

Lock for fixed part of withdrawable circuit-breaker


| Type | 1SDA.....R1 |
|--|-------------|
| | T4-T5-T6 |
| KLF-D FP - Different key for each circuit-breaker | 055230 |
| KLF-S FP - Same key for different groups of circuit-breakers | 055231 |
| PLL FP - Lock padlocks | 055232 |
| KLF-D Ronis FP - Lock type Ronis | 055233 |

Terminal covers for fixed part - TC-FP

| Type | 1SDA.....R1 | |
|--------------|-------------|---------|
| | 3 poles | 4 poles |
| TC-FP T4 | 054857 | 054858 |
| TC-FP T5 400 | 054859 | 054861 |

Ordering codes

Accessories

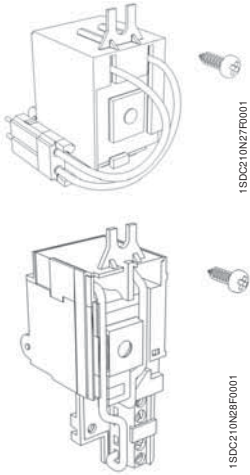

Service releases

Shunt opening release - SOR


| Type | 1SDA.....R1 | | |
|---------------------------------------|-------------|----------|--------|
| | T1-T2-T3 | T4-T5-T6 | T7-T7M |
| uncabled version | | | |
| SOR 12 V DC | 053000 | 054862 | |
| SOR 24 V AC / DC | | | 062065 |
| SOR 24...30 V AC / DC | 051333 | 054863 | |
| SOR 30 V AC / DC | | | 062066 |
| SOR 48 V AC / DC | | | 062067 |
| SOR 48...60 V AC / DC | 051334 | 054864 | |
| SOR 60 V AC / DC | | | 062068 |
| SOR 110...120 V AC / DC | | | 062069 |
| SOR 110...127 V AC - 110...125 V DC | 051335 | 054865 | |
| SOR 120...127 V AC / DC | | | 063547 |
| SOR 220...240 V AC / DC | | | 063548 |
| SOR 220...240 V AC - 220...250 V DC | 051336 | 054866 | |
| SOR 240...250 V AC / DC | | | 062070 |
| SOR 380...400 V AC | | | 062071 |
| SOR 380...440 V AC | 051337 | 054867 | |
| SOR 415...440 V AC | | | 062072 |
| SOR 480...525 V AC | 051338 | 054868 | |
| cabled version | | | |
| SOR-C 12 V DC | 053001 | 054869 | |
| SOR-C 24...30 V AC / DC | 051339 | 054870 | |
| SOR-C 48...60 V AC / DC | 051340 | 054871 | |
| SOR-C 110...127 V AC - 110...125 V DC | 051341 | 054872 | |
| SOR-C 220...240 V AC - 220...250 V DC | 051342 | 054873 | |
| SOR-C 380...440 V AC | 051343 | 054874 | |
| SOR-C 480...525 V AC | 051344 | 054875 | |

SOR Test Unit

| Type | 1SDA.....R1 |
|--------|-------------|
| T7-T7M | 050228 |

Shunt closing release - SCR

| Type | 1SDA.....R1 |
|-------------------------|-------------|
| | T7M |
| cabled version | |
| SCR 24 V AC / DC | 062076 |
| SCR 30 V AC / DC | 062077 |
| SCR 48 V AC / DC | 062078 |
| SCR 60 V AC / DC | 062079 |
| SCR 110...120 V AC / DC | 062080 |
| SCR 120...127 V AC / DC | 063549 |
| SCR 220...240 V AC / DC | 063550 |
| SCR 240...250 V AC / DC | 062081 |
| SCR 380...400 V AC | 062082 |
| SCR 415...440 V AC | 062083 |

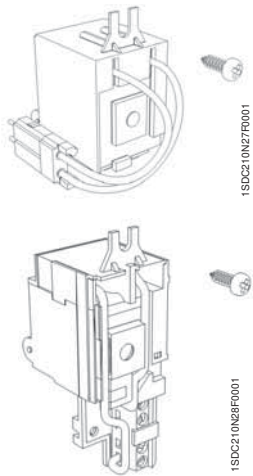

Undervoltage release - UVR

| Type | 1SDA.....R1 | | |
|---------------------------------------|-------------|----------|--------|
| | T1-T2-T3 | T4-T5-T6 | T7-T7M |
| uncabled version | | | |
| UVR 24 V AC / DC | | | 062087 |
| UVR 24...30 V AC / DC | 051345 | 054880 | |
| UVR 30 V AC / DC | | | 062088 |
| UVR 48 V AC / DC | 051346 | 054881 | 062089 |
| UVR 60 V AC/DC | 052333 | 054882 | 062090 |
| UVR 110...120 V AC / DC | | | 062091 |
| UVR 110...127 V AC - 110...125 V DC | 051347 | 054883 | |
| UVR 120...127 V AC / DC | | | 063551 |
| UVR 220...240 V AC / DC | | | 063552 |
| UVR 220...240 V AC - 220...250 V DC | 051348 | 054884 | |
| UVR 240...250 V AC / DC | | | 062092 |
| UVR 380...400 V AC | | | 062093 |
| UVR 380...440 V AC | 051349 | 054885 | |
| UVR 415...440 V AC | | | 062094 |
| UVR 480...525 V AC | 051350 | 054886 | |
| cabled version | | | |
| UVR-C 24...30 V AC / DC | 051351 | 054887 | |
| UVR-C 48 V AC / DC | 051352 | 054888 | |
| UVR-C 60 V AC/DC | 052335 | 054889 | |
| UVR-C 110...127 V AC - 110...125 V DC | 051353 | 054890 | |
| UVR-C 220...240 V AC - 220...250 V DC | 051354 | 054891 | |
| UVR-C 380...440 V AC | 051355 | 054892 | |
| UVR-C 480...525 V AC | 051356 | 054893 | |

Shunt opening release with permanent operation - PS-SOR

| Type | 1SDA.....R1 |
|-------------------------|-------------|
| | T4-T5-T6 |
| uncabled version | |
| PS-SOR 24...30 V DC | 054876 |
| PS-SOR 110...120 V AC | 054877 |
| cabled version | |
| PS-SOR-C 24...30 V DC | 054878 |
| PS-SOR-C 110...120 V AC | 054879 |

Connectors and socket-plugs for electrical accessories

| Type | 1SDA.....R1 | |
|----------------------------------|-------------|----------|
| | T1-T2-T3 | T4-T5-T6 |
| Socket-plug 12 poles | 051362 | 051362 |
| Socket-plug 6 poles | 051363 | 051363 |
| Socket-plug 3 poles | 051364 | 051364 |
| 3-way connector for second SOR-C | | 055273 |

Loose cables

| Type | 1SDA.....R1 |
|-------------------------------|-------------|
| | T1-T2-T3 |
| Kit 12 cables L=2m for AUX | 051365 |
| Kit 6 cables L=2m for AUX | 051366 |
| Kit 2 cables L=2m for SOR-UVR | 051367 |

Ordering codes

Accessories

Time delay device for undervoltage release - UVD

| Type | 1SDA.....R1 | |
|-------------------------|-------------|--------|
| | T1...T6 | T7-T7M |
| UVD 24...30 V AC / DC | 051357 | 038316 |
| UVD 48 V AC / DC | | 038317 |
| UVD 48...60 V AC / DC | 051358 | |
| UVD 60 V AC / DC | | 038318 |
| UVD 110...125 V AC / DC | 051360 | 038319 |
| UVD 220...250 V AC / DC | 051361 | 038320 |

Electrical signals


Auxiliary contacts - AUX

| Type | 1SDA.....R1 | | | |
|--|-------------|----------|--------|--------|
| | T1-T2-T3 | T4-T5-T6 | T7 | T7M |
| uncabled version ⁽¹⁾ | | | | |
| AUX 1Q 1SY 250 V AC/DC | 051368 | 051368 | | |
| AUX 3Q 1SY 250 V AC/DC | 051369 | 051369 | | |
| AUX 1Q 1SY 400 V AC | | | 062104 | |
| AUX 2Q 400 V AC | | | | 062102 |
| AUX 1Q 1SY 24 V DC | | | 062103 | |
| AUX 3Q 1SY 24 V DC | 054914 | 054914 | | |
| AUX 2Q 24 V DC | | | | 062101 |
| cabled version ⁽¹⁾ with 1 m long cables | | | | |
| AUX-C 1Q 1SY 250 V AC/DC | 051370 | 054910 | | |
| AUX-C 3Q 1SY 250 V AC/DC | 051371 | 054911 | | |
| AUX-C 1Q 1SY 400 V AC | | 054912 | | |
| AUX-C 2Q 400 V AC | | 054913 | | |
| AUX-C 3Q 1SY 24 V DC | 055361 | 054915 | | |
| cabled version for T2 with PR221 DS trip unit | | | | |
| AUX-C 1 S51 1Q SY | 053704 | | | |
| AUX-C 2Q 1SY | 055504 | | | |
| cabled contact for signalling trip coil release trip | | | | |
| AUX-SA 1 S51 T4-T5 | | 055050 | | |
| AUX-SA 1 S51 T6 ⁽²⁾ | | 060393 | | |
| AUX-SA 1 S51 T7-T7M | | | 062105 | 063553 |
| cabled contact for signalling manual/remote operation | | | | |
| AUX-MO-C ⁽³⁾ | | 054917 | | |
| cabled contact circuit breaker ready to close | | | | |
| AUX-RTC 24V DC | | | | 062108 |
| AUX-RTC 250V AC/DC | | | | 062109 |
| cabled contact signalling spring charged | | | | |
| AUX-MC 24V DC | | | | 062106 |
| AUX-MC 250V AC/DC | | | | 062107 |
| cabled contacts in electronic version | | | | |
| AUX-E-C 1Q 1SY | | 054916 | | |


⁽¹⁾ These cannot be combined with the circuit-breaker fitted with PR221DS electronic trip unit.

⁽²⁾ Available only mounted on the circuit-breaker.


⁽³⁾ For T4, T5 and T6 in plug-in/withdrawable version, it is necessary to order a socket plug connector 3 poles 1SDA051364R1.

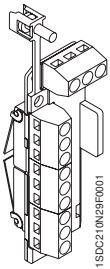


1SDC210N29F0001

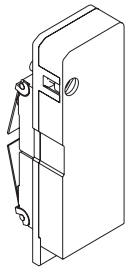


1SDC210N29R0001

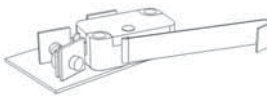


1SDC210N31F0001

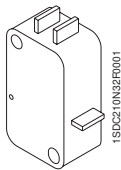

1SDC210N32F0001

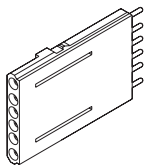

1SDC210N33F0001

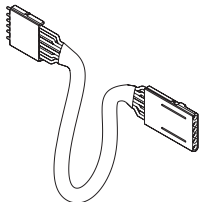

1SDC210N34F0001

Auxiliary position contacts - AUP

| Type | 1SDA.....R1 | | |
|--|-------------|----------|--------|
| | T2-T3 | T4-T5-T6 | T7-T7M |
| AUP T2-T3 - 1 contact signalling circuit-breakers racked-in | 051372 | | |
| AUP-I T4-T5 24 V DC - 1 contact signalling circuit-breakers racked-in | | 054920 | |
| AUP-I T4-T5 400 V AC/DC - 1 contact for signalling circuit-breakers racked-out | | 054918 | |
| AUP-R T4-T5 24 V DC - 1 contact for signalling circuit-breakers racked-out | | 054921 | |
| AUP-R T4-T5 400 V AC/DC - 1 contact for signalling circuit-breakers racked-out | | 054919 | |
| AUP T7-T7M 24 V DC | | | 062110 |
| AUP T7-T7M 250 V AC | | | 062111 |

Early auxiliary contacts - AUE

| Type | 1SDA.....R1 | | | |
|----------------------|-------------|--------|--------|--------|
| | T2-T3 | T4-T5 | T6 | T7 |
| AUE - early contacts | 051374 | 054925 | 060394 | 062112 |

Note: On T7, the early auxiliary contacts (AUE) can only be ordered mounted on the circuit-breaker

Adapters - ADP

| Type | 1SDA.....R1 |
|----------------------|-------------|
| | T4-T5-T6 |
| ADP - Adapters 5pin | 055173 |
| ADP - Adapters 6pin | 054922 |
| ADP - Adapters 12pin | 054923 |
| ADP - Adapters 10pin | 054924 |

Testing extension

| Type | 1SDA.....R1 |
|--|-------------|
| | T4-T5-T6 |
| 5pin checking extension for blank tests on T4-T5-T6 P/W service releases | 055351 |
| 6pin checking extension for blank tests on T4-T5-T6 P/W auxiliary contacts (1+1) service and residual current releases | 055063 |
| 12pin checking extension for blank tests on T4-T5-T6 P/W auxiliary contacts (3+1) | 055064 |
| 5pin checking extension for blank tests on T4-T5-T6 P/W motor operator and early contacts | 055065 |

Trip reset

| Type | 1SDA.....R1 |
|----------------------------|-------------|
| | T7M |
| Trip reset 24-30 V AC/DC | 063554 |
| Trip reset 110-130 V AC/DC | 062118 |
| Trip reset 200-240 V AC/DC | 062119 |



Mechanical signals

Mechanical operation counter

| Type | 1SDA.....R1 |
|------------------------------|-------------|
| | T7M |
| Mechanical operation counter | 062160 |

Ordering codes

Accessories

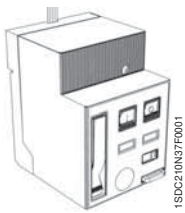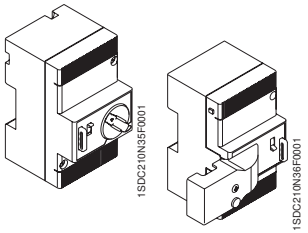

Motor operator

Solenoid operator - MOS

| Type | 1SDA.....R1 | |
|--|-------------|--|
| | T1-T2-T3 | |
| MOS 5 cables, superimposed 48...60 V DC | 059596 | |
| MOS 5 cables, superimposed 110...250 V AC/DC | 059597 | |
| Note: It is always fitted with crimped cables | | |
| MOS 5 cables T1-T2, side-by-side, 48...60 V DC | 059598 | |
| MOS 5 cables T1-T2, side-by-side, 110...250 V AC/DC | 059599 | |
| Note: It is always fitted with crimped cables | | |

Stored energy motor operator - MOE


| Type | 1SDA.....R1 | |
|-----------------------------|-------------|--------|
| | T4-T5 | T6 |
| MOE T4-T5 24 V DC | 054894 | 060395 |
| MOE T4-T5 48...60 V DC | 054895 | 060396 |
| MOE T4-T5 110...125 V AC/DC | 054896 | 060397 |
| MOE T4-T5 220...250 V AC/DC | 054897 | 060398 |
| MOE T4-T5 380 V AC | 054898 | 060399 |

Stored energy motor operator with electronics - MOE-E

| Type | 1SDA.....R1 | |
|---|-------------|--------|
| | T4-T5 | T6 |
| MOE-E T4-T5 24 V DC | 054899 | 060400 |
| MOE-E T4-T5 48...60 V DC | 054900 | 060401 |
| MOE-E T4-T5 110...125 V AC/DC | 054901 | 060402 |
| MOE-E T4-T5 220...250 V AC/DC | 054902 | 060403 |
| MOE-E T4-T5 380 V AC | 054903 | 060404 |
| Note: Always supplied complete with the AUX-E-C electronic auxiliary contact | | |

Spring charging motor

| Type | 1SDA.....R1 |
|---|-------------|
| | T7M |
| Spring charging motor 24...30 V AC/DC | 062113 |
| Spring charging motor 48...60 V AC/DC | 062114 |
| Spring charging motor 100...130 V AC/DC | 062115 |
| Spring charging motor 220...250 V AC/DC | 062116 |
| Spring charging motor 380...415 V AC | 062117 |

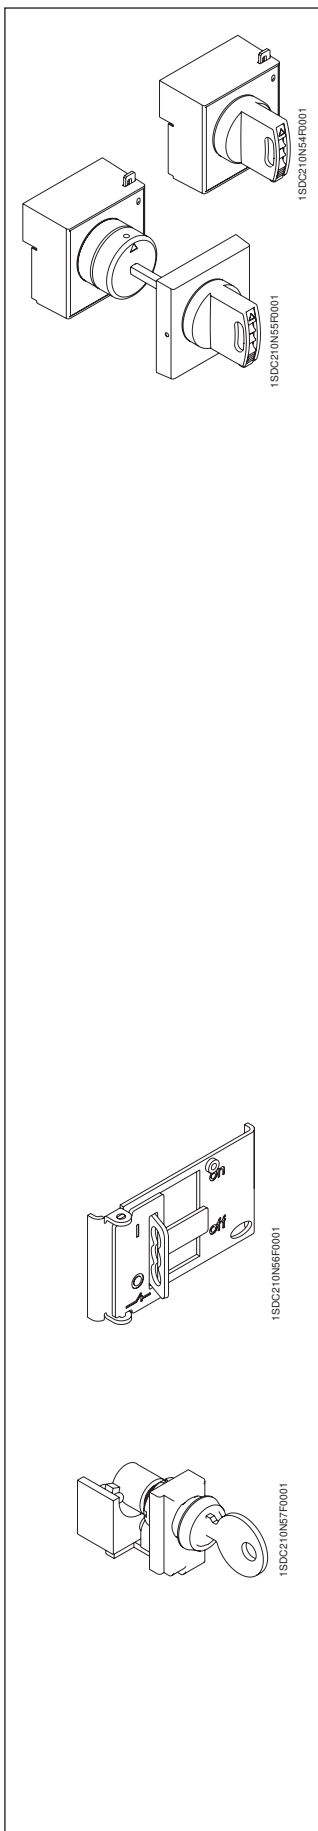

Rotary handle operating mechanism

Direct- RHD

| Type | 1SDA.....R1 | | | |
|--|-------------|--------|--------|--------|
| | T1-T2-T3 | T4-T5 | T6 | T7 |
| RHD normal for fixed and plug-in | 051381 | 054926 | 060405 | 062120 |
| RHD_EM emergency for fixed and plug-in | 051382 | 054927 | 060406 | 062121 |
| RHD normal for withdrawable | | 054928 | 060407 | 062120 |
| RHD_EM di emergency for withdrawable | | 055234 | 060408 | 062121 |

Transmitted - RHE

| Type | 1SDA.....R1 | | | |
|---|-------------|--------|--------|--------|
| | T1-T2-T3 | T4-T5 | T6 | T7 |
| RHE normal for fixed and plug-in | 051383 | 054929 | 060409 | 062122 |
| RHE_EM emergency for fixed and plug-in | 051384 | 054930 | 060410 | 062123 |
| RHE normal for withdrawable | | 054933 | 060411 | 062122 |
| RHE_EM di emergency for withdrawable | | 054934 | 060412 | 062123 |
| Individual components | | | | |
| RHE_B just base for RHE for fixed and plug-in | 051385 | 054931 | 060413 | 062124 |
| RHE_B just base for RHE withdrawable | 054935 | | 060414 | 062124 |
| RHE_S just rod 500mm for RHE | 051386 | 054932 | 054932 | 054932 |
| RHE_H just handle for RHE | 051387 | 054936 | 060415 | 062125 |
| RHE_H_EM just emergency handle for RHE | 051388 | 054937 | 060416 | 062126 |

IP54 protection for rotary handle

| Type | 1SDA.....R1 | | |
|------------------------------|-------------|----------|--------|
| | T1-T2-T3 | T4-T5-T6 | T7 |
| RHE_IP54 protection kit IP54 | 051392 | 054938 | 054938 |

Operating mechanism and locks

Padlock lever lock - PLL

| Type | 1SDA.....R1 | | |
|--|-------------|--------|--------|
| | T1-T2-T3 | T7 | T7M |
| PLL - plug-in in open position | 051393 | | |
| PLL for T1 1p - plug-in in open position | 060199 | | |
| PLL - plate in open/closed position | 051394 | | |
| PLL - plate in open position | 060534 | | |
| PLL - padlock lever lock | | 062150 | 062151 |

Note: On T7, the padlock lever lock is an alternative to the key lock

“Ronis” key lock in open position on the circuit-breaker - KLC ⁽¹⁾

| Type | 1SDA.....R1 | |
|---|-------------|--------|
| | T1-T2-T3 | |
| standard version | | |
| KLC same key - T1 | | 053528 |
| KLC same key - T2 | | 053529 |
| KLC same key - T3 | | 053530 |
| version with key removable in both positions | | |
| KLC-S same key - T1 | | 051395 |
| KLC-S same key - T2 | | 052015 |
| KLC-S same key - T3 | | 052016 |

⁽¹⁾ It cannot be mounted when there is a front operating mechanism, a rotary handle operating mechanism, motor operator or RC221/RC222 residual current device and, only in the case of three pole circuit-breakers, with the service releases (UVR, SOR).

Ordering codes

Accessories

Key lock in open position on the circuit-breaker - KLC

| Type | 1SDA.....R1 | |
|--|-------------|--------|
| | T7 | T7M |
| KLC-D - different key | 062134 | 062141 |
| KLC-S - same key for different groups of circuit-breakers (N. 20005) | 062135 | 062142 |
| KLC-S - same key for different groups of circuit-breakers (N. 20006) | 062136 | 062143 |
| KLC-S - same key for different groups of circuit-breakers (N. 20007) | 062137 | 062144 |
| KLC-S - same key for different groups of circuit-breakers (N. 20008) | 062138 | 062145 |
| KLC-R - arrangement for Ronis key lock | 062139 | 062146 |
| KLC-P - arrangement for Profalux key lock | 062140 | 062149 |

Key lock for rotary handle - RHL

| Type | 1SDA.....R1 |
|---|-------------|
| | T1-T2-T3 |
| RHL - different keys for each circuit-breaker/in open position | 051389 |
| RHL - same key for different groups of circuit-breakers (N. 20005) | 051390 |
| RHL - same key for different groups of circuit-breakers (N. 20006) | 060147 |
| RHL - same key for different groups of circuit-breakers (N. 20007) | 060148 |
| RHL - same key for different groups of circuit-breakers (N. 20008) | 060149 |
| RHL - different keys for each circuit-breaker/in open-closed position | 052021 |

Key lock for front/rotary handle - KLF

| Type | 1SDA.....R1 | | |
|--|-------------|--------|--------|
| | T4-T5 | T6 | T7 |
| KLF-D - different key | 054939 | 060658 | 063555 |
| KLF-S - same key for different groups of circuit-breakers (N. 20005) | 054940 | 060659 | 063556 |
| KLF-S - same key for different groups of circuit-breakers (N. 20006) | 054941 | 060660 | 063557 |
| KLF-S - same key for different groups of circuit-breakers (N. 20007) | 054942 | 060661 | 063558 |
| KLF-S - same key for different groups of circuit-breakers (N. 20008) | 054943 | 060662 | 063559 |
| KLF-S - arrangement for Ronis key lock | | | 063560 |
| KLF-S - arrangement for Profalux key lock | | | 063561 |


Key lock for motor operator - MOL

| Type | 1SDA.....R1 | |
|--|-------------|--------|
| | T4-T5 | T6 |
| MOL-D different key | 054904 | 060611 |
| MOL-S - same key for different groups of circuit-breakers (N. 20005) | 054905 | 060612 |
| MOL-S - same key for different groups of circuit-breakers (N. 20006) | 054906 | 060613 |
| MOL-S - same key for different groups of circuit-breakers (N. 20007) | 054907 | 060614 |
| MOL-S - same key for different groups of circuit-breakers (N. 20008) | 054908 | 060615 |
| MOL-M - lock only on manual operation with same key | 054909 | 054909 |


Key lock in racked-in/test isolated/racked-out position

| Type | 1SDA.....R1 |
|--|-------------|
| | T7-T7M |
| For 1 circuit-breaker - different key | 062153 |
| For groups of circuit-breakers - same key (N. 20005) | 062154 |
| For groups of circuit-breakers - same key (N. 20006) | 062155 |
| For groups of circuit-breakers - same key (N. 20007) | 062156 |
| For groups of circuit-breakers - same key (N. 20008) | 062157 |
| Predisposizione per blocco chiave Ronis | 063567 |
| Predisposizione per blocco chiave Profalux | 063570 |
| Predisposizione per blocco chiave Castell | 063568 |
| Predisposizione per blocco chiave Kirk | 063569 |

Note: The fixed part can be equipped with two different key locks.

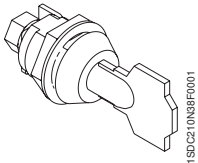

1SDC210N38F0001

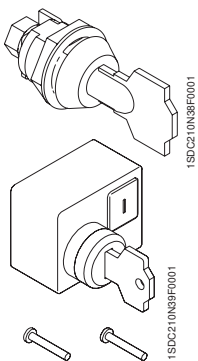


1SDC210N38F0001


1SDC210N38F0001



1SDC210N40F0001

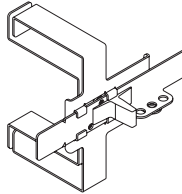

1SDC210N41F0001

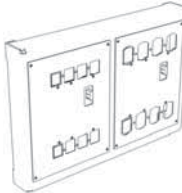

1SDC210N42F0001

Accessory for lock in racked-out position

| Type | 1SDA.....R1 |
|-----------------------------|-------------|
| | T7-T7M |
| Lock in racked-out position | 062158 |

Note: Order to complete the circuit-breaker lock in racked-in/isolated-test/racked-out position

Mechanical compartment door lock

| Type | 1SDA.....R1 |
|----------------------------------|-------------|
| | T7-T7M |
| Mechanical compartment door lock | 062159 |

Front lever operating mechanism - FLD

| Type | 1SDA.....R1 | |
|-----------------------------|-------------|--------|
| | T4-T5 | T6 |
| FLD - for fixed and plug-in | 054944 | 060417 |
| FLD - for withdrawable | 054945 | 060418 |

Mechanical interlock - MIF

| Type | 1SDA.....R1 |
|---|-------------|
| | T1-T2-T3 |
| MIF front interlocking plate between 2 circuit-breakers | 051396 |
| MIF front interlocking plate between 3 circuit-breakers | 052165 |

Mechanical interlock - MIR

| Type | 1SDA.....R1 |
|--|-------------|
| | T4-T5 |
| MIR-HB - frame unit horizontal interlock | 054946 |
| MIR-VB - frame unit vertical interlock | 054947 |
| MIR-P - plate for interlock type A | 054948 |
| MIR-P - plate for interlock type B | 054949 |
| MIR-P - plate for interlock type C | 054950 |
| MIR-P - plate for interlock type D | 054951 |
| MIR-P - plate for interlock type E | 054952 |
| MIR-P - plate for interlock type F | 054953 |

Note: To interlock two circuit-breakers you have to order a frame unit interlock and a plate (for type A or B or C or D or E or F) interlock.

Mechanical interlock - MIR

| Type | 1SDA.....R1 | |
|----------------------|-------------|--------|
| | T3 | T6 |
| Horizontal interlock | 063324 | 060685 |
| Vertical interlock | 063325 | 060686 |

Ordering codes

Accessories

Mechanical interlock with cables between two circuit-breakers

| Type | 1SDA.....R1 | |
|--------------------------------------|-------------|--|
| | T7M | |
| Cables kit for interlock | 062127 | |
| Plate for fixed cb | 062129 | |
| Plate for fixed cb (fixing to floor) | 062130 | |
| Plate for withdrawable cb | 062131 | |

Note: To interlock two circuit-breakers you have to order a cables kit and two plates in function of the version of the circuit-breaker

Sealable lock of thermal adjustment

| Type | 1SDA.....R1 | |
|----------------------------------|-------------|--|
| | T1-T2-T3 | |
| TMD release anti-adjustment seal | 051397 | |

Transparent protection

Transparent protection for buttons

| Type | 1SDA.....R1 | |
|--|-------------|--|
| | T7M | |
| Transparent protection for buttons | 062132 | |
| Transparent protection for buttons - independent | 062133 | |

IP54 door protection


| Type | 1SDA.....R1 | |
|----------------------|-------------|--|
| | T7M | |
| IP54 door protection | 062161 | |

Residual current releases

SACE RC221, SACE RC222, SACE RC223

| Type | 1SDA.....R1 | |
|---------------------------|-------------|---------|
| | 3 poles | 4 poles |
| RC222/1 MOD 200 mm for T1 | | 053869 |
| RC221/1 per T1 | 051398 | 051401 |
| RC222/1 per T1 | 051400 | 051402 |
| RC221/2 per T2 | 051403 | 051405 |
| RC222/2 per T2 | 051404 | 051406 |
| RC221/3 per T3 | 051407 | 051409 |
| RC222/3 per T3 | 051408 | 051410 |
| RC222/4 per T4 | | 054954 |
| RC223/4 per T4 | | 054956 |
| RC222/5 per T5 | | 054955 |

Note: The residual current releases for T2 and T3 circuit-breakers are always supplied complete with the FC Cu terminal kit.

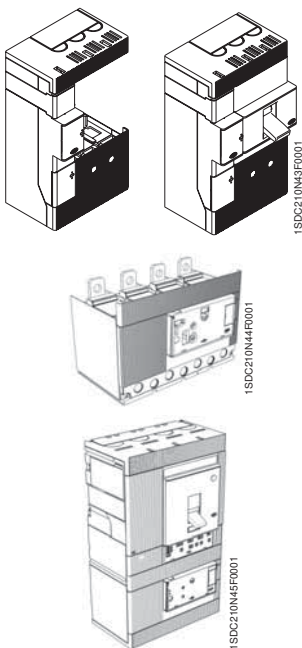

SACE RCQ

| Type | 1SDA.....R1 T1...T7-T7M |
|--|----------------------------|
| Relay and closed toroid - diameter 60 mm | 037388 |
| Relay and closed toroid - diameter 110 mm | 037389 |
| Relay and closed toroid - diameter 185 mm | 050542 |
| Relay and toroid which can be opened - diameter 110 mm | 037390 |
| Relay and toroid which can be opened - diameter 180 mm | 037391 |
| Relay and toroid which can be opened - diameter 230 mm | 037392 |
| Relay only | 037393 |
| Closed toroid only - diameter 60 mm | 037394 |
| Closed toroid only - diameter 110 mm | 037395 |
| Closed toroid only - diameter 185 mm | 050543 |
| Toroid which can be opened - diameter 110 mm | 037396 |
| Toroid which can be opened - diameter 180 mm | 037397 |
| Toroid which can be opened - diameter 230 mm | 037398 |

Note: Opening coil and undervoltage coil to be ordered separately.

Installation accessories

Bracket for fixing onto DIN rail

| Type | 1SDA.....R1 T1-T2-T3 |
|---------------------------------------|-------------------------|
| DIN50022 T1-T2 | 051437 |
| DIN50022 T3 | 051439 |
| DIN 50022 T1 - T2 for RC221/RC222 | 051937 |
| DIN 50022 T3 for RC221/RC222 | 051938 |
| DIN 50022 T1 -T2 for MOS side-by-side | 051939 |
| DIN 50022 T1 for RC222 mod. 200 mm | 053940 |



Connections terminals

High insulating terminal covers - HTC

| Type | 1SDA.....R1 | |
|------------|-------------|---------|
| | 3 poles | 4 poles |
| HTC T1 | 051415 | 051416 |
| HTC T2 | 051417 | 051418 |
| HTC T3 | 051419 | 051420 |
| HTC T4 | 054958 | 054959 |
| HTC T5 | 054960 | 054961 |
| HTC T6 | 014040 | 014041 |
| HTC T7-T7M | 063091 | 063092 |

Protection for high insulating terminal covers - HTC-P

| Type | 1SDA.....R1 | |
|----------|-------------|---------|
| | 3 poles | 4 poles |
| HTC-P T4 | 054962 | 054963 |
| HTC-P T5 | 054964 | 054965 |

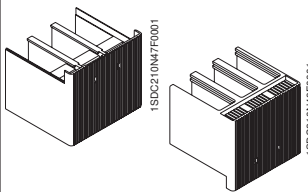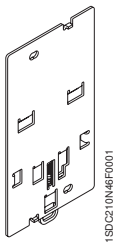

Ordering codes

Accessories

Low insulating terminal covers - LTC

| Type | 1SDA.....R1 | |
|--------------|-------------|---------|
| | 3 poles | 4 poles |
| LTC T1 | 051421 | 051422 |
| LTC T2 | 051423 | 051424 |
| LTC T3 | 051425 | 051426 |
| LTC T4 | 054966 | 054967 |
| LTC T5 | 054968 | 054969 |
| LTC T6 | 014038 | 014039 |
| LTC T7-T7M F | 063093 | 063094 |
| LTC T7-T7M W | 063095 | 063096 |

IP40 front protections for screw terminals - STC

| Type | 1SDA.....R1 | |
|--------|-------------|---------|
| | 3 poles | 4 poles |
| STC T1 | 051431 | 051432 |
| STC T2 | 051433 | 051434 |
| STC T3 | 051435 | 051436 |

Sealable screws for terminal covers


| Type | 1SDA.....R1 | |
|-----------------|----------------|-----------|
| | T1-T2-T3-T4-T5 | T6-T7-T7M |
| Sealable screws | 051504 | 013699 |

Separating partitions - PB


| Type | 1SDA.....R1 | | | |
|---------------------------------------|-------------|--------|--------|--------|
| | T1-T2-T3 | T4-T5 | T6 | T7-T7M |
| PB100 low (H=100 mm) - 4 pieces - 3p | 051427 | 054970 | 050696 | 054970 |
| PB100 low (H=100 mm) - 6 pieces - 4p | 051428 | 054971 | 050697 | 054971 |
| PB200 high (H=200 mm) - 4 pieces - 3p | 051429 | 054972 | | 054972 |
| PB200 high (H=200 mm) - 6 pieces - 4p | 051430 | 054973 | | 054973 |

Front extended terminals - EF


| Type | 1SDA.....R1 | | | |
|-----------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| EF T1 | 051442 | 051443 | 051440 | 051441 |
| EF T2 | 051466 | 051467 | 051464 | 051465 |
| EF T3 | 051490 | 051491 | 051488 | 051489 |
| EF T4 | 055000 | 055001 | 054998 | 054999 |
| EF T5 | 055036 | 055037 | 055034 | 055035 |
| EF T6 630 | 023379 | 023389 | 013920 | 013921 |
| EF T6 800 | 023383 | 023393 | 013954 | 013955 |
| EF T7-T7M | 063103 | 063104 | 063105 | 063106 |

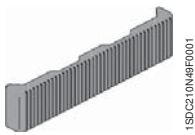

1SDC210N49FR001

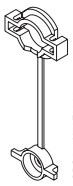


1SDC210N50FR001

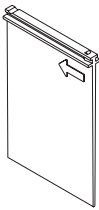


1SDC210N51FR001




1SDC210N52FR001

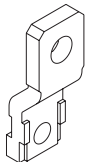



1SDC210N53FR001

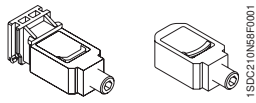


1SDC210N6SF0001

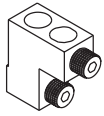

1SDC210N69FR0001

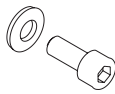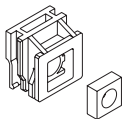

1SDC220N60FR0001

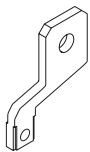

1SDC210N6FR0001

Front terminals for copper-aluminium cables - FC CuAl

| Type | 1SDA.....R1 | | | |
|---|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| FC CuAl T1 95mm ² - external terminal | 051446 | 051447 | 051444 | 051445 |
| FC CuAl T2 95mm ² | 051458 | 051459 | 051456 | 051457 |
| FC CuAl T2 2x95mm ² - external terminal | 055153 | 055154 | 055151 | 055152 |
| FC CuAl T2 185mm ² - external terminal | 051462 | 051463 | 051460 | 051461 |
| FC CuAl T3 2x150mm ² - external terminal | 055157 | 055158 | 055155 | 055156 |
| FC CuAl T3 185mm ² | 051486 | 051487 | 051484 | 051485 |
| FC CuAl T3 150...240mm ² - external terminal | 051940 | 051941 | 051942 | 051943 |
| FC CuAl T4 1x50mm ² | 054984 | 054985 | 054982 | 054983 |
| FC CuAl T4 2x150mm ² - external terminal | 054992 | 054993 | 054990 | 054991 |
| FC CuAl T4 1x185mm ² | 054988 | 054989 | 054986 | 054987 |
| FC CuAl T5 400 2x120mm ² - external terminal | 055028 | 055029 | 055026 | 055027 |
| FC CuAl T5 400 1x240mm ² | 055020 | 055021 | 055018 | 055019 |
| FC CuAl T5 400 1x300mm ² | 055024 | 055025 | 055022 | 055023 |
| FC CuAl T5 630 2x240mm ² - external terminal | 055032 | 055033 | 055030 | 055031 |
| FC CuAl T6 630 2x240mm ² | 023380 | 023390 | 013922 | 013923 |
| FC CuAl T6 800 3x185mm ² - external terminal | 023384 | 023394 | 013956 | 013957 |
| FC CuAl T6 1000 4x150mm ² - external terminal | 060687 | 060688 | 060689 | 060690 |
| FC CuAl T7 1250-T7M 1250 4x240mm ² - external terminal | 063112 | 063113 | 063114 | 063115 |

Front terminals - F ⁽¹⁾

| Type | 1SDA.....R1 | | | |
|----------------------------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| F T2 - Plugs with screws | 051450 | 051451 | 051448 | 051449 |
| F T3 - Plugs with screws | 051478 | 051479 | 051476 | 051477 |
| F T4 - Plugs with screws | 054976 | 054977 | 054974 | 054975 |
| F T5 - Plugs with screws | 055012 | 055013 | 055010 | 055011 |
| F T6 630-800 - Plugs with screws | 060421 | 060422 | 060423 | 060424 |
| F T7-T7M - Plugs with screws | 063099 | 063100 | 063101 | 063102 |


⁽¹⁾ To be requested as loose kit

Front extended spread terminals - ES

| Type | 1SDA.....R1 | | | |
|---------------------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| ES T2 | 051470 | 051471 | 051468 | 051469 |
| ES T3 | 051494 | 051495 | 051492 | 051493 |
| ES T4 | 055004 | 055005 | 055002 | 055003 |
| ES T5 | 055040 | 055041 | 055038 | 055039 |
| ES T6 (1/2 upper kit) | 050692 | | | |
| ES T6 (1/2 lower kit) | 050704 | | | |
| ES T6 | | 050693 | 050688 | 050689 |
| ES T7-T7M (1/2 upper kit) | 063107 | | | |
| ES T7-T7M (1/2 lower kit) | 063108 | | | |
| ES T7-T7M | | 063109 | 063110 | 063111 |

Ordering codes

Accessories

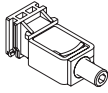

1SDC210N62F0001

Front terminals for copper cables - FC Cu


| Type | 1SDA.....R1 | | | |
|-------------------------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| FC Cu T2 | 051454 | 051455 | 051452 | 051453 |
| FC Cu T3 | 051482 | 051483 | 051480 | 051481 |
| FC Cu T4 1x185mm ² | 054980 | 054981 | 054978 | 054979 |
| FC Cu T5 1x240mm ² | 055016 | 055017 | 055014 | 055015 |
| FC Cu T5 2x240mm ² | 055364 | 055365 | 055362 | 055363 |

Rear terminals for copper-aluminium cables - RC CuAl

| Type | 1SDA.....R1 | | | |
|-------------------------------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| RC CuAl T6 630 2x150mm ² | 023381 | 023391 | 013924 | 013925 |
| RC CuAl T6 800 3x240mm ² | 023385 | 023395 | 013958 | 013959 |

Note: For ordering methods, please ask ABB SACE.


Front multi-cable terminals - MC

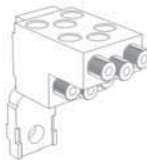

1SDC210N63F0001

| Type | 1SDA.....R1 | | | |
|--------------------------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| MC CuAl T4 6x35mm ² | 054996 | 054997 | 054994 | 054995 |

Rear terminals

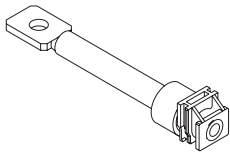

1SDC210N64F0001

| Type | 1SDA.....R1 | | | |
|------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| R T2 | 051474 | 051475 | 051472 | 051473 |
| R T3 | 051498 | 051499 | 051496 | 051497 |
| R T4 | 055008 | 055009 | 055006 | 055007 |
| R T5 | 055044 | 055045 | 055042 | 055043 |
| R T6 | 060425 | 060426 | 060427 | 060428 |
| R T7 | 063116 | 063117 | 063118 | 063119 |


Rear flat horizontal terminals - HR

| Type | 1SDA.....R1 | | | |
|-----------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| HR T7-T7M | 063120 | 063121 | 063122 | 063123 |

Rear flat vertical terminals - VR


| Type | 1SDA.....R1 | | | |
|-----------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| VR T7-T7M | 063124 | 063125 | 063126 | 063127 |

Rear flat horizontal terminals - HR

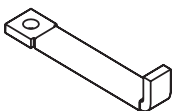

1SDC210N65F0001

| Type | 1SDA.....R1 | | | |
|-----------------|-------------|----------|----------|----------|
| | 3 pieces | 4 pieces | 6 pieces | 8 pieces |
| HR T1 | 053865 | 053866 | 053867 | 053868 |
| HR RC221/222 T1 | | 053987 | | |

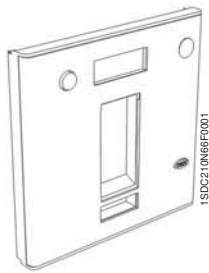

Kit for taking up voltage for auxiliaries

| Type | 1SDA.....R1 | |
|------------------|-------------|----------|
| | 3 pieces | 4 pieces |
| AuxV T2 FC Cu | 051500 | 051501 |
| AuxV T3 FC Cu | 051502 | 051503 |
| AuxV T4-T5 FC Cu | 055046 | 055047 |
| AuxV T4-T5 F | 055048 | 055049 |

Note: Only available for fixed version circuit-breaker.

Front display unit - FDU

| Type | 1SDA.....R1 | |
|---|-------------|--------|
| | T4-T5 | T6 |
| FDU display unit for T4-T5-T6 with PR222 or PR223 | 055051 | 060429 |

Automatic transfer switch - ATS010

| Type | 1SDA.....R1 |
|-----------------------------------|-------------|
| ATS010 for T4, T5, T6, T7 and T7M | 052927 |

Modules for PR33x electronic trip unit

| Type | 1SDA.....R1 | |
|--|-------------|--------|
| | T7 | T7M |
| HMI030 interface on the front of switchgear | 063143 | 063143 |
| PR330/V voltage measuring module | 063144 | 063144 |
| PR330/D-M communication module (Modbus RTU) | 063145 | 063145 |
| PR330/R actuator module | 063146 | 063146 |
| BT030 external wireless communication module | 058259 | 058259 |
| PR030B power supply unit | 058258 | 058258 |
| Internal voltage socket for PR332/P | 063573 | 063573 |

Dialogue unit PR222DS/PD

| Type | 1SDA.....R1 |
|------|-------------|
| | T4-T5 |
| LSI | 055066 |
| LSIG | 055067 |

Note: To be specified only in addition to the code of the automatic circuit-breaker, with analogous overcurrent release (PR222DS/P). To order the trip unit separately, see pag 7/32.

Extracode for PR231 interchangeability

| Type | 1SDA.....R1 |
|--|-------------|
| | T7-T7M |
| Extracode for PR231 interchangeability | 063140 |

Trip unit adapters for PR33x

| Type | 1SDA.....R1 | |
|--------------------------|-------------|--------|
| | T7 | T7M |
| Adapters for PR331-PR332 | 063141 | |
| Adapters for PR33x | | 063142 |

Ordering codes

Accessories

CT for external neutral

| Type | 1SDA.....R1 |
|-----------------------------------|-------------|
| CT for external neutral - T4 320 | 055055 |
| CT for external neutral - T4 250 | 055054 |
| CT for external neutral - T4 160 | 055053 |
| CT for external neutral - T4 100 | 055052 |
| CT for external neutral - T5 400 | 055057 |
| CT for external neutral - T5 320 | 055056 |
| CT for external neutral - T5 630 | 055058 |
| CT for external neutral - T6 630 | 060430 |
| CT for external neutral - T6 800 | 060431 |
| CT for external neutral - T6 1000 | 060610 |

Note: Connector X4 is not included and must be ordered separately.

Current sensor for external neutral

| Type | 1SDA.....R1 |
|---|-------------|
| Current sensor for external neutral - T7-T7M 400...1600 | 063159 |

Note: Connector X4 is not included and must be ordered separately.


Rating plug

| Type | 1SDA.....R1 |
|----------|-------------|
| T7-T7M | |
| In=400A | 063147 |
| In=630A | 063148 |
| In=800A | 063149 |
| In=1000A | 063150 |
| In=1250A | 063151 |
| In=1600A | 063152 |

Extracode rating plug

| Type | 1SDA.....R1 |
|----------|-------------|
| In=400A | 063153 |
| In=630A | 063154 |
| In=800A | 063155 |
| In=1000A | 063156 |
| In=1250A | 063157 |

Note: To be specified only in addition to the code of the automatic circuit-breaker.

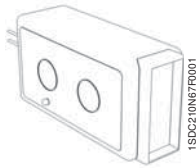

Accessories for electronic releases

| Type | 1SDA.....R1 T4-T5-T6 |
|---|-------------------------|
| X3 Connector for fixed circuit-breaker PR222DS or PR223DS | 055059 |
| X3 Connector for plug-in/withdrawable circuit-breaker | 055061 |
| X4 Connector for fixed circuit-breaker | 055060 |
| X4 Connector for plug-in/withdrawable circuit-breaker | 055062 |
| TT1 - Test Unit ⁽²⁾ | 037121 |
| PR010/T - Test and configuration unit for PR222DS/P, PR222DS/PD, PR223DS or PR222MP electronic releases | 048964 |
| PR021/K - Signalling unit for PR222DS/PD, PR223DS or PR222MP electronic releases | 059146 |
| PR212/CI - Contactor control unit for PR222MP | 050708 |
| EP010 - Interface module for PR222/PD | 059469 |
| EP010 - Interface module for PR223/DS | 063116 |
| VM210 measurement module for PR223DS and PR223EF | 059602 |
| IM210 interlock module for PR223EF and PR12x | 059603 |

⁽¹⁾ For the use of the X3 and X4 connectors, see page 3/45

⁽²⁾ Available also for T2.

Spare parts

Flanges for compartment door

| Type | 1SDA.....R1 |
|--|-------------|
| Flange for compartment door for T1-T2-T3 | 051509 |
| Flange for compartment door for MOS or RHD T1-T2-T3 | 051510 |
| Flange for compartment door T1 with RC221 or RC222 3p | 051511 |
| Flange for compartment door T2 with RC221 or RC222 3p | 051512 |
| Flange for compartment door T3 with RC221 or RC222 3p | 051513 |
| Flange for compartment door T1-T2-T3 with RC221 or RC222 4p | 051514 |
| Flange for compartment door for T4-T5 fixed or plug-in | 055094 |
| Flange for compartment door for T4-T5 withdrawable | 055095 |
| Flange for compartment door for RC222 for T4-T5 | 055096 |
| Flange for the T6 compartment door | 060432 |
| Flange for the withdrawable T6 compartment door | 060433 |
| Flange for the fixed T6 compartment door with MOE/MOE-E, RHD and FLD | 060434 |
| Flange for compartment door for T7-T7M fixed | 063160 |
| Flange for compartment door for T7-T7M withdrawable | 063161 |
| Flange for compartment door for T7 fixed with rotary handle | 063162 |

Solenoid operator for residual current device


| Type | 1SDA.....R1 |
|-----------------------|-------------|
| RC221/RC222 for T1 | 051506 |
| RC221/RC222 for T2 | 051507 |
| RC221/RC222 for T3 | 051508 |
| RC222/RC223 for T4-T5 | 055097 |

Single terminal

| Type | 1SDA.....R1 T7-T7M |
|-----------------|-----------------------|
| Single terminal | 062170 |

Note: To have a complete overview of the spare parts available for the Tmax family of circuit-breakers, please consult the "Spare Parts Catalogue".

Notes

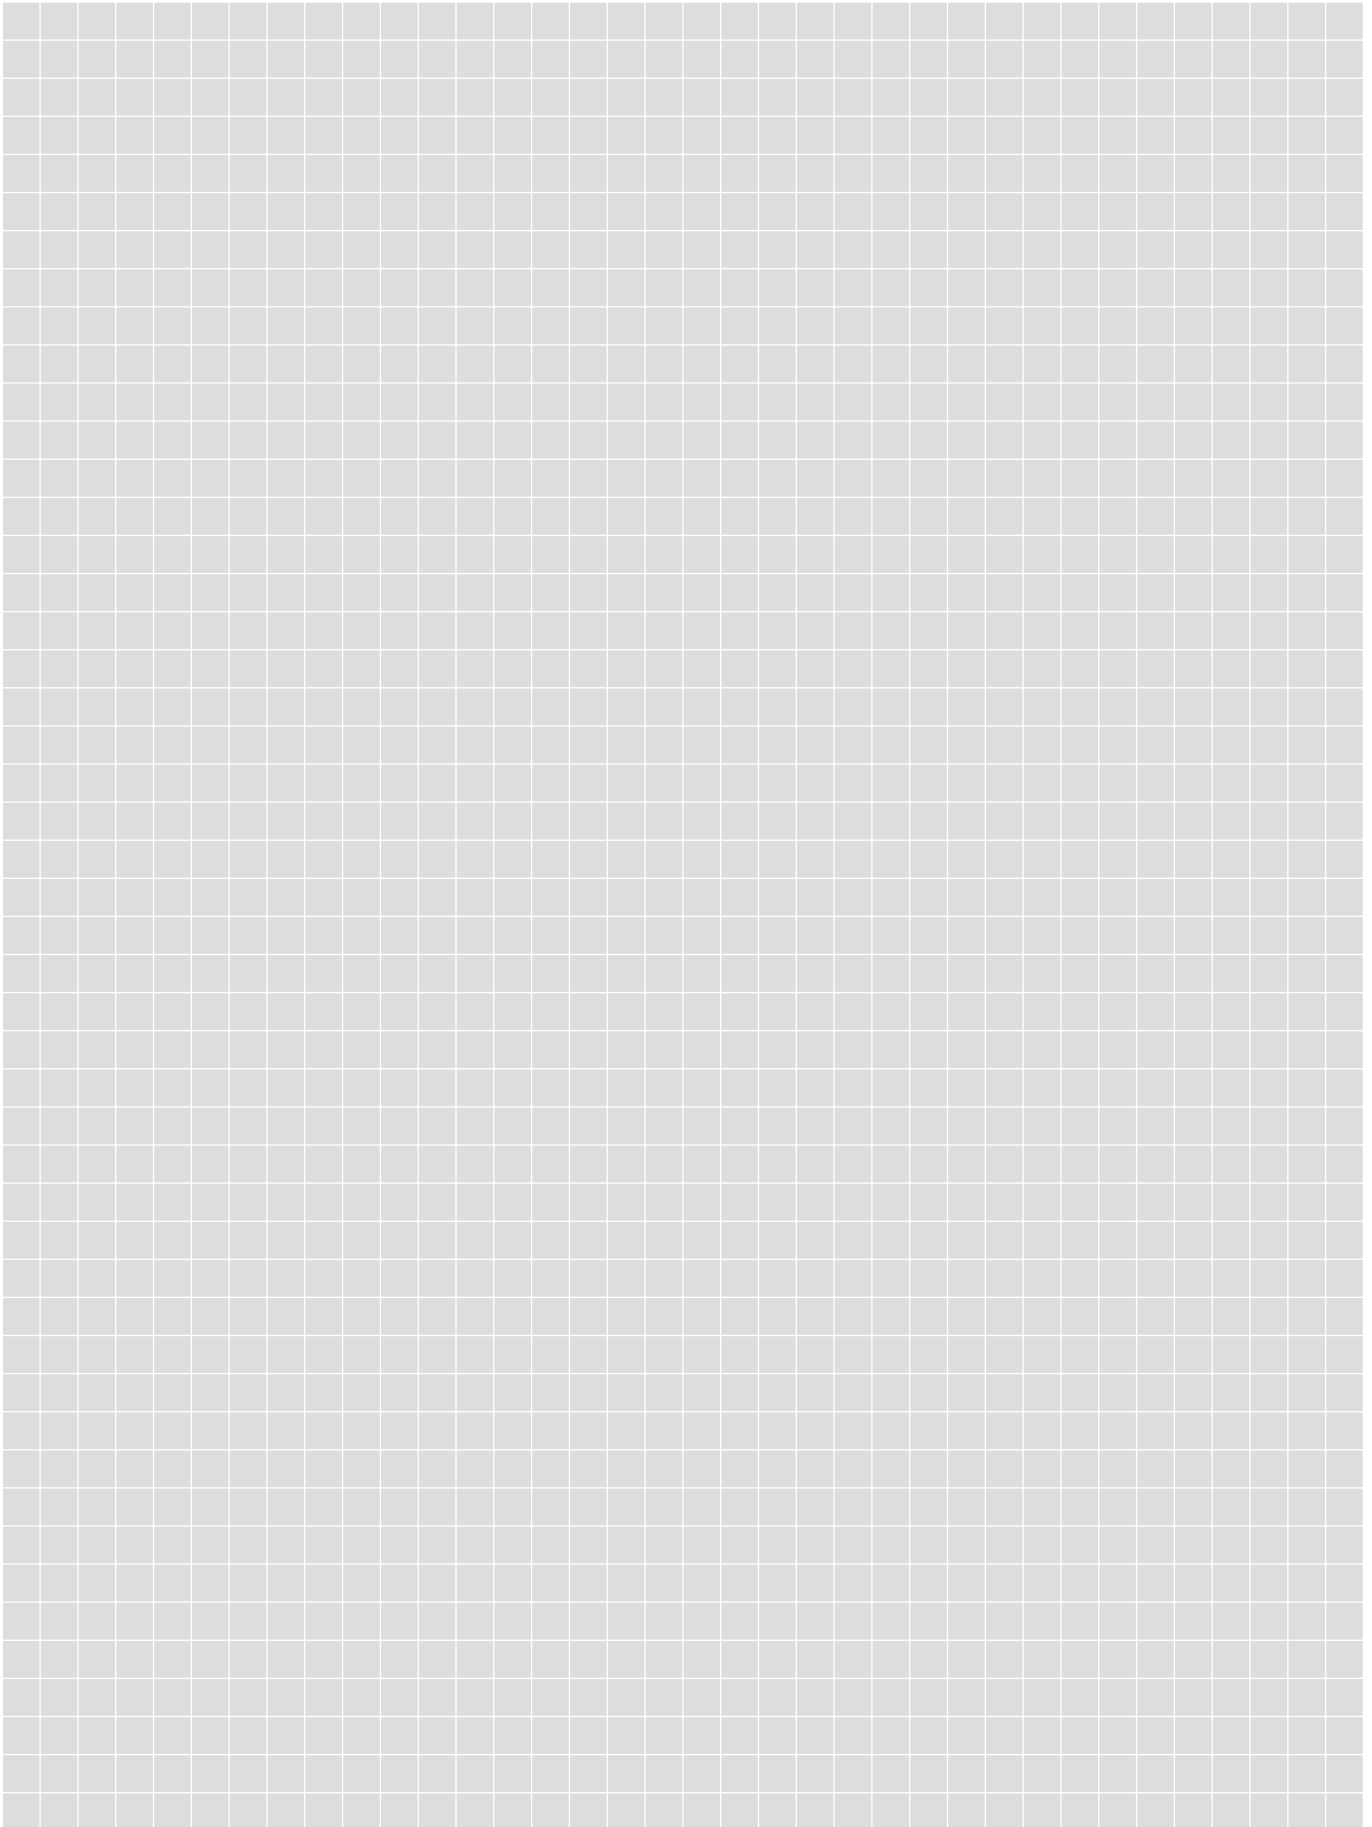

Notes

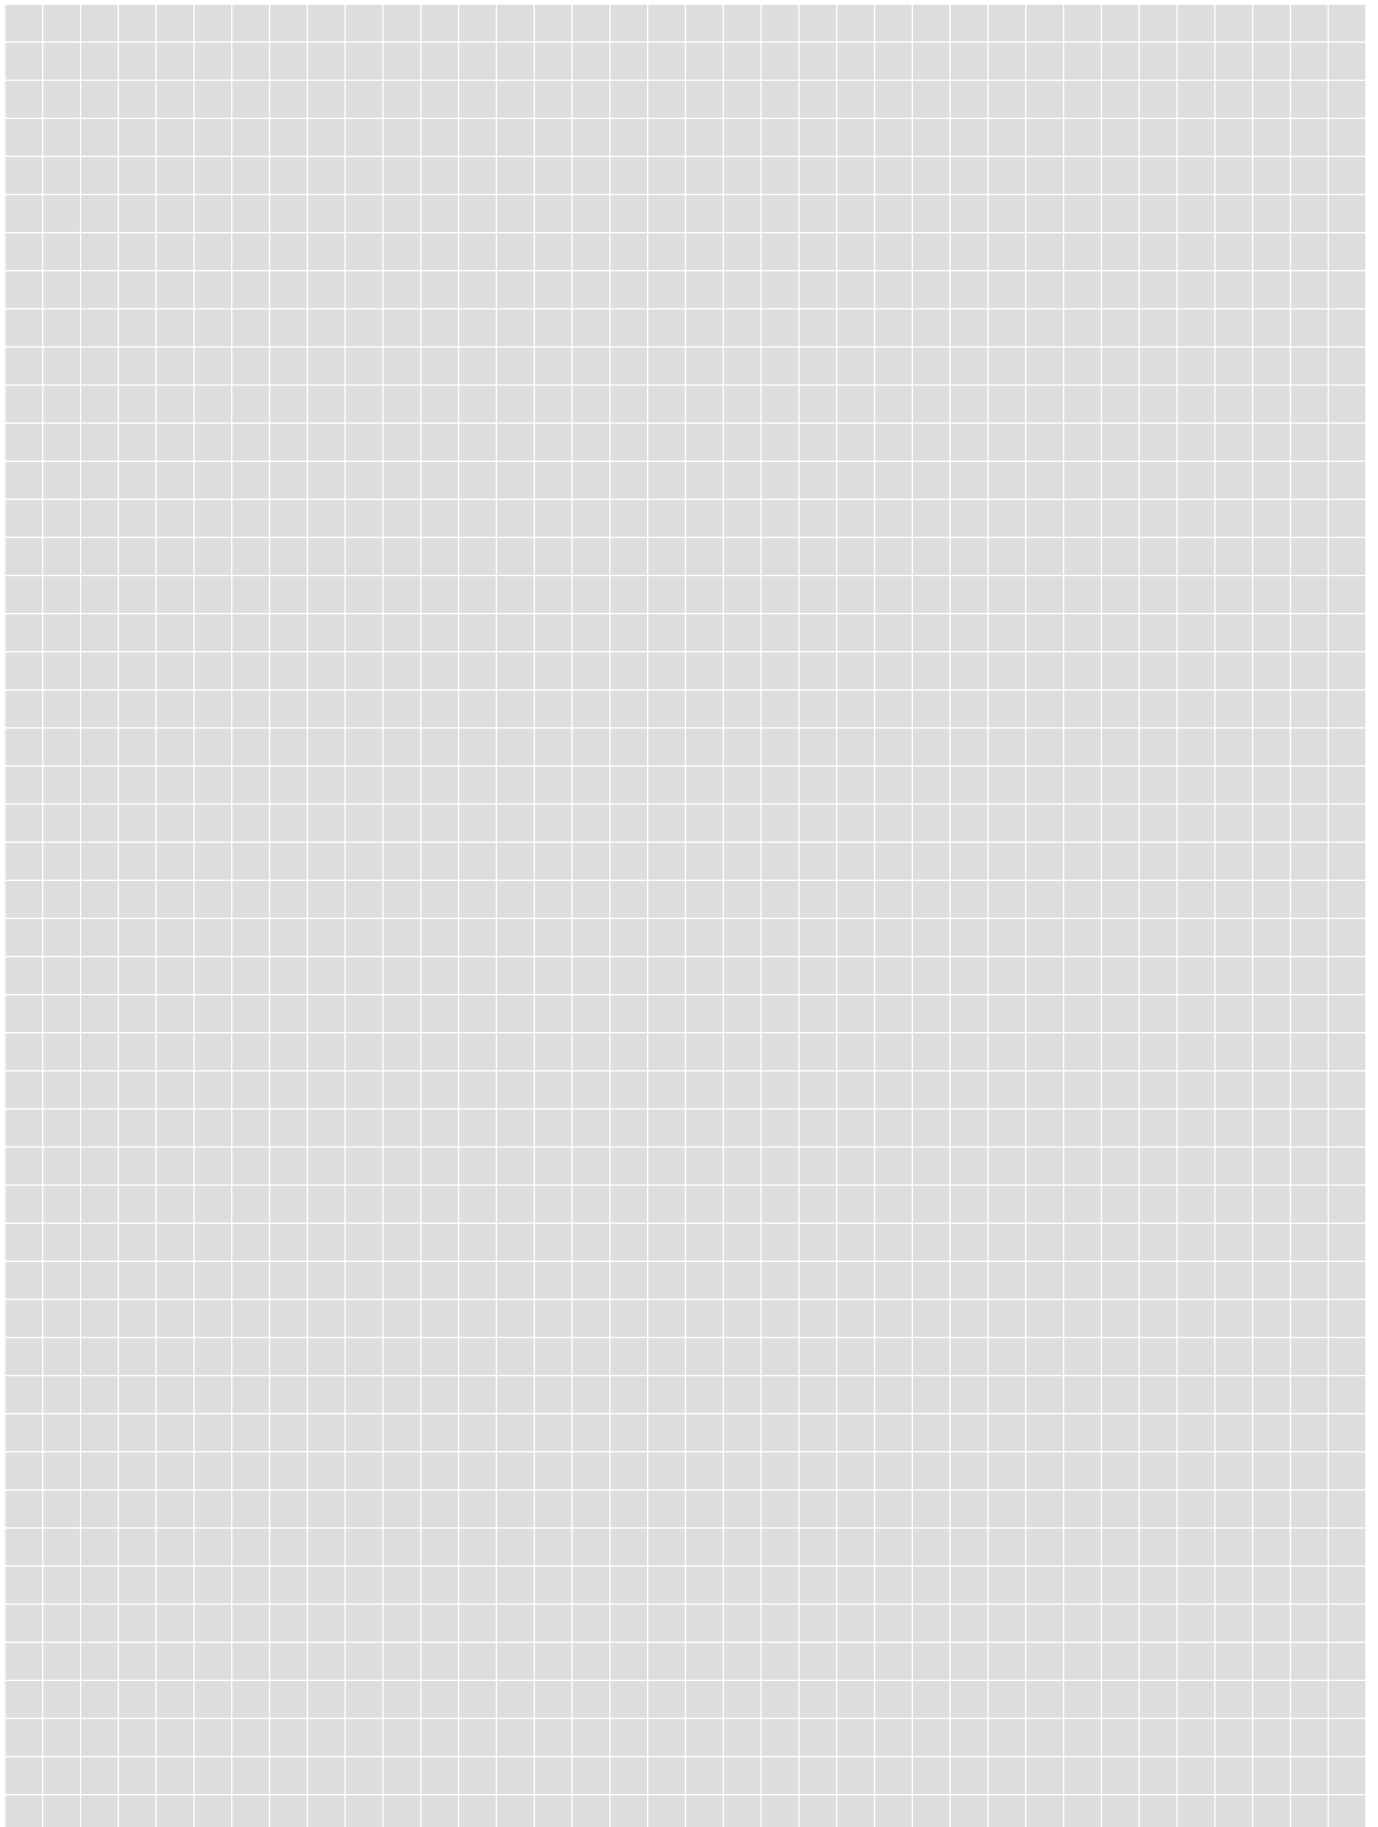




ABB SACE S.p.A

An ABB Group Company

L.V. Breakers

Via Baioni, 35

24123 Bergamo, Italy

Tel.: +39 035.395.111 - Telefax: +39 035.395.306-433

<http://www.abb.com>

Due to possible developments of standards as well as of materials, the characteristics and dimensions specified in the present catalogue may only be considered binding after confirmation by ABB SACE.